



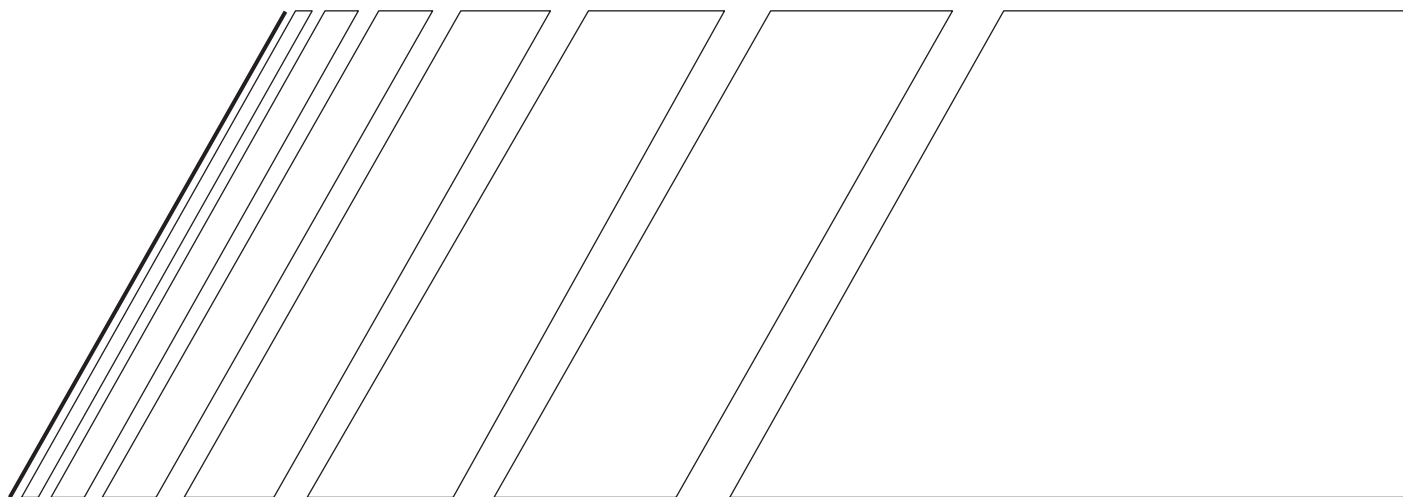

## USER'S MANUAL

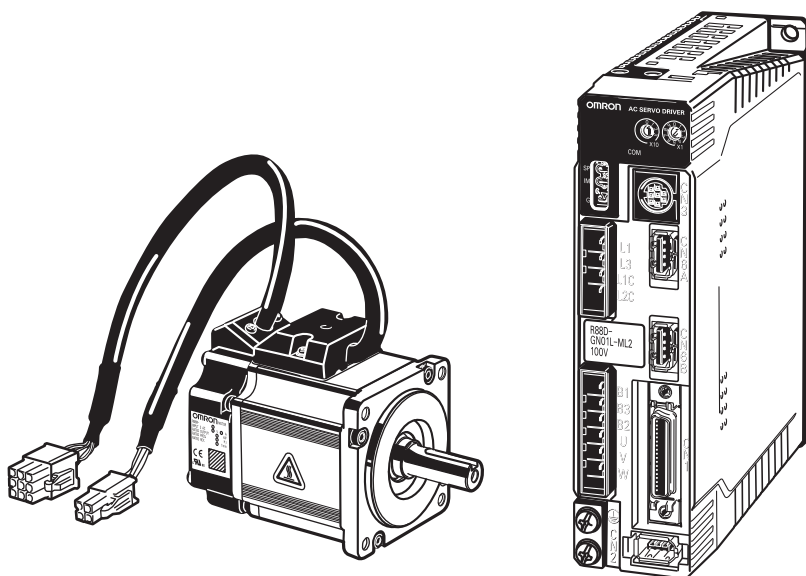

## OMNUC G SERIES

R88M-G□  
(AC Servomotors)  
R88D-GN□-ML2  
(AC Servo Drives)

**AC SERVOMOTORS/SERVO DRIVES  
WITH BUILT-IN MECHATROLINK-II COMMUNICATIONS**

#### Trademarks and Copyrights

- Product names and system names in this manual are trademarks or registered trademarks of their respective companies.
- MECHATROLINK is a registered trademark of the MECHATROLINK Members Association.

#### © OMRON, 2008

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

---

# Introduction

---

Thank you for choosing the OMNUC G Series. This User's Manual describes installation/wiring methods and parameter setting procedures required for the operation of the OMNUC G Series as well as troubleshooting and inspection methods.

## Intended Readers

This manual is intended for the following personnel.  
Those with knowledge of electrical systems (a qualified electrical engineer or the equivalent) as follows:

- ♦ Personnel in charge of introducing FA equipment
- ♦ Personnel in charge of designing FA systems
- ♦ Personnel in charge of managing FA systems and facilities

## NOTICE

This manual contains information necessary to ensure safe and proper use of the OMNUC G Series and its peripheral devices. Please read this manual thoroughly and understand its contents before using the products.

Please keep this manual handy for future reference.

Make sure this User's Manual is delivered to the actual end user of the products.

---

## Read and Understand This Manual

Please read and understand this manual before using the product. Please consult your OMRON representative if you have any questions or comments.

### ***Warranty and Limitations of Liability***

| <b><i>WARRANTY</i></b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.</p> <p>OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.</p> |

| <b><i>LIMITATIONS OF LIABILITY</i></b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.</p> <p>In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.</p> <p>IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.</p> |



---

## ***Application Considerations***

### ***SUITABILITY FOR USE***

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### ***PROGRAMMABLE PRODUCTS***

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

### ***Disclaimers***

| <b><i>CHANGE IN SPECIFICATIONS</i></b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Product specifications and accessories may be changed at any time based on improvements and other reasons.</p> <p>It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.</p> |

| <b><i>DIMENSIONS AND WEIGHTS</i></b>                                                                                         |
|------------------------------------------------------------------------------------------------------------------------------|
| <p>Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.</p> |

| <b><i>PERFORMANCE DATA</i></b>                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.</p> |

| <b><i>ERRORS AND OMISSIONS</i></b>                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.</p> |

# Precautions for Safe Use

- To ensure safe and proper use of the OMNUC G Series and its peripheral devices, read the “Precautions for Safe Use” and the rest of the manual thoroughly to acquire sufficient knowledge of the devices, safety information, and precautions before using the products.
- Make sure this User’s Manual is delivered to the actual end users of the products.
- Please keep this manual close at hand for future reference.

## Explanation of Signal Words

- The precautions indicated here provide important information for safety. Be sure to heed the information provided with the precautions.
- The following signal words are used to indicate and classify precautions in this manual.

|                                                                                                   |                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <b>WARNING</b>  | Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. Additionally, there may be severe property damage. |
|  <b>Caution</b> | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.                                 |

Failure to heed the precautions classified as “Caution” may also lead to serious results. Always heed these precautions.

## Safety Precautions

- This manual may include illustrations of the product with protective covers or shields removed in order to show the components of the product in detail. Make sure that these protective covers and shields are put in place as specified before using the product.
- Consult your OMRON representative when using the product after a long period of storage.

|  <b>WARNING</b> |                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | Always connect the frame ground terminals of the Servo Drive and the Servomotor to 100 Ω or less.<br>Incorrect grounding may result in electric shock.                                                                                                                                                 |
|                 | Do not touch the inside of the Servo Drive.<br>Doing so may result in electric shock.                                                                                                                                                                                                                  |
|                 | When turning OFF the main circuit power supply, turn OFF the RUN command (RUN) at the same time. Residual voltage may cause the Servomotor to continue rotating and result in injury or equipment damage even if the main circuit power supply is turned OFF externally, e.g., with an emergency stop. |
|                 | Do not remove the front cover, terminal covers, cables, or optional items while the power is being supplied.<br>Doing so may result in electric shock.                                                                                                                                                 |

## Precautions for Safe Use

---

|                                                                                     |                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Installation, operation, maintenance, or inspection must be performed by authorized personnel.<br>Not doing so may result in electric shock or injury.                                                                                   |
|    | Wiring or inspection must not be performed for at least 15 minutes after turning OFF the power supply.<br>Doing so may result in electric shock.                                                                                         |
|    | Do not damage or pull on the cables, place heavy objects on them, or subject them to excessive stress.<br>Doing so may result in electric shock, stopping product operation, or burning.                                                 |
|    | Do not touch the rotating parts of the Servomotor during operation.<br>Doing so may result in injury.                                                                                                                                    |
|    | Do not modify the product.<br>Doing so may result in injury or damage to the product.                                                                                                                                                    |
|    | Provide a stopping mechanism on the machine to ensure safety.<br>*The holding brake is not designed as a stopping mechanism for safety purposes.<br>Not doing so may result in injury.                                                   |
|    | Provide an external emergency stopping mechanism that can stop operation and shut off the power supply immediately.<br>Not doing so may result in injury.                                                                                |
|   | Do not come close to the machine immediately after resetting momentary power interruption to avoid an unexpected restart.<br>Doing so may result in injury.<br>Take appropriate measures to secure safety against an unexpected restart. |
|  | Confirm safety after an earthquake has occurred.<br>Failure to do so may result in electric shock, injury, or fire.                                                                                                                      |
|  | Do not use external force to drive the Servomotor.<br>Doing so may result in fire.                                                                                                                                                       |



## WARNING



Do not place any flammable materials near the Servomotor, Servo Drive, or Regeneration Resistor.  
Doing so may result in fire.



Mount the Servomotor, Servo Drive, and Regeneration Resistor on metal or other non-flammable materials.  
Failure to do so may result in fire.



Do not frequently and repeatedly turn the main power supply ON and OFF.  
Doing so may result in product failure.



## Caution



Use the Servomotors and Servo Drives in a specified combination.  
Using them incorrectly may result in fire or damage to the products.



Do not store or install the product in the following places. Doing so may result in fire, electric shock, or damage to the product.

- Locations subject to direct sunlight.
- Locations subject to temperatures outside the specified range.
- Locations subject to humidity outside the specified range.
- Locations subject to condensation as the result of severe changes in temperature.
- Locations subject to corrosive or flammable gases.
- Locations subject to dust (especially iron dust) or salts.
- Locations subject to exposure to water, oil, or chemicals.
- Locations subject to shock or vibration.



Do not touch the Servo Drive radiator, Servo Drive regeneration resistor, or Servomotor while the power is being supplied or soon after the power is turned OFF.  
Doing so may result in burn injuries.

### ■ Storage and Transportation Precautions



## Caution



Do not hold the product by the cables or motor shaft while transporting it.  
Doing so may result in injury or malfunction.



Do not place any load exceeding the figure indicated on the product.  
Doing so may result in injury or malfunction.



Use the motor eye-bolts only for transporting the Servomotor.  
Using them for transporting the machinery may result in injury or malfunction.

### ■ Installation and Wiring Precautions

|  <b>Caution</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | Do not step on or place a heavy object on the product.<br>Doing so may result in injury.                                                                                                                                                                                                                                                                                                                                                                                          |
|                 | Do not cover the inlet or outlet ports and prevent any foreign objects from entering the product.<br>Covering them or not preventing entry of foreign objects may result in fire.                                                                                                                                                                                                                                                                                                 |
|                 | Be sure to install the product in the correct direction.<br>Not doing so may result in malfunction.                                                                                                                                                                                                                                                                                                                                                                               |
|                 | Provide the specified clearances between the Servo Drive and the control panel or with other devices.<br>Not doing so may result in fire or malfunction.                                                                                                                                                                                                                                                                                                                          |
|                 | Do not subject Servomotor shaft or Servo Drive to strong impacts.<br>Doing so may result in malfunction.                                                                                                                                                                                                                                                                                                                                                                          |
|                 | Be sure to wire correctly and securely.<br>Not doing so may result in motor runaway, injury, or malfunction.                                                                                                                                                                                                                                                                                                                                                                      |
|                | Be sure that all the mounting screws, terminal screws, and cable connector screws are tightened properly.<br>Incorrect tightening torque may result in malfunction.                                                                                                                                                                                                                                                                                                               |
|               | Use crimp terminals for wiring.<br>Do not connect bare stranded wires directly to the protective ground terminal.<br>Doing so may result in burning.                                                                                                                                                                                                                                                                                                                              |
|               | Always use the power supply voltage specified in the User's Manual.<br>An incorrect voltage may result in malfunction or burning.                                                                                                                                                                                                                                                                                                                                                 |
|               | Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied. Be particularly careful in places where the power supply is unstable.<br>An incorrect power supply may result in equipment damage.                                                                                                                                                                                                                                 |
|               | Install external breakers and take other safety measures against short-circuiting in external wiring.<br>Insufficient safety measures against short-circuiting may result in burning.                                                                                                                                                                                                                                                                                             |
|               | Take appropriate and sufficient shielding measures when installing systems in the following locations. Failure to do so may result in damage to the product. <ul style="list-style-type: none"><li>♦ Locations subject to static electricity or other forms of noise.</li><li>♦ Locations subject to strong electromagnetic fields and magnetic fields.</li><li>♦ Locations subject to possible exposure to radioactivity.</li><li>♦ Locations close to power supplies.</li></ul> |
|               | Connect an emergency stop cutoff relay in series with the brake control relay.<br>Failure to do so may result in injury or product failure.                                                                                                                                                                                                                                                                                                                                       |
|               | Do not reverse the polarity of the battery when connecting it.<br>Reversing the polarity may damage the battery or cause it to explode.                                                                                                                                                                                                                                                                                                                                           |

## ■ Operation and Adjustment Precautions

|  <b>Caution</b> |                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | Confirm that no adverse effects will occur in the system before performing the test operation.<br>Not doing so may result in equipment damage.    |
|                 | Check the newly set parameters for proper operation before actually running them.<br>Not doing so may result in equipment damage.                 |
|                 | Do not make any extreme adjustments or setting changes.<br>Doing so may result in unstable operation and injury.                                  |
|                 | Separate the Servomotor from the machine, check for proper operation, and then connect to the machine.<br>Not doing so may cause injury.          |
|                 | When an alarm occurs, remove the cause, reset the alarm after confirming safety, and then resume operation.<br>Not doing so may result in injury. |
|                | Do not use the built-in brake of the Servomotor for ordinary braking.<br>Doing so may result in malfunction.                                      |
|               | Do not operate the Servomotor connected to a load that exceeds the applicable load moment of inertia.<br>Doing so may result in malfunction.      |


## ■ Maintenance and Inspection Precautions

|  <b>Caution</b> |                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | Resume operation only after transferring to the new Unit the contents of the data required for operation.<br>Not doing so may result in equipment damage. |
|                 | Do not attempt to disassemble or repair any of the products.<br>Any attempt to do so may result in electric shock or injury.                              |

## Precautions for Safe Use

### ■ Warning Label Position

Warning labels are located on the product as shown in the following illustration.  
Be sure to follow the instructions given there.

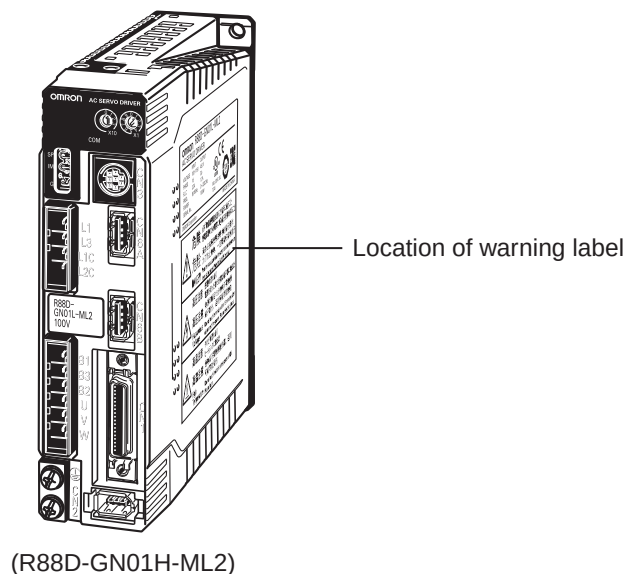

### ■ Warning Label Contents

|                                                                                     |                                                        |                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|--------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>危険</b><br><b>危険</b><br><b>DANGER</b>                | 必ず取扱説明書を読んで指示に従うこと<br>感電保護のため確実にⓍ端子を接地すること<br>请务必按照使用说明书的指示操作<br>为了防止触电，一定要接好接地端子<br>Read the manual and follow the safety instructions before use.<br>Never fail to connect Protective Earth(PE) terminal. |
|  | <b>高压注意</b><br><b>高压注意</b><br><b>Hazardous Voltage</b> | 感電の恐れあり<br>電源を切った後15分間は端子部に触るな!<br>电源切断后15分钟内不要触摸端子部分，否则可能导致触电<br>Do not touch terminals within 15 minutes after disconnect the power. Risk of electric shock.                                              |
|  | <b>高温注意</b><br><b>高温注意</b><br><b>High Temperature</b>  | やけどの恐れあり<br>ヒートシンクに触るな!<br>通电后不要触摸散热器，否则可能导致受伤<br>Do not touch heatsink when power is ON. Risk of burn.                                                                                                     |

### ■ Disposing of the Product

- Dispose of the batteries according to local ordinances and regulations. Wrap the batteries in tape or other insulative material before disposing of them.
- Dispose of the product as industrial waste.



---

# Items to Check When Unpacking

---

Check the following items after removing the product from the package.

- Has the correct product been delivered?
- Has the product been damaged in shipping?


■ **Accessories Provided with Product**

**Safety Precautions document × 1**

- No connectors or mounting screws are provided. They have to be prepared by the user.
- Should you find any problems (missing parts, damage to the Servo Drive, etc.), please contact your local sales representative or OMRON sales office.

■ **Understanding Servo Drive Model Numbers**

The model number provides information such as the Servo Drive type, the applicable Servomotor capacity, and the power supply voltage.

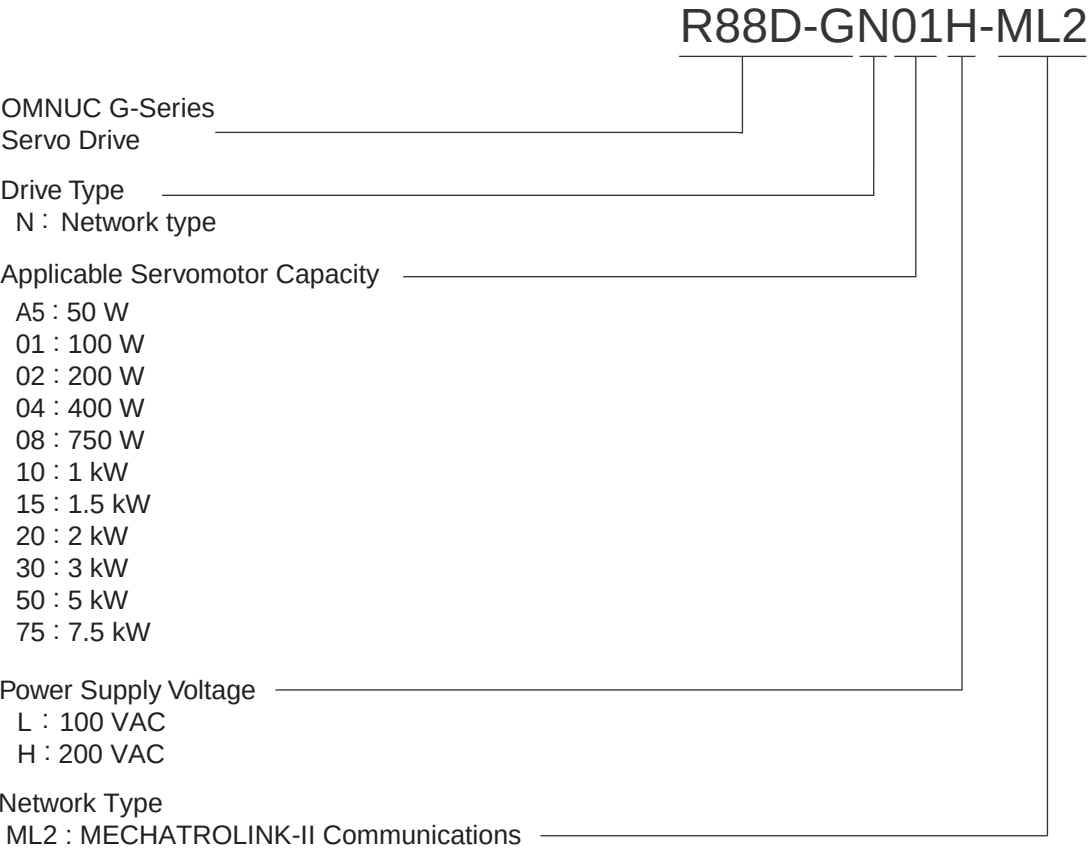



■ Understanding Decelerator Model Numbers (Backlash = 3' Max.)

R88G-HPG14A05100PBJ

Decelerator for \_\_\_\_\_  
G-Series Servomotors  
Backlash = 3' Max.

Flange Size Number \_\_\_\_\_

11A :□40  
14A :□60  
20A :□90  
32A :□120  
50A :□170  
65A :□230

Gear Ratio \_\_\_\_\_

05 :1/5  
09 :1/9 (only frame number 11A)  
11 :1/11 (except frame number 65A)  
12 :1/12 (only frame number 65A)  
20 :1/20 (only frame number 65A)  
21 :1/21 (except frame number 65A)  
25 :1/25 (only frame number 65A)  
33 :1/33  
45 :1/45

Applicable Servomotor Capacity \_\_\_\_\_

050 : 50 W  
100 :100 W  
200 :200 W  
400 :400 W  
750 :750 W  
900 :900 W  
1K0 :1 kW  
1K5 :1.5 kW  
2K0 :2 kW  
3K0 :3 kW  
4K0 :4 kW  
4K5 :4.5 kW  
5K0 :5 kW  
6K0 :6 kW  
7K5 :7 kW

Motor Type \_\_\_\_\_

Blank :3,000-r/min cylindrical Servomotors  
P :flat Servomotors  
S :2,000-r/min Servomotors  
T :1,000-r/min Servomotors

Backlash \_\_\_\_\_

B :3' max.

Option \_\_\_\_\_

Blank :Straight shaft  
J :With key and tap

Items to Check When Unpacking

■ Understanding Decelerator Model Numbers (Backlash = 15' Max.)

R88G-VRSF09B100PCJ

Decelerator for \_\_\_\_\_  
G-Series Servomotors  
Backlash = 15' Max.

Gear Ratio \_\_\_\_\_  
05 :1/5  
09 :1/9  
15 :1/15  
25 :1/25

Flange Size Number \_\_\_\_\_  
B :□52  
C :□78  
D :□98

Applicable Servomotor Capacity \_\_\_\_\_  
050 : 50 W  
100 :100 W  
200 :200 W  
400 :400 W  
750 :750 W

Motor Type \_\_\_\_\_  
Blank :3,000-r/min cylindrical Servomotors  
P :flat Servomotors

Backlash \_\_\_\_\_  
C :15' max.

Option \_\_\_\_\_  
J :With key and tap

# About This Manual

This manual consists of the following chapters. Refer to this table and chose the required chapters of the manual.

|           |                                   | Overview                                                                                                                                                                                                                                                         |
|-----------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Chapter 1 | Features and System Configuration | Describes the features and names of parts of the product as well as the EC Directives and the UL standards.                                                                                                                                                      |
| Chapter 2 | Standard Models and Dimensions    | Provides the model numbers, external and mounting hole dimensions for Servo Drives, Servomotors, Decelerators, and peripheral devices.                                                                                                                           |
| Chapter 3 | Specifications                    | Provides the general specifications, characteristics, connector specifications, and I/O circuit specifications for Servo Drives, and the general specifications and characteristics for Servomotors, as well as specifications for accessories such as encoders. |
| Chapter 4 | System Design                     | Describes the installation conditions for Servo Drives, Servomotors, and Decelerators, EMC conforming wiring methods, calculations of regenerative energy, and performance information on the External Regeneration Resistor.                                    |
| Chapter 5 | Operating Functions               | Describes the control functions, parameter settings, and operation.                                                                                                                                                                                              |
| Chapter 6 | Operation                         | Describes operating procedures and operating methods for each mode.                                                                                                                                                                                              |
| Chapter 7 | Adjustment Functions              | Describes gain adjustment functions, setting methods, and precautions.                                                                                                                                                                                           |
| Chapter 8 | Troubleshooting                   | Describes items to check for troubleshooting, error diagnoses using alarm LED displays and the countermeasures, error diagnoses based on the operation status and the countermeasures, and periodic maintenance.                                                 |
| Chapter 9 | Appendix                          | Provides the parameter tables.                                                                                                                                                                                                                                   |

# Table of Contents

---

|                                                         |      |
|---------------------------------------------------------|------|
| Introduction .....                                      | 1    |
| Read and Understand This Manual .....                   | 2    |
| Precautions for Safe Use .....                          | 5    |
| Items to Check When Unpacking .....                     | 11   |
| About This Manual .....                                 | 15   |
| Chapter 1 Features and System Configuration             |      |
| 1-1 Overview.....                                       | 1-1  |
| 1-2 System Configuration .....                          | 1-2  |
| 1-3 Names of Parts and Functions .....                  | 1-3  |
| 1-4 System Block Diagrams .....                         | 1-5  |
| 1-5 Applicable Standards.....                           | 1-10 |
| Chapter 2 Standard Models and Dimensions                |      |
| 2-1 Standard Models .....                               | 2-1  |
| 2-2 External and Mounting Hole Dimensions .....         | 2-23 |
| Chapter 3 Specifications                                |      |
| 3-1 Servo Drive Specifications.....                     | 3-1  |
| 3-2 Servomotor Specifications.....                      | 3-17 |
| 3-3 Decelerator Specifications.....                     | 3-32 |
| 3-4 Cable and Connector Specifications .....            | 3-42 |
| 3-5 Parameter Unit Specifications .....                 | 3-78 |
| 3-6 External Regeneration Resistor Specifications ..... | 3-79 |
| 3-7 Reactor Specifications.....                         | 3-80 |
| Chapter 4 System Design                                 |      |
| 4-1 Installation Conditions .....                       | 4-1  |
| 4-2 Wiring .....                                        | 4-11 |
| 4-3 Wiring Conforming to EMC Directives .....           | 4-26 |
| 4-4 Regenerative Energy Absorption.....                 | 4-44 |

## Chapter 5 Operating Functions

|      |                                               |      |
|------|-----------------------------------------------|------|
| 5-1  | Position Control .....                        | 5-1  |
| 5-2  | Speed Control .....                           | 5-4  |
| 5-3  | Torque Control .....                          | 5-7  |
| 5-4  | Forward and Reverse Drive Prohibit .....      | 5-10 |
| 5-5  | Brake Interlock .....                         | 5-11 |
| 5-6  | Torque Limit .....                            | 5-16 |
| 5-7  | Soft Start .....                              | 5-18 |
| 5-8  | Acceleration/Deceleration Time Settings ..... | 5-19 |
| 5-9  | Moving Average Time .....                     | 5-20 |
| 5-10 | Electronic Gear .....                         | 5-21 |
| 5-11 | Speed Limit .....                             | 5-22 |
| 5-12 | Sequence Input Signals .....                  | 5-23 |
| 5-13 | Sequence Output Signals .....                 | 5-25 |
| 5-14 | Backlash Compensation .....                   | 5-27 |
| 5-15 | Overrun Protection .....                      | 5-29 |
| 5-16 | Gain Switching .....                          | 5-31 |
| 5-17 | Speed Feed-forward .....                      | 5-38 |
| 5-18 | Torque Feed-forward .....                     | 5-39 |
| 5-19 | Speed Feedback Filter Selection .....         | 5-40 |
| 5-20 | P Control Switching .....                     | 5-41 |
| 5-21 | Torque Command Filter Time Constant.....      | 5-42 |
| 5-22 | Notch Filter .....                            | 5-43 |
| 5-23 | Adaptive Filter .....                         | 5-45 |
| 5-24 | Instantaneous Speed Observer .....            | 5-48 |
| 5-25 | Damping Control .....                         | 5-50 |
| 5-26 | User Parameters .....                         | 5-55 |
| 5-27 | Details on Important Parameters .....         | 5-86 |

## Chapter 6 Operation

|     |                               |      |
|-----|-------------------------------|------|
| 6-1 | Operational Procedure .....   | 6-1  |
| 6-2 | Preparing for Operation.....  | 6-2  |
| 6-3 | Using the Parameter Unit..... | 6-8  |
| 6-4 | Setting the Mode .....        | 6-9  |
| 6-5 | Trial Operation .....         | 6-31 |

## Chapter 7 Adjustment Functions

|     |                              |      |
|-----|------------------------------|------|
| 7-1 | Gain Adjustment.....         | 7-1  |
| 7-2 | Realtime Autotuning .....    | 7-3  |
| 7-3 | Normal Mode Autotuning ..... | 7-9  |
| 7-4 | Manual Tuning .....          | 7-14 |

**Table of Contents**

---

**Chapter 8 Troubleshooting**

|     |                                                              |      |
|-----|--------------------------------------------------------------|------|
| 8-1 | Error Processing .....                                       | 8-1  |
| 8-2 | Alarm Table .....                                            | 8-3  |
| 8-3 | Troubleshooting.....                                         | 8-7  |
| 8-4 | Overload Characteristics (Electronic Thermal Function) ..... | 8-20 |
| 8-5 | Periodic Maintenance .....                                   | 8-21 |

**Chapter 9 Appendix**

|     |                        |     |
|-----|------------------------|-----|
| 9-1 | Parameter Tables ..... | 9-1 |
|-----|------------------------|-----|



# Chapter 1

## Features and System Configuration

|     |                                    |      |
|-----|------------------------------------|------|
| 1-1 | Overview .....                     | 1-1  |
|     | Overview .....                     | 1-1  |
|     | Features .....                     | 1-1  |
| 1-2 | System Configuration .....         | 1-2  |
| 1-3 | Names of Parts and Functions ..... | 1-3  |
|     | Servo Drive Part Names .....       | 1-3  |
|     | Servo Drive Functions .....        | 1-4  |
| 1-4 | System Block Diagrams .....        | 1-5  |
| 1-5 | Applicable Standards .....         | 1-10 |
|     | EC Directives .....                | 1-10 |
|     | UL and CSA Standards .....         | 1-10 |

---

# 1-1 Overview

---

## Overview

The OMNUC G Series AC Servo Drives (with built-in MECHATROLINK-II communications support) are a series of Servo Drives supporting the MECHATROLINK-II high-speed motion field network. When used with the MECHATROLINK-II Position Control Unit (CJ1W-NCF71 or CS1W-NCF71), a sophisticated positioning control system can be made easily with one communications cable connecting the Servo Drive and Controller.

With realtime autotuning, adaptive filter, notch filter, and damping control, you can set up a system that provides stable operation by suppressing vibration in low-rigidity machines.

## Features

### ■ Data Transmission Using MECHATROLINK-II Communications

When used with the MECHATROLINK-II Position Control Unit (CJ1W-NCF71 or CS1W-NCF71), all control data between the Servo Drive and Controller can be exchanged through data communications.

Since the various control commands are transmitted via data communications, Servomotor's operational performance is maximized without being limited by interface specifications such as the response frequency of the encoder feedback pulses.

This makes it possible to use the Servo Drive's various control parameters and monitor data via a host controller, allowing you to unify the system data control.

### ■ Suppressing Vibration of Low-rigidity Mechanisms during Acceleration/Deceleration

The damping control function suppresses vibration of low-rigidity mechanisms or devices whose ends tend to vibrate.

Two vibration filters are provided to enable switching the vibration frequency automatically according to the direction of the rotation. Furthermore, the settings can be made easily by just setting the vibration frequency and filter values, and you are assured of stable operation even if the settings are inappropriate.

### ■ High-speed Positioning via Resonance Suppression Control

The realtime autotuning function automatically estimates the load inertia of the machine in realtime and sets the optimal gain.


The adaptive filter automatically suppresses vibration caused by resonance.

Two independent notch filters make it possible to reduce the vibration of a mechanism with multiple resonance frequencies.

### ■ Command Control Mode Switching


Operations can be performed by switching between two of the following control modes: Position control, speed control, and torque control. Therefore, a variety of applications can be supported by one Servo Drive.

# 1-2 System Configuration

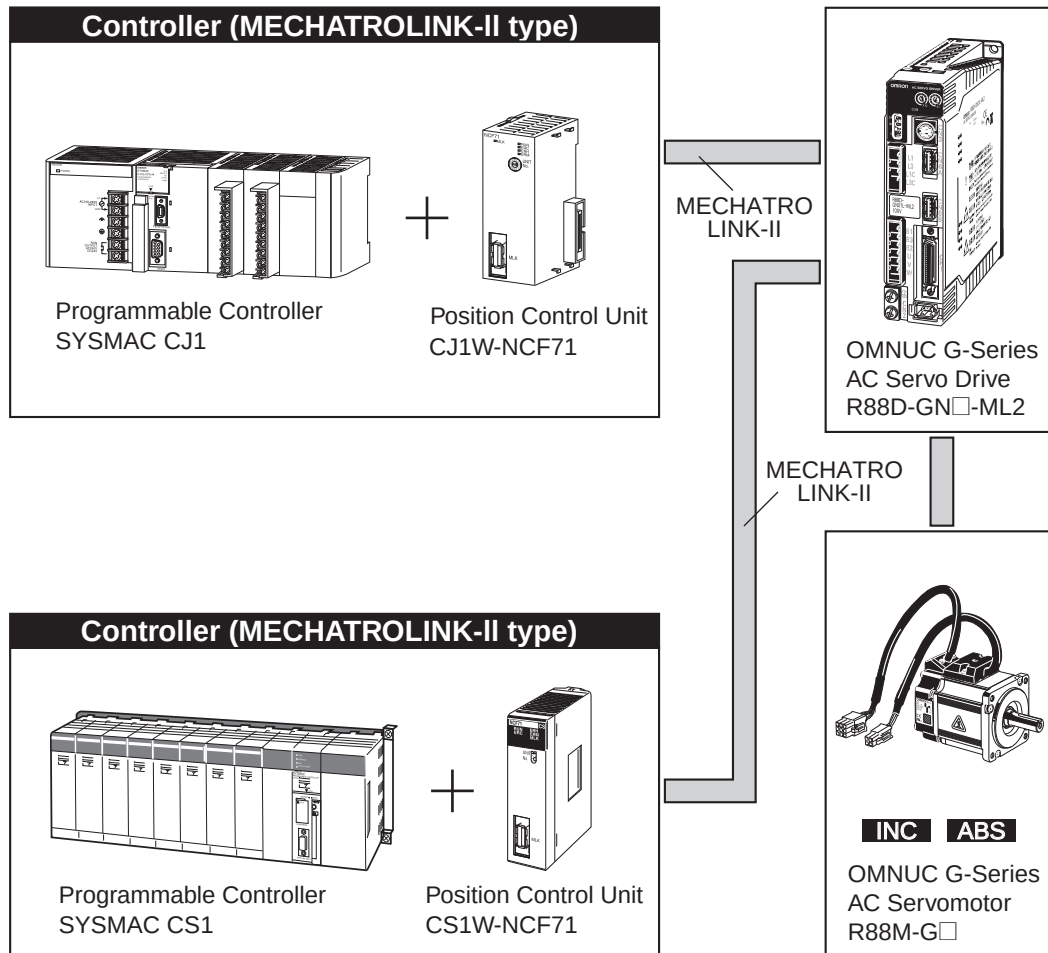

# 1-3 Names of Parts and Functions

## Servo Drive Part Names

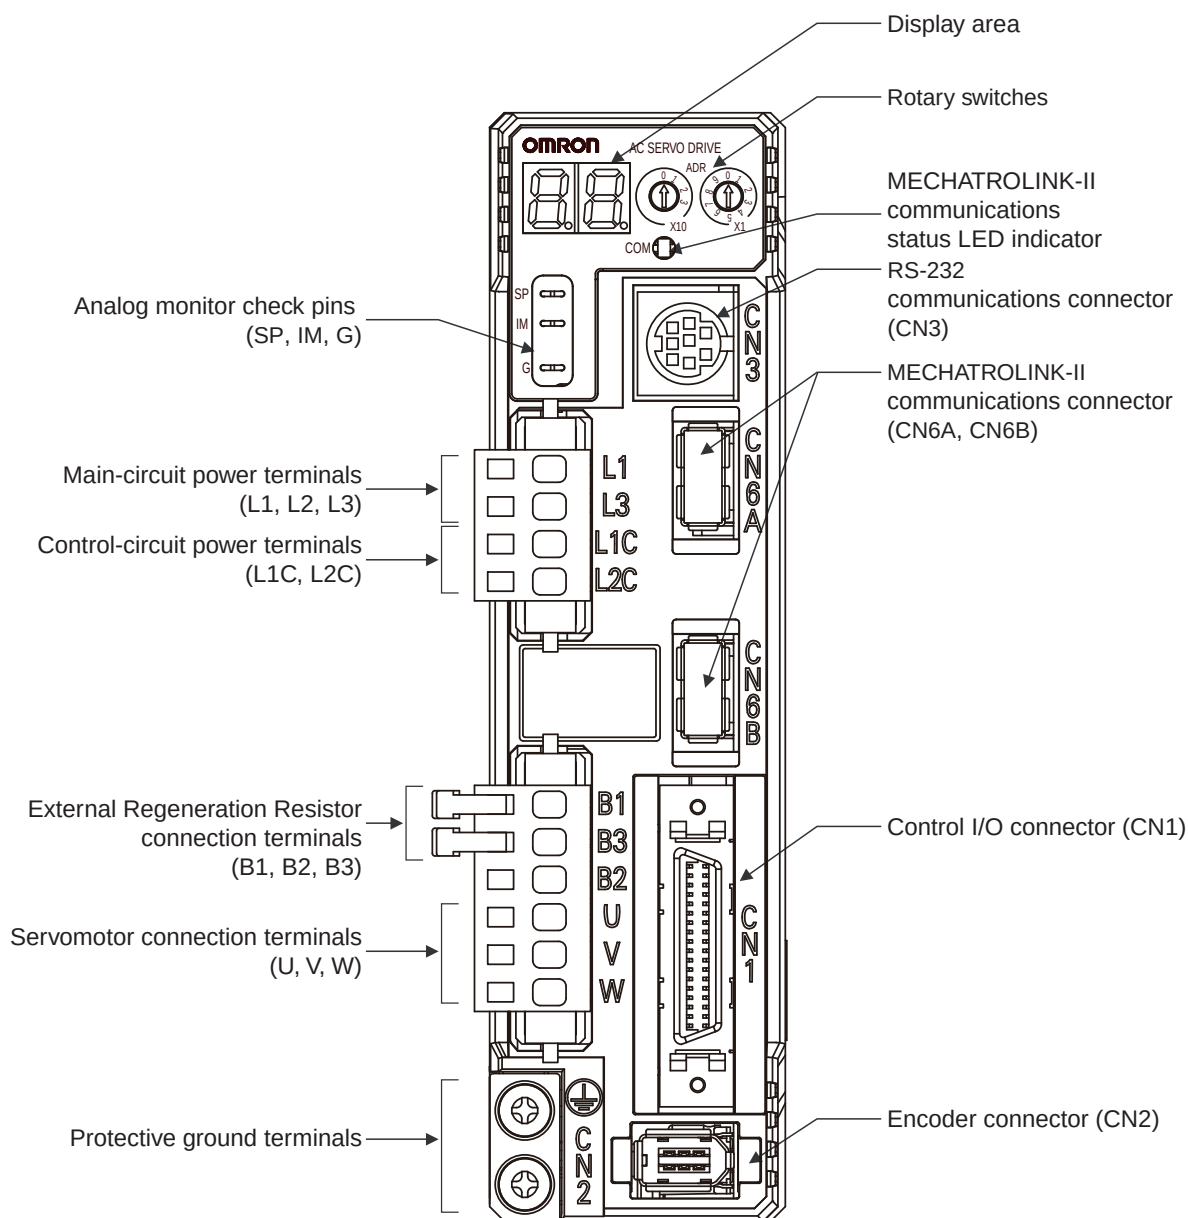

## Servo Drive Functions

### ■ Display Area

A 2-digit 7-segment LED display shows the Servo Drive status, alarm codes, parameters, and other information.

### ■ Analog Monitor Check Pins (SP, IM, and G)

The actual motor speed, command speed, torque, and number of accumulated pulses can be measured based on the analog voltage level by using an oscilloscope.

Set the type of signal to be output and the output voltage level by setting the Speed Monitor (SP) Selection (Pn007) and Torque Monitor (IM) Selection (Pn008).

For details, refer to *User Parameters* on page 5-55.

### ■ MECHATROLINK-II Status LED Indicator

Indicates the communications status of the MECHATROLINK-II.

For details, refer to *MECHATROLINK-II Status LED Indicator* on page 6-4.


### ■ Rotary Switches

Sets the node address.


For details, refer to *Servo Drive Display and Settings* on page 6-3.

# 1-4 System Block Diagrams


R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN01H-ML2/  
-GN02H-ML2/-GN04H-ML2

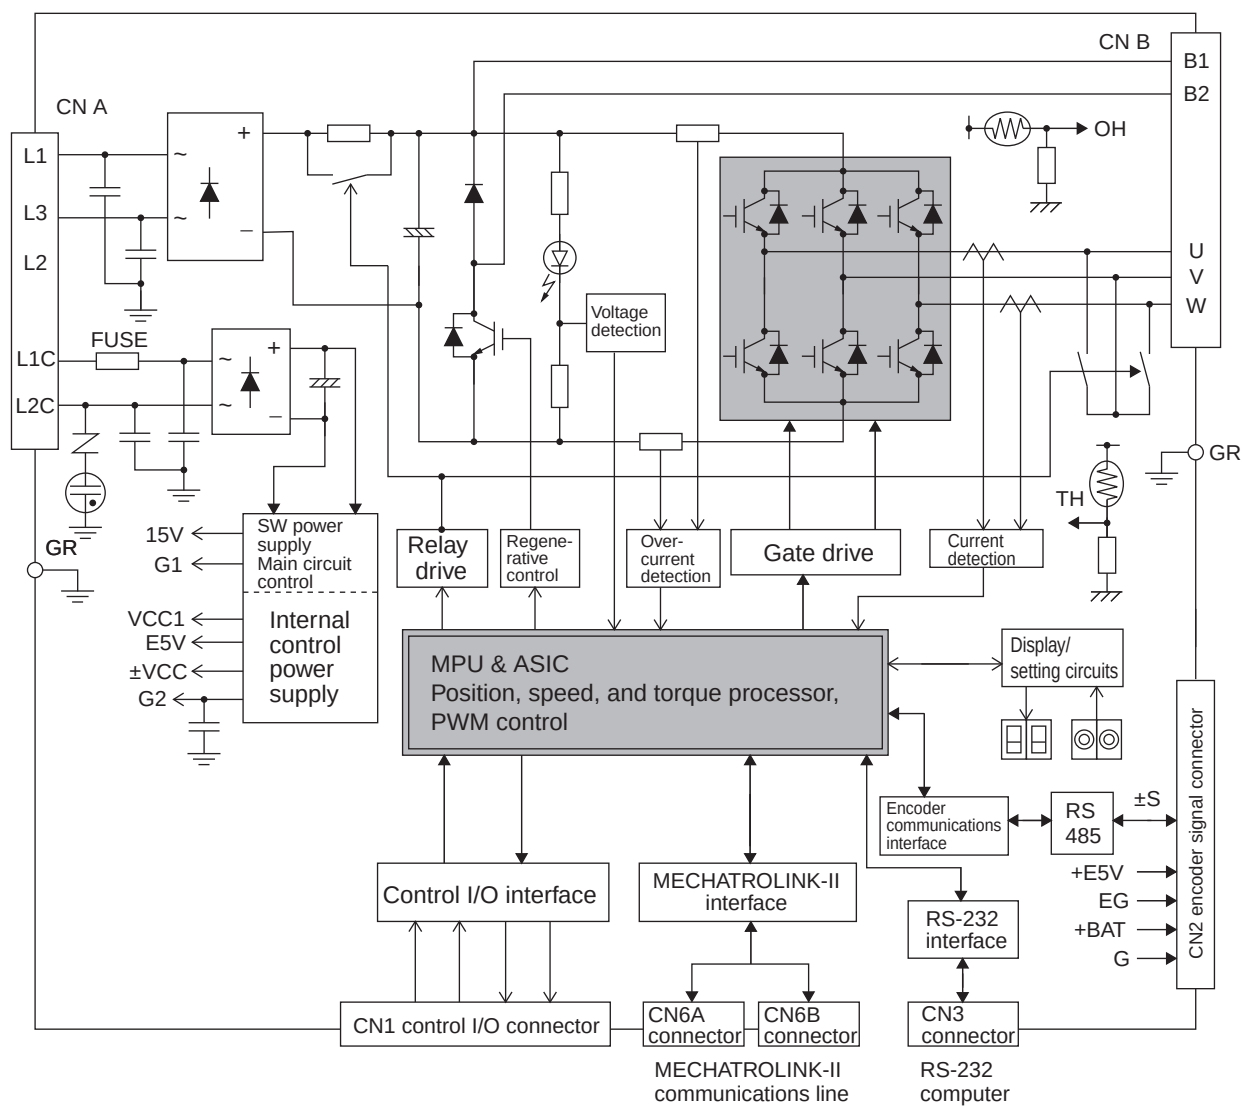

## R88D-GN04L-ML2/-GN08H-ML2/-GN10H-ML2/-GN15H-ML2

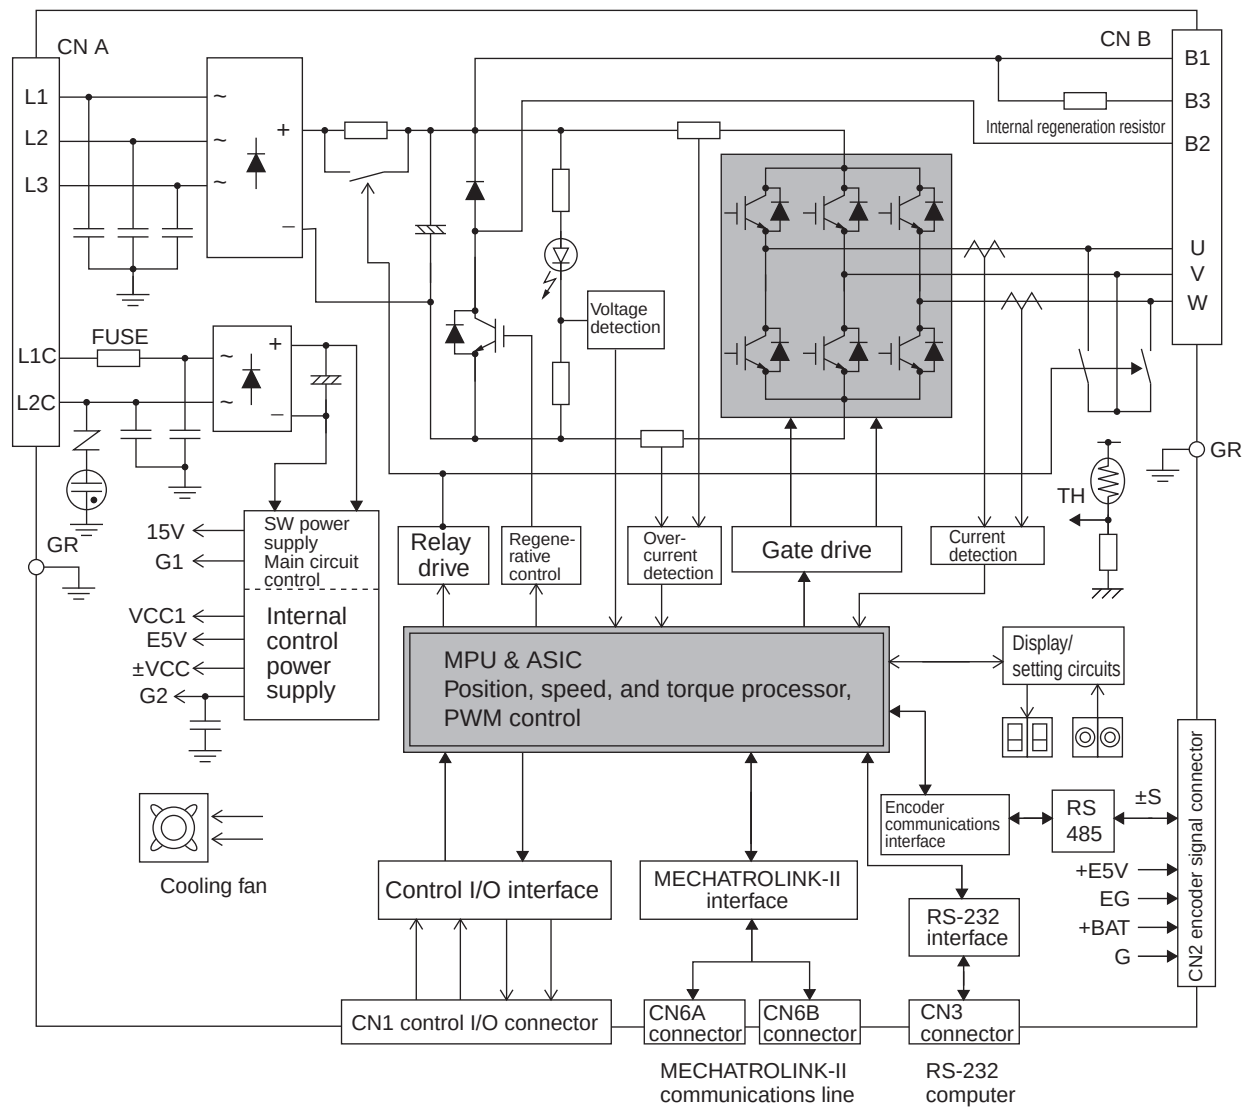


R88D-GN20H-ML2

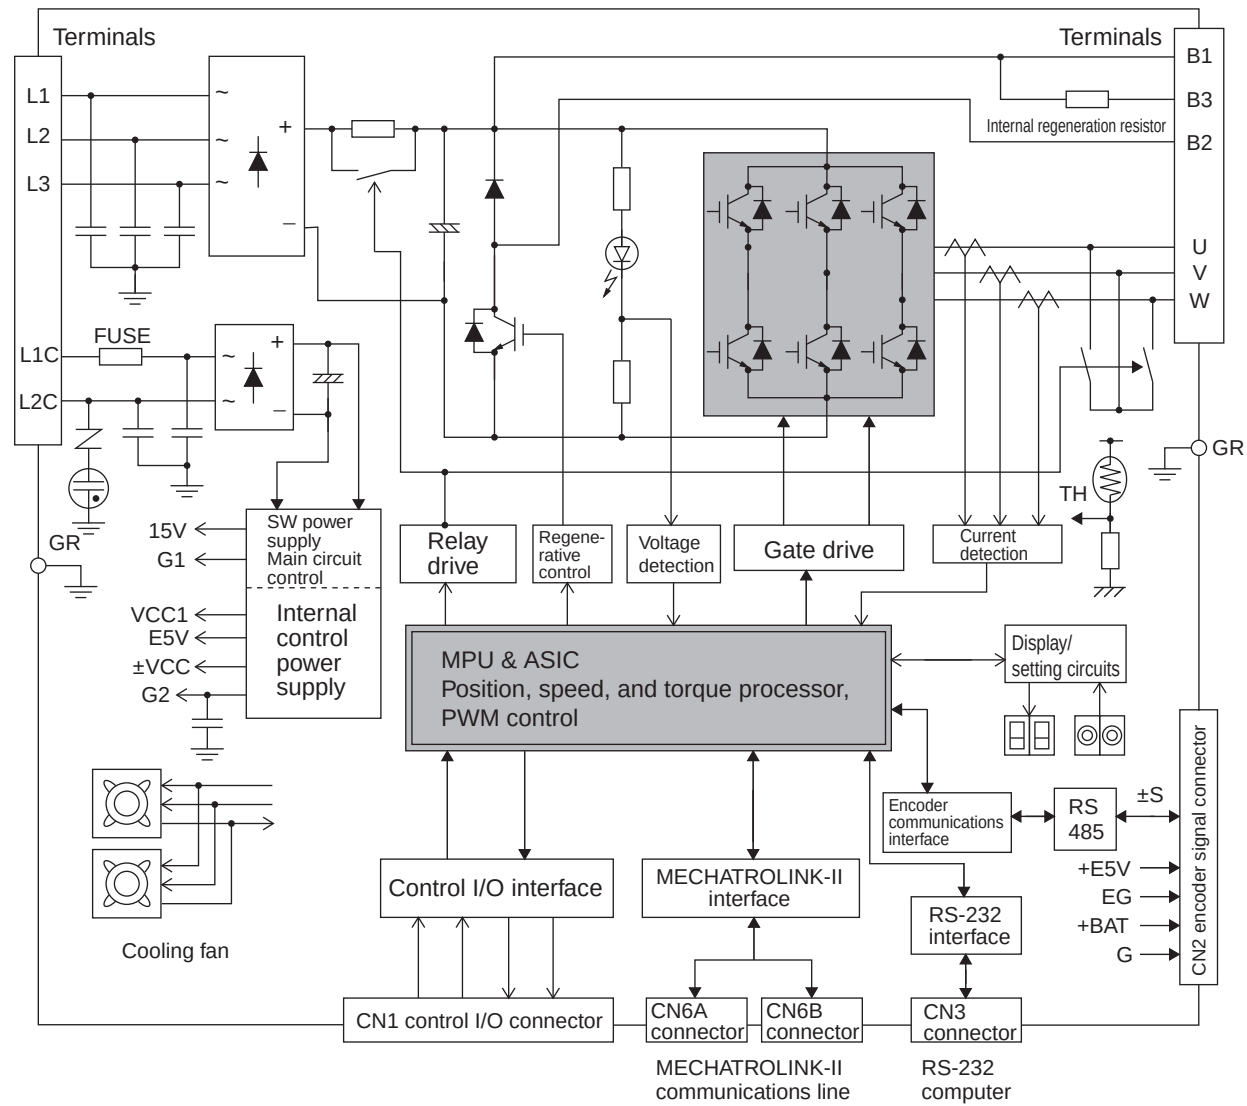




## R88D-GN30H-ML2/GN50H-ML2

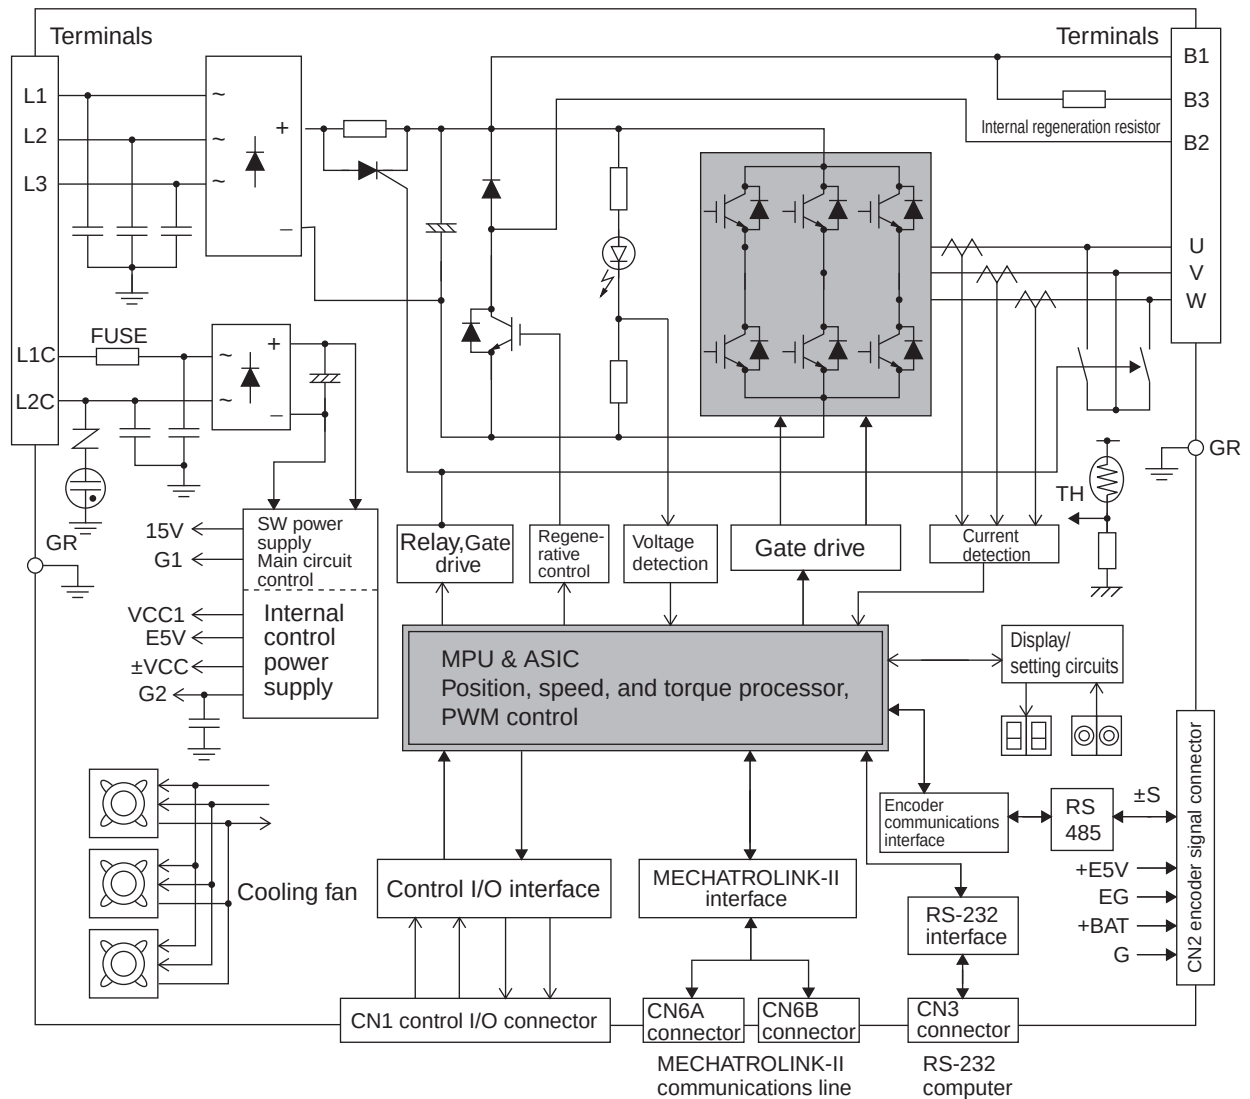

R88D-GN75H-ML2

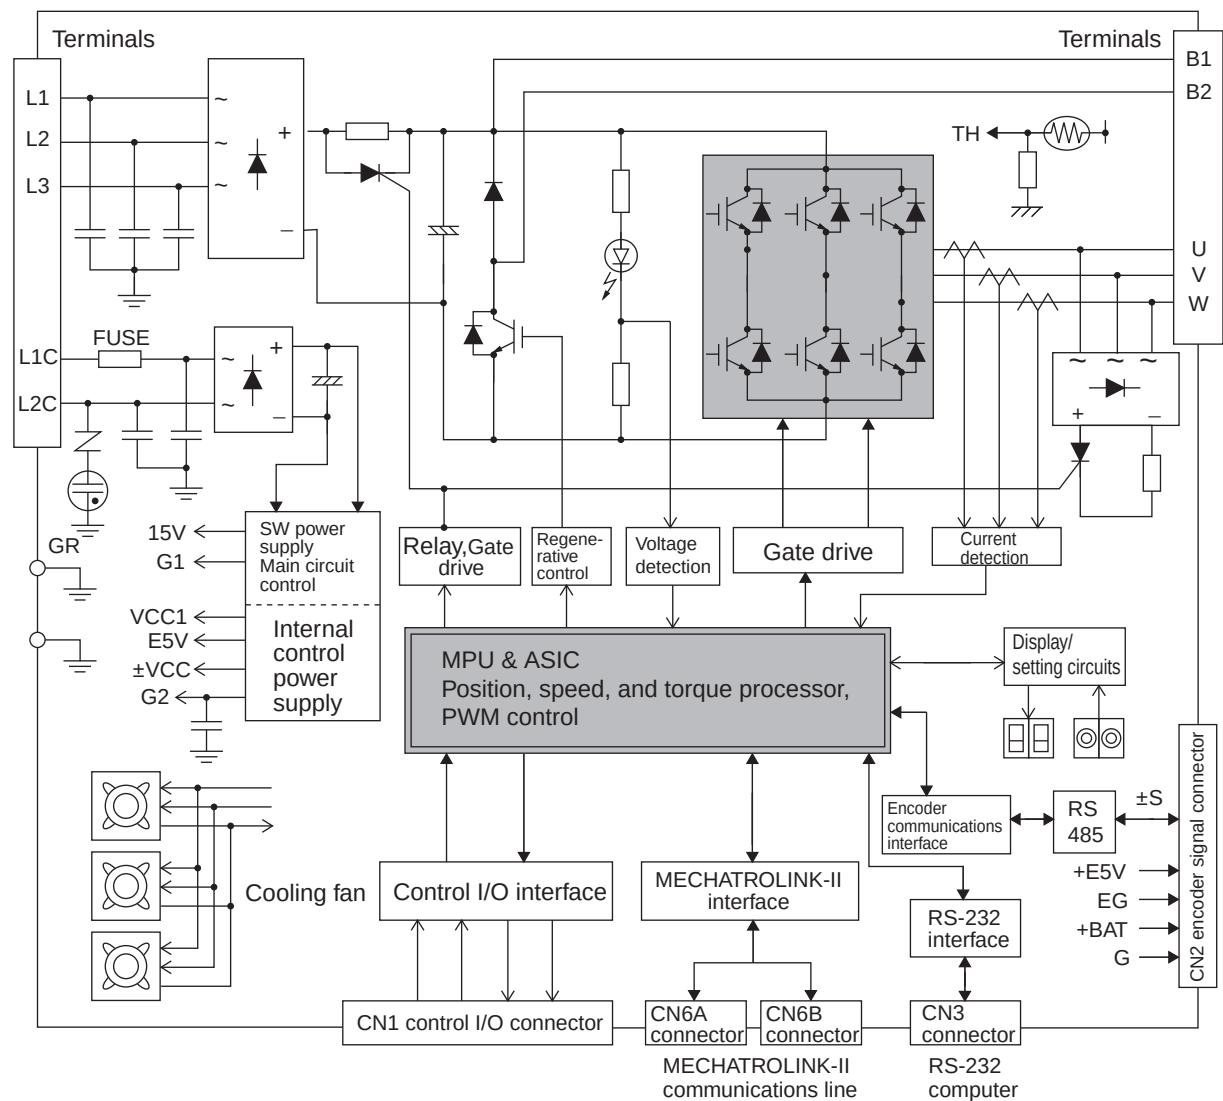

# 1-5 Applicable Standards

## EC Directives

| EC Direc-<br>tives       | Product                          | Applicable standards     | Comments                                                                                                              |
|--------------------------|----------------------------------|--------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Low Voltage<br>Directive | AC Servo Drive                   | EN 50178                 | Safety requirements for electrical equipment for measurement, control, or laboratory use                              |
|                          | AC Servomotors                   | IEC 60034-1/-5           | Rotating electrical machines                                                                                          |
| EMC<br>Directive         | AC Servo Drive<br>AC Servomotors | EN 55011 Class A Group 1 | Limits of radio disturbance and measurement methods for industrial, scientific, and medical radio-frequency equipment |
|                          |                                  | EN 61000-6-2             | Electromagnetic compatibility (EMC) Immunity standard for industrial environments                                     |
|                          |                                  | IEC 61000-4-2            | Electrostatic discharge immunity testing                                                                              |
|                          |                                  | IEC 61000-4-3            | Radio frequency radiation field immunity testing                                                                      |
|                          |                                  | IEC 61000-4-4            | Electrical fast transient burst immunity testing                                                                      |
|                          |                                  | IEC 61000-4-5            | Lightning surge immunity testing                                                                                      |
|                          |                                  | IEC 61000-4-6            | High-frequency conduction immunity testing                                                                            |
|                          |                                  | IEC 61000-4-11           | Momentary power interruption immunity testing                                                                         |

**Note** To conform to the EMC Directives, the Servomotor and Servo Drive must be installed under the conditions described in *Wiring Conforming to EMC Directives* on page 4-26.

## UL and CSA Standards

| Standard         | Product                      | Applicable standards | File number | Comments                   |
|------------------|------------------------------|----------------------|-------------|----------------------------|
| UL<br>standards  | AC Servo Drive               | UL 508C              | E179149     | Power conversion equipment |
|                  | AC Servomotors <sup>*1</sup> | UL 1004              | E179189     | Electric motor             |
| CSA<br>standards | AC Servomotors <sup>*1</sup> | CSA22.2 No.100       | E179189     | Motor and generator        |

<sup>\*1</sup>. UL approval is pending for motor capacities of 6 to 7.5 kW.



# Chapter 2

## Standard Models and Dimensions

|     |                                                 |      |
|-----|-------------------------------------------------|------|
| 2-1 | Standard Models .....                           | 2-1  |
|     | Servo Drives .....                              | 2-1  |
|     | Servomotors.....                                | 2-2  |
|     | Servo Drive-Servomotor Combinations .....       | 2-5  |
|     | Decelerators.....                               | 2-7  |
|     | Accessories and Cables .....                    | 2-14 |
| 2-2 | External and Mounting Hole Dimensions .....     | 2-23 |
|     | Servo Drives .....                              | 2-23 |
|     | Servomotors.....                                | 2-33 |
|     | Parameter Unit Dimensions .....                 | 2-43 |
|     | Servomotor and Decelerator Combinations.....    | 2-44 |
|     | Decelerator Dimensions.....                     | 2-47 |
|     | External Regeneration Resistor Dimensions ..... | 2-61 |
|     | Reactor Dimensions.....                         | 2-62 |

# 2-1 Standard Models

## Servo Drives

| Specifications                   |        | Model          |
|----------------------------------|--------|----------------|
| Single-phase 100 VAC             | 50 W   | R88D-GNA5L-ML2 |
|                                  | 100 W  | R88D-GN01L-ML2 |
|                                  | 200 W  | R88D-GN02L-ML2 |
|                                  | 400 W  | R88D-GN04L-ML2 |
| Single-phase 200 VAC             | 50 W   | R88D-GN01H-ML2 |
|                                  | 100 W  |                |
|                                  | 200 W  | R88D-GN02H-ML2 |
|                                  | 400 W  | R88D-GN04H-ML2 |
| Single-phase/three-phase 200 VAC | 750 W  | R88D-GN08H-ML2 |
|                                  | 1 kW   | R88D-GN10H-ML2 |
|                                  | 900 W  | R88D-GN15H-ML2 |
|                                  | 1 kW   |                |
|                                  | 1.5 kW |                |
| Three-phase 200 VAC              | 2 kW   | R88D-GN20H-ML2 |
|                                  | 2 kW   | R88D-GN30H-ML2 |
|                                  | 3 kW   |                |
|                                  | 3 kW   | R88D-GN50H-ML2 |
|                                  | 4 kW   |                |
|                                  | 4.5 kW |                |
|                                  | 5 kW   | R88D-GN75H-ML2 |
|                                  | 6 kW   |                |
|                                  | 7.5 kW |                |

## Servomotors

### ■ 3,000-r/min Servomotors

| Specifications   |       |       | Model                         |                                    |                               |                                    |
|------------------|-------|-------|-------------------------------|------------------------------------|-------------------------------|------------------------------------|
|                  |       |       | With incremental encoder      |                                    | With absolute encoder         |                                    |
|                  |       |       | Straight shaft<br>without key | Straight shaft<br>with key and tap | Straight shaft<br>without key | Straight shaft<br>with key and tap |
| Without<br>brake | 100 V | 50 W  | R88M-G05030H                  | R88M-G05030H-S2                    | R88M-G05030T                  | R88M-G05030T-S2                    |
|                  |       | 100 W | R88M-G10030L                  | R88M-G10030L-S2                    | R88M-G10030S                  | R88M-G10030S-S2                    |
|                  |       | 200 W | R88M-G20030L                  | R88M-G20030L-S2                    | R88M-G20030S                  | R88M-G20030S-S2                    |
|                  |       | 400 W | R88M-G40030L                  | R88M-G40030L-S2                    | R88M-G40030S                  | R88M-G40030S-S2                    |
|                  | 200 V | 50 W  | R88M-G05030H                  | R88M-G05300H-S2                    | R88M-G05030T                  | R88M-G05030T-S2                    |
|                  |       | 100 W | R88M-G10030H                  | R88M-G10030H-S2                    | R88M-G10030T                  | R88M-G10030T-S2                    |
|                  |       | 200 W | R88M-G20030H                  | R88M-G20030H-S2                    | R88M-G20030T                  | R88M-G20030T-S2                    |
|                  |       | 400 W | R88M-G40030H                  | R88M-G40030H-S2                    | R88M-G40030T                  | R88M-G40030T-S2                    |
|                  |       | 750 W | R88M-G75030H                  | R88M-G75030H-S2                    | R88M-G75030T                  | R88M-G75030T-S2                    |
|                  |       | 1 kW  | ---                           | ---                                | R88M-G1K030T                  | R88M-G1K030T-S2                    |
|                  |       | 1.5kW | ---                           | ---                                | R88M-G1K530T                  | R88M-G1K530T-S2                    |
|                  |       | 2 kW  | ---                           | ---                                | R88M-G2K030T                  | R88M-G2K030T-S2                    |
|                  |       | 3 kW  | ---                           | ---                                | R88M-G3K030T                  | R88M-G3K030T-S2                    |
|                  |       | 4 kW  | ---                           | ---                                | R88M-G4K030T                  | R88M-G4K030T-S2                    |
|                  |       | 5 kW  | ---                           | ---                                | R88M-G5K030T                  | R88M-G5K030T-S2                    |
| With<br>brake    | 100 V | 50 W  | R88M-G05030H-B                | R88M-G05030H-BS2                   | R88M-G05030T-B                | R88M-G05030T-BS2                   |
|                  |       | 100 W | R88M-G10030L-B                | R88M-G10030L-BS2                   | R88M-G10030S-B                | R88M-G10030S-BS2                   |
|                  |       | 200 W | R88M-G20030L-B                | R88M-G20030L-BS2                   | R88M-G20030S-B                | R88M-G20030S-BS2                   |
|                  |       | 400 W | R88M-G40030L-B                | R88M-G40030L-BS2                   | R88M-G40030S-B                | R88M-G40030S-BS2                   |
|                  | 200 V | 50 W  | R88M-G05030H-B                | R88M-G05030H-BS2                   | R88M-G05030T-B                | R88M-G05030T-BS2                   |
|                  |       | 100 W | R88M-G10030H-B                | R88M-G10030H-BS2                   | R88M-G10030T-B                | R88M-G10030T-BS2                   |
|                  |       | 200 W | R88M-G20030H-B                | R88M-G20030H-BS2                   | R88M-G20030T-B                | R88M-G20030T-BS2                   |
|                  |       | 400 W | R88M-G40030H-B                | R88M-G40030H-BS2                   | R88M-G40030T-B                | R88M-G40030T-BS2                   |
|                  |       | 750 W | R88M-G75030H-B                | R88M-G75030H-BS2                   | R88M-G75030T-B                | R88M-G75030T-BS2                   |
|                  |       | 1 kW  | ---                           | ---                                | R88M-G1K030T-B                | R88M-G1K030T-BS2                   |
|                  |       | 1.5kW | ---                           | ---                                | R88M-G1K530T-B                | R88M-G1K530T-BS2                   |
|                  |       | 2 kW  | ---                           | ---                                | R88M-G2K030T-B                | R88M-G2K030T-BS2                   |
|                  |       | 3 kW  | ---                           | ---                                | R88M-G3K030T-B                | R88M-G3K030T-BS2                   |
|                  |       | 4 kW  | ---                           | ---                                | R88M-G4K030T-B                | R88M-G4K030T-BS2                   |
|                  |       | 5 kW  | ---                           | ---                                | R88M-G5K030T-B                | R88M-G5K030T-BS2                   |

**Note** Models with oil seals are also available.

## 2-1 Standard Models

### ■ 3,000-r/min Flat Servomotors

| Specifications |       |       | Model                      |                                 |                            |                                 |
|----------------|-------|-------|----------------------------|---------------------------------|----------------------------|---------------------------------|
|                |       |       | With incremental encoder   |                                 | With absolute encoder      |                                 |
|                |       |       | Straight shaft without key | Straight shaft with key and tap | Straight shaft without key | Straight shaft with key and tap |
| Without brake  | 100 V | 100 W | R88M-GP10030L              | R88M-GP10030L-S2                | R88M-GP10030S              | R88M-GP10030S-S2                |
|                |       | 200 W | R88M-GP20030L              | R88M-GP20030L-S2                | R88M-GP20030S              | R88M-GP20030S-S2                |
|                |       | 400 W | R88M-GP40030L              | R88M-GP40030L-S2                | R88M-GP40030S              | R88M-GP40030S-S2                |
|                | 200 V | 100 W | R88M-GP10030H              | R88M-GP10030H-S2                | R88M-GP10030T              | R88M-GP10030T-S2                |
|                |       | 200 W | R88M-GP20030H              | R88M-GP20030H-S2                | R88M-GP20030T              | R88M-GP20030T-S2                |
|                |       | 400 W | R88M-GP40030H              | R88M-GP40030H-S2                | R88M-GP40030T              | R88M-GP40030T-S2                |
| With brake     | 100 V | 100 W | R88M-GP10030L-B            | R88M-GP10030L-BS2               | R88M-GP10030S-B            | R88M-GP10030S-BS2               |
|                |       | 200 W | R88M-GP20030L-B            | R88M-GP20030L-BS2               | R88M-GP20030S-B            | R88M-GP20030S-BS2               |
|                |       | 400 W | R88M-GP40030L-B            | R88M-GP40030L-BS2               | R88M-GP40030S-B            | R88M-GP40030S-BS2               |
|                | 200 V | 100 W | R88M-GP10030H-B            | R88M-GP10030H-BS2               | R88M-GP10030T-B            | R88M-GP10030T-BS2               |
|                |       | 200 W | R88M-GP20030H-B            | R88M-GP20030H-BS2               | R88M-GP20030T-B            | R88M-GP20030T-BS2               |
|                |       | 400 W | R88M-GP40030H-B            | R88M-GP40030H-BS2               | R88M-GP40030T-B            | R88M-GP40030T-BS2               |

**Note** Models with oil seals are also available.

### ■ 2,000-r/min Servomotors

| Specifications |       |        | Model                      |                                 |
|----------------|-------|--------|----------------------------|---------------------------------|
|                |       |        | With absolute encoder      |                                 |
|                |       |        | Straight shaft without key | Straight shaft with key and tap |
| Without brake  | 200 V | 1 kW   | R88M-G1K020T               | R88M-G1K020T-S2                 |
|                |       | 1.5 kW | R88M-G1K520T               | R88M-G1K520T-S2                 |
|                |       | 2 kW   | R88M-G2K020T               | R88M-G2K020T-S2                 |
|                |       | 3 kW   | R88M-G3K020T               | R88M-G3K020T-S2                 |
|                |       | 4 kW   | R88M-G4K020T               | R88M-G4K020T-S2                 |
|                |       | 5 kW   | R88M-G5K020T               | R88M-G5K020T-S2                 |
|                |       | 7.5 kW | R88M-G7K515T               | R88M-G7K515T-S2                 |
| With brake     | 200 V | 1 kW   | R88M-G1K020T-B             | R88M-G1K020T-BS2                |
|                |       | 1.5 kW | R88M-G1K520T-B             | R88M-G1K520T-BS2                |
|                |       | 2 kW   | R88M-G2K020T-B             | R88M-G2K020T-BS2                |
|                |       | 3 kW   | R88M-G3K020T-B             | R88M-G3K020T-BS2                |
|                |       | 4 kW   | R88M-G4K020T-B             | R88M-G4K020T-BS2                |
|                |       | 5 kW   | R88M-G5K020T-B             | R88M-G5K020T-BS2                |
|                |       | 7.5 kW | R88M-G7K515T-B             | R88M-G7K515T-BS2                |

**Note 1.** Models with oil seals are also available.

**Note 2.** The rated rotation speed for 7.5-kW Servomotors is 1,500 r/min.



■ 1,000-r/min Servomotors

| Specifications        |       |        | Model                         |                                    |
|-----------------------|-------|--------|-------------------------------|------------------------------------|
|                       |       |        | With absolute encoder         |                                    |
|                       |       |        | Straight shaft<br>without key | Straight shaft<br>with key and tap |
| With-<br>out<br>brake | 200 V | 900 W  | R88M-G90010T                  | R88M-G90010T-S2                    |
|                       |       | 2 kW   | R88M-G2K010T                  | R88M-G2K010T-S2                    |
|                       |       | 3 kW   | R88M-G3K010T                  | R88M-G3K010T-S2                    |
|                       |       | 4.5 kW | R88M-G4K510T                  | R88M-G4K510T-S2                    |
|                       |       | 6 kW   | R88M-G6K010T                  | R88M-G6K010T-S2                    |
| With<br>brake         | 200 V | 900 W  | R88M-G90010T-B                | R88M-G90010T-BS2                   |
|                       |       | 2 kW   | R88M-G2K010T-B                | R88M-G2K010T-BS2                   |
|                       |       | 3 kW   | R88M-G3K010T-B                | R88M-G3K010T-BS2                   |
|                       |       | 4.5 kW | R88M-G4K510T-B                | R88M-G4K510T-BS2                   |
|                       |       | 6 kW   | R88M-G6K010T-B                | R88M-G6K010T-BS2                   |

**Note** Models with oil seals are also available.

## Servo Drive-Servomotor Combinations

The tables in this section show the possible combinations of OMNUC G-Series Servo Drives and Servomotors. The Servomotors and Servo Drives can only be used in the listed combinations. The box (-□) at the end of the model number is for options, such as the shaft type, brake and Decelerators.

### ■ 3,000-r/min Servomotors and Servo Drives

| Voltage                        | Servomotor   |                          |                       | Servo Drive    |
|--------------------------------|--------------|--------------------------|-----------------------|----------------|
|                                | Rated output | With incremental encoder | With absolute encoder |                |
| 100 V                          | 50 W         | R88M-G05030H-□           | R88M-G05030T-□        | R88D-GNA5L-ML2 |
|                                | 100 W        | R88M-G10030L-□           | R88M-G10030S-□        | R88D-GN01L-ML2 |
|                                | 200 W        | R88M-G20030L-□           | R88M-G20030S-□        | R88D-GN02L-ML2 |
|                                | 400 W        | R88M-G40030L-□           | R88M-G40030S-□        | R88D-GN04L-ML2 |
| Single-phase 200 V             | 50 W         | R88M-G05030H-□           | R88M-G05030T-□        | R88D-GN01H-ML2 |
|                                | 100 W        | R88M-G10030H-□           | R88M-G10030T-□        | R88D-GN01H-ML2 |
|                                | 200 W        | R88M-G20030H-□           | R88M-G20030T-□        | R88D-GN02H-ML2 |
|                                | 400 W        | R88M-G40030H-□           | R88M-G40030T-□        | R88D-GN04H-ML2 |
| Single-phase/three-phase 200 V | 750 W        | R88M-G75030H-□           | R88M-G75030T-□        | R88D-GN08H-ML2 |
|                                | 1 kW         | ---                      | R88M-G1K030T-□        | R88D-GN15H-ML2 |
|                                | 1.5 kW       | ---                      | R88M-G1K530T-□        | R88D-GN15H-ML2 |
|                                | 2 kW         | ---                      | R88M-G2K030T-□        | R88D-GN20H-ML2 |
| Three-phase 200 V              | 3 kW         | ---                      | R88M-G3K030T-□        | R88D-GN30H-ML2 |
|                                | 4 kW         | ---                      | R88M-G4K030T-□        | R88D-GN50H-ML2 |
|                                | 5 kW         | ---                      | R88M-G5K030T-□        | R88D-GN50H-ML2 |

### ■ 3,000-r/min Flat Servomotors and Servo Drives

| Voltage            | Servomotor   |                          |                       | Servo Drive    |
|--------------------|--------------|--------------------------|-----------------------|----------------|
|                    | Rated output | With incremental encoder | With absolute encoder |                |
| 100 V              | 100 W        | R88M-GP10030L-□          | R88M-GP10030S-□       | R88D-GN01L-ML2 |
|                    | 200 W        | R88M-GP20030L-□          | R88M-GP20030S-□       | R88D-GN02L-ML2 |
|                    | 400 W        | R88M-GP40030L-□          | R88M-GP40030S-□       | R88D-GN04L-ML2 |
| Single-phase 200 V | 100 W        | R88M-GP10030H-□          | R88M-GP10030T-□       | R88D-GN01H-ML2 |
|                    | 200 W        | R88M-GP20030H-□          | R88M-GP20030T-□       | R88D-GN02H-ML2 |
|                    | 400 W        | R88M-GP40030H-□          | R88M-GP40030T-□       | R88D-GN04H-ML2 |

### ■ 2,000-r/min Servomotors and Servo Drives

| Voltage                        | Servomotor   |                       | Servo Drive    |
|--------------------------------|--------------|-----------------------|----------------|
|                                | Rated output | With absolute encoder |                |
| Single-phase/three-phase 200 V | 1 kW         | R88M-G1K020T-□        | R88D-GN10H-ML2 |
|                                | 1.5 kW       | R88M-G1K520T-□        | R88D-GN15H-ML2 |
| Three-phase 200 V              | 2 kW         | R88M-G2K020T-□        | R88D-GN20H-ML2 |
|                                | 3 kW         | R88M-G3K020T-□        | R88D-GN30H-ML2 |
|                                | 4 kW         | R88M-G4K020T-□        | R88D-GN50H-ML2 |
|                                | 5 kW         | R88M-G5K020T-□        | R88D-GN50H-ML2 |
|                                | 7.5 kW       | R88M-G7K515T-□        | R88D-GN75H-ML2 |

### ■ 1,000-r/min Servomotors and Servo Drives

| Voltage                        | Servomotor   |                       | Servo Drive    |
|--------------------------------|--------------|-----------------------|----------------|
|                                | Rated output | With absolute encoder |                |
| Single-phase/three-phase 200 V | 900 W        | R88M-G90010T-□        | R88D-GN15H-ML2 |
| Three-phase 200 V              | 2 kW         | R88M-G2K010T-□        | R88D-GN30H-ML2 |
|                                | 3 kW         | R88M-G3K010T-□        | R88D-GN50H-ML2 |
|                                | 4.5 kW       | R88M-G4K510T-□        | R88D-GN50H-ML2 |
|                                | 6 kW         | R88M-G6K010T-□        | R88D-GN75H-ML2 |

## Decelerators

The following types of Decelerators are available for OMNUC G-Series Servomotors. Select a Decelerator based on the Servomotor capacity.

### ■ Backlash = 3' Max.

#### Decelerators for 3,000-r/min Servomotors

| Specifications |            | Model              |
|----------------|------------|--------------------|
| Motor capacity | Gear ratio |                    |
| 50 W           | 1/5        | R88G-HPG11A05100B□ |
|                | 1/9        | R88G-HPG11A09050B□ |
|                | 1/21       | R88G-HPG14A21100B□ |
|                | 1/33       | R88G-HPG14A33050B□ |
|                | 1/45       | R88G-HPG14A45050B□ |
| 100 W          | 1/5        | R88G-HPG11A05100B□ |
|                | 1/11       | R88G-HPG14A11100B□ |
|                | 1/21       | R88G-HPG14A21100B□ |
|                | 1/33       | R88G-HPG20A33100B□ |
|                | 1/45       | R88G-HPG20A45100B□ |
| 200 W          | 1/5        | R88G-HPG14A05200B□ |
|                | 1/11       | R88G-HPG14A11200B□ |
|                | 1/21       | R88G-HPG20A21200B□ |
|                | 1/33       | R88G-HPG20A33200B□ |
|                | 1/45       | R88G-HPG20A45200B□ |
| 400 W          | 1/5        | R88G-HPG14A05400B□ |
|                | 1/11       | R88G-HPG20A11400B□ |
|                | 1/21       | R88G-HPG20A21400B□ |
|                | 1/33       | R88G-HPG32A33400B□ |
|                | 1/45       | R88G-HPG32A45400B□ |
| 750 W          | 1/5        | R88G-HPG20A05750B□ |
|                | 1/11       | R88G-HPG20A11750B□ |
|                | 1/21       | R88G-HPG32A21750B□ |
|                | 1/33       | R88G-HPG32A33750B□ |
|                | 1/45       | R88G-HPG32A45750B□ |

| Specifications |            | Model              |
|----------------|------------|--------------------|
| Motor capacity | Gear ratio |                    |
| 1 kW           | 1/5        | R88G-HPG32A051K0B□ |
|                | 1/11       | R88G-HPG32A111K0B□ |
|                | 1/21       | R88G-HPG32A211K0B□ |
|                | 1/33       | R88G-HPG32A331K0B□ |
|                | 1/45       | R88G-HPG50A451K0B□ |
| 1.5 kW         | 1/5        | R88G-HPG32A052K0B□ |
|                | 1/11       | R88G-HPG32A112K0B□ |
|                | 1/21       | R88G-HPG32A211K5B□ |
|                | 1/33       | R88G-HPG50A332K0B□ |
|                | 1/45       | R88G-HPG50A451K5B□ |
| 2 kW           | 1/5        | R88G-HPG32A052K0B□ |
|                | 1/11       | R88G-HPG32A112K0B□ |
|                | 1/21       | R88G-HPG50A212K0B□ |
|                | 1/33       | R88G-HPG50A332K0B□ |
| 3 kW           | 1/5        | R88G-HPG32A053K0B□ |
|                | 1/11       | R88G-HPG50A113K0B□ |
|                | 1/21       | R88G-HPG50A213K0B□ |
| 4 kW           | 1/5        | R88G-HPG32A054K0B□ |
|                | 1/11       | R88G-HPG50A115K0B□ |
| 5 kW           | 1/5        | R88G-HPG50A055K0B□ |
|                | 1/11       | R88G-HPG50A115K0B□ |

**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG11A05100BJ)

## Decelerators for 2,000-r/min Servomotors

| Specifications |            | Model               |
|----------------|------------|---------------------|
| Motor capacity | Gear ratio |                     |
| 1 kW           | 1/5        | R88G-HPG32A053K0B□  |
|                | 1/11       | R88G-HPG32A112K0SB□ |
|                | 1/21       | R88G-HPG32A211K0SB□ |
|                | 1/33       | R88G-HPG50A332K0SB□ |
|                | 1/45       | R88G-HPG50A451K0SB□ |
| 1.5 kW         | 1/5        | R88G-HPG32A053K0B□  |
|                | 1/11       | R88G-HPG32A112K0SB□ |
|                | 1/21       | R88G-HPG50A213K0B□  |
|                | 1/33       | R88G-HPG50A332K0SB□ |
| 2 kW           | 1/5        | R88G-HPG32A053K0B□  |
|                | 1/11       | R88G-HPG32A112K0SB□ |
|                | 1/21       | R88G-HPG50A213K0B□  |
|                | 1/33       | R88G-HPG50A332K0SB□ |
| 3 kW           | 1/5        | R88G-HPG32A054K0B□  |
|                | 1/11       | R88G-HPG50A115K0B□  |
|                | 1/21       | R88G-HPG50A213K0SB□ |
|                | 1/25       | R88G-HPG65A253K0SB□ |
| 4 kW           | 1/5        | R88G-HPG50A054K0SB□ |
|                | 1/11       | R88G-HPG50A114K0SB□ |
|                | 1/20       | R88G-HPG65A204K0SB□ |
|                | 1/25       | R88G-HPG65A254K0SB□ |
| 5 kW           | 1/5        | R88G-HPG50A055K0SB□ |
|                | 1/11       | R88G-HPG50A115K0SB□ |
|                | 1/20       | R88G-HPG65A205K0SB□ |
|                | 1/25       | R88G-HPG65A255K0SB□ |
| 7.5 kW         | 1/5        | R88G-HPG65A057K5SB□ |
|                | 1/12       | R88G-HPG65A127K5SB□ |

**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG32A053K0BJ)

## Decelerators for 1,000-r/min Servomotors

| Specifications |            | Model               |
|----------------|------------|---------------------|
| Motor capacity | Gear ratio |                     |
| 900 W          | 1/5        | R88G-HPG32A05900TB□ |
|                | 1/11       | R88G-HPG32A11900TB□ |
|                | 1/21       | R88G-HPG50A21900TB□ |
|                | 1/33       | R88G-HPG50A33900TB□ |
| 2 kW           | 1/5        | R88G-HPG32A052K0TB□ |
|                | 1/11       | R88G-HPG50A112K0TB□ |
|                | 1/21       | R88G-HPG50A212K0TB□ |
|                | 1/25       | R88G-HPG65A255K0SB□ |
| 3 kW           | 1/5        | R88G-HPG50A055K0SB□ |
|                | 1/11       | R88G-HPG50A115K0SB□ |
|                | 1/20       | R88G-HPG65A205K0SB□ |
|                | 1/25       | R88G-HPG65A255K0SB□ |
| 4.5 kW         | 1/5        | R88G-HPG50A054K5TB□ |
|                | 1/12       | R88G-HPG65A127K5SB□ |
|                | 1/20       | R88G-HPG65A204K5TB□ |
| 6 kW           | 1/5        | R88G-HPG65A057K5SB□ |
|                | 1/12       | R88G-HPG65A127K5SB□ |

**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG32A05900TBJ)

Decelerators for 3,000-r/min Flat Servomotors

| Specifications |            | Model               |
|----------------|------------|---------------------|
| Motor capacity | Gear ratio |                     |
| 100 W          | 1/5        | R88G-HPG11A05100PB□ |
|                | 1/11       | R88G-HPG14A11100PB□ |
|                | 1/21       | R88G-HPG14A21100PB□ |
|                | 1/33       | R88G-HPG20A33100PB□ |
|                | 1/45       | R88G-HPG20A45100PB□ |
| 200 W          | 1/5        | R88G-HPG14A05200PB□ |
|                | 1/11       | R88G-HPG20A11200PB□ |
|                | 1/21       | R88G-HPG20A21200PB□ |
|                | 1/33       | R88G-HPG20A33200PB□ |
|                | 1/45       | R88G-HPG20A45200PB□ |
| 400 W          | 1/5        | R88G-HPG20A05400PB□ |
|                | 1/11       | R88G-HPG20A11400PB□ |
|                | 1/21       | R88G-HPG20A21400PB□ |
|                | 1/33       | R88G-HPG32A33400PB□ |
|                | 1/45       | R88G-HPG32A45400PB□ |

- Note 1.** The standard models have a straight shaft.
- Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG11A05100PBJ)



■ Backlash = 15' Max.

Decelerators for 3,000-r/min Servomotors (Straight Shaft with Key)

| Specifications |            | Model             |
|----------------|------------|-------------------|
| Motor capacity | Gear ratio |                   |
| 50 W           | 1/5        | R88G-VRSF05B100CJ |
|                | 1/9        | R88G-VRSF09B100CJ |
|                | 1/15       | R88G-VRSF15B100CJ |
|                | 1/25       | R88G-VRSF25B100CJ |
| 100 W          | 1/5        | R88G-VRSF05B100CJ |
|                | 1/9        | R88G-VRSF09B100CJ |
|                | 1/15       | R88G-VRSF15B100CJ |
|                | 1/25       | R88G-VRSF25B100CJ |
| 200 W          | 1/5        | R88G-VRSF05B200CJ |
|                | 1/9        | R88G-VRSF09C200CJ |
|                | 1/15       | R88G-VRSF15C200CJ |
|                | 1/25       | R88G-VRSF25C200CJ |
| 400 W          | 1/5        | R88G-VRSF05C400CJ |
|                | 1/9        | R88G-VRSF09C400CJ |
|                | 1/15       | R88G-VRSF15C400CJ |
|                | 1/25       | R88G-VRSF25C400CJ |
| 750 W          | 1/5        | R88G-VRSF05C750CJ |
|                | 1/9        | R88G-VRSF09D750CJ |
|                | 1/15       | R88G-VRSF15D750CJ |
|                | 1/25       | R88G-VRSF25D750CJ |

Decelerators for 3,000-r/min Flat Servomotors (Straight Shaft with Key)

| Specifications |            | Model              |
|----------------|------------|--------------------|
| Motor capacity | Gear ratio |                    |
| 100 W          | 1/5        | R88G-VRSF05B100PCJ |
|                | 1/9        | R88G-VRSF09B100PCJ |
|                | 1/15       | R88G-VRSF15B100PCJ |
|                | 1/25       | R88G-VRSF25B100PCJ |
| 200 W          | 1/5        | R88G-VRSF05B200PCJ |
|                | 1/9        | R88G-VRSF09C200PCJ |
|                | 1/15       | R88G-VRSF15C200PCJ |
|                | 1/25       | R88G-VRSF25C200PCJ |
| 400 W          | 1/5        | R88G-VRSF05C400PCJ |
|                | 1/9        | R88G-VRSF09C400PCJ |
|                | 1/15       | R88G-VRSF15C400PCJ |
|                | 1/25       | R88G-VRSF25C400PCJ |

## Accessories and Cables

### ■ Encoder Cables (Standard Cables)

| Specifications                                                                                                                                                   |      | Model         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|---------------|
| 3,000-r/min Servomotors of 50 to 750 W with an absolute encoder,<br>3,000-r/min Flat Servomotors of 100 to 400 W with an absolute encoder                        | 3 m  | R88A-CRGA003C |
|                                                                                                                                                                  | 5 m  | R88A-CRGA005C |
|                                                                                                                                                                  | 10 m | R88A-CRGA010C |
|                                                                                                                                                                  | 15 m | R88A-CRGA015C |
|                                                                                                                                                                  | 20 m | R88A-CRGA020C |
|                                                                                                                                                                  | 30 m | R88A-CRGA030C |
|                                                                                                                                                                  | 40 m | R88A-CRGA040C |
|                                                                                                                                                                  | 50 m | R88A-CRGA050C |
| 3,000-r/min Servomotors of 50 to 750 W with an incremental encoder,<br>3,000-r/min Flat Servomotors of 100 to 400 W with an incremental encoder                  | 3 m  | R88A-CRGB003C |
|                                                                                                                                                                  | 5 m  | R88A-CRGB005C |
|                                                                                                                                                                  | 10 m | R88A-CRGB010C |
|                                                                                                                                                                  | 15 m | R88A-CRGB015C |
|                                                                                                                                                                  | 20 m | R88A-CRGB020C |
|                                                                                                                                                                  | 30 m | R88A-CRGB030C |
|                                                                                                                                                                  | 40 m | R88A-CRGB040C |
|                                                                                                                                                                  | 50 m | R88A-CRGB050C |
| 3,000-r/min Servomotors of 1 to 5 kW,<br>2,000-r/min Servomotors of 1 to 5 kW,<br>1,500-r/min Servomotors of 7.5 kW,<br>1,000-r/min Servomotors of 900 W to 6 kW | 3 m  | R88A-CRGC003N |
|                                                                                                                                                                  | 5 m  | R88A-CRGC005N |
|                                                                                                                                                                  | 10 m | R88A-CRGC010N |
|                                                                                                                                                                  | 15 m | R88A-CRGC015N |
|                                                                                                                                                                  | 20 m | R88A-CRGC020N |
|                                                                                                                                                                  | 30 m | R88A-CRGC030N |
|                                                                                                                                                                  | 40 m | R88A-CRGC040N |
|                                                                                                                                                                  | 50 m | R88A-CRGC050N |

## ■ Servomotor Power Cables (Standard Cables)

| Specifications                                                                                                           |      | Model                        |                           |
|--------------------------------------------------------------------------------------------------------------------------|------|------------------------------|---------------------------|
|                                                                                                                          |      | For Servomotor without brake | For Servomotor with brake |
| 3,000-r/min Servomotors of 50 to 750 W,<br>3,000-r/min Flat Servomotors of 100 to 400 W                                  | 3 m  | R88A-CAGA003S                | ---                       |
|                                                                                                                          | 5 m  | R88A-CAGA005S                | ---                       |
|                                                                                                                          | 10 m | R88A-CAGA010S                | ---                       |
|                                                                                                                          | 15 m | R88A-CAGA015S                | ---                       |
|                                                                                                                          | 20 m | R88A-CAGA020S                | ---                       |
|                                                                                                                          | 30 m | R88A-CAGA030S                | ---                       |
|                                                                                                                          | 40 m | R88A-CAGA040S                | ---                       |
|                                                                                                                          | 50 m | R88A-CAGA050S                | ---                       |
| 3,000-r/min Servomotors of 1 to 1.5 kW,<br>2,000-r/min Servomotors of 1 to 1.5 kW,<br>1,000-r/min Servomotors of 900 W   | 3 m  | R88A-CAGB003S                | R88A-CAGB003B             |
|                                                                                                                          | 5 m  | R88A-CAGB005S                | R88A-CAGB005B             |
|                                                                                                                          | 10 m | R88A-CAGB010S                | R88A-CAGB010B             |
|                                                                                                                          | 15 m | R88A-CAGB015S                | R88A-CAGB015B             |
|                                                                                                                          | 20 m | R88A-CAGB020S                | R88A-CAGB020B             |
|                                                                                                                          | 30 m | R88A-CAGB030S                | R88A-CAGB030B             |
|                                                                                                                          | 40 m | R88A-CAGB040S                | R88A-CAGB040B             |
|                                                                                                                          | 50 m | R88A-CAGB050S                | R88A-CAGB050B             |
| 3,000-r/min Servomotors of 2 kW,<br>2,000-r/min Servomotors of 2 kW                                                      | 3 m  | R88A-CAGC003S                | R88A-CAGC003B             |
|                                                                                                                          | 5 m  | R88A-CAGC005S                | R88A-CAGC005B             |
|                                                                                                                          | 10 m | R88A-CAGC010S                | R88A-CAGC010B             |
|                                                                                                                          | 15 m | R88A-CAGC015S                | R88A-CAGC015B             |
|                                                                                                                          | 20 m | R88A-CAGC020S                | R88A-CAGC020B             |
|                                                                                                                          | 30 m | R88A-CAGC030S                | R88A-CAGC030B             |
|                                                                                                                          | 40 m | R88A-CAGC040S                | R88A-CAGC040B             |
|                                                                                                                          | 50 m | R88A-CAGC050S                | R88A-CAGC050B             |
| 3,000-r/min Servomotors of 3 to 5 kW,<br>2,000-r/min Servomotors of 3 to 5 kW,<br>1,000-r/min Servomotors of 2 to 4.5 kW | 3 m  | R88A-CAGD003S                | R88A-CAGD003B             |
|                                                                                                                          | 5 m  | R88A-CAGD005S                | R88A-CAGD005B             |
|                                                                                                                          | 10 m | R88A-CAGD010S                | R88A-CAGD010B             |
|                                                                                                                          | 15 m | R88A-CAGD015S                | R88A-CAGD015B             |
|                                                                                                                          | 20 m | R88A-CAGD020S                | R88A-CAGD020B             |
|                                                                                                                          | 30 m | R88A-CAGD030S                | R88A-CAGD030B             |
|                                                                                                                          | 40 m | R88A-CAGD040S                | R88A-CAGD040B             |
|                                                                                                                          | 50 m | R88A-CAGD050S                | R88A-CAGD050B             |

| Specifications                                                        |      | Model                        |                           |
|-----------------------------------------------------------------------|------|------------------------------|---------------------------|
|                                                                       |      | For Servomotor without brake | For Servomotor with brake |
| 1,500-r/min Servomotors of 7.5 kW,<br>1,000-r/min Servomotors of 6 kW | 3 m  | R88A-CAGE003S                | ---                       |
|                                                                       | 5 m  | R88A-CAGE005S                | ---                       |
|                                                                       | 10 m | R88A-CAGE010S                | ---                       |
|                                                                       | 15 m | R88A-CAGE015S                | ---                       |
|                                                                       | 20 m | R88A-CAGE020S                | ---                       |
|                                                                       | 30 m | R88A-CAGE030S                | ---                       |
|                                                                       | 40 m | R88A-CAGE040S                | ---                       |
|                                                                       | 50 m | R88A-CAGE050S                | ---                       |

**Note** There are separate connectors for power and brakes for 3,000-r/min Servomotors of 50 to 750 W, Flat Servomotors, and Servomotors of 6 kW or higher.  
Therefore, when a Servomotor with a brake is used, it will require both a Power Cable for a Servomotor without a brake and a Brake Cable.

2-1 Standard Models

■ Brake Cables (Standard Cables)

| Specifications                                                                          |      | Model         |
|-----------------------------------------------------------------------------------------|------|---------------|
| 3,000-r/min Servomotors of 50 to 750 W,<br>3,000-r/min Flat Servomotors of 100 to 400 W | 3 m  | R88A-CAGA003B |
|                                                                                         | 5 m  | R88A-CAGA005B |
|                                                                                         | 10 m | R88A-CAGA010B |
|                                                                                         | 15 m | R88A-CAGA015B |
|                                                                                         | 20 m | R88A-CAGA020B |
|                                                                                         | 30 m | R88A-CAGA030B |
|                                                                                         | 40 m | R88A-CAGA040B |
|                                                                                         | 50 m | R88A-CAGA050B |
| 1,500-r/min Servomotors of 7.5 kW,<br>1,000-r/min Servomotors of 6 kW                   | 3 m  | R88A-CAGE003B |
|                                                                                         | 5 m  | R88A-CAGE005B |
|                                                                                         | 10 m | R88A-CAGE010B |
|                                                                                         | 15 m | R88A-CAGE015B |
|                                                                                         | 20 m | R88A-CAGE020B |
|                                                                                         | 30 m | R88A-CAGE030B |
|                                                                                         | 40 m | R88A-CAGE040B |
|                                                                                         | 50 m | R88A-CAGE050B |

## ■ Encoder Cables (Robot Cables)

| Specifications                                                                                                                                        |      | Model          |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|------|----------------|
| 3,000-r/min Servomotors of 50 to 750 W<br>with an absolute encoder,<br>3,000-r/min Flat Servomotors of 100 to 400 W<br>with an absolute encoder       | 3 m  | R88A-CRGA003CR |
|                                                                                                                                                       | 5 m  | R88A-CRGA005CR |
|                                                                                                                                                       | 10 m | R88A-CRGA010CR |
|                                                                                                                                                       | 15 m | R88A-CRGA015CR |
|                                                                                                                                                       | 20 m | R88A-CRGA020CR |
|                                                                                                                                                       | 30 m | R88A-CRGA030CR |
|                                                                                                                                                       | 40 m | R88A-CRGA040CR |
|                                                                                                                                                       | 50 m | R88A-CRGA050CR |
| 3,000-r/min Servomotors of 50 to 750 W<br>with an incremental encoder,<br>3,000-r/min Flat Servomotors of 100 to 400 W<br>with an incremental encoder | 3 m  | R88A-CRGB003CR |
|                                                                                                                                                       | 5 m  | R88A-CRGB005CR |
|                                                                                                                                                       | 10 m | R88A-CRGB010CR |
|                                                                                                                                                       | 15 m | R88A-CRGB015CR |
|                                                                                                                                                       | 20 m | R88A-CRGB020CR |
|                                                                                                                                                       | 30 m | R88A-CRGB030CR |
|                                                                                                                                                       | 40 m | R88A-CRGB040CR |
|                                                                                                                                                       | 50 m | R88A-CRGB050CR |
| 3,000-r/min Servomotors of 1 to 5 kW,<br>2,000-r/min Servomotors of 1 to 5 kW,<br>1,000-r/min Servomotors of 900 W to 4.5 kW                          | 3 m  | R88A-CRGC003NR |
|                                                                                                                                                       | 5 m  | R88A-CRGC005NR |
|                                                                                                                                                       | 10 m | R88A-CRGC010NR |
|                                                                                                                                                       | 15 m | R88A-CRGC015NR |
|                                                                                                                                                       | 20 m | R88A-CRGC020NR |
|                                                                                                                                                       | 30 m | R88A-CRGC030NR |
|                                                                                                                                                       | 40 m | R88A-CRGC040NR |
|                                                                                                                                                       | 50 m | R88A-CRGC050NR |

## ■ Servomotor Power Cables (Robot Cables)

| Specifications                                                                                                           |      | Model                        |                           |
|--------------------------------------------------------------------------------------------------------------------------|------|------------------------------|---------------------------|
|                                                                                                                          |      | For Servomotor without brake | For Servomotor with brake |
| 3,000-r/min Servomotors of 50 to 750 W,<br>3,000-r/min Flat Servomotors of 100 to 400 W                                  | 3 m  | R88A-CAGA003SR               | ---                       |
|                                                                                                                          | 5 m  | R88A-CAGA005SR               | ---                       |
|                                                                                                                          | 10 m | R88A-CAGA010SR               | ---                       |
|                                                                                                                          | 15 m | R88A-CAGA015SR               | ---                       |
|                                                                                                                          | 20 m | R88A-CAGA020SR               | ---                       |
|                                                                                                                          | 30 m | R88A-CAGA030SR               | ---                       |
|                                                                                                                          | 40 m | R88A-CAGA040SR               | ---                       |
|                                                                                                                          | 50 m | R88A-CAGA050SR               | ---                       |
| 3,000-r/min Servomotors of 1 to 1.5 kW,<br>2,000-r/min Servomotors of 1 to 1.5 kW,<br>1,000-r/min Servomotors of 900 W   | 3 m  | R88A-CAGB003SR               | R88A-CAGB003BR            |
|                                                                                                                          | 5 m  | R88A-CAGB005SR               | R88A-CAGB005BR            |
|                                                                                                                          | 10 m | R88A-CAGB010SR               | R88A-CAGB010BR            |
|                                                                                                                          | 15 m | R88A-CAGB015SR               | R88A-CAGB015BR            |
|                                                                                                                          | 20 m | R88A-CAGB020SR               | R88A-CAGB020BR            |
|                                                                                                                          | 30 m | R88A-CAGB030SR               | R88A-CAGB030BR            |
|                                                                                                                          | 40 m | R88A-CAGB040SR               | R88A-CAGB040BR            |
|                                                                                                                          | 50 m | R88A-CAGB050SR               | R88A-CAGB050BR            |
| 3,000-r/min Servomotors of 2 kW,<br>2,000-r/min Servomotors of 2 kW                                                      | 3 m  | R88A-CAGC003SR               | R88A-CAGC003BR            |
|                                                                                                                          | 5 m  | R88A-CAGC005SR               | R88A-CAGC005BR            |
|                                                                                                                          | 10 m | R88A-CAGC010SR               | R88A-CAGC010BR            |
|                                                                                                                          | 15 m | R88A-CAGC015SR               | R88A-CAGC015BR            |
|                                                                                                                          | 20 m | R88A-CAGC020SR               | R88A-CAGC020BR            |
|                                                                                                                          | 30 m | R88A-CAGC030SR               | R88A-CAGC030BR            |
|                                                                                                                          | 40 m | R88A-CAGC040SR               | R88A-CAGC040BR            |
|                                                                                                                          | 50 m | R88A-CAGC050SR               | R88A-CAGC050BR            |
| 3,000-r/min Servomotors of 3 to 5 kW,<br>2,000-r/min Servomotors of 3 to 5 kW,<br>1,000-r/min Servomotors of 2 to 4.5 kW | 3 m  | R88A-CAGD003SR               | R88A-CAGD003BR            |
|                                                                                                                          | 5 m  | R88A-CAGD005SR               | R88A-CAGD005BR            |
|                                                                                                                          | 10 m | R88A-CAGD010SR               | R88A-CAGD010BR            |
|                                                                                                                          | 15 m | R88A-CAGD015SR               | R88A-CAGD015BR            |
|                                                                                                                          | 20 m | R88A-CAGD020SR               | R88A-CAGD020BR            |
|                                                                                                                          | 30 m | R88A-CAGD030SR               | R88A-CAGD030BR            |
|                                                                                                                          | 40 m | R88A-CAGD040SR               | R88A-CAGD040BR            |
|                                                                                                                          | 50 m | R88A-CAGD050SR               | R88A-CAGD050BR            |

**Note** There are separate connectors for power and brakes for 3,000-r/min Servomotors of 50 to 750 W and Flat Servomotors.

Therefore, when a Servomotor with a brake is used, it will require a Power Cable for a Servomotor without a brake, as well as a Brake Cable.



### ■ Brake Cables (Robot Cables)

| Specifications                                                                          |      | Model          |
|-----------------------------------------------------------------------------------------|------|----------------|
| 3,000-r/min Servomotors of 50 to 750 W,<br>3,000-r/min Flat Servomotors of 100 to 400 W | 3 m  | R88A-CAGA003BR |
|                                                                                         | 5 m  | R88A-CAGA005BR |
|                                                                                         | 10 m | R88A-CAGA010BR |
|                                                                                         | 15 m | R88A-CAGA015BR |
|                                                                                         | 20 m | R88A-CAGA020BR |
|                                                                                         | 30 m | R88A-CAGA030BR |
|                                                                                         | 40 m | R88A-CAGA040BR |
|                                                                                         | 50 m | R88A-CAGA050BR |

### ■ Communications Cable

| Specifications              |     | Model         |
|-----------------------------|-----|---------------|
| RS-232 Communications Cable | 2 m | R88A-CCG002P2 |

### ■ MECHATROLINK-II Communications Cable

| Specifications                       |       | Model        |
|--------------------------------------|-------|--------------|
| MECHATROLINK-II Cable                | 0.5 m | FNY-W6003-A5 |
|                                      | 1 m   | FNY-W6003-01 |
|                                      | 3 m   | FNY-W6003-03 |
|                                      | 5 m   | FNY-W6003-05 |
|                                      | 10 m  | FNY-W6003-10 |
|                                      | 20 m  | FNY-W6003-20 |
|                                      | 30 m  | FNY-W6003-30 |
| MECHATROLINK-II termination resistor |       | FNY-W6022    |

### ■ Absolute Encoder Battery Cable

| Specifications                 |       | Model         |
|--------------------------------|-------|---------------|
| Absolute Encoder Battery Cable | 0.3 m | R88A-CRGD0R3C |

## ■ Connectors

| Specifications                         |                     | Model       |
|----------------------------------------|---------------------|-------------|
| Servomotor Connector for Encoder Cable | Absolute Encoder    | R88A-CNG01R |
|                                        | Incremental Encoder | R88A-CNG02R |
| Control I/O Connector (CN1)            |                     | R88A-CNU01C |
| Encoder Connector (CN2)                |                     | R88A-CNW01R |
| Power Cable Connector (750 W max.)     |                     | R88A-CNG01A |
| Brake Cable Connector (750 W max.)     |                     | R88A-CNG01B |

## ■ Control Cables

| Specifications                  |                 | Model         |
|---------------------------------|-----------------|---------------|
| Connector Terminal Block Cables | 1 m             | XW2Z-100J-B33 |
|                                 | 2 m             | XW2Z-200J-B33 |
| Connector Terminal Block        | M3 screw type   | XW2B-20G4     |
|                                 | M3.5 screw type | XW2B-20G5     |
|                                 | M3 screw type   | XW2D-20G6     |

## ■ External Regeneration Resistors

| Specifications                                                        | Model          |
|-----------------------------------------------------------------------|----------------|
| Regeneration capacity: 20 W, 50 $\Omega$ (with 150°C thermal switch)  | R88A-RR08050S  |
| Regeneration capacity: 20 W, 100 $\Omega$ (with 150°C thermal switch) | R88A-RR080100S |
| Regeneration capacity: 70 W, 47 $\Omega$ (with 170°C thermal switch)  | R88A-RR22047S  |
| Regeneration capacity: 180 W, 20 $\Omega$ (with 200°C thermal switch) | R88A-RR50020S  |

## ■ Reactors

| Specifications                       | Model        |
|--------------------------------------|--------------|
| R88D-GNA5L-ML2/-GN01H-ML2            | 3G3AX-DL2002 |
| R88D-GN01L-ML2/-GN02H-ML2            | 3G3AX-DL2004 |
| R88D-GN02L-ML2/-GN04H-ML2            | 3G3AX-DL2007 |
| R88D-GN04L-ML2/-GN08H-ML2/-GN10H-ML2 | 3G3AX-DL2015 |
| R88D-GN15H-ML2                       | 3G3AX-DL2022 |
| R88D-GN08H-ML2/-GN10H-ML2/-GN15H-ML2 | 3G3AX-AL2025 |
| R88D-GN20H-ML2/-GN30H-ML2            | 3G3AX-AL2055 |
| R88D-GN50H-ML2                       | 3G3AX-AL2110 |
| R88D-GN75H-ML2                       | 3G3AX-AL2220 |

**■ Mounting Brackets (L Brackets for Rack Mounting)**

| Specifications                                  | Model      |
|-------------------------------------------------|------------|
| R88D-GNA5L-ML2/-GN01L-ML2/-GN01H-ML2/-GN02H-ML2 | R88A-TK01G |
| R88D-GN02L-ML2/-GN04H-ML2                       | R88A-TK02G |
| R88D-GN04L-ML2/-GN08H-ML2                       | R88A-TK03G |
| R88D-GN10H-ML2/-GN15H-ML2                       | R88A-TK04G |

**■ Absolute Encoder Backup Battery**

| Specifications   | Model       |
|------------------|-------------|
| 2,000 mA·h 3.6 V | R88A-BAT01G |


# 2-2 External and Mounting Hole Dimensions

## Servo Drives


- Single-phase 100 VAC: R88D-GNA5L-ML2/-GN01L-ML2 (50 to 100 W)  
Single-phase 200 VAC: R88D-GN01H-ML2/-GN02H-ML2 (50 to 200 W)

### Wall Mounting

External Dimensions

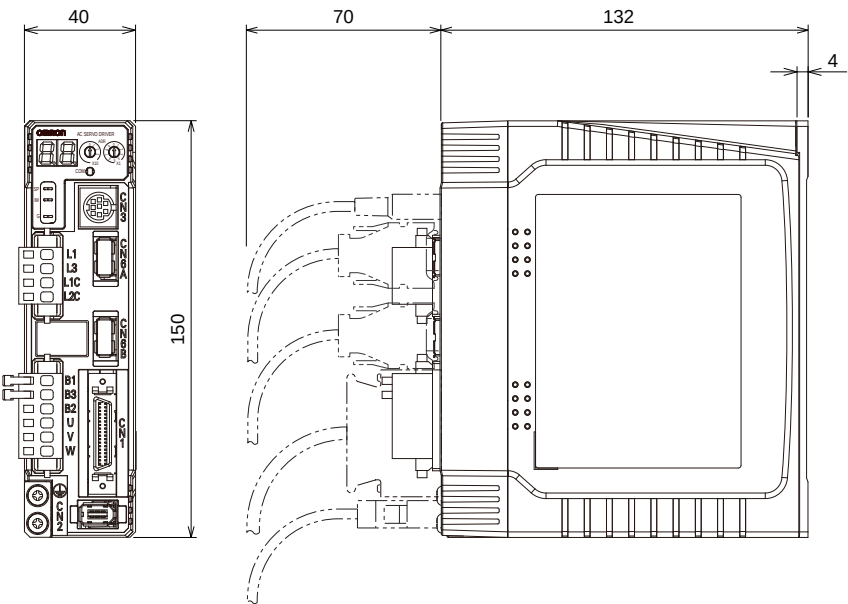


Mounting Hole Dimensions

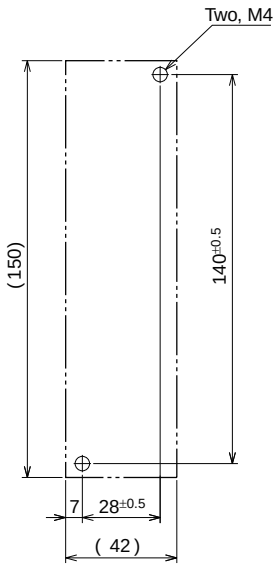


Front Panel Mounting (Using Mounting Brackets)

External Dimensions

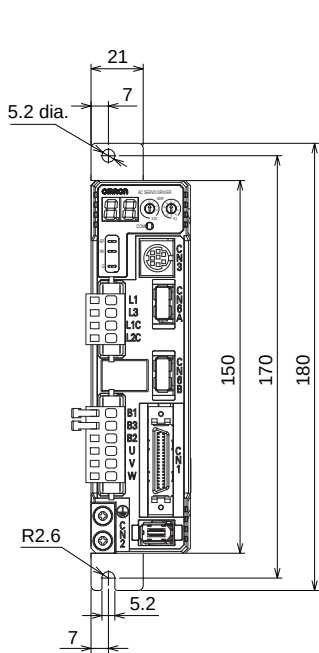

Mounting Hole Dimensions

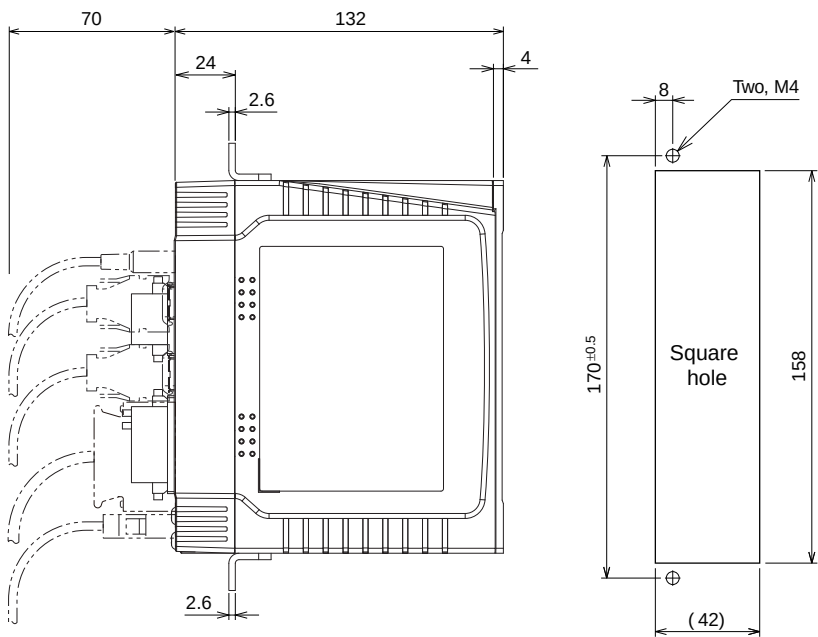


2-2 External and Mounting Hole Dimensions


- Single-phase 100 VAC: R88D-GN02L-ML2 (200 W)
- Single-phase 200 VAC: R88D-GN04H-ML2 (400 W)

Wall Mounting

External Dimensions

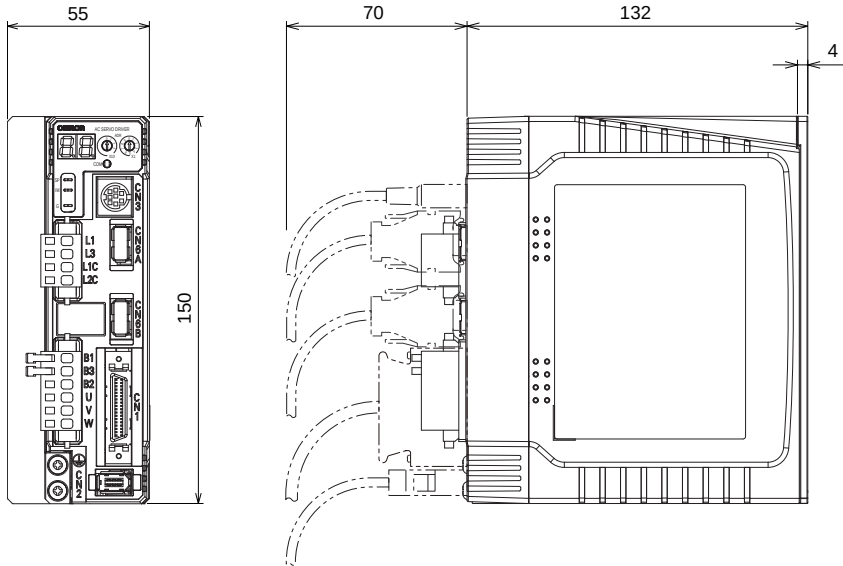


Mounting Hole Dimensions

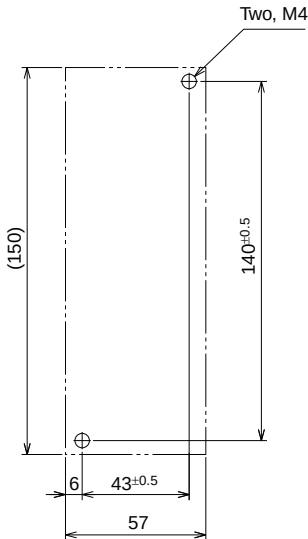


Front Panel Mounting (Using Mounting Brackets)

External Dimensions

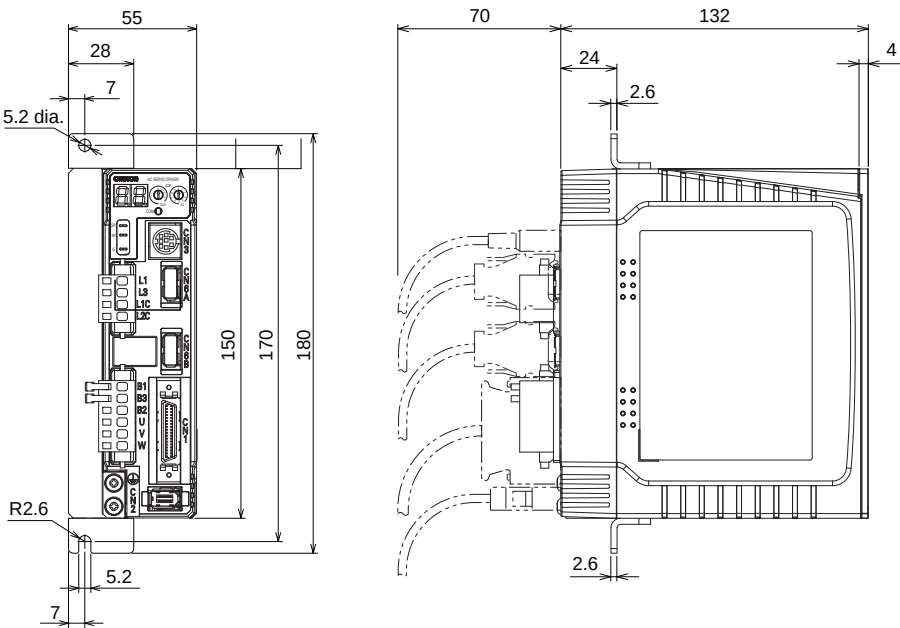


Mounting Hole Dimensions

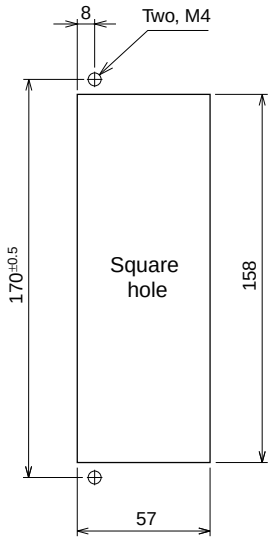


- Single-phase 100 VAC: R88D-GN04L-ML2 (400 W)
- Single-phase 200/Three phase VAC: R88D-GN08H-ML2 (750 W)

### Wall Mounting

#### External Dimensions

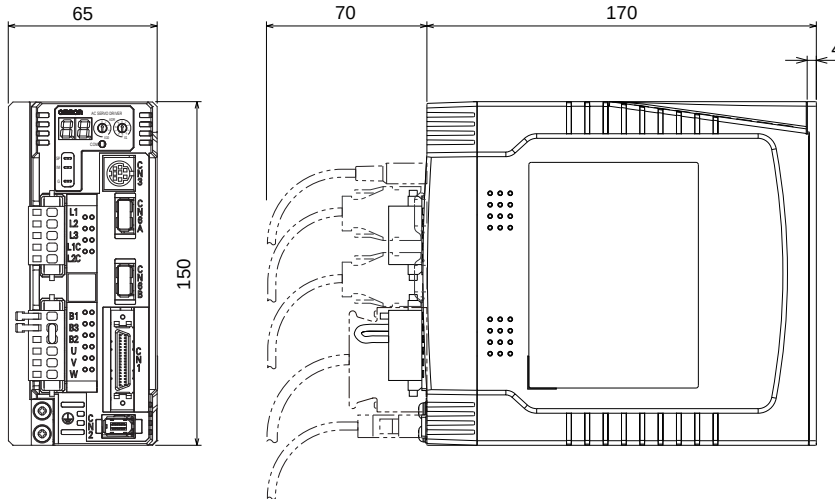


#### Mounting Hole Dimensions

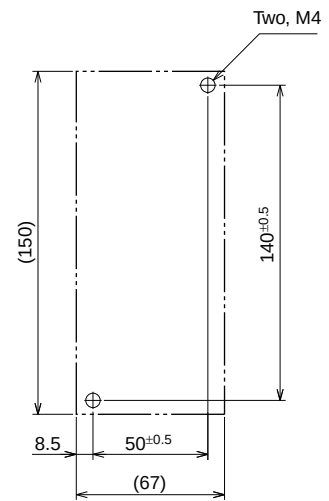


### Front Panel Mounting (Using Mounting Brackets)

#### External Dimensions

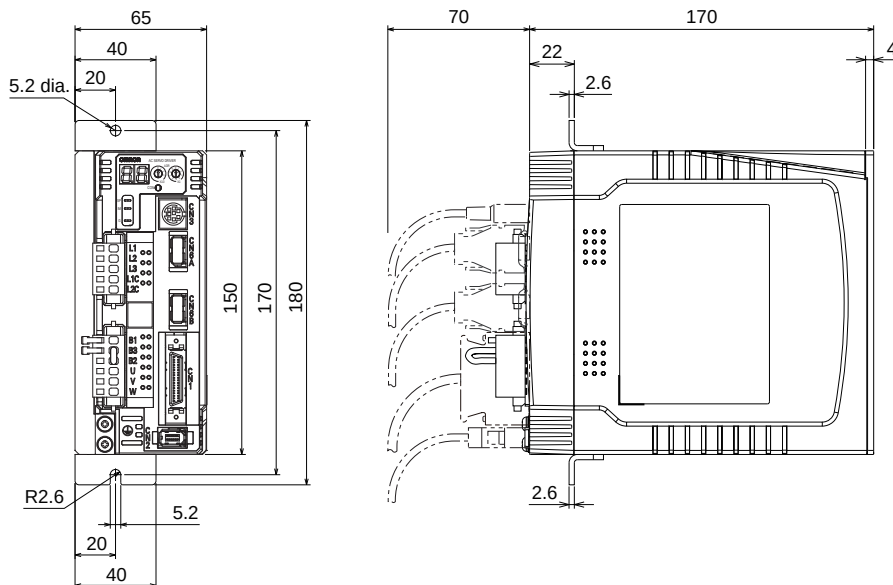

#### Mounting Hole Dimensions

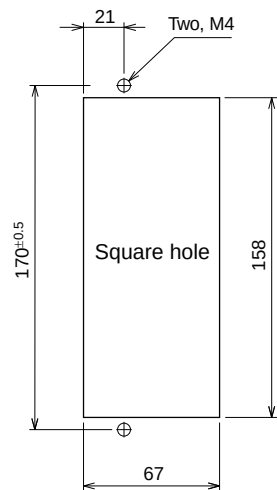


2-2 External and Mounting Hole Dimensions


■ Single-phase/Three-phase 200 VAC: R88D-GN10H-ML2/-GN15H-ML2  
(900 W to 1.5 kW)

Wall Mounting

External Dimensions

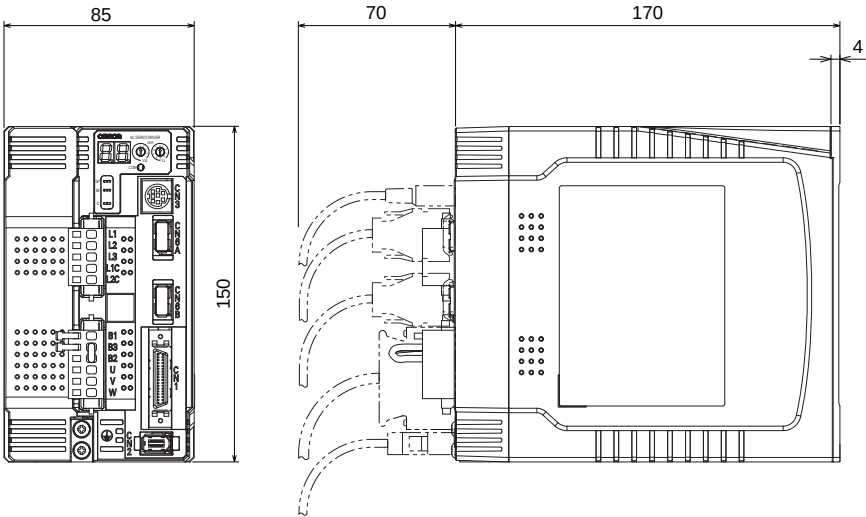


Mounting Hole Dimensions

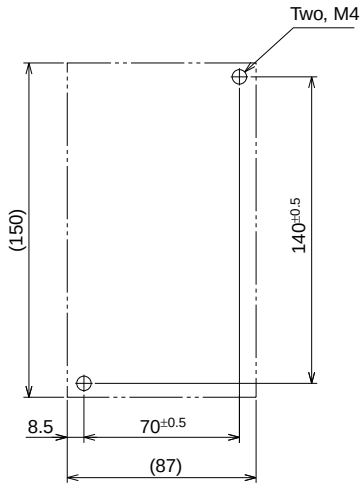


Front Panel Mounting (Using Mounting Brackets)

External Dimensions

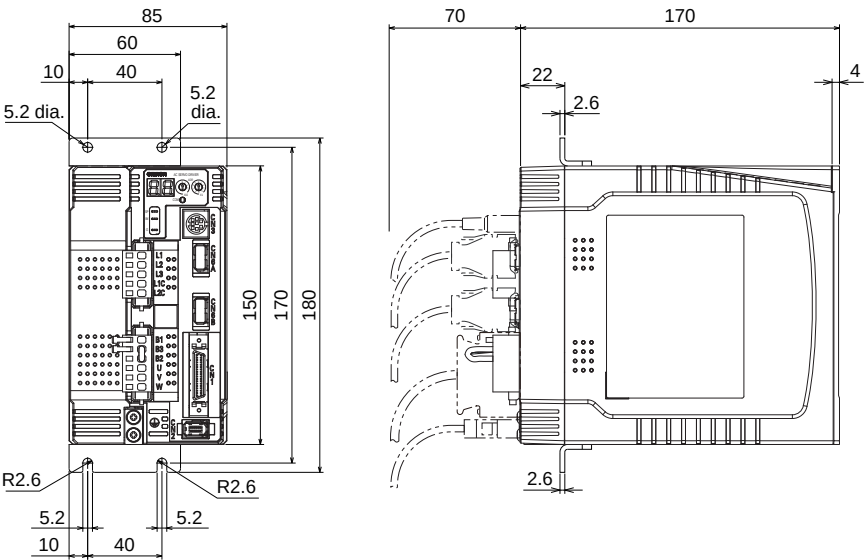

Mounting Hole Dimensions


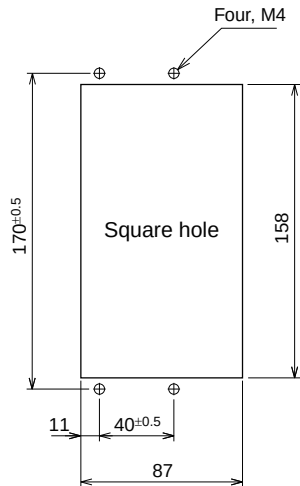





■ Three-phase 200 VAC: R88D-GN20H-ML2 (2 kW)

## Wall Mounting


### External Dimensions

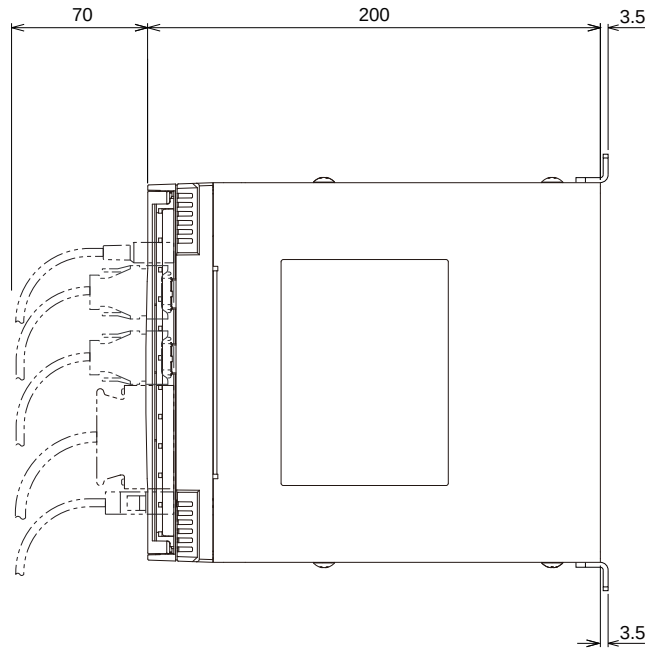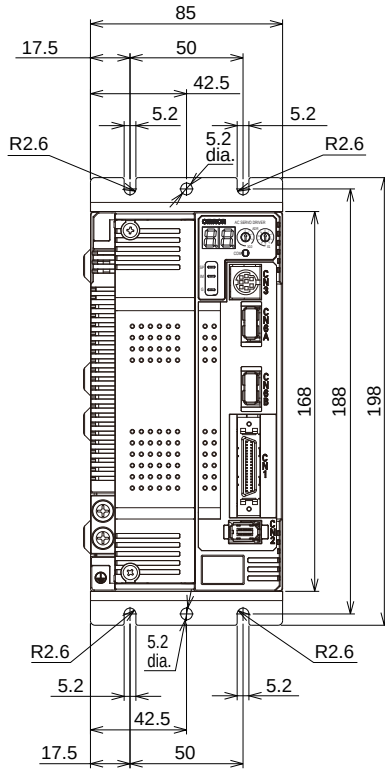


### Mounting Hole Dimensions

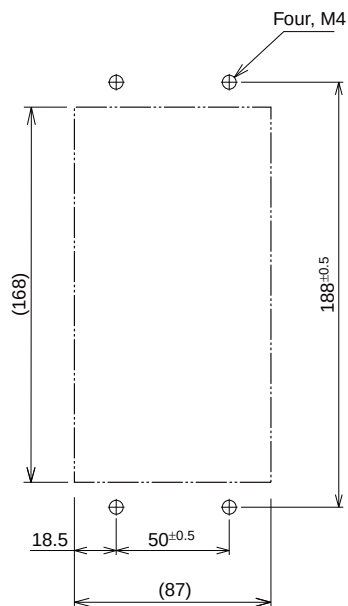

Front Panel Mounting (Using Mounting Brackets)

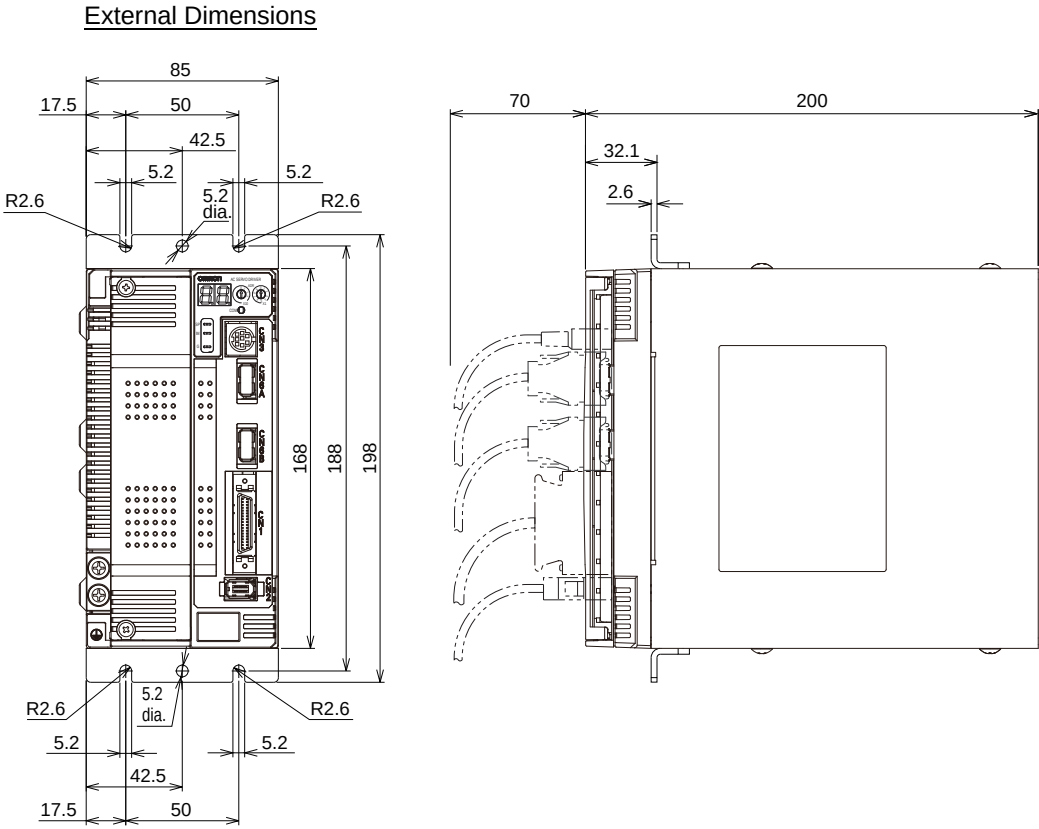


Mounting Hole Dimensions

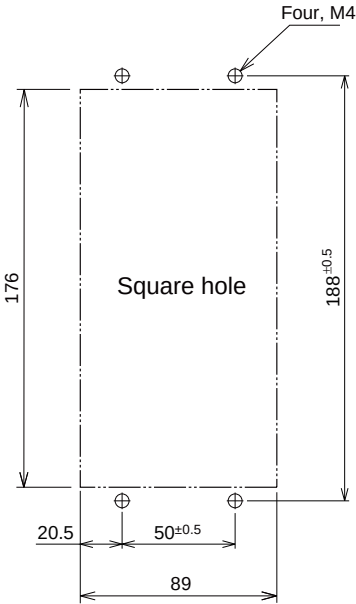


■ Three-phase 200 VAC: R88D-GN30H-ML2/-GN50H-ML2 (2 to 5 kW)

Wall Mounting


External Dimensions

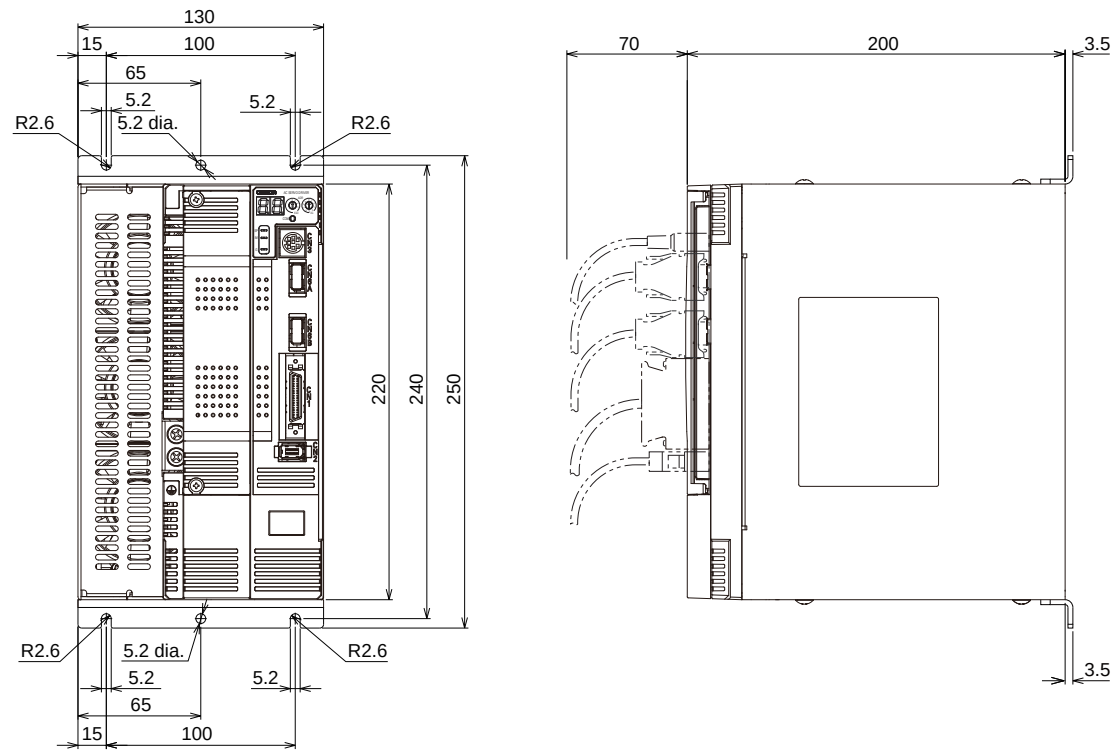

Mounting Hole Dimensions

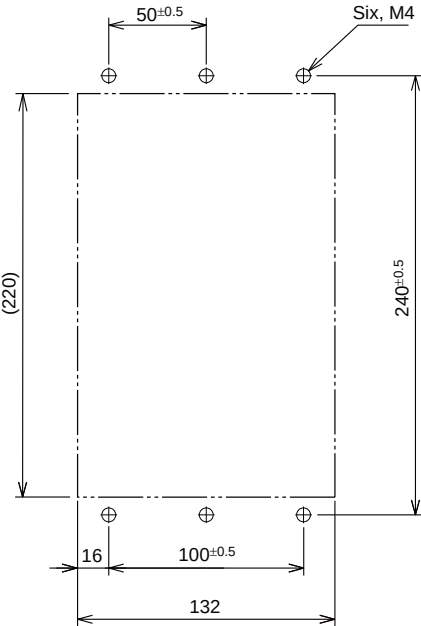

### External Dimensions

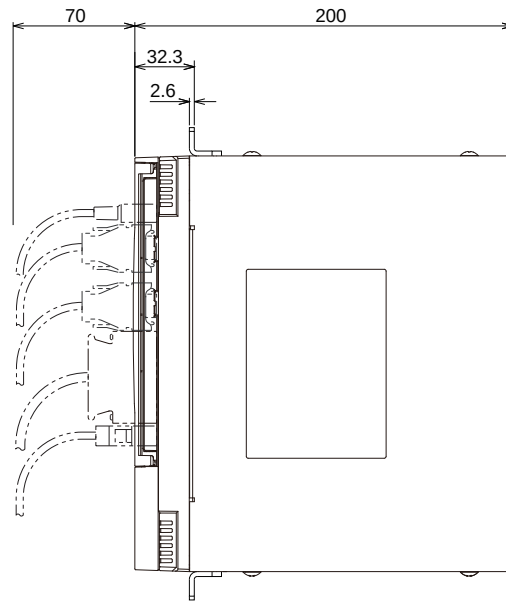


Technical drawing of a square hole in a plate. The plate has overall dimensions of 228 mm by 240±0.5 mm. The square hole has a side length of 100±0.5 mm. The hole is centered, with a 16 mm margin from the left edge. There are six M4 holes: three along the top edge and three along the bottom edge. The distance between the centers of the top holes is 50±0.5 mm. The distance between the centers of the bottom holes is 100±0.5 mm. The text "Square hole" is centered within the square hole.


■ Three-phase 200 VAC: R88D-GN75H-ML2 (7.5 kW)

Front Panel Mounting (Using Mounting Brackets)

External Dimensions

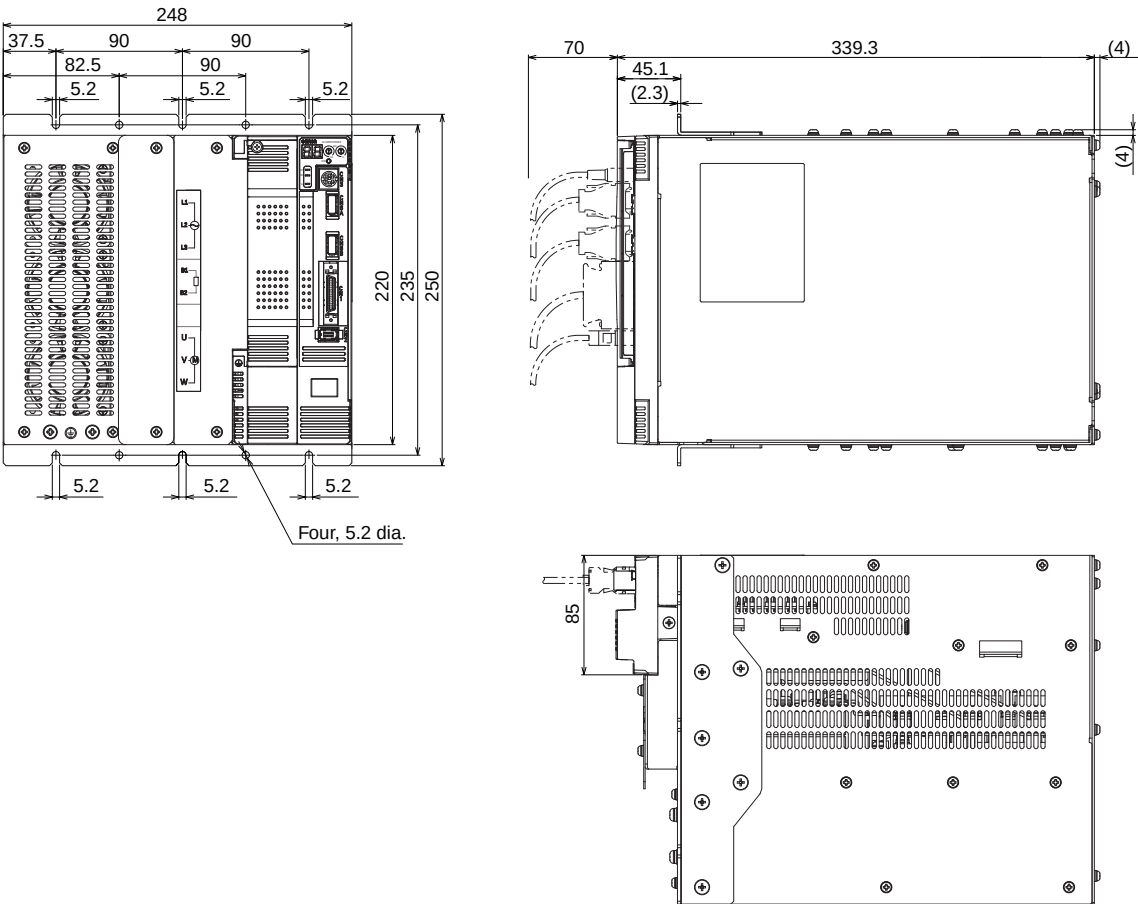

Mounting Hole Dimensions

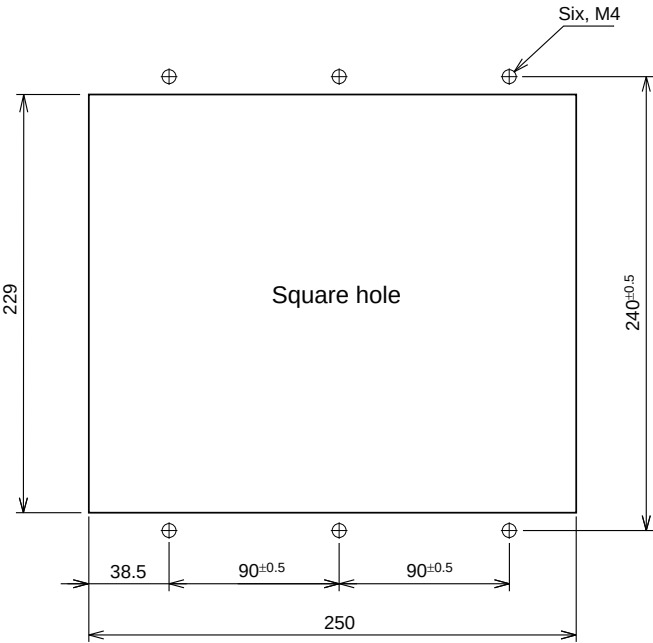

2-2 External and Mounting Hole Dimensions

Servomotors

■ 3,000-r/min Servomotors


50 W/100 W

R88M-G05030H(-S2)/-G10030L(-S2)/-G10030H(-S2)/-G05030H-B(S2)

/-G10030L-B(S2)/-G10030H-B(S2) **INC**

R88M-G05030T(-S2)/-G10030S(-S2)/-G10030T(-S2)/-G05030T-B(S2)

/-G10030S-B(S2)/-G10030T-B(S2) **ABS**

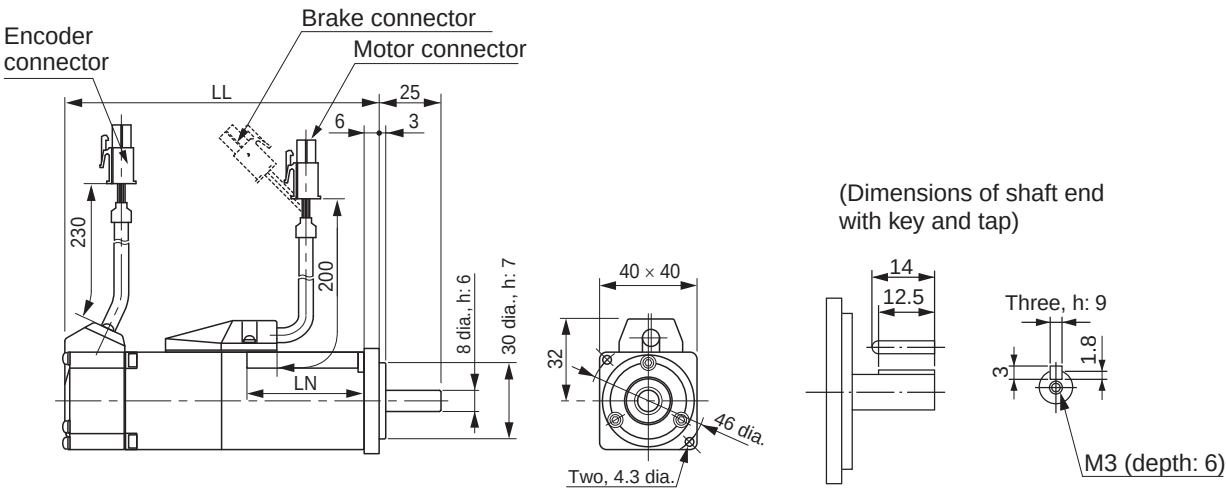

| Model           | Dimensions (mm) |      |
|-----------------|-----------------|------|
|                 | LL              | LN   |
| R88M-G05030□    | 72              | 26.5 |
| R88M-G10030□    | 92              | 46.5 |
| R88M-G05030□-B□ | 102             | 26.5 |
| R88M-G10030□-B□ | 122             | 46.5 |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

### ■ 3,000-r/min Servomotors

#### 200 W/400 W/750 W


R88M-G20030L(-S2)/-G40030L(-S2)/-G20030H(-S2)/-G40030H(-S2)

/-G75030H(-S2)/-G20030L-B(S2)/-G40030L-B(S2)

/-G20030H-B(S2)/-G40030H-B(S2)/-G75030H-B(S2) **INC**

R88M-G20030S(-S2)/-G40030S(-S2)/-G20030T(-S2)/-G40030T(-S2)

/-G75030T(-S2)/-G20030S-B(S2)/-G40030S-B(S2)

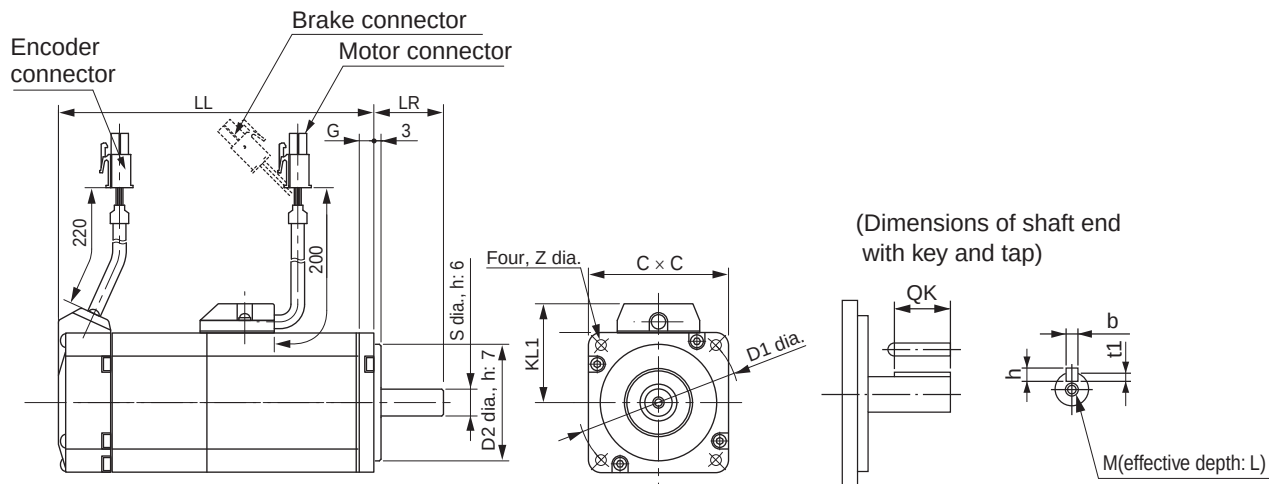/-G20030T-B(S2)/-G40030T-B(S2)/-G75030T-B(S2) **ABS**


| Model           | Dimensions (mm) |    |    |    |    |    |     |     |     |    |     |   |    |     |   |
|-----------------|-----------------|----|----|----|----|----|-----|-----|-----|----|-----|---|----|-----|---|
|                 | LL              | LR | S  | D1 | D2 | C  | G   | KL1 | Z   | QK | b   | h | M  | t1  | L |
| R88M-G20030□    | 79.5            | 30 | 11 | 70 | 50 | 60 | 6.5 | 43  | 4.5 | 18 | 4h9 | 4 | M4 | 2.5 | 8 |
| R88M-G40030□    | 99              |    | 14 |    |    |    |     |     |     |    |     |   |    |     |   |
| R88M-G75030□    | 112.2           | 35 | 19 | 90 | 70 | 80 | 8   | 53  | 6   | 22 | 6h9 | 6 |    | 3.5 |   |
| R88M-G20030□-B□ | 116             | 30 | 11 | 70 | 50 | 60 | 6.5 | 43  | 4.5 | 18 | 4h9 | 4 | M4 | 2.5 | 8 |
| R88M-G40030□-B□ | 135.5           |    | 14 |    |    |    |     |     |     |    |     |   |    |     |   |
| R88M-G75030□-B□ | 149.2           | 35 | 19 | 90 | 70 | 80 | 8   | 53  | 6   | 22 | 6h9 | 6 |    | 3.5 |   |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.


## 2-2 External and Mounting Hole Dimensions

### ■ 3,000-r/min Servomotors

1 kW/1.5 kW/2 kW

R88M-G1K030T(-S2)/-G1K530T(-S2)/-G2K030T(-S2)/-G1K030T-B(S2)

/-G1K530T-B(S2)/-G2K030T-B(S2) **ABS**

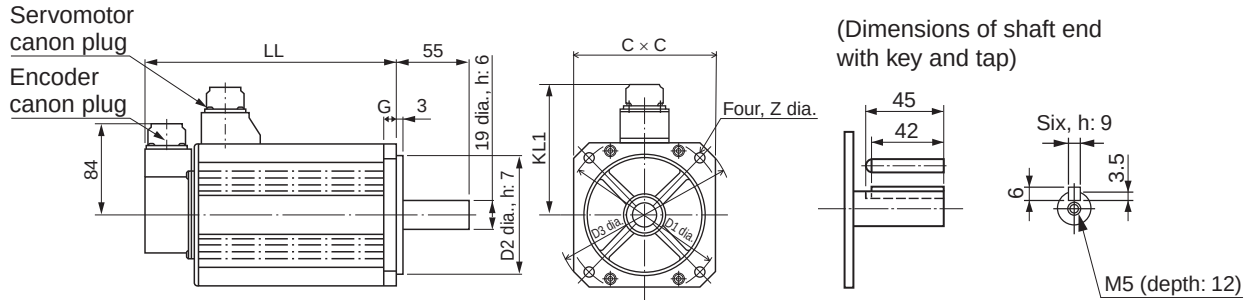


| Model           | Dimensions (mm) |     |    |     |     |    |     |     |
|-----------------|-----------------|-----|----|-----|-----|----|-----|-----|
|                 | LL              | D1  | D2 | C   | D3  | G  | KL1 | Z   |
| R88M-G1K030□    | 175             | 100 | 80 | 90  | 120 | 7  | 98  | 6.6 |
| R88M-G1K530□    | 180             | 115 | 95 | 100 | 135 | 10 | 103 | 9   |
| R88M-G2K030□    | 205             |     |    |     |     |    |     |     |
| R88M-G1K030□-B□ | 200             | 100 | 80 | 90  | 120 | 7  | 98  | 6.6 |
| R88M-G1K530□-B□ | 205             | 115 | 95 | 100 | 135 | 10 | 103 | 9   |
| R88M-G2K030□-B□ | 230             |     |    |     |     |    |     |     |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

### ■ 3,000-r/min Servomotors

3 kW

R88M-G3K030T(-S2)/-G3K030T-B(S2) **ABS**

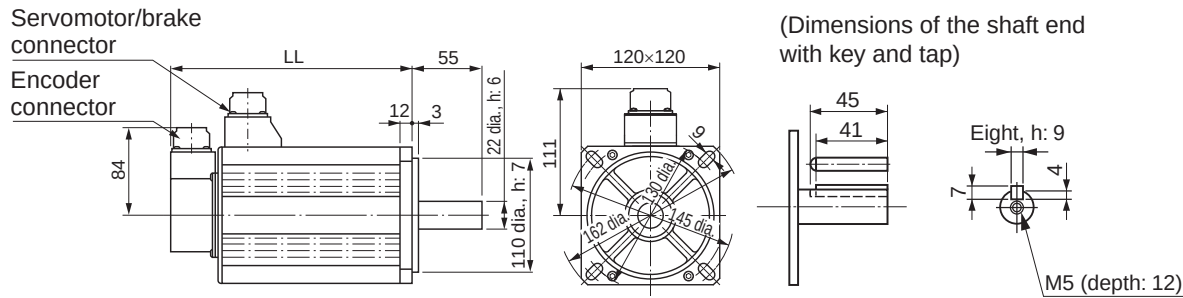

| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G3K030□    | 217             |
| R88M-G3K030□-B□ | 242             |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.



## 3,000-r/min Servomotors

4 kW/5 kW

R88M-G4K030T(-S2)/-G5K030T(-S2)/-G4K030T-B(S2)/-G5K030T-B(S2) **ABS**

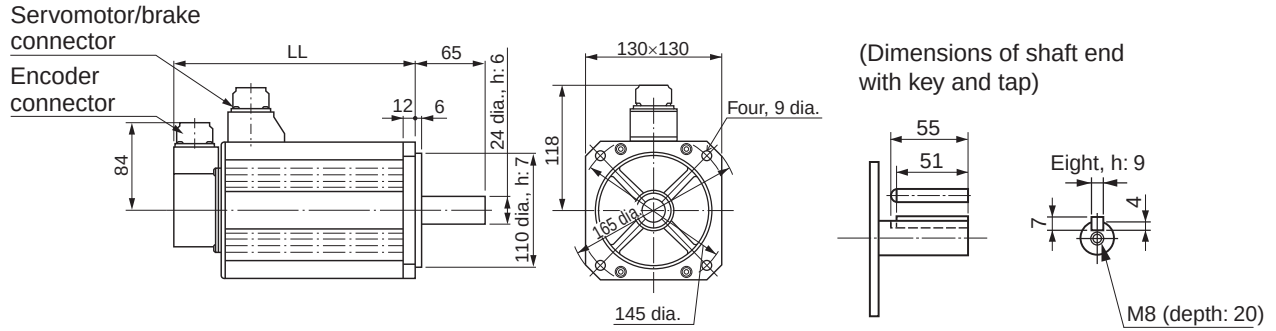

| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G4K030□    | 240             |
| R88M-G5K030□    | 280             |
| R88M-G4K030□-B□ | 265             |
| R88M-G5K030□-B□ | 305             |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.


## 2-2 External and Mounting Hole Dimensions

### ■ 3,000-r/min Flat Servomotors

#### 100 W/200 W/400 W

R88M-GP10030L(-S2)/-GP20030L(-S2)/-GP40030L(-S2)/-GP10030H(-S2)  
/-GP20030H(-S2)/-GP40030H(-S2)/-GP10030L-B(S2)/-GP20030L-B(S2)  
/-GP40030L-B(S2)/-GP10030H-B(S2)/-GP20030H-B(S2)/-GP40030H-B(S2) **INC**

R88M-GP10030S(-S2)/-GP20030S(-S2)/-GP40030S(-S2)/-GP10030T(-S2)  
/-GP20030T(-S2)/-GP40030T(-S2)/-GP10030S-B(S2)/-GP20030S-B(S2)  
/-GP40030S-B(S2)/-GP10030T-B(S2)/-GP20030T-B(S2)/-GP40030T-B(S2) **ABS**

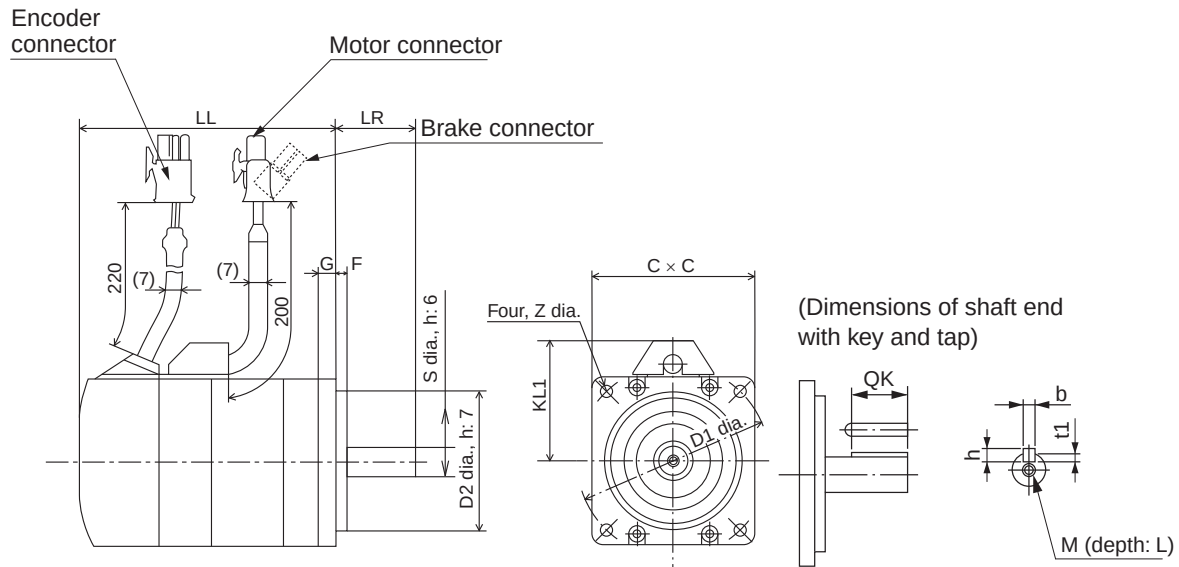

| Model            | Dimensions (mm) |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
|------------------|-----------------|----|----|----|----|----|---|---|-----|-----|------|-----|---|-----|----|----|
|                  | LL              | LR | S  | D1 | D2 | C  | F | G | KL1 | Z   | QK   | b   | h | t1  | M  | L  |
| R88M-GP10030L    | 60.5            | 25 | 8  | 70 | 50 | 60 | 3 | 7 | 43  | 4.5 | 12.5 | 3h9 | 3 | 1.8 | M3 | 6  |
| R88M-GP10030H    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP10030S    | 87.5            | 30 | 11 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 18   | 4h9 | 4 | 2.5 | M4 | 8  |
| R88M-GP10030T    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP20030L    | 67.5            | 30 | 11 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 18   | 4h9 | 4 | 2.5 | M4 | 8  |
| R88M-GP20030H    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP20030S    | 94.5            | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP20030T    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP40030L    | 82.5            | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP40030H    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP40030S    | 109.5           | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP40030T    |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP10030L-B□ | 84.5            | 25 | 8  | 70 | 50 | 60 | 3 | 7 | 43  | 4.5 | 12.5 | 3h9 | 3 | 1.8 | M3 | 6  |
| R88M-GP10030H-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP10030S-B□ | 111.5           | 30 | 11 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 18   | 4h9 | 4 | 2.5 | M4 | 8  |
| R88M-GP10030T-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP20030L-B□ | 100             | 30 | 11 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 18   | 4h9 | 4 | 2.5 | M4 | 8  |
| R88M-GP20030H-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP20030S-B□ | 127             | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP20030T-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP40030L-B□ | 115             | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP40030H-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |
| R88M-GP40030S-B□ | 142             | 30 | 14 | 90 | 70 | 80 | 5 | 8 | 53  | 5.5 | 22.5 | 5h9 | 5 | 3   | M5 | 10 |
| R88M-GP40030T-B□ |                 |    |    |    |    |    |   |   |     |     |      |     |   |     |    |    |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

## ■ 2,000-r/min Servomotors


### 1 kW/1.5 kW

R88M-G1K020T(-S2)/-G1K520T(-S2)/-G1K020T-B(S2)/-G1K520T-B(S2) **ABS**

Servomotor/brake  
connector  
Encoder  
connector

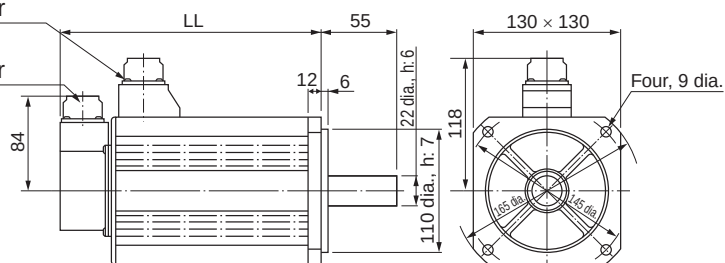

(Dimensions of shaft end  
with key and tap)

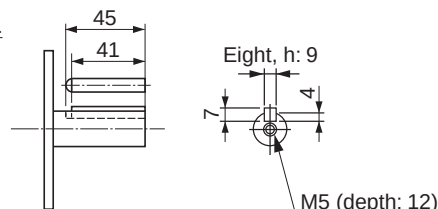

| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G1K020□    | 150             |
| R88M-G1K520□    | 175             |
| R88M-G1K020□-B□ |                 |
| R88M-G1K520□-B□ | 200             |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

## ■ 2,000-r/min Servomotors


### 2 kW/3 kW

R88M-G2K020T(-S2)/-G3K020T(-S2)/-G2K020T-B(S2)/-G3K020T-B(S2) **ABS**

Servomotor/brake  
connector  
Encoder  
connector

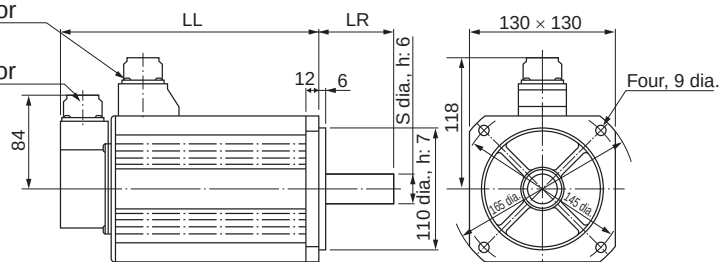

(Dimensions of shaft end  
with key and tap)

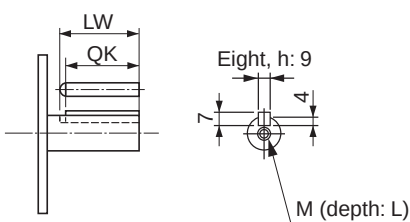

| Model           | Dimensions (mm) |    |    |    |    |    |    |
|-----------------|-----------------|----|----|----|----|----|----|
|                 | LL              | LR | S  | LW | QK | M  | L  |
| R88M-G2K020□    | 200             | 55 | 22 | 45 | 41 | M5 | 12 |
| R88M-G3K020□    | 250             | 65 | 24 | 55 | 51 | M8 | 20 |
| R88M-G2K020□-B□ | 225             | 55 | 22 | 45 | 41 | M5 | 12 |
| R88M-G3K020□-B□ | 275             | 65 | 24 | 55 | 51 | M8 | 20 |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

2-2 External and Mounting Hole Dimensions

■ 2,000-r/min Servomotors

4 kW/5 kW

R88M-G4K020T(-S2)/-G5K020T(-S2)/-G4K020T-B(S2)/-G5K020T-B(S2) **ABS**

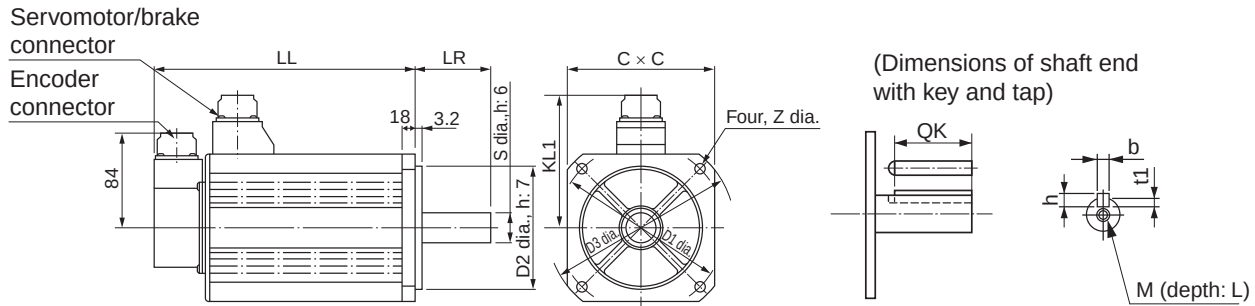

| Model           | Dimensions (mm) |    |    |     |       |     |     |     |      |    |      |   |    |     |    |
|-----------------|-----------------|----|----|-----|-------|-----|-----|-----|------|----|------|---|----|-----|----|
|                 | LL              | LR | S  | D1  | D2    | C   | D3  | KL1 | Z    | QK | b    | h | t1 | M   | L  |
| R88M-G4K020□    | 242             | 65 | 28 | 165 | 130   | 150 | 190 | 128 | 11   | 51 | 8h9  | 7 | 4  | M8  | 20 |
| R88M-G5K020□    | 225             | 70 | 35 | 200 | 114.3 | 176 | 233 | 143 | 13.5 | 50 | 10h9 | 8 | 5  | M12 | 25 |
| R88M-G4K020□-B□ | 267             | 65 | 28 | 165 | 130   | 150 | 190 | 128 | 11   | 51 | 8h9  | 7 | 4  | M8  | 20 |
| R88M-G5K020□-B□ | 250             | 70 | 35 | 200 | 114.3 | 176 | 233 | 143 | 13.5 | 50 | 10h9 | 8 | 5  | M12 | 25 |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

## ■ 1,500-r/min Servomotors

**7.5 kW**

R88M-G7K515T(-S2)/-G7K515T-B(S2) **ABS**

## ABS

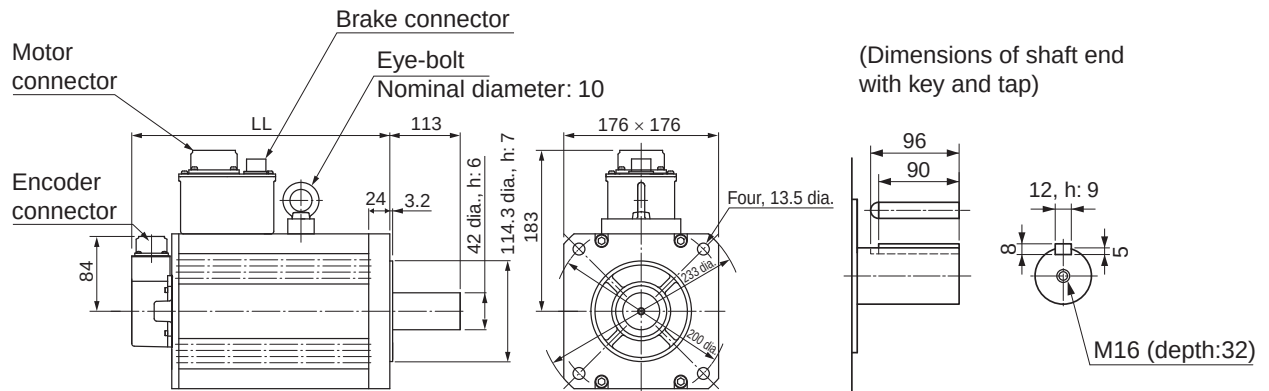

| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G7K515□    | 340.5           |
| R88M-G7K515□-B□ | 380.5           |


**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

2-2 External and Mounting Hole Dimensions

■ 1,000-r/min Servomotors

900 W/2 kW

R88M-G90010T(-S2)/-G2K010T(-S2)/-G90010T-B(S2)/-G2K010T-B(S2) **ABS**

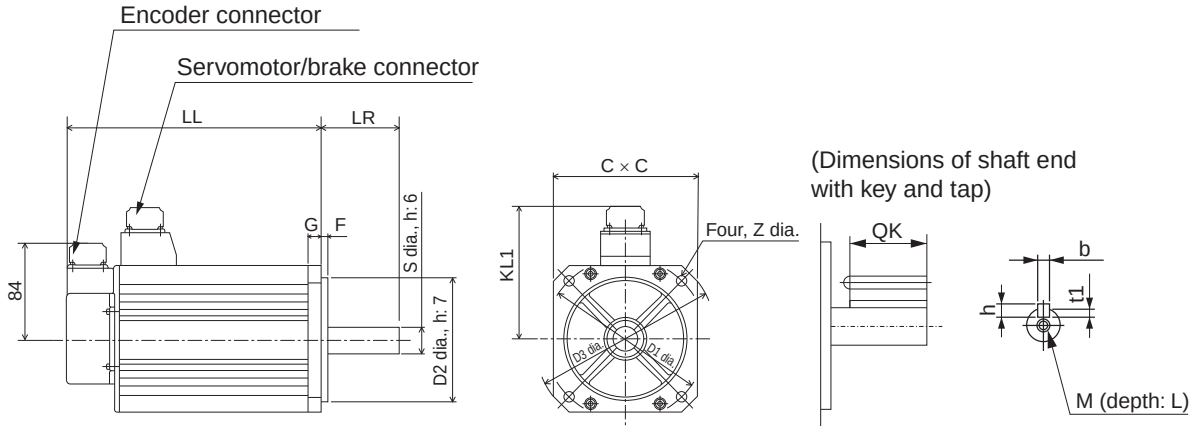


| Model           | Dimensions (mm) |    |    |     |       |     |     |     |    |     |      |    |      |   |    |     |    |
|-----------------|-----------------|----|----|-----|-------|-----|-----|-----|----|-----|------|----|------|---|----|-----|----|
|                 | LL              | LR | S  | D1  | D2    | C   | D3  | F   | G  | KL1 | Z    | QK | b    | h | t1 | M   | L  |
| R88M-G90010□    | 175             | 70 | 22 | 145 | 110   | 130 | 165 | 6   | 12 | 118 | 9    | 41 | 8h9  | 7 | 4  | M5  | 12 |
| R88M-G2K010□    | 182             | 80 | 35 | 200 | 114.3 | 176 | 233 | 3.2 | 18 | 143 | 13.5 | 50 | 10h9 | 8 | 5  | M12 | 25 |
| R88M-G90010□-B□ | 200             | 70 | 22 | 145 | 110   | 130 | 165 | 6   | 12 | 118 | 9    | 41 | 8h9  | 7 | 4  | M5  | 12 |
| R88M-G2K010□-B□ | 207             | 80 | 35 | 200 | 114.3 | 176 | 233 | 3.2 | 18 | 143 | 13.5 | 50 | 10h9 | 8 | 5  | M12 | 25 |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

■ 1,000-r/min Servomotors

3 kW

R88M-G3K010T(-S2)/-G3K010T-B(S2) **ABS**

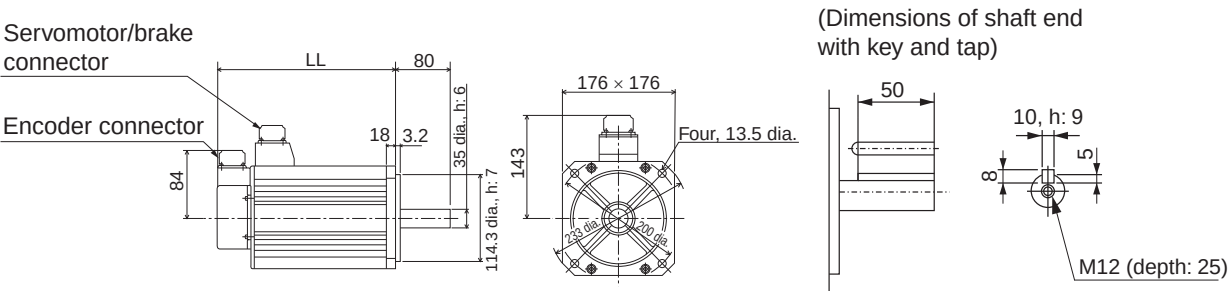


| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G3K010□    | 222             |
| R88M-G3K010□-B□ | 271             |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

### ■ 1,000-r/min Servomotors

4.5 kW

R88M-G4K510T(-S2)/-G4K510T-B(S2) **ABS**

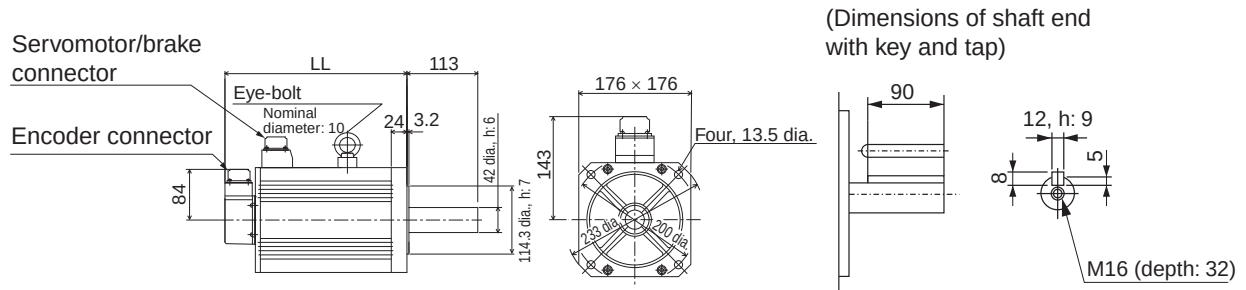


| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G4K510□    | 300.5           |
| R88M-G4K510□-B□ | 337.5           |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

### ■ 1,000-r/min Servomotors

6 kW

R88M-G6K010T(-S2)/-G6K010T-B(S2) **ABS**

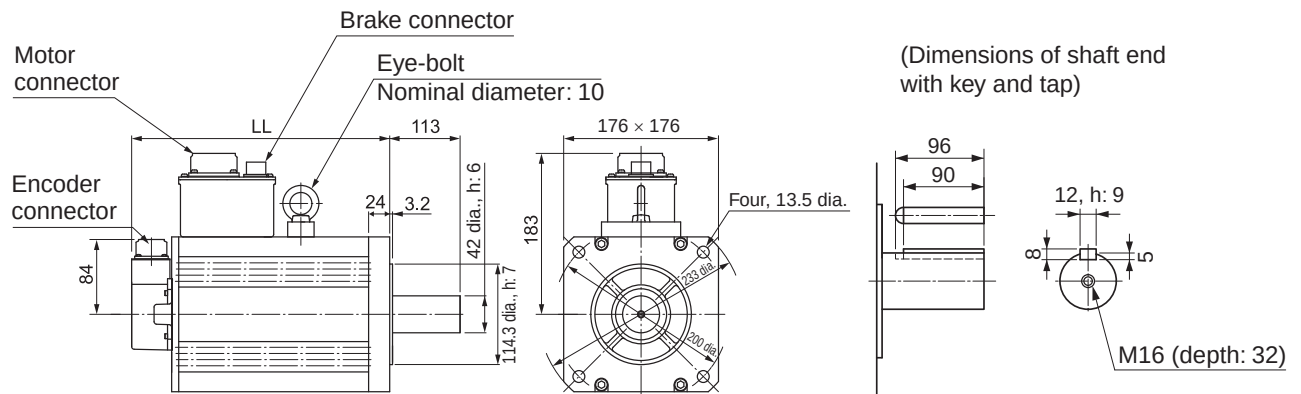


| Model           | Dimensions (mm) |
|-----------------|-----------------|
|                 | LL              |
| R88M-G6K010□    | 340.5           |
| R88M-G6K010□-B□ | 380.5           |

**Note** The standard models have a straight shaft. Models with a key and tap are indicated with "S2" at the end of the model number.

Parameter Unit Dimensions

■ R88A-PR02G Hand-held Parameter Unit

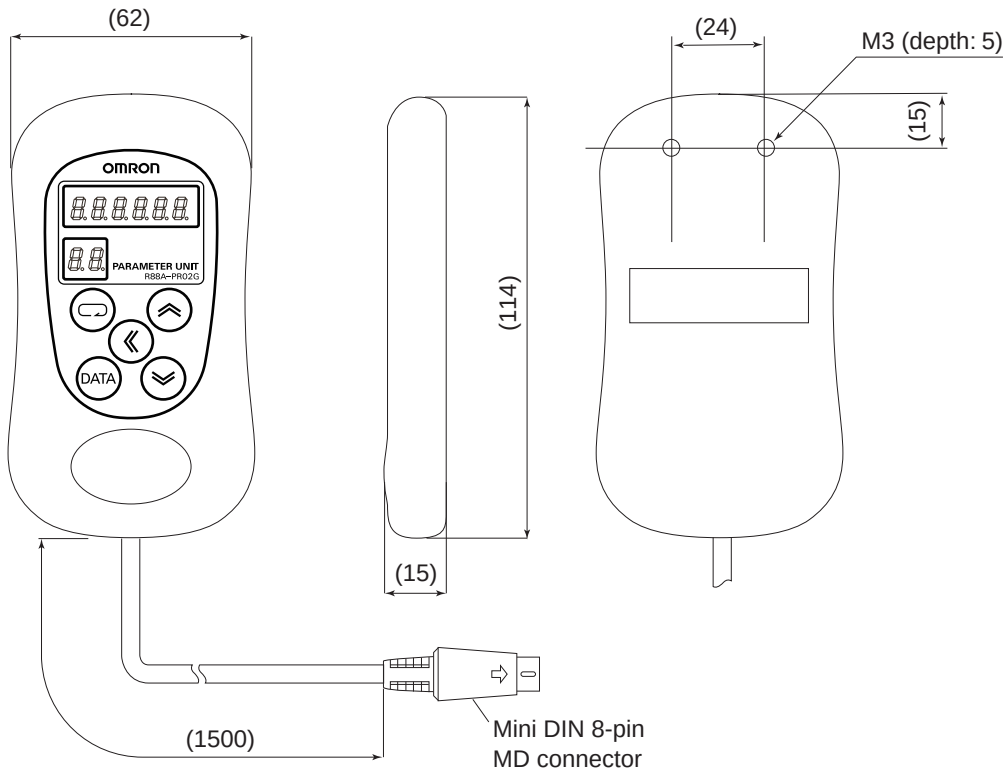



## Servomotor and Decelerator Combinations

## 3,000-r/min Servomotors

| Motor model  | 1/5                                                 | 1/11<br>(1/9 for flange size<br>No.11)              | 1/21                                                | 1/33                                                | 1/45               |
|--------------|-----------------------------------------------------|-----------------------------------------------------|-----------------------------------------------------|-----------------------------------------------------|--------------------|
| R88M-G05030□ | R88G-HPG11A05100B□<br>(Also used with R88M-G10030□) | R88G-HPG11A09050B□<br>(Gear ratio 1/9)              | R88G-HPG14A21100B□<br>(Also used with R88M-G10030□) | R88G-HPG14A33050B□                                  | R88G-HPG14A45050B□ |
| R88M-G10030□ | R88G-HPG11A05100B□                                  | R88G-HPG14A11100B□                                  | R88G-HPG14A21100B□                                  | R88G-HPG20A33100B□                                  | R88G-HPG20A45100B□ |
| R88M-G20030□ | R88G-HPG14A05200B□                                  | R88G-HPG14A11200B□                                  | R88G-HPG20A21200B□                                  | R88G-HPG20A33200B□                                  | R88G-HPG20A45200B□ |
| R88M-G40030□ | R88G-HPG14A05400B□                                  | R88G-HPG20A11400B□                                  | R88G-HPG20A21400B□                                  | R88G-HPG32A33400B□                                  | R88G-HPG32A45400B□ |
| R88M-G75030□ | R88G-HPG20A05750B□                                  | R88G-HPG20A11750B□                                  | R88G-HPG32A21750B□                                  | R88G-HPG32A33750B□                                  | R88G-HPG32A45750B□ |
| R88M-G1K030T | R88G-HPG32A051K0B□                                  | R88G-HPG32A111K0B□                                  | R88G-HPG32A211K0B□                                  | R88G-HPG32A331K0B□                                  | R88G-HPG50A451K0B□ |
| R88M-G1K530T | R88G-HPG32A052K0B□<br>(Also used with R88M-G2K030T) | R88G-HPG32A112K0B□<br>(Also used with R88M-G2K030T) | R88G-HPG32A211K5B□                                  | R88G-HPG50A332K0B□<br>(Also used with R88M-G2K030T) | R88G-HPG50A451K5B□ |
| R88M-G2K030T | R88G-HPG32A052K0B□                                  | R88G-HPG32A112K0B□                                  | R88G-HPG50A212K0B□                                  | R88G-HPG50A332K0B□                                  | ---                |
| R88M-G3K030T | R88G-HPG32A053K0B□                                  | R88G-HPG50A113K0B□                                  | R88G-HPG50A213K0B□                                  | ---                                                 | ---                |
| R88M-G4K030T | R88G-HPG32A054K0B□                                  | R88G-HPG50A115K0B□<br>(Also used with R88M-G5K030T) | ---                                                 | ---                                                 | ---                |
| R88M-G5K030T | R88G-HPG50A055K0B□                                  | R88G-HPG50A115K0B□                                  | ---                                                 | ---                                                 | ---                |

## 2-2 External and Mounting Hole Dimensions

### 3,000-r/min Flat Servomotors

| Motor model   | 1/5                 | 1/11                | 1/21                | 1/33                | 1/45                |
|---------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| R88M-GP10030□ | R88G-HPG11A05100PB□ | R88G-HPG14A11100PB□ | R88G-HPG14A21100PB□ | R88G-HPG20A33100PB□ | R88G-HPG20A45100PB□ |
| R88M-GP20030□ | R88G-HPG14A05200PB□ | R88G-HPG20A11200PB□ | R88G-HPG20A21200PB□ | R88G-HPG20A33200PB□ | R88G-HPG20A45200PB□ |
| R88M-GP40030□ | R88G-HPG20A05400PB□ | R88G-HPG20A11400PB□ | R88G-HPG20A21400PB□ | R88G-HPG32A33400PB□ | R88G-HPG32A45400PB□ |

### 2,000-r/min Servomotors

| Motor model  | 1/5                                                    | 1/11<br>(1/12 for flange size<br>No.65)                 | 1/21<br>(1/20 for flange size<br>No.65)                | 1/33<br>(1/25 for flange size<br>No.65)                 | 1/45                |
|--------------|--------------------------------------------------------|---------------------------------------------------------|--------------------------------------------------------|---------------------------------------------------------|---------------------|
| R88M-G1K020T | R88G-HPG32A053K0B□<br>(Also used with<br>R88M-G3K030T) | R88G-HPG32A112K0SB□<br>(Also used with<br>R88M-G2K020T) | R88G-HPG32A211K0SB□                                    | R88G-HPG50A332K0SB□<br>(Also used with<br>R88M-G2K020T) | R88G-HPG50A451K0SB□ |
| R88M-G1K520T | R88G-HPG32A053K0B□<br>(Also used with<br>R88M-G3K030T) | R88G-HPG32A112K0SB□<br>(Also used with<br>R88M-G2K020T) | R88G-HPG50A213K0B□<br>(Also used with<br>R88M-G3K030T) | R88G-HPG50A332K0SB□<br>(Also used with<br>R88M-G2K020T) | ---                 |
| R88M-G2K020T | R88G-HPG32A053K0B□<br>(Also used with<br>R88M-G3K030T) | R88G-HPG32A112K0SB□                                     | R88G-HPG50A213K0B□<br>(Also used with<br>R88M-G3K030T) | R88G-HPG50A332K0SB□                                     | ---                 |
| R88M-G3K020T | R88G-HPG32A054K0B□<br>(Also used with<br>R88M-G4K030T) | R88G-HPG50A115K0B□<br>(Also used with<br>R88M-G5K030T)  | R88G-HPG50A213K0SB□                                    | R88G-HPG65A253K0SB□                                     | ---                 |
| R88M-G4K020T | R88G-HPG50A054K0SB□                                    | R88G-HPG50A114K0SB□                                     | R88G-HPG65A204K0SB□                                    | R88G-HPG65A254K0SB□                                     | ---                 |
| R88M-G5K020T | R88G-HPG50A055K0SB□                                    | R88G-HPG50A115K0SB□                                     | R88G-HPG65A205K0SB□                                    | R88G-HPG65A255K0SB□                                     | ---                 |
| R88M-G7K515T | R88G-HPG65A057K5SB□                                    | R88G-HPG65A127K5SB□                                     | ---                                                    | ---                                                     | ---                 |

### 1,000-r/min Servomotors

| Motor model      | 1/5                                                          | 1/11<br>(1/12 for flange size<br>No.65)                      | 1/21<br>(1/20 for flange size<br>No.65)                      | 1/33<br>(1/25 for flange size<br>No.65)                      |
|------------------|--------------------------------------------------------------|--------------------------------------------------------------|--------------------------------------------------------------|--------------------------------------------------------------|
| R88M-<br>G90010T | R88G-<br>HPG32A05900TB□                                      | R88G-<br>HPG32A11900TB□                                      | R88G-<br>HPG50A21900TB□                                      | R88G-<br>HPG50A33900TB□                                      |
| R88M-<br>G2K010T | R88G-<br>HPG32A052K0TB□                                      | R88G-<br>HPG50A112K0TB□                                      | R88G-<br>HPG50A212K0TB□                                      | R88G-<br>HPG65A255K0SB□<br>(Also used with R88M-<br>G5K020T) |
| R88M-<br>G3K010T | R88G-<br>HPG50A055K0SB□<br>(Also used with R88M-<br>G5K020T) | R88G-<br>HPG50A115K0SB□<br>(Also used with R88M-<br>G5K020T) | R88G-<br>HPG65A205K0SB□<br>(Also used with R88M-<br>G5K020T) | R88G-<br>HPG65A255K0SB□<br>(Also used with R88M-<br>G5K020T) |
| R88M-<br>G4K510T | R88G-<br>HPG50A054K5TB□                                      | R88G-<br>HPG65A127K5SB□<br>(Also used with R88M-<br>G7K515T) | R88G-<br>HPG65A204K5TB□                                      | ---                                                          |
| R88M-<br>G6K010T | R88G-<br>HPG65A057K5SB□<br>(Also used with R88M-<br>G7K515T) | R88G-<br>HPG65A127K5SB□<br>(Also used with R88M-<br>G7K515T) | ---                                                          | ---                                                          |

### Decelerator Dimensions

■ Backlash = 3' Max.

#### Decelerators for 3,000-r/min Servomotors

| Model |      |                    | Dimensions (mm) |    |    |         |     |    |      |      |    |    |     |    |
|-------|------|--------------------|-----------------|----|----|---------|-----|----|------|------|----|----|-----|----|
|       |      |                    | LM              | LR | C1 | C2      | D1  | D2 | D3   | D4   | D5 | E  | F1  | F2 |
| 50 W  | 1/5  | R88G-HPG11A05100B□ | 39.5            | 42 | 40 | 40×40   | 46  | 46 | 40.0 | 39.5 | 29 | 27 | 2.2 | 15 |
|       | 1/9  | R88G-HPG11A09050B□ | 39.5            | 42 | 40 | 40×40   | 46  | 46 | 40.0 | 39.5 | 29 | 27 | 2.2 | 15 |
|       | 1/21 | R88G-HPG14A21100B□ | 64.0            | 58 | 60 | 60×60   | 70  | 46 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/33 | R88G-HPG14A33050B□ | 64.0            | 58 | 60 | 60×60   | 70  | 46 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/45 | R88G-HPG14A45050B□ | 64.0            | 58 | 60 | 60×60   | 70  | 46 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
| 100 W | 1/5  | R88G-HPG11A05100B□ | 39.5            | 42 | 40 | 40×40   | 46  | 46 | 40.0 | 39.5 | 29 | 27 | 2.2 | 15 |
|       | 1/11 | R88G-HPG14A11100B□ | 64.0            | 58 | 60 | 60×60   | 70  | 46 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/21 | R88G-HPG14A21100B□ | 64.0            | 58 | 60 | 60×60   | 70  | 46 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/33 | R88G-HPG20A33100B□ | 66.5            | 80 | 90 | 55 dia. | 105 | 46 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/45 | R88G-HPG20A45100B□ | 66.5            | 80 | 90 | 55 dia. | 105 | 46 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
| 200 W | 1/5  | R88G-HPG14A05200B□ | 64.0            | 58 | 60 | 60×60   | 70  | 70 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/11 | R88G-HPG14A11200B□ | 64.0            | 58 | 60 | 60×60   | 70  | 70 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/21 | R88G-HPG20A21200B□ | 71.0            | 80 | 90 | 89 dia. | 105 | 70 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/33 | R88G-HPG20A33200B□ | 71.0            | 80 | 90 | 89 dia. | 105 | 70 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/45 | R88G-HPG20A45200B□ | 71.0            | 80 | 90 | 89 dia. | 105 | 70 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |

| Model |      |                    | Dimensions (mm) |    |    |     |       |                  |                |   |   |     |                |    |
|-------|------|--------------------|-----------------|----|----|-----|-------|------------------|----------------|---|---|-----|----------------|----|
|       |      |                    | G               | S  | T  | Z1  | Z2    | AT <sup>*1</sup> | Key dimensions |   |   |     | Tap dimensions |    |
|       |      |                    |                 |    |    |     |       |                  | QK             | b | h | t1  | M              | L  |
| 50 W  | 1/5  | R88G-HPG11A05100B□ | 5               | 8  | 20 | 3.4 | M4×9  | M3               | 15             | 3 | 3 | 1.8 | M3             | 6  |
|       | 1/9  | R88G-HPG11A09050B□ | 5               | 8  | 20 | 3.4 | M4×9  | M3               | 15             | 3 | 3 | 1.8 | M3             | 6  |
|       | 1/21 | R88G-HPG14A21100B□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/33 | R88G-HPG14A33050B□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/45 | R88G-HPG14A45050B□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3   | M4             | 8  |
| 100 W | 1/5  | R88G-HPG11A05100B□ | 5               | 8  | 20 | 3.4 | M4×9  | M3               | 15             | 3 | 3 | 1.8 | M3             | 6  |
|       | 1/11 | R88G-HPG14A11100B□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/21 | R88G-HPG14A21100B□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/33 | R88G-HPG20A33100B□ | 10              | 25 | 42 | 9.0 | M4×10 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/45 | R88G-HPG20A45100B□ | 10              | 25 | 42 | 9.0 | M4×10 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
| 200 W | 1/5  | R88G-HPG14A05200B□ | 8               | 16 | 28 | 5.5 | M4×10 | M4               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/11 | R88G-HPG14A11200B□ | 8               | 16 | 28 | 5.5 | M4×10 | M4               | 25             | 5 | 5 | 3   | M4             | 8  |
|       | 1/21 | R88G-HPG20A21200B□ | 10              | 25 | 42 | 9.0 | M4×10 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/33 | R88G-HPG20A33200B□ | 10              | 25 | 42 | 9.0 | M4×10 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/45 | R88G-HPG20A45200B□ | 10              | 25 | 42 | 9.0 | M4×10 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |

**Note 1.** The standard models have a straight shaft.


**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG11A05100BJ)

| Model |      |                    | Dimensions (mm) |     |     |          |     |    |       |       |    |    |      |    |
|-------|------|--------------------|-----------------|-----|-----|----------|-----|----|-------|-------|----|----|------|----|
|       |      |                    | LM              | LR  | C1  | C2       | D1  | D2 | D3    | D4    | D5 | E  | F1   | F2 |
| 400 W | 1/5  | R88G-HPG14A05400B□ | 64.0            | 58  | 60  | 60×60    | 70  | 70 | 56.0  | 55.5  | 40 | 37 | 2.5  | 21 |
|       | 1/11 | R88G-HPG20A11400B□ | 71.0            | 80  | 90  | 89 dia.  | 105 | 70 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/21 | R88G-HPG20A21400B□ | 71.0            | 80  | 90  | 89 dia.  | 105 | 70 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/33 | R88G-HPG32A33400B□ | 104.0           | 133 | 120 | 122 dia. | 135 | 70 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |
|       | 1/45 | R88G-HPG32A45400B□ | 104.0           | 133 | 120 | 122 dia. | 135 | 70 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |
| 750 W | 1/5  | R88G-HPG20A05750B□ | 78.0            | 80  | 90  | 80×80    | 105 | 90 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/11 | R88G-HPG20A11750B□ | 78.0            | 80  | 90  | 80×80    | 105 | 90 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/21 | R88G-HPG32A21750B□ | 104.0           | 133 | 120 | 122 dia. | 135 | 90 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |
|       | 1/33 | R88G-HPG32A33750B□ | 104.0           | 133 | 120 | 122 dia. | 135 | 90 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |
|       | 1/45 | R88G-HPG32A45750B□ | 104.0           | 133 | 120 | 122 dia. | 135 | 90 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |



| Model |      |                    | Dimensions (mm) |    |    |      |       |                  |                |    |   |     |                |    |
|-------|------|--------------------|-----------------|----|----|------|-------|------------------|----------------|----|---|-----|----------------|----|
|       |      |                    | G               | S  | T  | Z1   | Z2    | AT <sup>*1</sup> | Key dimensions |    |   |     | Tap dimensions |    |
|       |      |                    |                 |    |    |      |       |                  | QK             | b  | h | t1  | M              | L  |
| 400 W | 1/5  | R88G-HPG14A05400B□ | 8               | 16 | 28 | 5.5  | M4×10 | M4               | 25             | 5  | 5 | 3   | M4             | 8  |
|       | 1/11 | R88G-HPG20A11400B□ | 10              | 25 | 42 | 9.0  | M4×10 | M4               | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/21 | R88G-HPG20A21400B□ | 10              | 25 | 42 | 9.0  | M4×10 | M4               | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/33 | R88G-HPG32A33400B□ | 13              | 40 | 82 | 11.0 | M4×10 | M4               | 70             | 12 | 8 | 5.0 | M10            | 20 |
|       | 1/45 | R88G-HPG32A45400B□ | 13              | 40 | 82 | 11.0 | M4×10 | M4               | 70             | 12 | 8 | 5.0 | M10            | 20 |
| 750 W | 1/5  | R88G-HPG20A05750B□ | 10              | 25 | 42 | 9.0  | M5×12 | M4               | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/11 | R88G-HPG20A11750B□ | 10              | 25 | 42 | 9.0  | M5×12 | M4               | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/21 | R88G-HPG32A21750B□ | 13              | 40 | 82 | 11.0 | M5×12 | M6               | 70             | 12 | 8 | 5.0 | M10            | 20 |
|       | 1/33 | R88G-HPG32A33750B□ | 13              | 40 | 82 | 11.0 | M5×12 | M6               | 70             | 12 | 8 | 5.0 | M10            | 20 |
|       | 1/45 | R88G-HPG32A45750B□ | 13              | 40 | 82 | 11.0 | M5×12 | M6               | 70             | 12 | 8 | 5.0 | M10            | 20 |

\*1. This is the set bolt.

## Outline Drawings

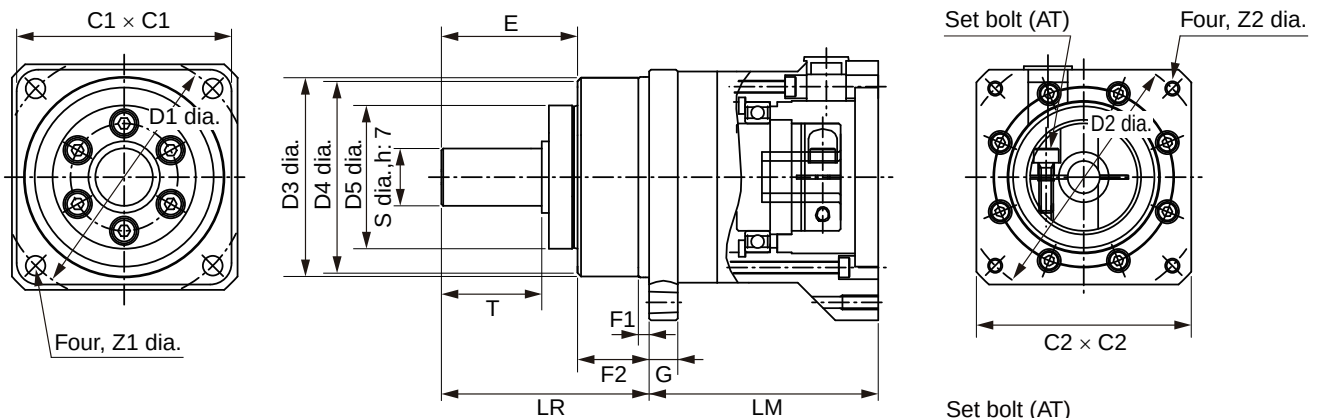

## Key and Tap Dimensions

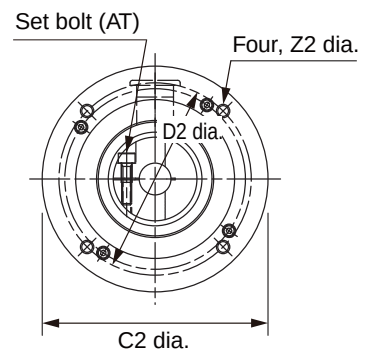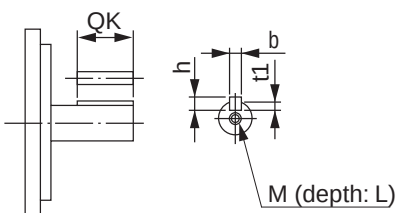

## 2-2 External and Mounting Hole Dimensions

| Model  |      |                    | Dimensions (mm) |     |     |          |     |     |     |     |     |     |      |    |
|--------|------|--------------------|-----------------|-----|-----|----------|-----|-----|-----|-----|-----|-----|------|----|
|        |      |                    | LM              | LR  | C1  | C2       | D1  | D2  | D3  | D4  | D5  | E   | F1   | F2 |
| 1 kW   | 1/5  | R88G-HPG32A051K0B□ | 104             | 133 | 120 | 122 dia. | 135 | 100 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A111K0B□ | 104             | 133 | 120 | 122 dia. | 135 | 100 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG32A211K0B□ | 104             | 133 | 120 | 122 dia. | 135 | 100 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/33 | R88G-HPG32A331K0B□ | 104             | 133 | 120 | 122 dia. | 135 | 100 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/45 | R88G-HPG50A451K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 100 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 1.5 kW | 1/5  | R88G-HPG32A052K0B□ | 110             | 133 | 120 | 135 dia. | 135 | 115 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A112K0B□ | 110             | 133 | 120 | 135 dia. | 135 | 115 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG32A211K5B□ | 110             | 133 | 120 | 135 dia. | 135 | 115 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/33 | R88G-HPG50A332K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 115 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/45 | R88G-HPG50A451K5B□ | 123             | 156 | 170 | 170 dia. | 190 | 115 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 2 kW   | 1/5  | R88G-HPG32A052K0B□ | 110             | 133 | 120 | 135 dia. | 135 | 115 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A112K0B□ | 110             | 133 | 120 | 135 dia. | 135 | 115 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG50A212K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 115 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/33 | R88G-HPG50A332K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 115 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 3 kW   | 1/5  | R88G-HPG32A053K0B□ | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG50A113K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/21 | R88G-HPG50A213K0B□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 4 kW   | 1/5  | R88G-HPG32A054K0B□ | 129             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG50A115K0B□ | 149             | 156 | 170 | 130×130  | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 5 kW   | 1/5  | R88G-HPG50A055K0B□ | 149             | 156 | 170 | 130×130  | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/11 | R88G-HPG50A115K0B□ | 149             | 156 | 170 | 130×130  | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |


**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG32A051K0BJ)

| Model  |      |                    | Dimensions (mm) |    |    |    |       |      |                |    |   |     |                |    |
|--------|------|--------------------|-----------------|----|----|----|-------|------|----------------|----|---|-----|----------------|----|
|        |      |                    | G               | S  | T  | Z1 | Z2    | AT*1 | Key dimensions |    |   |     | Tap dimensions |    |
|        |      |                    |                 |    |    |    |       |      | QK             | b  | h | t1  | M              | L  |
| 1 kW   | 1/5  | R88G-HPG32A051K0B□ | 13              | 40 | 82 | 11 | M6×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A111K0B□ | 13              | 40 | 82 | 11 | M6×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG32A211K0B□ | 13              | 40 | 82 | 11 | M6×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/33 | R88G-HPG32A331K0B□ | 13              | 40 | 82 | 11 | M6×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/45 | R88G-HPG50A451K0B□ | 16              | 50 | 82 | 14 | M6×10 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
| 1.5 kW | 1/5  | R88G-HPG32A052K0B□ | 13              | 40 | 82 | 11 | M8×10 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A112K0B□ | 13              | 40 | 82 | 11 | M8×10 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG32A211K5B□ | 13              | 40 | 82 | 11 | M8×10 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/33 | R88G-HPG50A332K0B□ | 16              | 50 | 82 | 14 | M8×10 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
|        | 1/45 | R88G-HPG50A451K5B□ | 16              | 50 | 82 | 14 | M8×10 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
| 2 kW   | 1/5  | R88G-HPG32A052K0B□ | 13              | 40 | 82 | 11 | M8×10 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A112K0B□ | 13              | 40 | 82 | 11 | M8×10 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG50A212K0B□ | 16              | 50 | 82 | 14 | M8×10 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
|        | 1/33 | R88G-HPG50A332K0B□ | 16              | 50 | 82 | 14 | M8×10 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
| 3 kW   | 1/5  | R88G-HPG32A053K0B□ | 13              | 40 | 82 | 11 | M8×18 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG50A113K0B□ | 16              | 50 | 82 | 14 | M8×16 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
|        | 1/21 | R88G-HPG50A213K0B□ | 16              | 50 | 82 | 14 | M8×16 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
| 4 kW   | 1/5  | R88G-HPG32A054K0B□ | 13              | 40 | 82 | 11 | M8×25 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG50A115K0B□ | 16              | 50 | 82 | 14 | M8×25 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
| 5 kW   | 1/5  | R88G-HPG50A055K0B□ | 16              | 50 | 82 | 14 | M8×25 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |
|        | 1/11 | R88G-HPG50A115K0B□ | 16              | 50 | 82 | 14 | M8×25 | M6   | 70             | 14 | 9 | 5.5 | M10            | 20 |

\*1. This is the set bolt.

## Outline Drawings

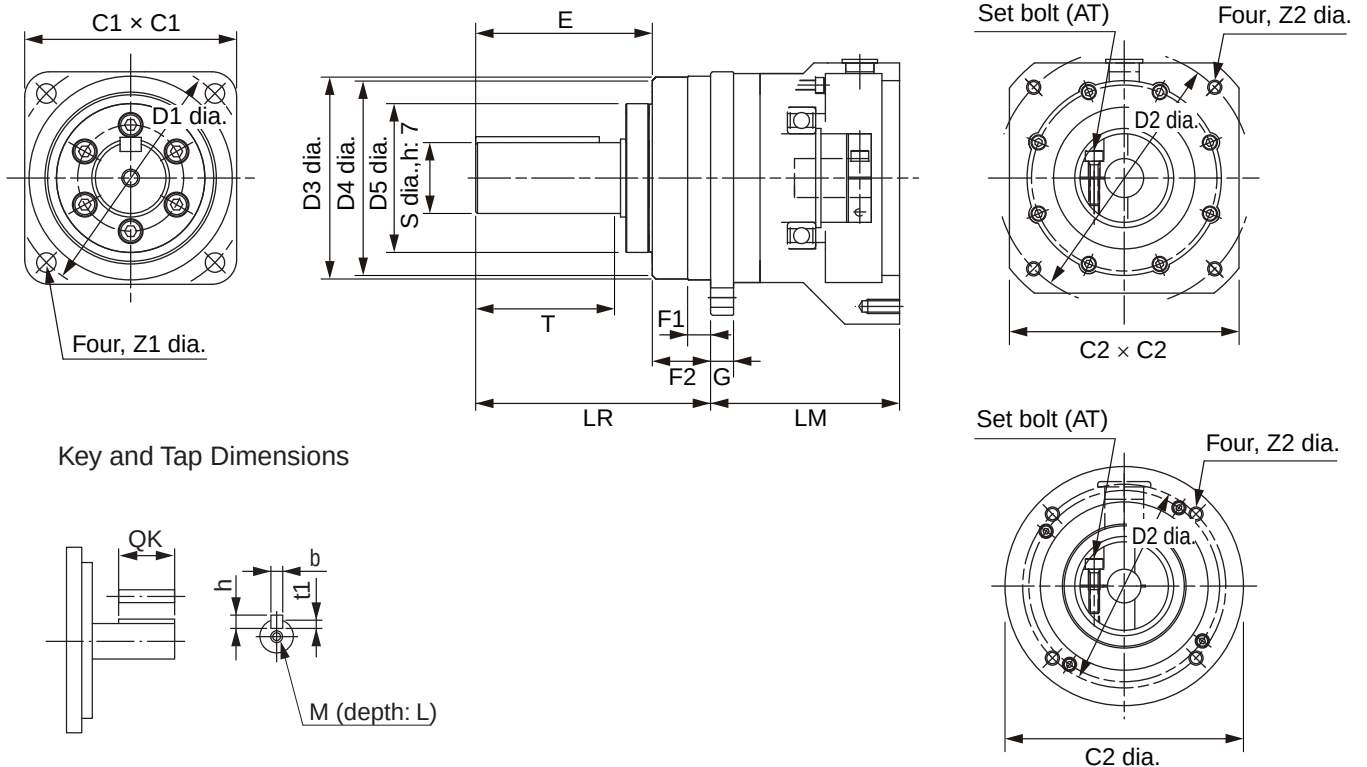

## 2-2 External and Mounting Hole Dimensions

### Decelerators for 2,000-r/min Servomotors

| Model  |      |                     | Dimensions (mm) |     |     |          |     |     |     |     |     |     |      |    |
|--------|------|---------------------|-----------------|-----|-----|----------|-----|-----|-----|-----|-----|-----|------|----|
|        |      |                     | LM              | LR  | C1  | C2       | D1  | D2  | D3  | D4  | D5  | E   | F1   | F2 |
| 1 kW   | 1/5  | R88G-HPG32A053K0B□  | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG32A211K0SB□ | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/45 | R88G-HPG50A451K0SB□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 1.5 kW | 1/5  | R88G-HPG32A053K0B□  | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG50A213K0B□  | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 2 kW   | 1/5  | R88G-HPG32A053K0B□  | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 107             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG50A213K0B□  | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 123             | 156 | 170 | 170 dia. | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 3 kW   | 1/5  | R88G-HPG32A054K0B□  | 129             | 133 | 120 | 130×130  | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG50A115K0B□  | 149             | 156 | 170 | 130×130  | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/21 | R88G-HPG50A213K0SB□ | 149             | 156 | 170 | 130×130  | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/25 | R88G-HPG65A253K0SB□ | 231             | 222 | 230 | 130×130  | 260 | 145 | 220 | 214 | 168 | 165 | 12.0 | 57 |

| Model  |      |                     | Dimensions (mm) |    |     |    |       |      |                |    |    |     |                |    |
|--------|------|---------------------|-----------------|----|-----|----|-------|------|----------------|----|----|-----|----------------|----|
|        |      |                     | G               | S  | T   | Z1 | Z2    | AT*1 | Key dimensions |    |    |     | Tap dimensions |    |
|        |      |                     |                 |    |     |    |       |      | QK             | b  | h  | t1  | M              | L  |
| 1 kW   | 1/5  | R88G-HPG32A053K0B□  | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG32A211K0SB□ | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/45 | R88G-HPG50A451K0SB□ | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
| 1.5 kW | 1/5  | R88G-HPG32A053K0B□  | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG50A213K0B□  | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
| 2 kW   | 1/5  | R88G-HPG32A053K0B□  | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A112K0SB□ | 13              | 40 | 82  | 11 | M8×18 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG50A213K0B□  | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/33 | R88G-HPG50A332K0SB□ | 16              | 50 | 82  | 14 | M8×16 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
| 3 kW   | 1/5  | R88G-HPG32A054K0B□  | 13              | 40 | 82  | 11 | M8×25 | M6   | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG50A115K0B□  | 16              | 50 | 82  | 14 | M8×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/21 | R88G-HPG50A213K0SB□ | 16              | 50 | 82  | 14 | M8×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/25 | R88G-HPG65A253K0SB□ | 25              | 80 | 130 | 18 | M8×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |

**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG32A053K0BJ)




| Model  |      |                     | Dimensions (mm) |     |     |         |     |     |     |     |     |     |      |    |
|--------|------|---------------------|-----------------|-----|-----|---------|-----|-----|-----|-----|-----|-----|------|----|
|        |      |                     | LM              | LR  | C1  | C2      | D1  | D2  | D3  | D4  | D5  | E   | F1   | F2 |
| 4 kW   | 1/5  | R88G-HPG50A054K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 165 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/11 | R88G-HPG50A114K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 165 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/20 | R88G-HPG65A204K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 165 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/25 | R88G-HPG65A254K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 165 | 220 | 214 | 168 | 165 | 12.0 | 57 |
| 5 kW   | 1/5  | R88G-HPG50A055K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/11 | R88G-HPG50A115K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/20 | R88G-HPG65A205K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
| 7.5 kW | 1/5  | R88G-HPG65A057K5SB□ | 184.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 254.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |

| Model  |      |                     | Dimensions (mm) |    |     |    |        |      |                |    |    |     |                |    |
|--------|------|---------------------|-----------------|----|-----|----|--------|------|----------------|----|----|-----|----------------|----|
|        |      |                     | G               | S  | T   | Z1 | Z2     | AT*1 | Key dimensions |    |    |     | Tap dimensions |    |
|        |      |                     |                 |    |     |    |        |      | QK             | b  | h  | t1  | M              | L  |
| 4 kW   | 1/5  | R88G-HPG50A054K0SB□ | 16              | 50 | 82  | 14 | M10×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/11 | R88G-HPG50A114K0SB□ | 16              | 50 | 82  | 14 | M10×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/20 | R88G-HPG65A204K0SB□ | 25              | 80 | 130 | 18 | M10×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/25 | R88G-HPG65A254K0SB□ | 25              | 80 | 130 | 18 | M10×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |
| 5 kW   | 1/5  | R88G-HPG50A055K0SB□ | 16              | 50 | 82  | 14 | M12×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/11 | R88G-HPG50A115K0SB□ | 16              | 50 | 82  | 14 | M12×25 | M6   | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/20 | R88G-HPG65A205K0SB□ | 25              | 80 | 130 | 18 | M12×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 25              | 80 | 130 | 18 | M12×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |
| 7.5 kW | 1/5  | R88G-HPG65A057K5SB□ | 25              | 80 | 130 | 18 | M12×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 25              | 80 | 130 | 18 | M12×25 | M8   | 110            | 22 | 14 | 9.0 | M16            | 35 |

\*1. This is the set bolt.

### Outline Drawings

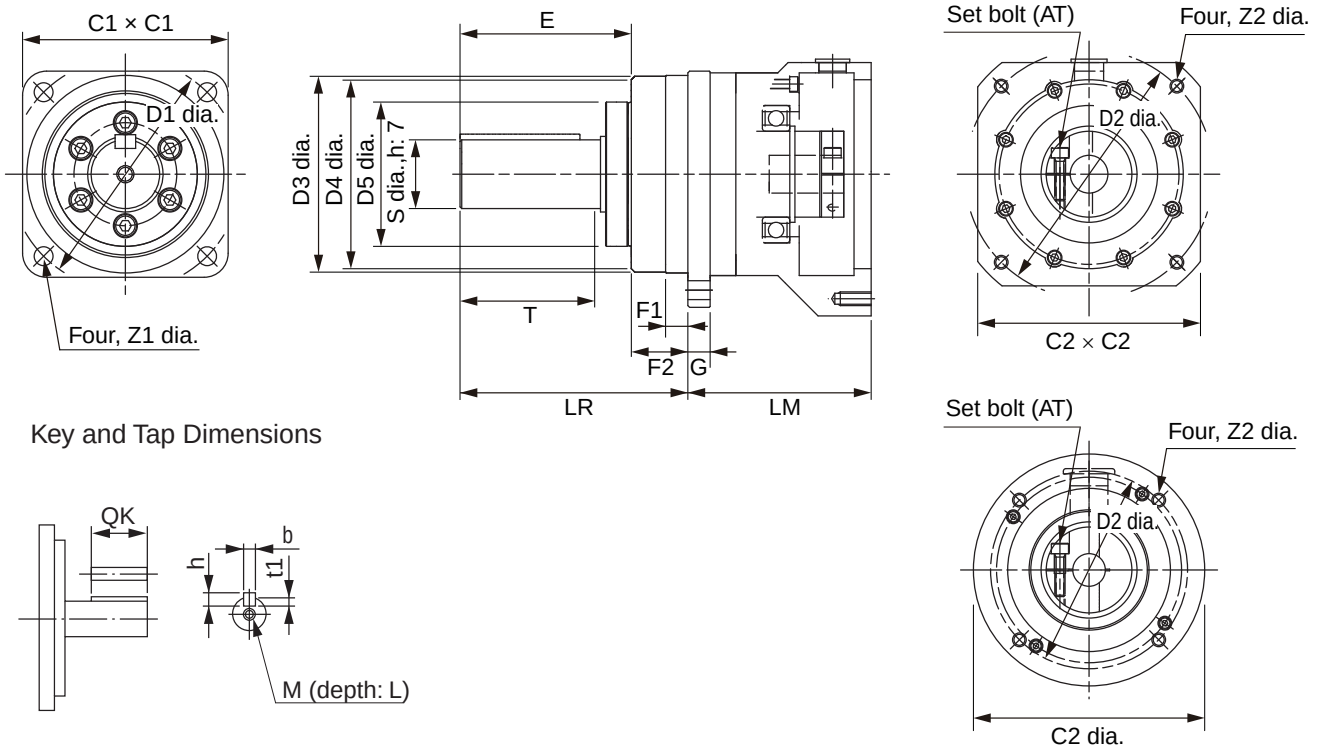

## 2-2 External and Mounting Hole Dimensions

### Decelerators for 1,000-r/min Servomotors

| Model  |      |                     | Dimensions (mm) |     |     |         |     |     |     |     |     |     |      |    |
|--------|------|---------------------|-----------------|-----|-----|---------|-----|-----|-----|-----|-----|-----|------|----|
|        |      |                     | LM              | LR  | C1  | C2      | D1  | D2  | D3  | D4  | D5  | E   | F1   | F2 |
| 900 W  | 1/5  | R88G-HPG32A05900TB□ | 129             | 133 | 120 | 130×130 | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG32A11900TB□ | 129             | 133 | 120 | 130×130 | 135 | 145 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/21 | R88G-HPG50A21900TB□ | 149             | 156 | 170 | 130×130 | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/33 | R88G-HPG50A33900TB□ | 149             | 156 | 170 | 130×130 | 190 | 145 | 165 | 163 | 122 | 103 | 12.0 | 53 |
| 2 kW   | 1/5  | R88G-HPG32A052K0TB□ | 129             | 133 | 120 | 180×180 | 135 | 200 | 115 | 114 | 84  | 98  | 12.5 | 35 |
|        | 1/11 | R88G-HPG50A112K0TB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/21 | R88G-HPG50A212K0TB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
| 3 kW   | 1/5  | R88G-HPG50A055K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/11 | R88G-HPG50A115K0SB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/20 | R88G-HPG65A205K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 231             | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
| 4.5 kW | 1/5  | R88G-HPG50A054K5TB□ | 149             | 156 | 170 | 180×180 | 190 | 200 | 165 | 163 | 122 | 103 | 12.0 | 53 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 254.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/20 | R88G-HPG65A204K5TB□ | 254.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
| 6 kW   | 1/5  | R88G-HPG65A057K5SB□ | 184.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 254.5           | 222 | 230 | 180×180 | 260 | 200 | 220 | 214 | 168 | 165 | 12.0 | 57 |


**Note 1.** The standard models have a straight shaft.

**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG32A05900TBJ)


| Model  |      |                     | Dimensions (mm) |    |     |    |        |                  |                |    |    |     |                |    |
|--------|------|---------------------|-----------------|----|-----|----|--------|------------------|----------------|----|----|-----|----------------|----|
|        |      |                     | G               | S  | T   | Z1 | Z2     | AT <sup>*1</sup> | Key dimensions |    |    |     | Tap dimensions |    |
|        |      |                     |                 |    |     |    |        |                  | QK             | b  | h  | t1  | M              | L  |
| 900 W  | 1/5  | R88G-HPG32A05900TB□ | 13              | 40 | 82  | 11 | M8×25  | M6               | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG32A11900TB□ | 13              | 40 | 82  | 11 | M8×25  | M6               | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/21 | R88G-HPG50A21900TB□ | 16              | 50 | 82  | 14 | M8×25  | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/33 | R88G-HPG50A33900TB□ | 16              | 50 | 82  | 14 | M8×25  | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
| 2 kW   | 1/5  | R88G-HPG32A052K0TB□ | 13              | 40 | 82  | 11 | M12×25 | M6               | 70             | 12 | 8  | 5.0 | M10            | 20 |
|        | 1/11 | R88G-HPG50A112K0TB□ | 16              | 50 | 82  | 14 | M12×25 | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/21 | R88G-HPG50A212K0TB□ | 16              | 50 | 82  | 14 | M12×25 | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
| 3 kW   | 1/5  | R88G-HPG50A055K0SB□ | 16              | 50 | 82  | 14 | M12×25 | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/11 | R88G-HPG50A115K0SB□ | 16              | 50 | 82  | 14 | M12×25 | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/20 | R88G-HPG65A205K0SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/25 | R88G-HPG65A255K0SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
| 4.5 kW | 1/5  | R88G-HPG50A054K5TB□ | 16              | 50 | 82  | 14 | M12×25 | M6               | 70             | 14 | 9  | 5.5 | M10            | 20 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/20 | R88G-HPG65A204K5TB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
| 6 kW   | 1/5  | R88G-HPG65A057K5SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |
|        | 1/12 | R88G-HPG65A127K5SB□ | 25              | 80 | 130 | 18 | M12×25 | M8               | 110            | 22 | 14 | 9.0 | M16            | 35 |

\*1. This is the set bolt.

## Outline Drawings

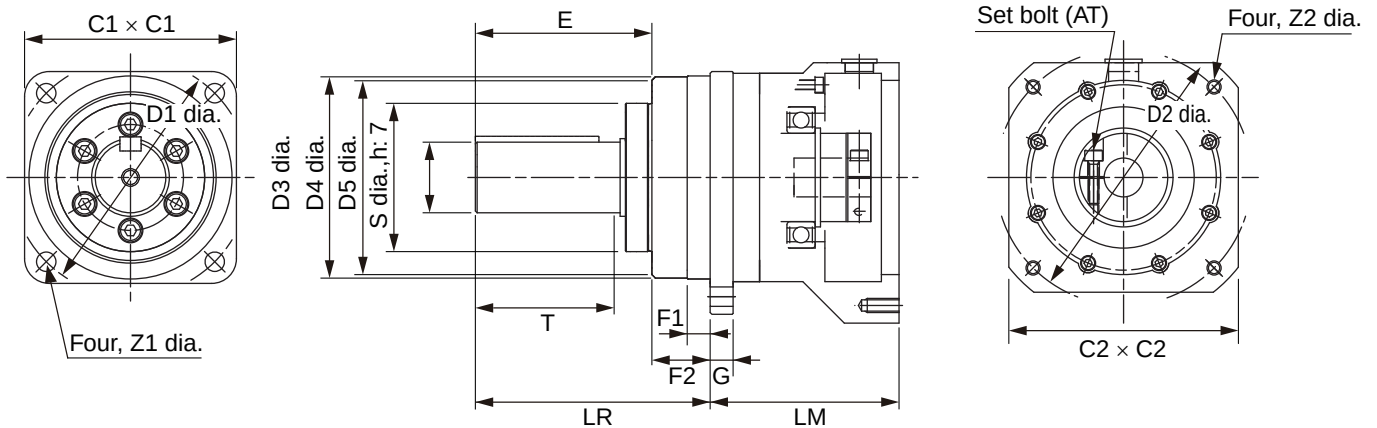

## Key and Tap Dimensions

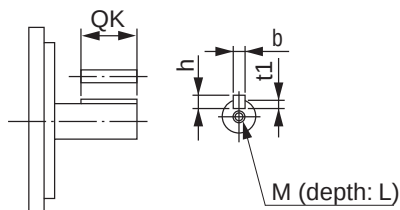

## 2-2 External and Mounting Hole Dimensions

### Decelerators for 3,000-r/min Flat Servomotors

| Model |      |                     | Dimensions (mm) |    |    |         |     |    |      |      |    |    |     |    |
|-------|------|---------------------|-----------------|----|----|---------|-----|----|------|------|----|----|-----|----|
|       |      |                     | LM              | LR | C1 | C2      | D1  | D2 | D3   | D4   | D5 | E  | F1  | F2 |
| 100 W | 1/5  | R88G-HPG11A05100PB□ | 39.5            | 42 | 40 | 60×60   | 46  | 70 | 40.0 | 39.5 | 29 | 27 | 2.2 | 15 |
|       | 1/11 | R88G-HPG14A11100PB□ | 64.0            | 58 | 60 | 60×60   | 70  | 70 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/21 | R88G-HPG14A21100PB□ | 64.0            | 58 | 60 | 60×60   | 70  | 70 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/33 | R88G-HPG20A33100PB□ | 71.0            | 80 | 90 | 89 dia. | 105 | 70 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/45 | R88G-HPG20A45100PB□ | 71.0            | 80 | 90 | 89 dia. | 105 | 70 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |

| Model |      |                     | Dimensions (mm) |    |    |     |       |                  |                |   |   |     |                |    |
|-------|------|---------------------|-----------------|----|----|-----|-------|------------------|----------------|---|---|-----|----------------|----|
|       |      |                     | G               | S  | T  | Z1  | Z2    | AT <sup>*1</sup> | Key dimensions |   |   |     | Tap dimensions |    |
|       |      |                     |                 |    |    |     |       |                  | QK             | b | h | t1  | M              | L  |
| 100 W | 1/5  | R88G-HPG11A05100PB□ | 5               | 8  | 20 | 3.4 | M4×9  | M3               | 15             | 3 | 3 | 1.8 | M3             | 6  |
|       | 1/11 | R88G-HPG14A11100PB□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3.0 | M4             | 8  |
|       | 1/21 | R88G-HPG14A21100PB□ | 8               | 16 | 28 | 5.5 | M4×10 | M3               | 25             | 5 | 5 | 3.0 | M4             | 8  |
|       | 1/33 | R88G-HPG20A33100PB□ | 10              | 25 | 42 | 9.0 | M4×10 | M3               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/45 | R88G-HPG20A45100PB□ | 10              | 25 | 42 | 9.0 | M4×10 | M3               | 36             | 8 | 7 | 4.0 | M6             | 12 |

| Model |      |                     | Dimensions (mm) |    |    |       |     |    |      |      |    |    |     |    |
|-------|------|---------------------|-----------------|----|----|-------|-----|----|------|------|----|----|-----|----|
|       |      |                     | LM              | LR | C1 | C2    | D1  | D2 | D3   | D4   | D5 | E  | F1  | F2 |
| 200 W | 1/5  | R88G-HPG14A05200PB□ | 65.0            | 58 | 60 | 80×80 | 70  | 90 | 56.0 | 55.5 | 40 | 37 | 2.5 | 21 |
|       | 1/11 | R88G-HPG20A11200PB□ | 78.0            | 80 | 90 | 80×80 | 105 | 90 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/21 | R88G-HPG20A21200PB□ | 78.0            | 80 | 90 | 80×80 | 105 | 90 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/33 | R88G-HPG20A33200PB□ | 78.0            | 80 | 90 | 80×80 | 105 | 90 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |
|       | 1/45 | R88G-HPG20A45200PB□ | 78.0            | 80 | 90 | 80×80 | 105 | 90 | 85.0 | 84.0 | 59 | 53 | 7.5 | 27 |

| Model |      |                     | Dimensions (mm) |    |    |     |       |                  |                |   |   |     |                |    |
|-------|------|---------------------|-----------------|----|----|-----|-------|------------------|----------------|---|---|-----|----------------|----|
|       |      |                     | G               | S  | T  | Z1  | Z2    | AT <sup>*1</sup> | Key dimensions |   |   |     | Tap dimensions |    |
|       |      |                     |                 |    |    |     |       |                  | QK             | b | h | t1  | M              | L  |
| 200 W | 1/5  | R88G-HPG14A05200PB□ | 8               | 16 | 28 | 5.5 | M5×12 | M4               | 25             | 5 | 5 | 3.0 | M4             | 8  |
|       | 1/11 | R88G-HPG20A11200PB□ | 10              | 25 | 42 | 9.0 | M5×12 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/21 | R88G-HPG20A21200PB□ | 10              | 25 | 42 | 9.0 | M5×12 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/33 | R88G-HPG20A33200PB□ | 10              | 25 | 42 | 9.0 | M5×12 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |
|       | 1/45 | R88G-HPG20A45200PB□ | 10              | 25 | 42 | 9.0 | M5×12 | M4               | 36             | 8 | 7 | 4.0 | M6             | 12 |

**Note 1.** The standard models have a straight shaft.


**Note 2.** Models with a key and tap are indicated with "J" at the end of the model number (the suffix shown in the box). (Example: R88G-HPG11A05100PB<sup>J</sup>)

| Model |      |                     | Dimensions (mm) |     |     |          |     |    |       |       |    |    |      |    |
|-------|------|---------------------|-----------------|-----|-----|----------|-----|----|-------|-------|----|----|------|----|
|       |      |                     | LM              | LR  | C1  | C2       | D1  | D2 | D3    | D4    | D5 | E  | F1   | F2 |
| 400 W | 1/5  | R88G-HPG20A05400PB□ | 78.0            | 80  | 90  | 80×80    | 105 | 90 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/11 | R88G-HPG20A11400PB□ | 78.0            | 80  | 90  | 80×80    | 105 | 90 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/21 | R88G-HPG20A21400PB□ | 78.0            | 80  | 90  | 80×80    | 105 | 90 | 85.0  | 84.0  | 59 | 53 | 7.5  | 27 |
|       | 1/33 | R88G-HPG32A33400PB□ | 104.0           | 133 | 120 | 122 dia. | 135 | 90 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |
|       | 1/45 | R88G-HPG32A45400PB□ | 104.0           | 133 | 120 | 122 dia. | 135 | 90 | 115.0 | 114.0 | 84 | 98 | 12.5 | 35 |



| Model |      |                     | Dimensions (mm) |    |    |      |       |      |                |    |   |     |                |    |
|-------|------|---------------------|-----------------|----|----|------|-------|------|----------------|----|---|-----|----------------|----|
|       |      |                     | G               | S  | T  | Z1   | Z2    | AT*1 | Key dimensions |    |   |     | Tap dimensions |    |
|       |      |                     |                 |    |    |      |       |      | QK             | b  | h | t1  | M              | L  |
| 400 W | 1/5  | R88G-HPG20A05400PB□ | 10              | 25 | 42 | 9.0  | M5×12 | M4   | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/11 | R88G-HPG20A11400PB□ | 10              | 25 | 42 | 9.0  | M5×12 | M4   | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/21 | R88G-HPG20A21400PB□ | 10              | 25 | 42 | 9.0  | M5×12 | M4   | 36             | 8  | 7 | 4.0 | M6             | 12 |
|       | 1/33 | R88G-HPG32A33400PB□ | 13              | 40 | 82 | 11.0 | M5×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |
|       | 1/45 | R88G-HPG32A45400PB□ | 13              | 40 | 82 | 11.0 | M5×12 | M6   | 70             | 12 | 8 | 5.0 | M10            | 20 |

\*1. This is the set bolt.

### Outline Drawings

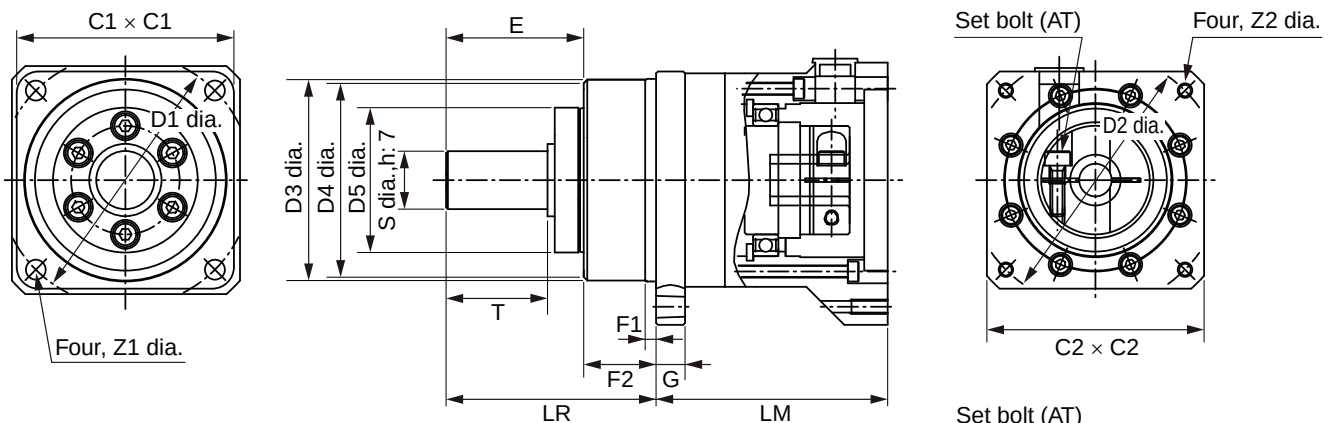

### Key and Tap Dimensions

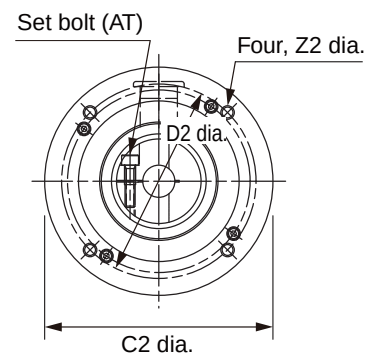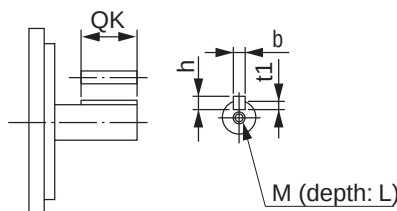


■ Backlash = 15' Max.

Decelerators for 3,000-r/min Servomotors

| Model |      |                   | Dimensions (mm) |    |    |    |    |     |    |    |    |   |
|-------|------|-------------------|-----------------|----|----|----|----|-----|----|----|----|---|
|       |      |                   | LM              | LR | C1 | C2 | D1 | D2  | D3 | D4 | E3 | F |
| 50 W  | 1/5  | R88G-VRSF05B100CJ | 67.5            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/9  | R88G-VRSF09B100CJ | 67.5            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/15 | R88G-VRSF15B100CJ | 78.0            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/25 | R88G-VRSF25B050CJ | 78.0            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
| 100 W | 1/5  | R88G-VRSF05B100CJ | 67.5            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/9  | R88G-VRSF09B100CJ | 67.5            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/15 | R88G-VRSF15B100CJ | 78.0            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
|       | 1/25 | R88G-VRSF25B100CJ | 78.0            | 32 | 40 | 52 | 46 | 60  | 50 | 45 | 10 | 3 |
| 200 W | 1/5  | R88G-VRSF05B200CJ | 72.5            | 32 | 60 | 52 | 70 | 60  | 50 | 45 | 10 | 3 |
|       | 1/9  | R88G-VRSF09C200CJ | 89.5            | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
|       | 1/15 | R88G-VRSF15C200CJ | 100.0           | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
|       | 1/25 | R88G-VRSF25C200CJ | 100.0           | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
| 400 W | 1/5  | R88G-VRSF05C400CJ | 89.5            | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
|       | 1/9  | R88G-VRSF09C400CJ | 89.5            | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
|       | 1/15 | R88G-VRSF15C400CJ | 100.0           | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
|       | 1/25 | R88G-VRSF25C400CJ | 100.0           | 50 | 60 | 78 | 70 | 90  | 70 | 62 | 17 | 3 |
| 750 W | 1/5  | R88G-VRSF05C750CJ | 93.5            | 50 | 80 | 78 | 90 | 90  | 70 | 62 | 17 | 3 |
|       | 1/9  | R88G-VRSF09D750CJ | 97.5            | 61 | 80 | 98 | 90 | 115 | 90 | 75 | 18 | 5 |
|       | 1/15 | R88G-VRSF15D750CJ | 110.0           | 61 | 80 | 98 | 90 | 115 | 90 | 75 | 18 | 5 |
|       | 1/25 | R88G-VRSF25D750CJ | 110.0           | 61 | 80 | 98 | 90 | 115 | 90 | 75 | 18 | 5 |

**Note** The standard models have a straight shaft with a key.


Outline Drawings

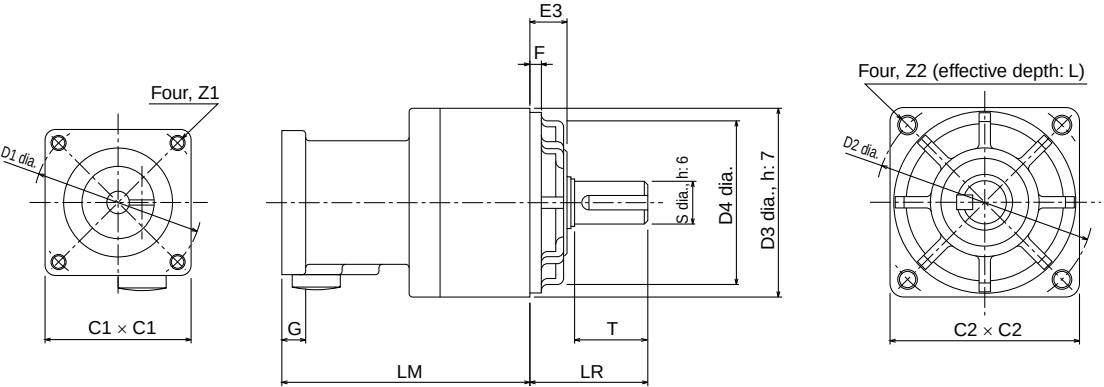


| Model |      |                   | Dimensions (mm) |    |    |    |    |    |                |   |   |     |
|-------|------|-------------------|-----------------|----|----|----|----|----|----------------|---|---|-----|
|       |      |                   | S               | T  | Z1 | Z2 | AT | L  | Key dimensions |   |   |     |
|       |      |                   |                 |    |    |    |    |    | QK             | b | h | t1  |
| 50 W  | 1/5  | R88G-VRSF05B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/9  | R88G-VRSF09B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/15 | R88G-VRSF15B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/25 | R88G-VRSF25B050CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
| 100 W | 1/5  | R88G-VRSF05B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/9  | R88G-VRSF09B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/15 | R88G-VRSF15B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/25 | R88G-VRSF25B100CJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
| 200 W | 1/5  | R88G-VRSF05B200CJ | 12              | 20 | M4 | M5 | M4 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/9  | R88G-VRSF09C200CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/15 | R88G-VRSF15C200CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/25 | R88G-VRSF25C200CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
| 400 W | 1/5  | R88G-VRSF05C400CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/9  | R88G-VRSF09C400CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/15 | R88G-VRSF15C400CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/25 | R88G-VRSF25C400CJ | 19              | 30 | M4 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
| 750 W | 1/5  | R88G-VRSF05C750CJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/9  | R88G-VRSF09D750CJ | 24              | 40 | M5 | M8 | M4 | 20 | 30             | 8 | 7 | 4   |
|       | 1/15 | R88G-VRSF15D750CJ | 24              | 40 | M5 | M8 | M4 | 20 | 30             | 8 | 7 | 4   |
|       | 1/25 | R88G-VRSF25D750CJ | 24              | 40 | M5 | M8 | M4 | 20 | 30             | 8 | 7 | 4   |

### Outline Drawings

Set bolt (AT)

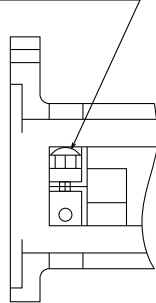

Key Dimensions

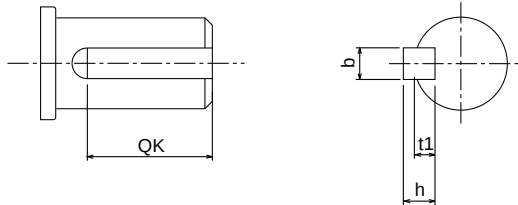


Decelerators for 3,000-r/min Flat Servomotors

| Model |      |                    | Dimensions (mm) |    |    |    |    |    |    |    |    |   |    |
|-------|------|--------------------|-----------------|----|----|----|----|----|----|----|----|---|----|
|       |      |                    | LM              | LR | C1 | C2 | D1 | D2 | D3 | D4 | E3 | F | G  |
| 100 W | 1/5  | R88G-VRSF05B100PCJ | 67.5            | 32 | 60 | 52 | 70 | 60 | 50 | 45 | 10 | 3 | 8  |
|       | 1/9  | R88G-VRSF09B100PCJ | 67.5            | 32 | 60 | 52 | 70 | 60 | 50 | 45 | 10 | 3 | 8  |
|       | 1/15 | R88G-VRSF15B100PCJ | 78.0            | 32 | 60 | 52 | 70 | 60 | 50 | 45 | 10 | 3 | 8  |
|       | 1/25 | R88G-VRSF25B100PCJ | 78.0            | 32 | 60 | 52 | 70 | 60 | 50 | 45 | 10 | 3 | 8  |
| 200 W | 1/5  | R88G-VRSF05B200PCJ | 72.5            | 32 | 80 | 52 | 90 | 60 | 50 | 45 | 10 | 3 | 12 |
|       | 1/9  | R88G-VRSF09C200PCJ | 89.5            | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
|       | 1/15 | R88G-VRSF15C200PCJ | 100.0           | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
|       | 1/25 | R88G-VRSF25C200PCJ | 100.0           | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
| 400 W | 1/5  | R88G-VRSF05C400PCJ | 89.5            | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
|       | 1/9  | R88G-VRSF09C400PCJ | 89.5            | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
|       | 1/15 | R88G-VRSF15C400PCJ | 100.0           | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |
|       | 1/25 | R88G-VRSF25C400PCJ | 100.0           | 50 | 80 | 78 | 90 | 90 | 70 | 62 | 17 | 3 | 12 |

**Note** The standard models have a straight shaft with a key.

Outline Drawings

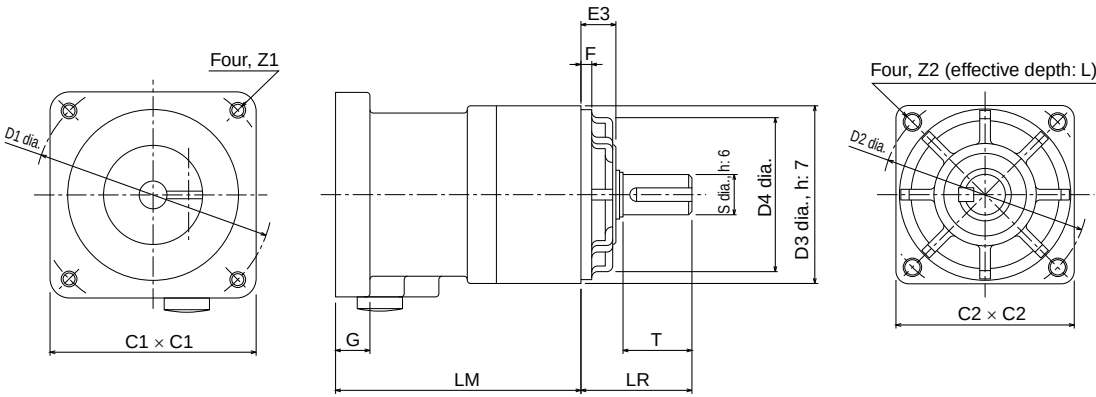






| Model |      |                    | Dimensions (mm) |    |    |    |    |    |                |   |   |     |
|-------|------|--------------------|-----------------|----|----|----|----|----|----------------|---|---|-----|
|       |      |                    | S               | T  | Z1 | Z2 | AT | L  | Key dimensions |   |   |     |
|       |      |                    |                 |    |    |    |    |    | QK             | b | h | t1  |
| 100 W | 1/5  | R88G-VRSF05B100PCJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/9  | R88G-VRSF09B100PCJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/15 | R88G-VRSF15B100PCJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/25 | R88G-VRSF25B100PCJ | 12              | 20 | M4 | M5 | M3 | 12 | 16             | 4 | 4 | 2.5 |
| 200 W | 1/5  | R88G-VRSF05B200PCJ | 12              | 20 | M5 | M5 | M4 | 12 | 16             | 4 | 4 | 2.5 |
|       | 1/9  | R88G-VRSF09C200PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/15 | R88G-VRSF15C200PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/25 | R88G-VRSF25C200PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
| 400 W | 1/5  | R88G-VRSF05C400PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/9  | R88G-VRSF09C400PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/15 | R88G-VRSF15C400PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |
|       | 1/25 | R88G-VRSF25C400PCJ | 19              | 30 | M5 | M6 | M4 | 20 | 22             | 6 | 6 | 3.5 |

### Outline Drawings

Set bolt (AT)

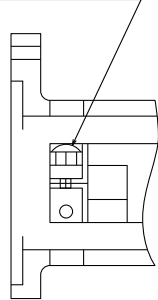


Key Dimensions

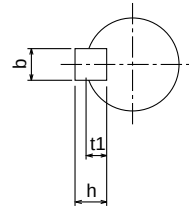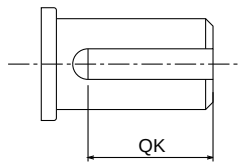


External Regeneration Resistor Dimensions

■ External Regeneration Resistor


R88A-RR08050S/-RR080100S

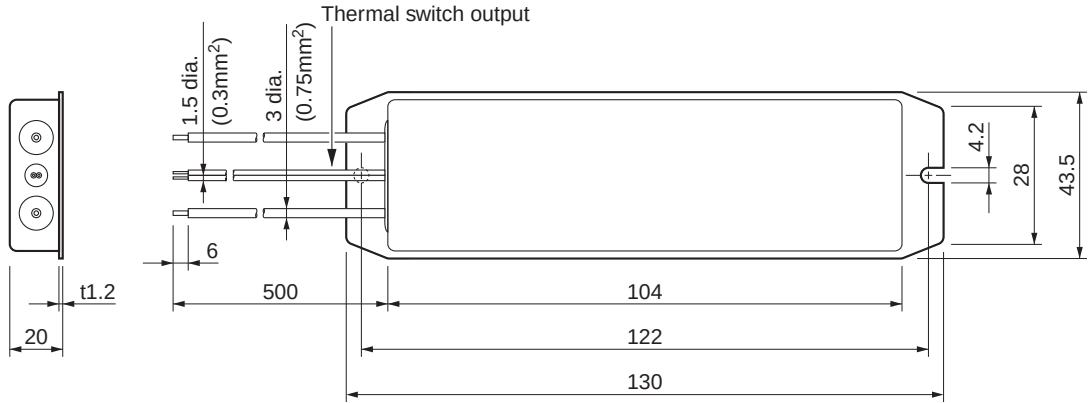

R88A-RR22047S

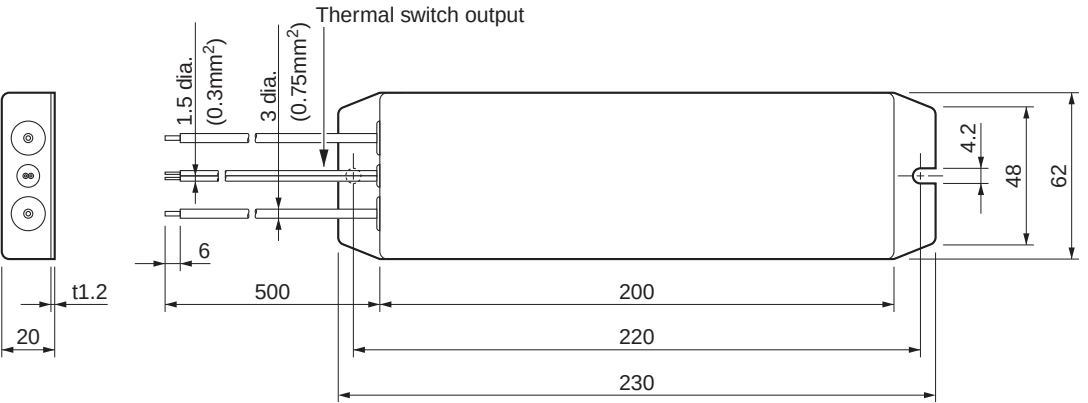


R88A-RR50020S

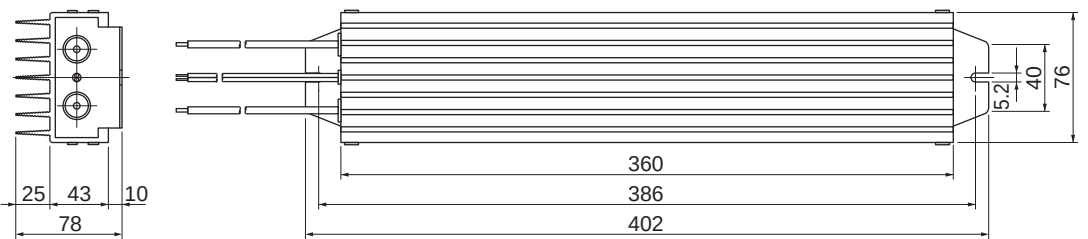


Reactor Dimensions

■ 3G3AX-DL2002

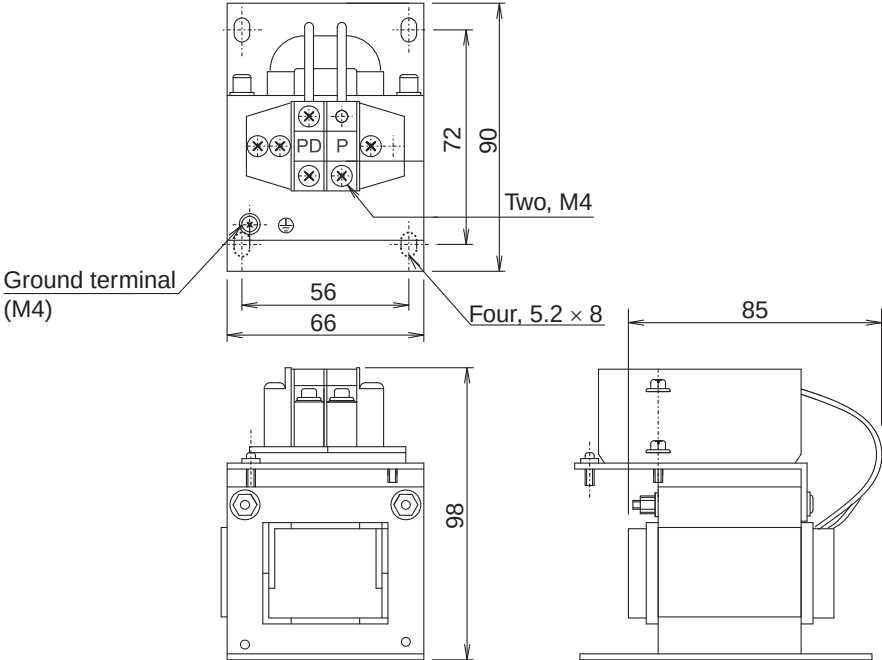


■ 3G3AX-DL2004

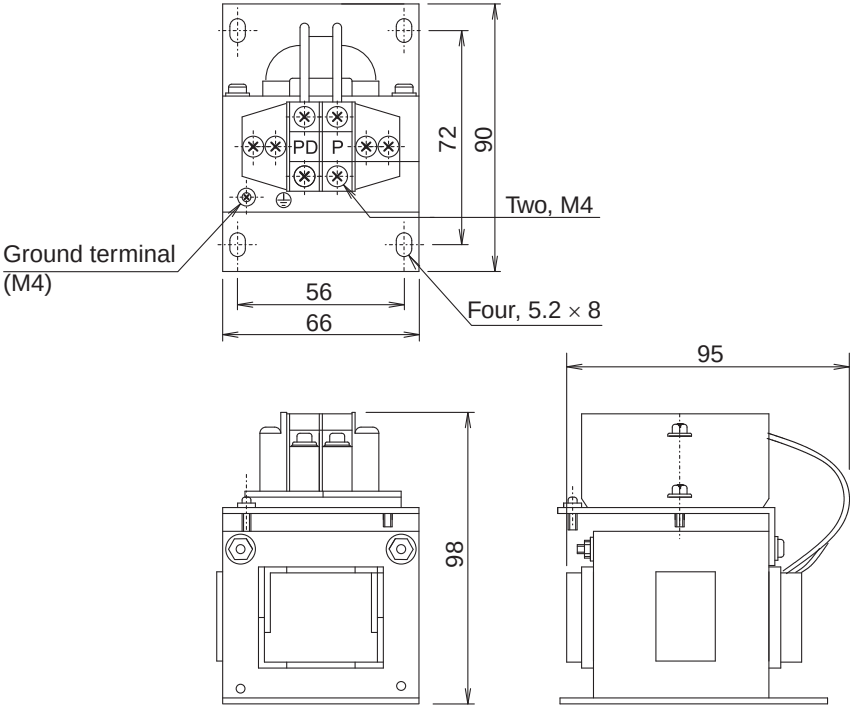


2-2 External and Mounting Hole Dimensions


■ 3G3AX-DL2007

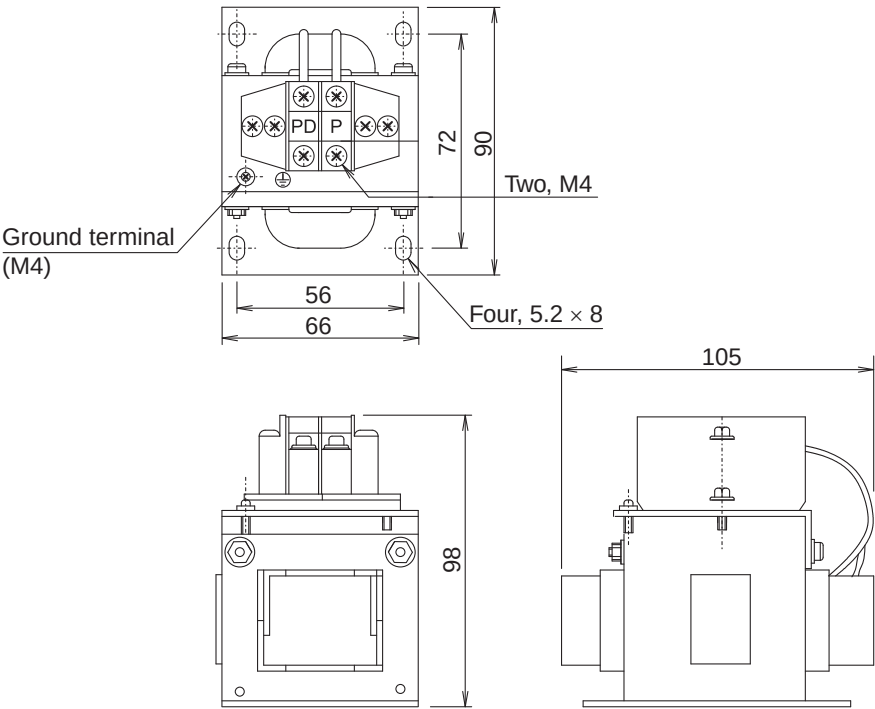


■ 3G3AX-DL2015

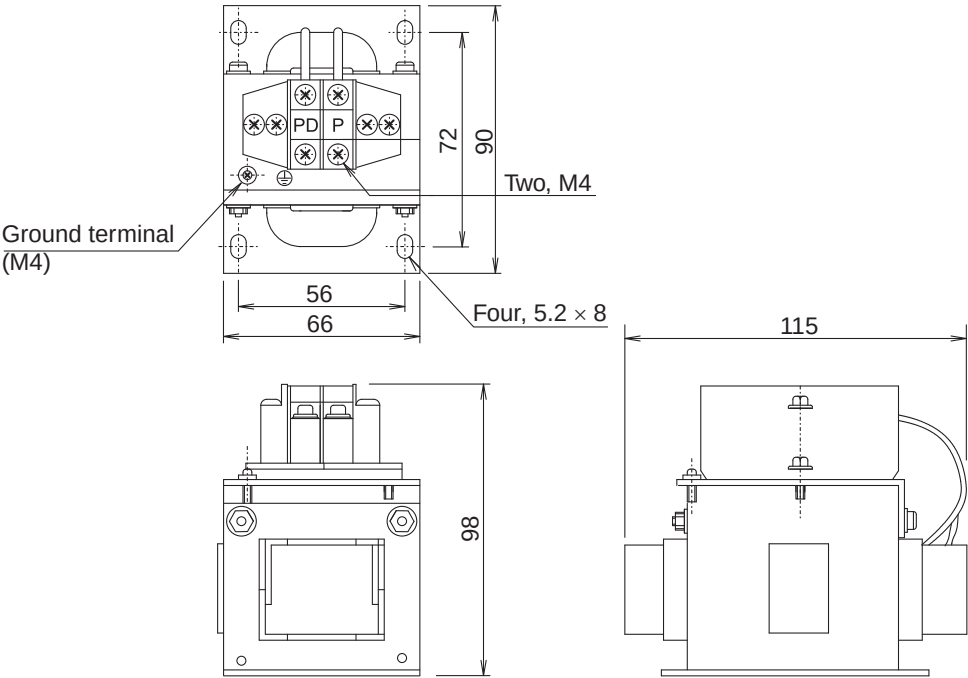

■ 3G3AX-DL2022

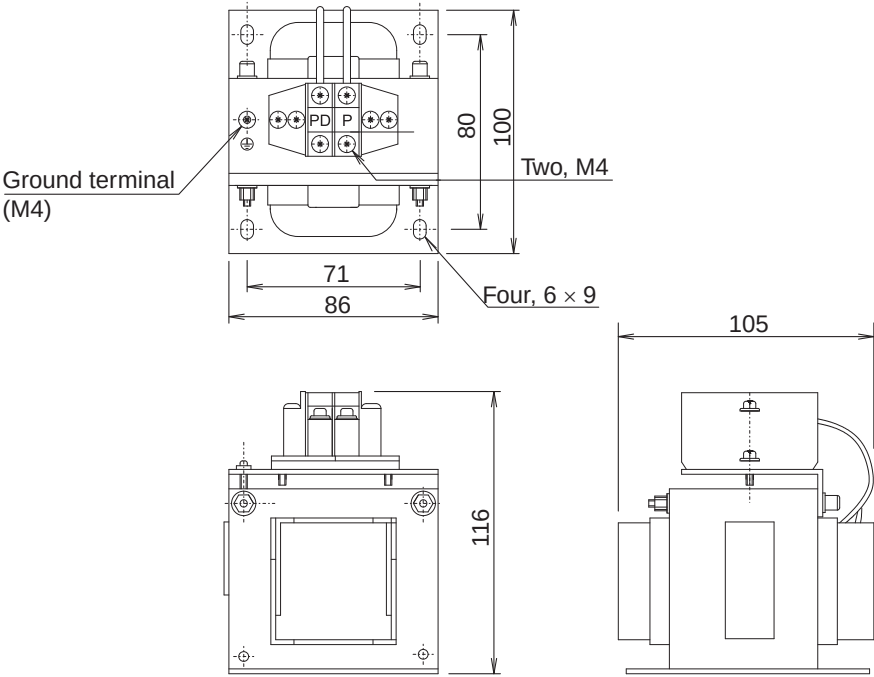


■ 3G3AX-AL2025/-AL2055

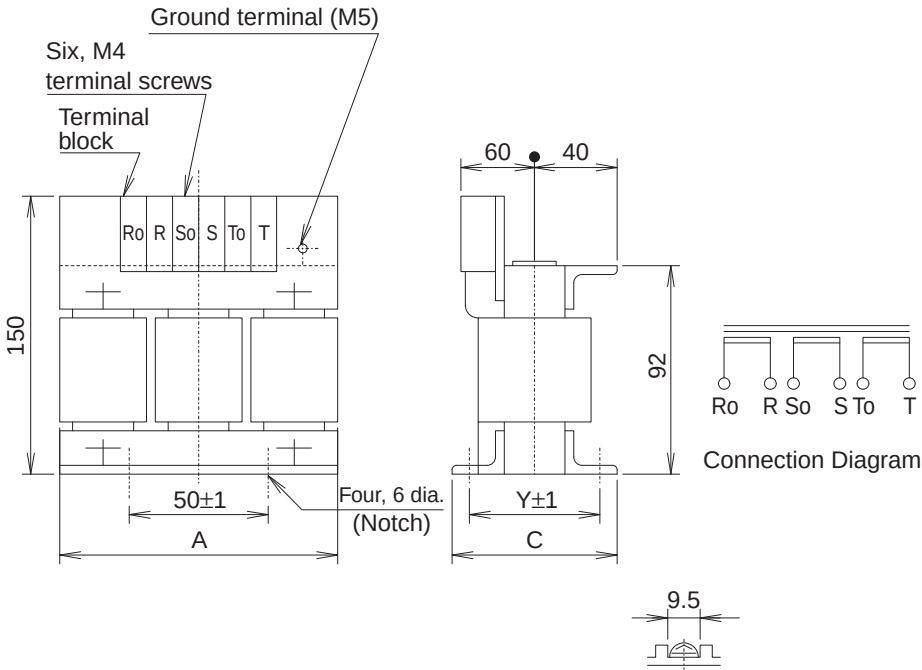

| Model        | Dimensions (mm) |    |    |
|--------------|-----------------|----|----|
|              | A               | C  | Y  |
| 3G3AX-AL2025 | 130             | 82 | 67 |
| 3G3AX-AL2055 | 140             | 98 | 75 |

2-2 External and Mounting Hole Dimensions

■ 3G3AX-AL2110/-AL2220

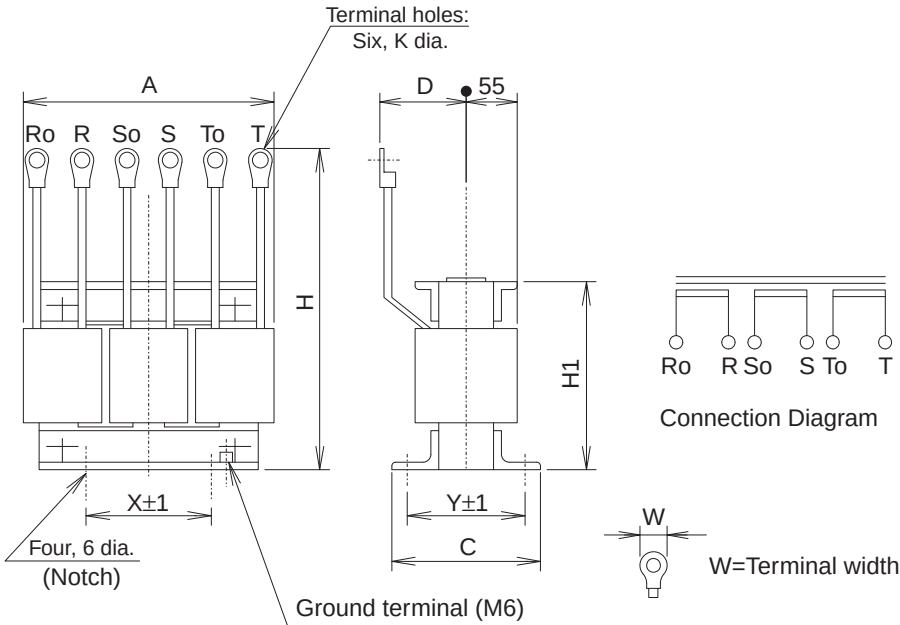

| Model        | Dimensions (mm) |     |    |     |     |    |    |     |      |
|--------------|-----------------|-----|----|-----|-----|----|----|-----|------|
|              | A               | C   | D  | H   | H1  | X  | Y  | K   | W    |
| 3G3AX-AL2110 | 160             | 103 | 70 | 170 | 106 | 60 | 80 | 5.3 | 12   |
| 3G3AX-AL2220 | 180             | 113 | 75 | 190 | 136 | 90 | 90 | 8.4 | 16.5 |

# Chapter 3

## Specifications

|     |                                                              |      |
|-----|--------------------------------------------------------------|------|
| 3-1 | Servo Drive Specifications .....                             | 3-1  |
|     | General Specifications .....                                 | 3-1  |
|     | Characteristics .....                                        | 3-2  |
|     | Main Circuit and Servomotor Connector Specifications.....    | 3-7  |
|     | Control I/O Connector Specifications (CN1) .....             | 3-10 |
|     | Control Input Circuits .....                                 | 3-14 |
|     | Control Output Circuits.....                                 | 3-14 |
|     | Control Sequence Timing .....                                | 3-15 |
|     | Encoder Connector Specifications (CN2) .....                 | 3-16 |
|     | Parameter Unit Connector Specifications (CN3) .....          | 3-16 |
| 3-2 | Servomotor Specifications .....                              | 3-17 |
|     | General Specifications .....                                 | 3-17 |
|     | Characteristics .....                                        | 3-18 |
|     | Encoder Specifications .....                                 | 3-31 |
| 3-3 | Decelerator Specifications .....                             | 3-32 |
|     | Standard Models and Specifications.....                      | 3-32 |
| 3-4 | Cable and Connector Specifications .....                     | 3-42 |
|     | Encoder Cable Specifications .....                           | 3-42 |
|     | Absolute Encoder Battery Cable Specifications.....           | 3-48 |
|     | Servomotor Power Cable Specifications.....                   | 3-49 |
|     | Communications Cable Specifications.....                     | 3-67 |
|     | Connector Specifications .....                               | 3-68 |
|     | MECHATROLINK-II Communications Cable<br>Specifications ..... | 3-71 |
|     | Control Cable Specifications.....                            | 3-73 |
| 3-5 | Parameter Unit Specifications .....                          | 3-78 |
| 3-6 | External Regeneration Resistor<br>Specifications .....       | 3-79 |
|     | External Regeneration Resistor Specifications .....          | 3-79 |
| 3-7 | Reactor Specifications .....                                 | 3-80 |

# 3-1 Servo Drive Specifications

Select the Servo Drive matching the Servomotor to be used. (For details, refer to *Servo Drive-Servomotor Combinations* on page 2-5.)  
OMNUC G-series Servo Drives are designed specifically for use with MECHATROLINK-II communication.

## General Specifications

| Item                                       |               |                       | Specifications                                                                                                                                                 |
|--------------------------------------------|---------------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ambient operating temperature and humidity |               |                       | 0 to 55°C, 90% RH max. (with no condensation)                                                                                                                  |
| Ambient storage temperature and humidity   |               |                       | −20 to 65°C, 90% RH max. (with no condensation)                                                                                                                |
| Operating and storage atmosphere           |               |                       | No corrosive gases                                                                                                                                             |
| Vibration resistance                       |               |                       | Smaller of either 10 to 60 Hz with double amplitude of 0.1 mm or acceleration of 5.88 m/s <sup>2</sup> max. in X, Y, and Z directions.                         |
| Impact resistance                          |               |                       | Acceleration of 19.6m/s <sup>2</sup> max. 2 times each in X, Y, and Z directions                                                                               |
| Insulation resistance                      |               |                       | Between power supply/power line terminals and frame ground: 0.5 MΩ min. (at 500 VDC)                                                                           |
| Dielectric strength                        |               |                       | Between power supply/power line terminals and frame ground: 1,500 VAC for 1 min at 50/60 Hz<br>Between each control signal and frame ground: 500 VAC for 1 min |
| Protective structure                       |               |                       | Built into panel (IP10).                                                                                                                                       |
| International standards                    | EC Directives | EMC Directive         | EN 55011 Class A Group 1<br>EN 61000-6-2, IEC 61000-4-2/-3/-4/-5/-6/-11                                                                                        |
|                                            |               | Low Voltage Directive | EN 50178                                                                                                                                                       |
|                                            | UL standards  |                       | UL 508C                                                                                                                                                        |
|                                            | CSA standards |                       | CSA 22.2 No.14                                                                                                                                                 |
|                                            |               |                       |                                                                                                                                                                |

- Note 1.** The above items reflect individual evaluation testing. The results may differ under compound conditions.
- Note 2.** Never perform withstand-voltage or other megameter tests on the Servo Drive. Doing so may damage the internal elements.
- Note 3.** Depending on the operating conditions, some Servo Drive parts will require maintenance. For details, refer to *Periodic Maintenance* on page 8-21.
- Note 4.** The service life of the Servo Drive is 28,000 hours at an average ambient temperature of 55°C at 100% of the rated torque.



## Characteristics

### ■ Servo Drives with 100-VAC Input Power

| Item                                   |                                               |                       | R88D-GNA5L-ML2                                      | R88D-GN01L-ML2 | R88D-GN02L-ML2 | R88D-GN04L-ML2 |
|----------------------------------------|-----------------------------------------------|-----------------------|-----------------------------------------------------|----------------|----------------|----------------|
| Continuous output current (rms)        |                                               |                       | 1.3 A                                               | 1.8 A          | 2.4 A          | 4.9 A          |
| Momentary maximum output current (rms) |                                               |                       | 3.9 A                                               | 5.4 A          | 7.2 A          | 14.7 A         |
| Input power supply                     | Main circuit                                  | Power supply capacity | 0.4 KVA                                             | 0.4 KVA        | 0.5 KVA        | 0.9 KVA        |
|                                        |                                               | Power supply voltage  | Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz |                |                |                |
|                                        |                                               | Rated current         | 1.4 A                                               | 2.2 A          | 3.7 A          | 6.6 A          |
|                                        | Control circuit                               | Power supply voltage  | Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz |                |                |                |
|                                        |                                               | Rated current         | 0.09 A                                              | 0.09 A         | 0.09 A         | 0.09 A         |
| Heat generated                         | Main circuit                                  |                       | 10.1 W                                              | 14.4 W         | 18.4 W         | 41.4 W         |
|                                        | Control circuit                               |                       | 4.4 W                                               | 4.4 W          | 4.4 W          | 4.4 W          |
| Control method                         |                                               |                       | All-digital servo                                   |                |                |                |
| Inverter method                        |                                               |                       | IGBT-driven PWM method                              |                |                |                |
| PWM frequency                          |                                               |                       | 12.0 kHz                                            |                | 6.0 kHz        |                |
| Weight                                 |                                               |                       | Approx. 0.8 kg                                      | Approx. 0.8 kg | Approx. 1.1 kg | Approx. 1.5 kg |
| Maximum applicable motor capacity      |                                               |                       | 50 W                                                | 100 W          | 200 W          | 400 W          |
| Applicable Servomotors                 | 3,000-r/min Servomotors                       | INC                   | G05030H                                             | G10030L        | G20030L        | G40030L        |
|                                        |                                               | ABS                   | G05030T                                             | G10030S        | G20030S        | G40030S        |
|                                        | 3,000-r/min Flat Servomotors                  | INC                   | ---                                                 | GP10030L       | GP20030L       | GP40030L       |
|                                        |                                               | ABS                   | ---                                                 | GP10030S       | GP20030S       | GP40030S       |
|                                        | 2,000-r/min Servomotors                       | ABS                   | ---                                                 | ---            | ---            | ---            |
|                                        | 1,000-r/min Servomotors                       | ABS                   | ---                                                 | ---            | ---            | ---            |
| Performance                            | Speed control range                           |                       | 1:5000                                              |                |                |                |
|                                        | Speed variability: Load characteristic        |                       | 0.01% or less at 0% to 100% (at rated speed)        |                |                |                |
|                                        | Speed variability: Voltage characteristic     |                       | 0% at ±10% of rated voltage (at rated speed)        |                |                |                |
|                                        | Speed variability: Temperature characteristic |                       | ±0.1% or less at 0 to 50°C (at rated speed)         |                |                |                |
|                                        | Torque control reproducibility                |                       | ±3% (at 20% to 100% of rated torque)                |                |                |                |

### 3-1 Servo Drive Specifications

#### ■ Servo Drives with Single-phase 200-VAC Input Power

| Item                                   |                                               |                       | R88D-GN01H-ML2                                       | R88D-GN02H-ML2 | R88D-GN04H-ML2 | R88D-GN08H-ML2                                                      | R88D-GN10H-ML2          | R88D-GN15H-ML2         |
|----------------------------------------|-----------------------------------------------|-----------------------|------------------------------------------------------|----------------|----------------|---------------------------------------------------------------------|-------------------------|------------------------|
| Continuous output current (rms)        |                                               |                       | 1.16 A                                               | 1.6 A          | 2.7 A          | 4.0 A                                                               | 5.9 A                   | 9.8 A                  |
| Momentary maximum output current (rms) |                                               |                       | 3.5 A                                                | 5.3 A          | 7.1 A          | 14.1 A                                                              | 21.2 A                  | 28.3 A                 |
| Input power supply                     | Main circuit                                  | Power supply capacity | 0.5 KVA                                              | 0.5 KVA        | 0.9 KVA        | 1.3 KVA                                                             | 1.8 KVA                 | 2.3 KVA                |
|                                        |                                               | Power supply voltage  | Single-phase 200 to 240 VAC (170 to 264 V), 50/60 Hz |                |                | Single-phase or Three-phase 200 to 240 VAC (170 to 264 V), 50/60 Hz |                         |                        |
|                                        |                                               | Rated current         | 1.3 A                                                | 2.0 A          | 3.7 A          | 5.0/3.3 <sup>*1</sup> A                                             | 7.5/4.1 <sup>*1</sup> A | 11/8.0 <sup>*1</sup> A |
|                                        | Control circuit                               | Power supply voltage  | Single-phase 200 to 240 VAC (170 to 264 V), 50/60 Hz |                |                |                                                                     |                         |                        |
|                                        |                                               | Rated current         | 0.05 A                                               | 0.05 A         | 0.05 A         | 0.05 A                                                              | 0.07 A                  | 0.07 A                 |
| Heat generated                         | Main circuit                                  |                       | 14.3 W                                               | 14.8 W         | 23.6 W         | 38.7 W                                                              | 52.9 W                  | 105.9 W                |
|                                        | Control circuit                               |                       | 4.5 W                                                | 4.5 W          | 4.5 W          | 4.3 W                                                               | 6.1 W                   | 6.1 W                  |
| PWM frequency                          |                                               |                       | 12.0 kHz                                             |                |                | 6.0 kHz                                                             |                         |                        |
| Weight                                 |                                               |                       | Approx. 0.8 kg                                       | Approx. 0.8 kg | Approx. 1.1 kg | Approx. 1.5 kg                                                      | Approx. 1.7 kg          | Approx. 1.7 kg         |
| Maximum applicable motor capacity      |                                               |                       | 100 W                                                | 200 W          | 400 W          | 750 W                                                               | 1 kW                    | 1.5 kW                 |
| Applicable Servomotors                 | 3,000-r/min Servomotors                       | INC                   | G05030H<br>G10030H                                   | G20030H        | G40030H        | G75030H                                                             | ---                     | ---                    |
|                                        |                                               | ABS                   | G05030T<br>G10030T                                   | G20030T        | G40030T        | G75030T                                                             | ---                     | G1K030T<br>G1K530T     |
|                                        | 3,000-r/min Flat Servomotors                  | INC                   | GP10030H                                             | GP20030H       | GP40030H       | ---                                                                 | ---                     | ---                    |
|                                        |                                               | ABS                   | GP10030T                                             | GP20030T       | GP40030T       | ---                                                                 | ---                     | ---                    |
|                                        | 2,000-r/min Servomotors                       | ABS                   | ---                                                  | ---            | ---            | ---                                                                 | G1K020T                 | G1K520T                |
|                                        | 1,000-r/min Servomotors                       | ABS                   | ---                                                  | ---            | ---            | ---                                                                 | ---                     | G90010T                |
| Control method                         |                                               |                       | All-digital servo                                    |                |                |                                                                     |                         |                        |
| Inverter method                        |                                               |                       | IGBT-driven PWM method                               |                |                |                                                                     |                         |                        |
| Performance                            | Speed control range                           |                       | 1:5000                                               |                |                |                                                                     |                         |                        |
|                                        | Speed variability: Load characteristic        |                       | 0.01% or less at 0% to 100% (at rated speed)         |                |                |                                                                     |                         |                        |
|                                        | Speed variability: Voltage characteristic     |                       | 0% at ±10% of rated voltage (at rated speed)         |                |                |                                                                     |                         |                        |
|                                        | Speed variability: Temperature characteristic |                       | ±0.1% or less at 0 to 50°C (at rated speed)          |                |                |                                                                     |                         |                        |
|                                        | Torque control reproducibility                |                       | ±3% (at 20% to 100% of rated torque)                 |                |                |                                                                     |                         |                        |

\*1. The left value is for single-phase input power and the right value is for three-phase input power.

### ■ Servo Drives with Three-phase 200-VAC Input Power

| Item                                   |                                               |                       | R88D-GN20H-ML2                                       | R88D-GN30H-ML2 | R88D-GN50H-ML2     | R88D-GN75H-ML2  |
|----------------------------------------|-----------------------------------------------|-----------------------|------------------------------------------------------|----------------|--------------------|-----------------|
| Continuous output current (rms)        |                                               |                       | 14.3 A                                               | 17.4 A         | 31.0 A             | 45.4 A          |
| Momentary maximum output current (rms) |                                               |                       | 45.3 A                                               | 63.6 A         | 84.8 A             | 170.0 A         |
| Input power supply                     | Main circuit                                  | Power supply capacity | 3.3 KVA                                              | 4.5 KVA        | 7.5 KVA            | 11 KVA          |
|                                        |                                               | Power supply voltage  | Three-phase 200 to 230 VAC (170 to 253 V), 50/60 Hz  |                |                    |                 |
|                                        |                                               | Rated current         | 10.2 A                                               | 15.2 A         | 23.7 A             | 35.0 A          |
|                                        | Control circuit                               | Power supply voltage  | Single-phase 200 to 230 VAC (170 to 253 V), 50/60 Hz |                |                    |                 |
|                                        |                                               | Rated current         | 0.1 A                                                | 0.12 A         | 0.12 A             | 0.14 A          |
| Heat generated                         | Main circuit                                  |                       | 112.3 W                                              | 219.6 W        | 391.7 W            | 376.2 W         |
|                                        | Control circuit                               |                       | 10.7 W                                               | 13.3 W         | 13.3 W             | 13.8 W          |
| PWM frequency                          |                                               |                       | 6.0 kHz                                              |                |                    |                 |
| Weight                                 |                                               |                       | Approx. 3.2 kg                                       | Approx. 6.0 kg | Approx. 6.0 kg     | Approx. 16.4 kg |
| Maximum applicable motor capacity      |                                               |                       | 2 kW                                                 | 3 kW           | 5 kW               | 7.5 kW          |
| Applicable Servomotors                 | 3,000-r/min Servomotors                       | INC                   | ---                                                  | ---            | ---                | ---             |
|                                        |                                               | ABS                   | G2K030T                                              | G3K030T        | G4K030T<br>G5K030T | ---             |
|                                        | 3,000-r/min Flat Servomotors                  | INC                   | ---                                                  | ---            | ---                | ---             |
|                                        |                                               | ABS                   | ---                                                  | ---            | ---                | ---             |
|                                        | 2,000-r/min Servomotors                       | ABS                   | G2K020T                                              | G3K020T        | G4K020T<br>G5K020T | G7K515T         |
|                                        | 1,000-r/min Servomotors                       | ABS                   | ---                                                  | G2K010T        | G3K010T<br>G4K510T | G6K010T         |
| Control method                         |                                               |                       | All-digital servo                                    |                |                    |                 |
| Inverter method                        |                                               |                       | IGBT-driven PWM method                               |                |                    |                 |
| Performance                            | Speed control range                           |                       | 1:5000                                               |                |                    |                 |
|                                        | Speed variability: Load characteristic        |                       | 0.01% or less at 0% to 100% (at rated speed)         |                |                    |                 |
|                                        | Speed variability: Voltage characteristic     |                       | 0% at ±10% of rated voltage (at rated speed)         |                |                    |                 |
|                                        | Speed variability: Temperature characteristic |                       | ±0.1% or less at 0 to 50°C (at rated speed)          |                |                    |                 |
|                                        | Torque control reproducibility                |                       | ±3% (at 20% to 100% of rated torque)                 |                |                    |                 |

#### ■ Protective Functions

| Error detection                           |            | Description                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control power supply undervoltage         |            | The voltage between P and N in the control voltage converter has dropped below the specified value.                                                                                                                                                                                                                               |
| Overvoltage                               |            | The voltage between P and N in the converter has exceeded the specified value.                                                                                                                                                                                                                                                    |
| Undervoltage                              |            | The main power supply between L1 and L3 was interrupted for longer than the time set in the Momentary Hold Time (Pn06D) when the Undervoltage Alarm Selection (Pn065) was set to 1. Alternatively, the voltage between P and N in the main power supply converter dropped below the specified value while the Servo Drive was ON. |
| Overcurrent                               |            | The current flowing to the converter exceeded the specified value.                                                                                                                                                                                                                                                                |
| Overheating                               |            | The temperature of the Servo Drive radiator or power elements exceeded the specified value.                                                                                                                                                                                                                                       |
| Overload                                  |            | The torque command value exceeded the level set in the Overload Detection Level Setting (Pn072), resulting in an overload due to the time characteristics.                                                                                                                                                                        |
| Regeneration overload                     |            | The regenerative energy exceeded the capacity of the regeneration resistor.                                                                                                                                                                                                                                                       |
| Encoder communications error              |            | The disconnection detection function was activated because communications between the encoder and Servo Drive were interrupted for a specified number of times.                                                                                                                                                                   |
| Encoder communications data error         |            | There was an error in the communications data from the encoder. (The encoder is connected, but there is an error in the communications data.)                                                                                                                                                                                     |
| Deviation counter overflow                |            | The number of position deviation pulses exceeded the Deviation Counter Overflow Level (Pn209).                                                                                                                                                                                                                                    |
| Overspeed                                 |            | The rotation speed of the Servomotor exceeded the setting of the Overspeed Detection Level Setting (Pn073).                                                                                                                                                                                                                       |
| Command error                             |            | The operation command ended in an error.                                                                                                                                                                                                                                                                                          |
| Internal deviation counter overflow       |            | The value of the deviation counter (internal control unit) exceeded $2^{27}$ (134217728).                                                                                                                                                                                                                                         |
| Overrun limit error                       |            | The allowable range of movement set in the Overrun Limit Setting (Pn026) was exceeded by the Servomotor.                                                                                                                                                                                                                          |
| Parameter error                           |            | The data in the parameter storage area was corrupted when the data was read from EEPROM at power-ON.                                                                                                                                                                                                                              |
| Parameter corruption                      |            | The EEPROM write verification data was corrupted when the data was read from EEPROM at power-ON.                                                                                                                                                                                                                                  |
| Drive prohibit input error                |            | Both the Forward and Reverse Drive Prohibit Inputs were open when the Drive Prohibit Input Selection (Pn004) was set to 0 or either the forward or reverse drive prohibit input was open when the Drive Prohibit Input Selection (Pn004) was set to 2.                                                                            |
| Absolute encoder system down error        | <b>ABS</b> | The power supply and battery to the absolute encoder went down and the capacitor voltage dropped below the specified value.                                                                                                                                                                                                       |
| Absolute encoder counter overflow error   | <b>ABS</b> | The multiturn counter for the absolute encoder has exceeded the specified value.                                                                                                                                                                                                                                                  |
| Absolute encoder overspeed error          | <b>ABS</b> | The Servomotor speed exceeded the specified value when the power to the absolute encoder was interrupted and power was supplied only from the battery.                                                                                                                                                                            |
| Absolute encoder one-turn counter error   | <b>ABS</b> | An error was detected in the one-turn counter for the absolute encoder.                                                                                                                                                                                                                                                           |
| Absolute encoder multi-turn counter error | <b>ABS</b> | An error was detected in the multiturn counter for the absolute encoder.                                                                                                                                                                                                                                                          |
| Absolute encoder status error             | <b>ABS</b> | The number of rotations of the encoder exceeded the specified value when the power supply was turned ON.                                                                                                                                                                                                                          |

| Error detection                  | Description                                                                                                                                                               |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Encoder phase Z error            | A phase Z pulse was not detected regularly for the serial encoder.                                                                                                        |
| Encoder PS signal error          | A logic error in the PS signal was detected for the serial encoder.                                                                                                       |
| Node address setting error       | The rotary switch for setting the node address of the Servo Drive was out of range when the control power was turned ON.                                                  |
| Communications error             | The expected data during the MECHATROLINK-II communications cycle was not received continuously, exceeding the number of times set in the Communications Control (Pn005). |
| Transmission cycle error         | While actuating MECHATROLINK-II communications, synchronization frames (SYNC) were not received in accordance with the transmission cycle.                                |
| Watchdog data error              | The synchronization data exchanged between the master and slave nodes during each MECHATROLINK-II communications cycle resulted in an error.                              |
| Emergency stop input error       | The emergency stop input circuit opened.                                                                                                                                  |
| Transmission cycle setting error | The transmission cycle setting is incorrect when receiving the MECHATROLINK-II CONNECT command.                                                                           |
| SYNC command error               | A SYNC-related command was issued while MECHATROLINK-II was in asynchronous communications mode.                                                                          |
| Parameter setting error          | The electronic gear ratio is outside the allowable parameter setting range; either it is smaller than 1/100 or larger than 100/1.                                         |
| Servomotor non-conformity        | The Servomotor and Servo Drive do not match.                                                                                                                              |

### Main Circuit and Servomotor Connector Specifications

When wiring the main circuit, use proper wire sizes, grounding systems, and anti-noise measures.

#### ■ R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN04L-ML2 R88D-GN01H-ML2/-GN02H-ML2/-GN04H-ML2/-GN08H-ML2/-GN10H-ML2/ -GN15H-ML2

#### Main Circuit Connector Specifications (CNA)

| Symbol | Name                               | Function                                                                             |
|--------|------------------------------------|--------------------------------------------------------------------------------------|
| L1     | Main circuit power supply input    | R88D-GN□L-ML2 (50 to 400 W): Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz     |
| L2     |                                    | R88D-GN□H-ML2 (50 W to 1.5 kW): Single-phase 200 to 240 VAC (170 to 264 V), 50/60 Hz |
| L3     |                                    | (750 W to 1.5 kW): Three-phase 200 to 240 VAC (170 to 264 V), 50/60Hz                |
| L1C    | Control circuit power supply input | R88D-GN□L-ML2: Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz                   |
| L2C    |                                    | R88D-GN□H-ML2: Single-phase 200 to 240 VAC (170 to 264V), 50/60 Hz                   |

#### Servomotor Connector Specifications (CNB)

| Symbol | Name                                                | Function                                                                                                                                                                                                 |
|--------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| B1     | External Regeneration Resistor connection terminals | 50 to 400 W: These terminals normally do not need to be connected. If there is high regenerative energy, connect an External Regeneration Resistor between B1 and B2.                                    |
| B2     |                                                     |                                                                                                                                                                                                          |
| B3     |                                                     | 750 W to 1.5 kW: Normally B2 and B3 are connected. If there is high regenerative energy, remove the short-circuit bar between B2 and B3 and connect an External Regeneration Resistor between B1 and B2. |
| U      | Servomotor connection terminals                     | Red                                                                                                                                                                                                      |
| V      |                                                     | White                                                                                                                                                                                                    |
| W      |                                                     | Blue                                                                                                                                                                                                     |
| ⊕      |                                                     | Green/Yellow                                                                                                                                                                                             |
| ⊕      | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                                                                                                    |

■ R88D-GN20H-ML2/-GN30H-ML2/-GN50H-ML2

Main Circuit Terminal Block Specifications

| Symbol | Name                                                | Function                                                                                                                                                                                           |                                                                                   |
|--------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| L1     | Main circuit power supply input                     | R88D-GN□H-ML2 (2 to 5 kW): Three-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                                                                                                                      |                                                                                   |
| L2     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| L3     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| L1C    | Control circuit power supply input                  | R88D-GN□H-ML2: Single-phase 200 to 230 VAC (170 to 253V), 50/60 Hz                                                                                                                                 |                                                                                   |
| L2C    |                                                     |                                                                                                                                                                                                    |                                                                                   |
| B1     | External Regeneration Resistor connection terminals | 2 to 5 kW: Normally B2 and B3 are connected. If there is high regenerative energy, remove the short-circuit bar between B2 and B3 and connect an External Regeneration Resistor between B1 and B2. |                                                                                   |
| B2     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| B3     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| U      | Servomotor connection terminals                     | Red                                                                                                                                                                                                | These are the output terminals to the Servomotor. Be sure to wire them correctly. |
| V      |                                                     | White                                                                                                                                                                                              |                                                                                   |
| W      |                                                     | Blue                                                                                                                                                                                               |                                                                                   |
| ⊕      |                                                     | Green/ Yellow                                                                                                                                                                                      |                                                                                   |
| ⊕      | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                                                                                              |                                                                                   |

### 3-1 Servo Drive Specifications

#### ■ R88D-GN75H-ML2

##### Main Circuit Terminal Block Specifications (TB1)

| Symbol                                                                            | Name                                                | Function                                                                                                                            |                                                                                      |
|-----------------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| L1                                                                                | Main circuit power supply input                     | R88D-GN75H-ML2 (6 to 7.5 kW): Three-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                                                    |                                                                                      |
| L2                                                                                |                                                     |                                                                                                                                     |                                                                                      |
| L3                                                                                |                                                     |                                                                                                                                     |                                                                                      |
| B1                                                                                | External Regeneration Resistor connection terminals | 6 to 7.5 kW: A regeneration resistor is not built in.<br>Connect an External Regeneration Resistor between B1 and B2, if necessary. |                                                                                      |
| B2                                                                                |                                                     |                                                                                                                                     |                                                                                      |
| U                                                                                 | Servomotor connection terminals                     | Red                                                                                                                                 | These are the output terminals to the Servomotor.<br>Be sure to wire them correctly. |
| V                                                                                 |                                                     | White                                                                                                                               |                                                                                      |
| W                                                                                 |                                                     | Blue                                                                                                                                |                                                                                      |
|  |                                                     | Green/<br>Yellow                                                                                                                    |                                                                                      |
|  | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                               |                                                                                      |


##### Main Circuit Terminal Block Specifications (TB2)

| Symbol | Name                               | Function                                                                                    |
|--------|------------------------------------|---------------------------------------------------------------------------------------------|
| NC     | ---                                | Do not connect.                                                                             |
| L1C    | Control circuit power supply input | R88D-GN75H-ML2: Single-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                         |
| L2C    |                                    |                                                                                             |
| ⊕      | Frame ground                       | This is the ground terminal. Ground to 100 Ω or less.                                       |
| NC     | ---                                | Do not connect.                                                                             |
| EX1    |                                    |                                                                                             |
| EX2    |                                    |                                                                                             |
| EX3    |                                    |                                                                                             |
| NC     |                                    |                                                                                             |
| FN(+)  | Fan Stop Output                    | Outputs a warning signal when the fan inside the Servo Drive stops.<br>(30 VDC, 50 mA max.) |
| FN(-)  |                                    |                                                                                             |



# Control I/O Connector Specifications (CN1)

## Control I/O Signal Connections and External Signal Processing

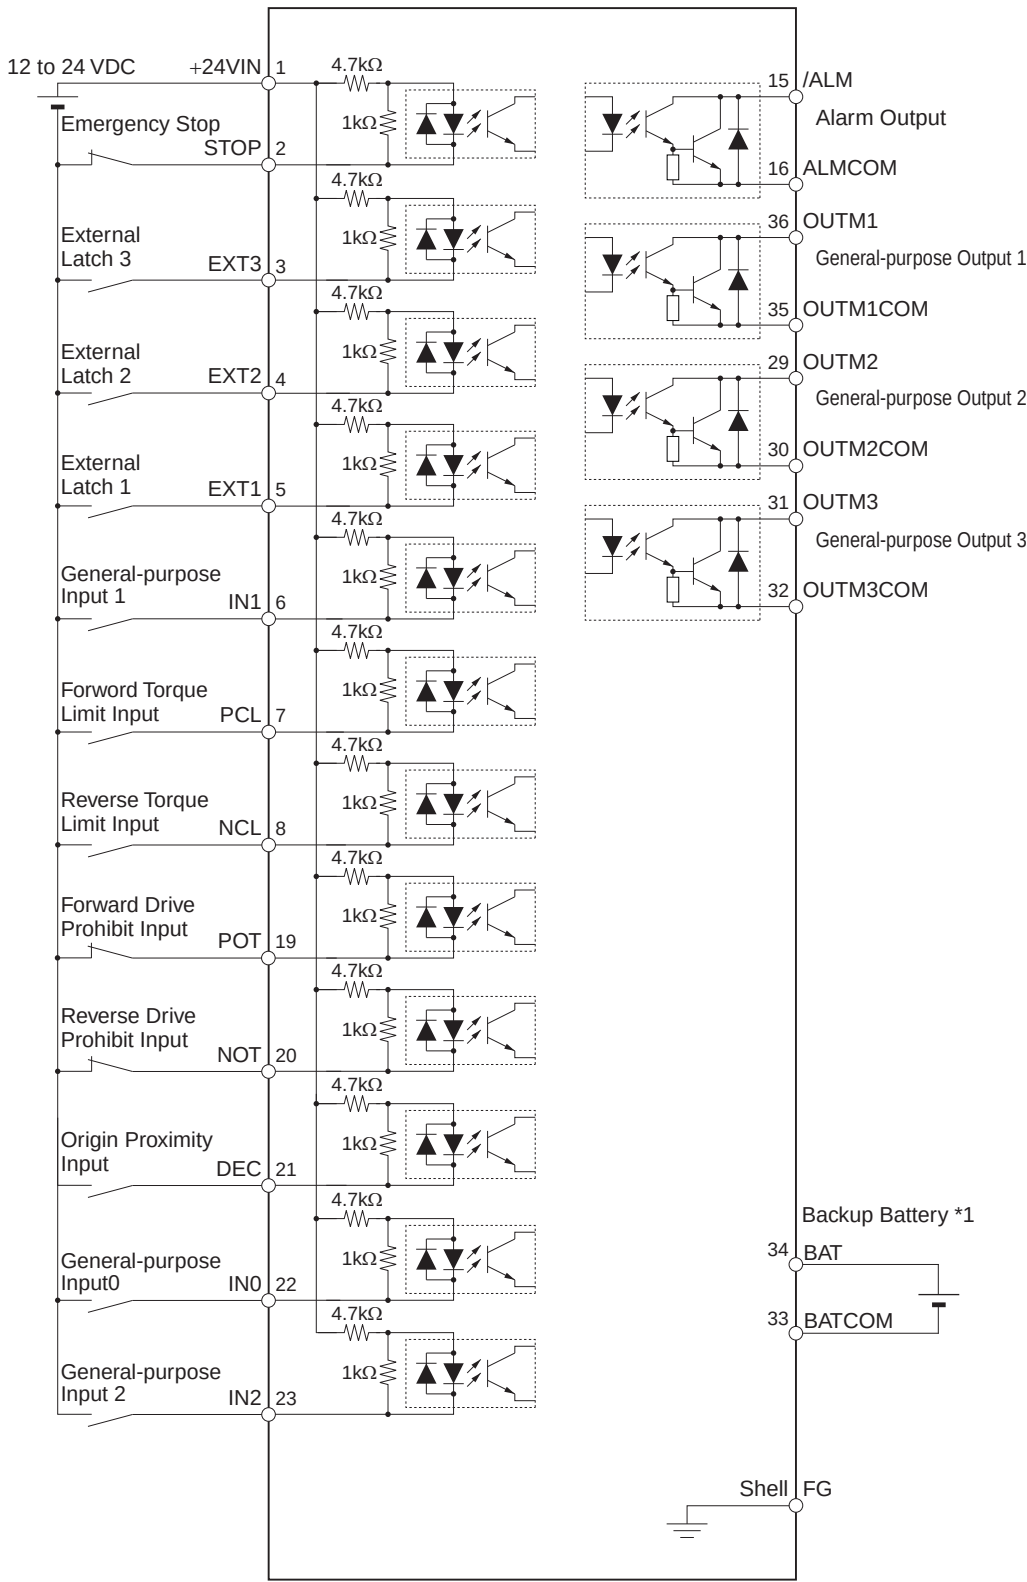

\*1. If a backup battery is connected, a cable with a battery is not required.

\*2. Inputs for pins 19 and 20 are determined by parameter settings. The diagram shows the default configuration.

### 3-1 Servo Drive Specifications

#### ■ Control I/O Signals

##### CN1 Control Input Signals

| Pin No.  | Symbol | Name                             | Function/Interface                                                                                                                                                                                                                                                   |
|----------|--------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1        | +24VIN | 12 to 24-VDC Power Supply Input  | Power supply input terminal (12 to 24 VDC) for sequence inputs.                                                                                                                                                                                                      |
| 2        | STOP   | Emergency Stop Input             | Input for emergency stop.<br>When this signal is enabled and pin 1 is not connected to pin 2, an Emergency Stop Input error (alarm code 87) occurs. Set this signal to be enabled or disabled in the Emergency Stop Input Setting (Pn041) (Factory default: Enable). |
| 3        | EXT3   | External Latch Signal 3          | This external signal input latches the current value feedback pulse counter.<br>The position data is obtained the moment the input is turned ON.<br>Minimal signal width must be 1 ms or more.                                                                       |
| 4        | EXT2   | External Latch Signal 2          |                                                                                                                                                                                                                                                                      |
| 5        | EXT1   | External Latch Signal 1          |                                                                                                                                                                                                                                                                      |
| 6        | IN1    | External general-purpose Input 1 | This input is used as external general-purpose input 1.                                                                                                                                                                                                              |
| 7        | PCL    | Forward Torque Limit Input       | When the Torque Limit Selection (Pn003) is set to 3 or 5, this signal input selects the torque limit. (For details, refer to the description of the <i>Torque Limit</i> on page 5-16.)                                                                               |
| 8        | NCL    | Reverse Torque Limit Input       |                                                                                                                                                                                                                                                                      |
| 19 to 20 | POT    | Forward Drive Prohibit Input     | Forward and reverse rotation overtravel input.<br>Pn004 chooses between enable and disable.<br>Pn044 sets the function assignment for pins 19 and 20.<br>Pn066 selects the operation.                                                                                |
|          | NOT    | Reverse Drive Prohibit Input     |                                                                                                                                                                                                                                                                      |
| 21       | DEC    | Origin Proximity Input           | Connect the origin proximity input signal in the origin search operation.<br>Pn042 changes the logic of the sensor.                                                                                                                                                  |
| 22       | IN0    | External general-purpose Input 0 | This input is used as external general-purpose input 0.                                                                                                                                                                                                              |
| 23       | IN2    | External general-purpose Input 2 | This input is used as external general-purpose input 2.                                                                                                                                                                                                              |
| 11       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 12       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 13       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 14       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 9        | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 10       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 27       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 28       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 34       | BAT    | Backup Battery Input <b>ABS</b>  | Backup battery connection terminals when the absolute encoder's power is interrupted. A cable with a battery is not required if a backup battery is connected to this terminal. (Backup voltage 3.6 V)                                                               |
| 33       | BATCOM |                                  |                                                                                                                                                                                                                                                                      |
| 17       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 24       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 25       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 26       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |
| 18       | ---    | Spare input                      | Do not connect anything to this input.                                                                                                                                                                                                                               |

**CN1 Control Output Signals**

| Pin No. | Symbol   | Name                             | Function/Interface                                                                                                                                                |
|---------|----------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15      | /ALM     | Alarm Output                     | The output is OFF when an alarm is generated in the Servo Drive.                                                                                                  |
| 16      | ALMCOM   |                                  |                                                                                                                                                                   |
| 29      | OUTM2    | General-purpose Output 2 (READY) | This is a general-purpose output. The function for this output is selected by changing the parameter. Refer to the <i>Output Signal Assignment Details</i> below. |
| 30      | OUTM2COM |                                  |                                                                                                                                                                   |
| 31      | OUTM3    | General-purpose Output 3 (CLIM)  |                                                                                                                                                                   |
| 32      | OUTM3COM |                                  |                                                                                                                                                                   |
| 36      | OUTM1    | General-purpose Output 1 (BKIR)  |                                                                                                                                                                   |
| 35      | OUTM1COM |                                  |                                                                                                                                                                   |

**Output Signal Assignment Details**

|                                                                                                                                                                   |                                                                                                          |                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| Pn112 (General-purpose Output 1 Function Selection)<br>Pn113 (General-purpose Output 2 Function Selection)<br>Pn114 (General-purpose Output 3 Function Selection) | OUTM1 (General-purpose Output 1)<br>OUTM2 (General-purpose Output 2)<br>OUTM3 (General-purpose Output 3) |                                                        |
| 0                                                                                                                                                                 | Not assigned                                                                                             | No output. Always OFF.                                 |
| 1                                                                                                                                                                 | INP1                                                                                                     | Positioning Completed 1 output assignment.             |
| 2                                                                                                                                                                 | VCMP                                                                                                     | Speed Conformity Signal output assignment.             |
| 3                                                                                                                                                                 | TGON                                                                                                     | Servomotor Rotation Speed Detection output assignment. |
| 4                                                                                                                                                                 | READY                                                                                                    | Servo Ready output assignment.                         |
| 5                                                                                                                                                                 | CLIM                                                                                                     | Current Limit Detection output assignment.             |
| 6                                                                                                                                                                 | VLIM                                                                                                     | Speed Limit Detection output assignment.               |
| 7                                                                                                                                                                 | BKIR                                                                                                     | Brake Interlock output assignment.                     |
| 8                                                                                                                                                                 | WARN                                                                                                     | Warning Signal output assignment.                      |
| 9                                                                                                                                                                 | INP2                                                                                                     | Positioning Completed 2 output assignment.             |

### 3-1 Servo Drive Specifications

#### ■ CN1 Pin Arrangement

|    |        |                                  |    |        |                                 |    |          |                                  |    |          |                                 |
|----|--------|----------------------------------|----|--------|---------------------------------|----|----------|----------------------------------|----|----------|---------------------------------|
| 2  | STOP   | Emergency Stop Input             | 1  | +24VIN | 12 to 24-VDC Power Supply Input | 20 | NOT      | Reverse Drive Prohibit Input     | 19 | POT      | Forward Drive Prohibit Input    |
| 4  | EXT2   | External Latch Signal 2          | 3  | EXT3   | External Latch Signal 3         | 22 | IN0      | External General-purpose Input 0 | 21 | DEC      | Origin Proximity Input          |
| 6  | IN1    | External General-purpose Input 1 | 5  | EXT1   | External Latch Signal 1         | 24 |          | *                                | 23 | IN2      | External General-purpose Input2 |
| 8  | NCL    | Reverse Torque Limit Input       | 7  | PCL    | Forward Torque Limit Input      | 26 |          | *                                | 25 |          | *                               |
| 10 |        | *                                | 9  |        | *                               | 28 |          | *                                | 27 |          | *                               |
| 12 |        | *                                | 11 |        | *                               | 30 | OUTM2COM | General-purpose Output 2         | 29 | OUTM2    | General-purpose Output 2        |
| 14 |        | *                                | 13 |        | *                               | 32 | OUTM3COM | General-purpose Output 3         | 31 | OUTM3    | General-purpose Output 3        |
| 16 | ALMCOM | Alarm Output                     | 15 | /ALM   | Alarm Output                    | 34 | BAT      | Backup Battery Input             | 33 | BATCOM   | Backup Battery Input            |
| 18 |        | *                                | 17 |        | *                               | 36 | OUTM1    | General-purpose Output 1         | 35 | OUTM1COM | General-purpose Output1         |

**Note 1.** Do not connect anything to unused pins (\*).

**Note 2.** Inputs for pins 19 and 20 are determined by parameter settings. The diagram shows the default configuration.

#### ■ Connector for CN1 (36 Pins)

| Name                   | Model          | Manufacturer |
|------------------------|----------------|--------------|
| Servo Drive Connector  | 52986-3679     | Molex Japan  |
| Cable Connector        | 10136-3000PE   | Sumitomo 3M  |
| Cable Case (Shell Kit) | 10336-52A0-008 |              |

## Control Input Circuits

### ■ Control Inputs

For the relay contact, use either a switch, or a transistor with an open-collector output.


External power supply:

12 VDC  $\pm 5\%$  to

24 VDC  $\pm 5\%$

Power supply capacity:


50 mA min. (per Unit)

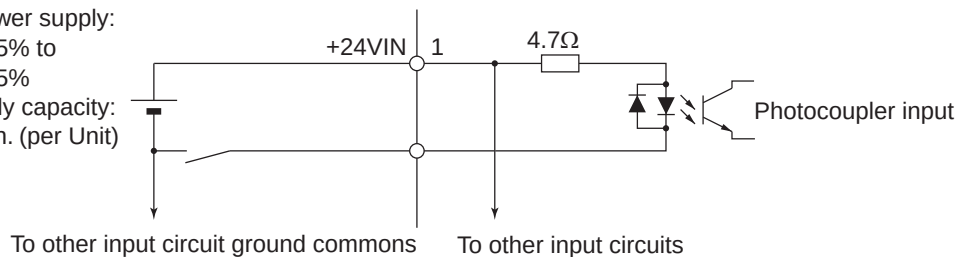

Signal Levels ON level: 10 V min.  
OFF level: 3 V max.


## Control Output Circuits

### ■ Control Outputs

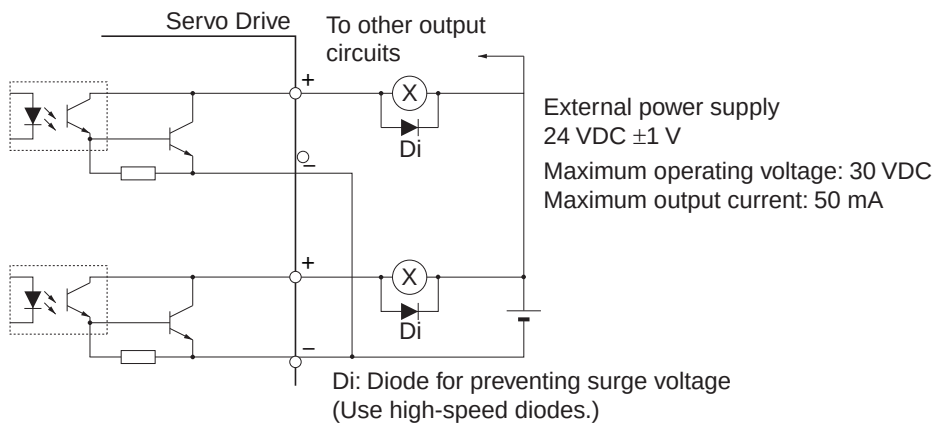

Control Sequence Timing

■ Power ON operation timing

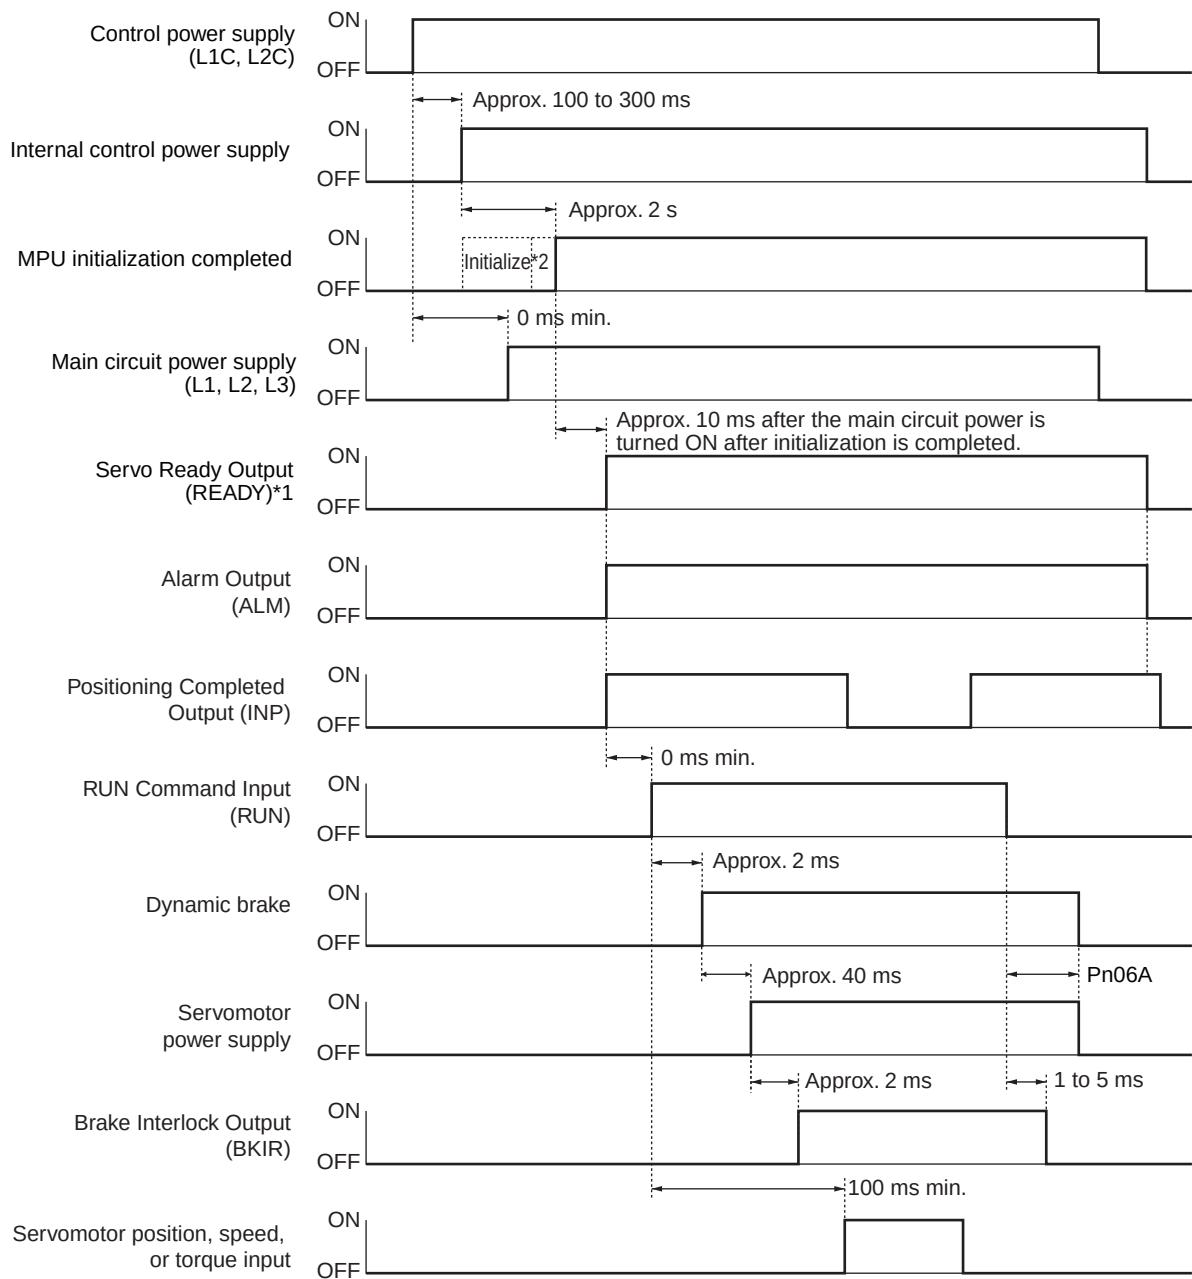

\*1. Servo Ready (READY) turns ON and returns a response when these conditions are met: MPU initialization is completed, main power is established, no alarms exist, MECHATROLINK-II communications are established, and the servo is synchronized.

\*2. Once the internal control power is established, the protective function starts working about 1.5 s after the CPU starts initializing itself.

Be sure that the input signals, in particular the Emergency Stop (STOP) and Drive Prohibit (POT/NOT) inputs are settled before the protective function starts working.

## Encoder Connector Specifications (CN2)

| Pin No. | Symbol | Name                      | Function/Interface                                                                                                                                                                                               |
|---------|--------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | E5V    | Encoder power supply +5 V | Power supply output for the encoder 5.2 V, 180 mA                                                                                                                                                                |
| 2       | E0V    | Encoder power supply GND  |                                                                                                                                                                                                                  |
| 3       | BAT+   | Battery +                 | Backup power supply output for the absolute encoder. 3.6 V, 100 $\mu$ A for operation during power interruption, 265 $\mu$ A for power interruption timer, and 3.6 $\mu$ A when power is supplied to Servo Drive |
| 4       | BAT-   | Battery -                 |                                                                                                                                                                                                                  |
| 5       | PS+    | Encoder +phase S input    | Line-driver input (corresponding with the EIA RS-485 communications method)                                                                                                                                      |
| 6       | PS-    | Encoder -phase S input    |                                                                                                                                                                                                                  |
| Shell   | FG     | Shield ground             | Cable shield ground                                                                                                                                                                                              |

### Connectors for CN2 (6 Pins)

| Name                  | Model      | Manufacturer |
|-----------------------|------------|--------------|
| Servo Drive Connector | 53460-0629 | Molex Japan  |
| Cable Connector       | 55100-0670 |              |

## Parameter Unit Connector Specifications (CN3)

| Pin No. | Symbol | Name                | Function/Interface                                              |
|---------|--------|---------------------|-----------------------------------------------------------------|
| 3       | TXD    | RS-232 send data    | Send data output to the Parameter Unit or personal computer     |
| 4       | GND    | Ground              | ---                                                             |
| 5       | RXD    | RS-232 receive data | Receive data input from the Parameter Unit or personal computer |

### Connector for CN3 (8 Pins)

| Name      | Model       | Manufacturer    |
|-----------|-------------|-----------------|
| Connector | MD-S8000-10 | J.S.T. Mfg. Co. |

## 3-2 Servomotor Specifications

The following OMNUC G-Series AC Servomotors are available.

- ♦3,000-r/min Servomotors
- ♦3,000-r/min Flat Servomotors
- ♦2,000-r/min Servomotors
- ♦1,000-r/min Servomotors

There are various options available on the Servomotors, such as models with brakes, decelerators, or different shaft types.

Select a Servomotor based on the mechanical system's load conditions and the installation environment.

### General Specifications

| Item                                       |               | 3,000-r/min Servomotors                                                                  |                                                                                            | 3,000-r/min Flat Servomotors                                                             | 1,000-r/min Servomotors<br>2,000-r/min Servomotors                                         |             |                              |
|--------------------------------------------|---------------|------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|-------------|------------------------------|
|                                            |               | 50 to 750 W                                                                              | 1 to 5 kW                                                                                  | 100 to 400 W                                                                             | 900 W to 5 kW                                                                              | 6 to 7.5 kW |                              |
| Ambient operating temperature and humidity |               | 0 to 40°C, 85% RH max. (with no condensation)                                            |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Ambient storage temperature and humidity   |               | −20 to 65°C, 85% RH max. (with no condensation)                                          | −20 to 80°C, 85% max. (with no condensation)                                               |                                                                                          |                                                                                            |             |                              |
| Operating and storage atmosphere           |               | No corrosive gases                                                                       |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Vibration resistance <sup>*1</sup>         |               | 10 to 2,500 Hz<br>Acceleration of 49 m/s <sup>2</sup> max. in the X, Y, and Z directions | 10 to 2,500 Hz<br>Acceleration of 24.5 m/s <sup>2</sup> max. in the X, Y, and Z directions | 10 to 2,500 Hz<br>Acceleration of 49 m/s <sup>2</sup> max. in the X, Y, and Z directions | 10 to 2,500 Hz<br>Acceleration of 24.5 m/s <sup>2</sup> max. in the X, Y, and Z directions |             |                              |
| Impact resistance                          |               | Acceleration of 98 m/s <sup>2</sup> max.<br>3 times each in the X, Y, and Z directions   | Acceleration of 98 m/s <sup>2</sup> max.<br>3 times each in the X, Y, and Z directions     | Acceleration of 98 m/s <sup>2</sup> max.<br>3 times each in the X, Y, and Z directions   | Acceleration of 98 m/s <sup>2</sup> max.<br>2 times vertically                             |             |                              |
| Insulation resistance                      |               | 20 MΩ min. at 500 VDC between the power terminals and FG terminal                        |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Dielectric strength                        |               | 1,500 VAC (50 or 60 Hz) for 1 minute between the power terminals and FG terminal         |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Operating position                         |               | All directions                                                                           |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Insulation grade                           |               | Type B                                                                                   | Type F                                                                                     | Type B                                                                                   | Type F                                                                                     |             |                              |
| Structure                                  |               | Totally enclosed, self-cooling                                                           |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Protective structure                       |               | IP65 (excluding the output shaft rotating section and lead wire ends)                    |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Vibration grade                            |               | V-15                                                                                     |                                                                                            |                                                                                          |                                                                                            |             |                              |
| Mounting method                            |               | Flange-mounting                                                                          |                                                                                            |                                                                                          |                                                                                            |             |                              |
| International standards                    | EC Directives | EMC Directive                                                                            | EN 55011 Class A Group 1                                                                   |                                                                                          |                                                                                            |             |                              |
|                                            |               |                                                                                          | EN 61000-6-2, IEC 61000-4-2/-3/-4/-5/-6/-11                                                |                                                                                          |                                                                                            |             |                              |
|                                            |               | Low-voltage Directive                                                                    | IEC 60034-1/-5                                                                             |                                                                                          |                                                                                            |             |                              |
|                                            | UL standards  |                                                                                          | UL 1004                                                                                    |                                                                                          |                                                                                            |             | UL:<br>pending <sup>*2</sup> |
|                                            | CSA standards |                                                                                          | CSA 22.2 No.100                                                                            |                                                                                          |                                                                                            |             |                              |

<sup>\*1</sup>. The amplitude may be amplified by mechanical resonance. Do not exceed 80% of the specified value for extended periods of time.

<sup>\*2</sup>. UL application pending for motor sizes from 6 to 7.5 kW.

**Note 1.** Do not use the cable when it is laid in oil or water.

**Note 2.** Do not expose the cable outlet or connections to stress due to bending or the weight of the cable itself.



## Characteristics

### ■ 3,000-r/min Servomotors

| Item                                   |                                  | Unit                                      | 100 VAC                                                                              |                      |                      |                      |
|----------------------------------------|----------------------------------|-------------------------------------------|--------------------------------------------------------------------------------------|----------------------|----------------------|----------------------|
|                                        |                                  |                                           | G05030H                                                                              | G10030L              | G20030L              | G40030L              |
|                                        |                                  |                                           | G05030T                                                                              | G10030S              | G20030S              | G40030S              |
| Rated output <sup>*1</sup>             |                                  | W                                         | 50                                                                                   | 100                  | 200                  | 400                  |
| Rated torque <sup>*1</sup>             |                                  | N·m                                       | 0.16                                                                                 | 0.32                 | 0.64                 | 1.3                  |
| Rated rotation speed                   |                                  | r/min                                     | 3000                                                                                 |                      |                      |                      |
| Max. momentary rotation speed          |                                  | r/min                                     | 5000                                                                                 |                      |                      |                      |
| Max. momentary torque <sup>*1</sup>    |                                  | N·m                                       | 0.45                                                                                 | 0.93                 | 1.78                 | 3.6                  |
| Rated current <sup>*1</sup>            |                                  | A (rms)                                   | 1.1                                                                                  | 1.7                  | 2.5                  | 4.6                  |
| Max. momentary current <sup>*1</sup>   |                                  | A (rms)                                   | 3.4                                                                                  | 5.1                  | 7.6                  | 13.9                 |
| Rotor inertia                          |                                  | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | $2.5 \times 10^{-6}$                                                                 | $5.1 \times 10^{-6}$ | $1.4 \times 10^{-5}$ | $2.6 \times 10^{-5}$ |
| Applicable load inertia                |                                  | ---                                       | 30 times the rotor inertia max. <sup>*2</sup>                                        |                      |                      |                      |
| Torque constant <sup>*1</sup>          |                                  | N·m/A                                     | 0.14                                                                                 | 0.19                 | 0.26                 | 0.28                 |
| Power rate <sup>*1</sup>               |                                  | kW/s                                      | 10.4                                                                                 | 20.1                 | 30.3                 | 62.5                 |
| Mechanical time constant               |                                  | ms                                        | 1.56                                                                                 | 1.11                 | 0.72                 | 0.55                 |
| Electrical time constant               |                                  | ms                                        | 0.7                                                                                  | 0.8                  | 2.5                  | 2.9                  |
| Allowable radial load <sup>*3</sup>    |                                  | N                                         | 68                                                                                   | 68                   | 245                  | 245                  |
| Allowable thrust load <sup>*3</sup>    |                                  | N                                         | 58                                                                                   | 58                   | 98                   | 98                   |
| Weight                                 | Without brake                    | kg                                        | Approx. 0.3                                                                          | Approx. 0.5          | Approx. 0.8          | Approx. 1.2          |
|                                        | With brake                       | kg                                        | Approx. 0.5                                                                          | Approx. 0.7          | Approx. 1.3          | Approx. 1.7          |
| Radiation shield dimensions (material) |                                  |                                           | 100 × 80 × t10 (Al)                                                                  |                      | 130 × 120 × t12 (Al) |                      |
| Applicable Servo Drives (R88D-)        |                                  |                                           | GNA5L-ML2                                                                            | GN01L-ML2            | GN02L-ML2            | GN04L-ML2            |
| Brake specifications                   | Brake inertia                    | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | $2 \times 10^{-7}$                                                                   | $2 \times 10^{-7}$   | $1.8 \times 10^{-6}$ | $1.8 \times 10^{-6}$ |
|                                        | Excitation voltage <sup>*4</sup> | V                                         | 24 VDC ±5%                                                                           |                      |                      |                      |
|                                        | Power consumption (at 20°C)      | W                                         | 7                                                                                    | 7                    | 9                    | 9                    |
|                                        | Current consumption (at 20°C)    | A                                         | 0.3                                                                                  | 0.3                  | 0.36                 | 0.36                 |
|                                        | Static friction torque           | N·m                                       | 0.29 min.                                                                            | 0.29 min.            | 1.27 min.            | 1.27 min.            |
|                                        | Attraction time <sup>*5</sup>    | ms                                        | 35 max.                                                                              | 35 max.              | 50 max.              | 50 max.              |
|                                        | Release time <sup>*5</sup>       | ms                                        | 20 max.                                                                              | 20 max.              | 15 max.              | 15 max.              |
|                                        | Backlash                         |                                           | 1° (reference value)                                                                 |                      |                      |                      |
|                                        | Allowable work per braking       | J                                         | 39.2                                                                                 | 39.2                 | 137                  | 137                  |
|                                        | Allowable total work             | J                                         | $4.9 \times 10^3$                                                                    | $4.9 \times 10^3$    | $44.1 \times 10^3$   | $44.1 \times 10^3$   |
|                                        | Allowable angular acceleration   | rad/s <sup>2</sup>                        | 30,000 max.<br>(Speed of 2,800 r/min or more must not be changed in less than 10 ms) |                      |                      |                      |
|                                        | Brake life                       | ---                                       | 10,000,000 operations                                                                |                      |                      |                      |
|                                        | Rating                           | ---                                       | Continuous                                                                           |                      |                      |                      |
|                                        | Insulation grade                 | ---                                       | Type B                                                                               |                      |                      |                      |


### 3-2 Servomotor Specifications

| Model (R88M-)                          |                                           |                                               | 200 VAC                                                                              |                        |                        |                                               |                        |
|----------------------------------------|-------------------------------------------|-----------------------------------------------|--------------------------------------------------------------------------------------|------------------------|------------------------|-----------------------------------------------|------------------------|
|                                        |                                           |                                               | G05030H                                                                              | G10030H                | G20030H                | G40030H                                       | G75030H                |
| Item                                   | Unit                                      |                                               | G05030T                                                                              | G10030T                | G20030T                | G40030T                                       | G75030T                |
| Rated output <sup>*1</sup>             | W                                         | 50                                            | 100                                                                                  | 200                    | 400                    | 750                                           |                        |
| Rated torque <sup>*1</sup>             | N·m                                       | 0.16                                          | 0.32                                                                                 | 0.64                   | 1.3                    | 2.4                                           |                        |
| Rated rotation speed                   | r/min                                     | 3000                                          |                                                                                      |                        |                        |                                               |                        |
| Max. momentary rotation speed          | r/min                                     | 5000                                          |                                                                                      |                        |                        |                                               |                        |
| Max. momentary torque <sup>*1</sup>    | N·m                                       | 0.45                                          | 0.90                                                                                 | 1.78                   | 3.67                   | 7.05                                          |                        |
| Rated current <sup>*1</sup>            | A (rms)                                   | 1.1                                           | 1.1                                                                                  | 1.6                    | 2.6                    | 4                                             |                        |
| Max. momentary current <sup>*1</sup>   | A (rms)                                   | 3.4                                           | 3.4                                                                                  | 4.9                    | 7.9                    | 12.1                                          |                        |
| Rotor inertia                          | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | 2.5 × 10 <sup>-6</sup>                        | 5.1 × 10 <sup>-6</sup>                                                               | 1.4 × 10 <sup>-5</sup> | 2.6 × 10 <sup>-5</sup> | 8.7 × 10 <sup>-5</sup>                        |                        |
| Applicable load inertia                | ---                                       | 30 times the rotor inertia max. <sup>*2</sup> |                                                                                      |                        |                        | 20 times the rotor inertia max. <sup>*2</sup> |                        |
| Torque constant <sup>*1</sup>          | N·m/A                                     | 0.14                                          | 0.19                                                                                 | 0.41                   | 0.51                   | 0.64                                          |                        |
| Power rate <sup>*1</sup>               | kW/s                                      | 10.4                                          | 20.1                                                                                 | 30.3                   | 62.5                   | 66                                            |                        |
| Mechanical time constant               | ms                                        | 1.56                                          | 1.1                                                                                  | 0.71                   | 0.52                   | 0.45                                          |                        |
| Electrical time constant               | ms                                        | 0.7                                           | 0.79                                                                                 | 2.6                    | 3                      | 4.6                                           |                        |
| Allowable radial load <sup>*3</sup>    | N                                         | 68                                            | 68                                                                                   | 245                    | 245                    | 392                                           |                        |
| Allowable thrust load <sup>*3</sup>    | N                                         | 58                                            | 58                                                                                   | 98                     | 98                     | 147                                           |                        |
| Weight                                 | Without brake                             | kg                                            | Approx. 0.3                                                                          | Approx. 0.5            | Approx. 0.8            | Approx. 1.2                                   | Approx. 2.3            |
|                                        | With brake                                | kg                                            | Approx. 0.5                                                                          | Approx. 0.7            | Approx. 1.3            | Approx. 1.7                                   | Approx. 3.1            |
| Radiation shield dimensions (material) |                                           | 100 × 80 × t10 (Al)                           |                                                                                      | 130 × 120 × t12 (Al)   |                        | 170 × 160 × t12 (Al)                          |                        |
| Applicable Servo Drives (R88D-)        |                                           | GN01H-ML2                                     | GN01H-ML2                                                                            | GN02H-ML2              | GN04H-ML2              | GN08H-ML2                                     |                        |
| Brake specifications                   | Brake inertia                             | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4)     | 2 × 10 <sup>-7</sup>                                                                 | 2 × 10 <sup>-7</sup>   | 1.8 × 10 <sup>-6</sup> | 1.8 × 10 <sup>-6</sup>                        | 7.5 × 10 <sup>-6</sup> |
|                                        | Excitation voltage <sup>*4</sup>          | V                                             | 24 VDC ±5%                                                                           |                        |                        |                                               |                        |
|                                        | Power consumption (at 20°C)               | W                                             | 7                                                                                    | 7                      | 9                      | 9                                             | 10                     |
|                                        | Current consumption (at 20°C)             | A                                             | 0.3                                                                                  | 0.3                    | 0.36                   | 0.36                                          | 0.42                   |
|                                        | Static friction torque                    | N·m                                           | 0.29 min.                                                                            | 0.29 min.              | 1.27 min.              | 1.27 min.                                     | 2.45 min.              |
|                                        | Attraction time <sup>*5</sup>             | ms                                            | 35 max.                                                                              | 35 max.                | 50 max.                | 50 max.                                       | 70 max.                |
|                                        | Release time <sup>*5</sup>                | ms                                            | 20 max.                                                                              | 20 max.                | 15 max.                | 15 max.                                       | 20 max.                |
|                                        | Backlash                                  |                                               | 1° (reference value)                                                                 |                        |                        |                                               |                        |
|                                        | Allowable work per braking                | J                                             | 39.2                                                                                 | 39.2                   | 137                    | 137                                           | 196                    |
|                                        | Allowable total work                      | J                                             | 4.9 × 10 <sup>3</sup>                                                                | 4.9 × 10 <sup>3</sup>  | 44.1 × 10 <sup>3</sup> | 44.1 × 10 <sup>3</sup>                        | 147 × 10 <sup>3</sup>  |
|                                        | Allowable angular acceleration            | rad/s <sup>2</sup>                            | 30,000 max.<br>(Speed of 2,800 r/min or more must not be changed in less than 10 ms) |                        |                        |                                               |                        |
|                                        | Brake life                                | ---                                           | 10,000,000 operations                                                                |                        |                        |                                               |                        |
|                                        | Rating                                    | ---                                           | Continuous                                                                           |                        |                        |                                               |                        |
|                                        | Insulation grade                          | ---                                           | Type B                                                                               |                        |                        |                                               |                        |

| Model (R88M-)                          |                                           |                                           | 200 VAC                                                                            |                       |                       |                       |                       |                       |
|----------------------------------------|-------------------------------------------|-------------------------------------------|------------------------------------------------------------------------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
|                                        |                                           |                                           | G1K030T                                                                            | G1K530T               | G2K030T               | G3K030T               | G4K030T               | G5K030T               |
| Item                                   | Unit                                      |                                           |                                                                                    |                       |                       |                       |                       |                       |
| Rated output <sup>*1</sup>             | W                                         |                                           | 1000                                                                               | 1500                  | 2000                  | 3000                  | 4000                  | 5000                  |
| Rated torque <sup>*1</sup>             | N·m                                       |                                           | 3.18                                                                               | 4.77                  | 6.36                  | 9.54                  | 12.6                  | 15.8                  |
| Rated rotation speed                   | r/min                                     |                                           | 3000                                                                               |                       |                       |                       |                       |                       |
| Max. momentary rotation speed          | r/min                                     |                                           | 5000                                                                               |                       |                       |                       | 4500                  |                       |
| Max. momentary torque <sup>*1</sup>    | N·m                                       |                                           | 9.1                                                                                | 12.8                  | 18.4                  | 27.0                  | 36.3                  | 45.1                  |
| Rated current <sup>*1</sup>            | A (rms)                                   |                                           | 7.2                                                                                | 9.4                   | 13                    | 18.6                  | 24.7                  | 28.5                  |
| Max. momentary current <sup>*1</sup>   | A (rms)                                   |                                           | 21.4                                                                               | 28.5                  | 40                    | 57.1                  | 75                    | 85.7                  |
| Rotor inertia                          | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) |                                           | $1.69 \times 10^{-4}$                                                              | $2.59 \times 10^{-4}$ | $3.46 \times 10^{-4}$ | $6.77 \times 10^{-4}$ | $1.27 \times 10^{-3}$ | $1.78 \times 10^{-3}$ |
| Applicable load inertia                | ---                                       |                                           | 15 times the rotor inertia max. <sup>*2</sup>                                      |                       |                       |                       |                       |                       |
| Torque constant <sup>*1</sup>          | N·m/A                                     |                                           | 0.44                                                                               | 0.51                  | 0.48                  | 0.51                  | 0.51                  | 0.57                  |
| Power rate <sup>*1</sup>               | kW/s                                      |                                           | 60                                                                                 | 88                    | 117                   | 134                   | 125                   | 140                   |
| Mechanical time constant               | ms                                        |                                           | 0.78                                                                               | 0.54                  | 0.53                  | 0.46                  | 0.51                  | 0.46                  |
| Electrical time constant               | ms                                        |                                           | 6.7                                                                                | 10                    | 10.8                  | 20                    | 20                    | 20                    |
| Allowable radial load <sup>*3</sup>    | N                                         |                                           | 392                                                                                | 490                   | 490                   | 490                   | 784                   | 784                   |
| Allowable thrust load <sup>*3</sup>    | N                                         |                                           | 147                                                                                | 196                   | 196                   | 196                   | 343                   | 343                   |
| Weight                                 | Without brake                             | kg                                        | Approx. 4.5                                                                        | Approx. 5.1           | Approx. 6.5           | Approx. 9.3           | Approx. 12.9          | Approx. 17.3          |
|                                        | With brake                                | kg                                        | Approx. 5.1                                                                        | Approx. 6.5           | Approx. 7.9           | Approx. 11            | Approx. 14.8          | Approx. 19.2          |
| Radiation shield dimensions (material) |                                           |                                           | 170×160×t12 (Al)                                                                   | 320×300×t30 (Al)      | 320×300×t20 (Al)      | 380×350×t30 (Al)      |                       |                       |
| Applicable Servo Drives (R88D-)        |                                           |                                           | GN15H-ML2                                                                          | GN15H-ML2             | GN20H-ML2             | GN30H-ML2             | GN50H-ML2             | GN50H-ML2             |
| Brake specifications                   | Brake inertia                             | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | $2.5 \times 10^{-5}$                                                               | $3.3 \times 10^{-5}$  | $3.3 \times 10^{-5}$  | $3.3 \times 10^{-5}$  | $1.35 \times 10^{-4}$ | $1.35 \times 10^{-4}$ |
|                                        | Excitation voltage <sup>*4</sup>          | V                                         | 24 VDC ±10%                                                                        |                       |                       |                       |                       |                       |
|                                        | Power consumption (at 20°C)               | W                                         | 18                                                                                 | 19                    | 19                    | 19                    | 22                    | 22                    |
|                                        | Current consumption (at 20°C)             | A                                         | 0.74                                                                               | 0.81                  | 0.81                  | 0.81                  | 0.9                   | 0.9                   |
|                                        | Static friction torque                    | N·m                                       | 4.9 min.                                                                           | 7.8 min.              | 7.8 min.              | 11.8 min.             | 16.1 min.             | 16.1 min.             |
|                                        | Attraction time <sup>*5</sup>             | ms                                        | 50 max.                                                                            | 50 max.               | 50 max.               | 80 max.               | 110 max.              | 110 max.              |
|                                        | Release time <sup>*5</sup>                | ms                                        | 15 max.                                                                            | 15 max.               | 15 max.               | 15 max.               | 50 max.               | 50 max.               |
|                                        | Backlash                                  |                                           | 1° (reference value)                                                               |                       |                       |                       |                       |                       |
|                                        | Allowable work per braking                | J                                         | 392                                                                                | 392                   | 392                   | 392                   | 1470                  | 1470                  |
|                                        | Allowable total work                      | J                                         | $2.0 \times 10^5$                                                                  | $4.9 \times 10^5$     | $4.9 \times 10^5$     | $4.9 \times 10^5$     | $2.2 \times 10^6$     | $2.2 \times 10^6$     |
|                                        | Allowable angular acceleration            | rad/s <sup>2</sup>                        | 10,000 max.<br>(Speed of 900 r/min or more must not be changed in less than 10 ms) |                       |                       |                       |                       |                       |
|                                        | Brake life                                | ---                                       | 10,000,000 operations                                                              |                       |                       |                       |                       |                       |
|                                        | Rating                                    | ---                                       | Continuous                                                                         |                       |                       |                       |                       |                       |
|                                        | Insulation grade                          | ---                                       | Type F                                                                             |                       |                       |                       |                       |                       |

## 3-2 Servomotor Specifications

- \*1. These are the values when the Servomotor is combined with a Servo Drive at room temperature (20°C, 65%). The maximum momentary torque indicates the standard value.
- \*2. Applicable Load Inertia
  - ♦ The operable load inertia ratio (load inertia/rotor inertia) depends on the mechanical configuration and its rigidity. For a machine with high rigidity, operation is possible even with high load inertia. Select an appropriate motor and confirm that operation is possible.
  - ♦ If the dynamic brake is activated frequently with high load inertia, the dynamic brake resistor may burn. Do not repeatedly turn the Servomotor ON and OFF while the dynamic brake is enabled.
- \*3. The allowable radial and thrust loads are the values determined for a service life of 20,000 hours at normal operating temperatures.  
The allowable radial loads are applied as shown in the following diagram.

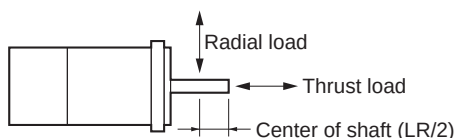


- \*4. This is an OFF brake. (It is reset when excitation voltage is applied).
- \*5. The operation time is the value (reference value) measured with a surge suppressor (CR50500 manufactured by Okaya Electric Industries Co., Ltd.).

### Torque-Rotational Speed Characteristics for 3,000-r/min Servomotors


♦ 3,000-r/min Servomotors with 100-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 100-VAC input.


♦ R88M-G05030H/T (50 W)

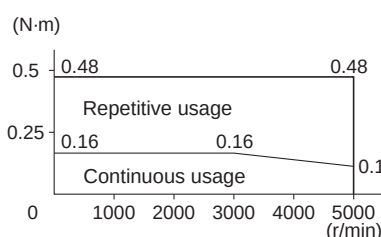


♦ R88M-G10030L/S (100 W)

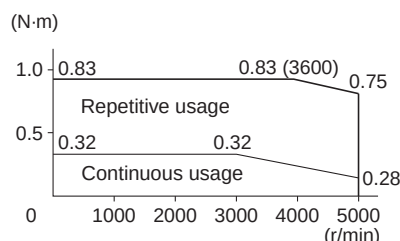

♦ R88M-G20030L/S (200 W)

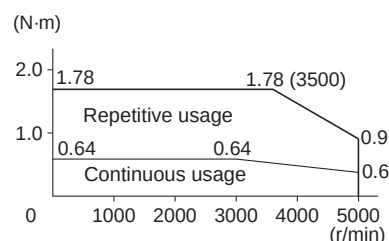


♦ R88M-G40030L/S (400 W)

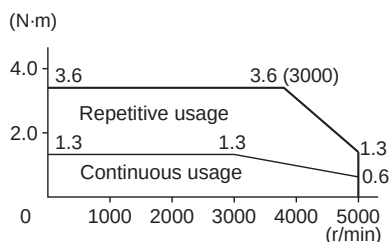


### ♦ 3,000-r/min Servomotors with 200-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 200-VAC input.


#### ♦ R88M-G05030H/T (50 W)

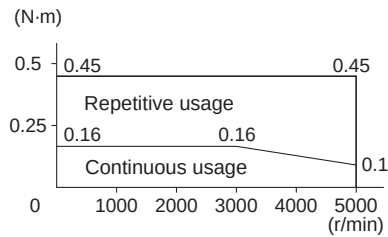


#### ♦ R88M-G10030H/T (100 W)

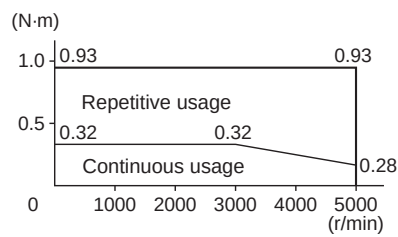


#### ♦ R88M-G20030H/T (200 W)

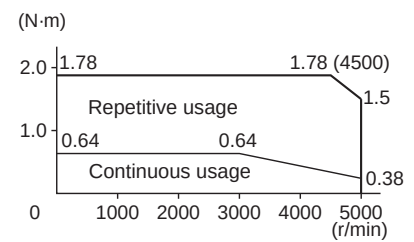


#### ♦ R88M-G40030H/T (400 W)

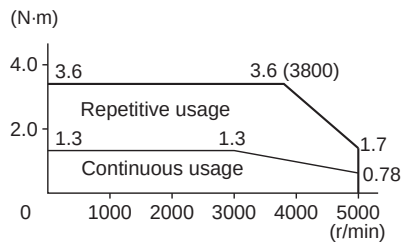


#### ♦ R88M-G75030H/T (750 W)

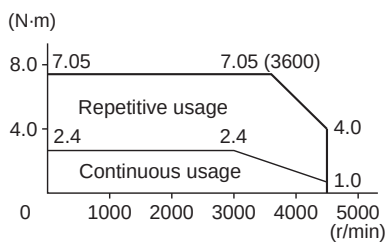


#### ♦ R88M-G1K030T (1 kW)

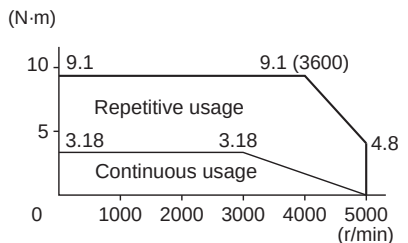


#### ♦ R88M-G1K530T (1.5 kW)

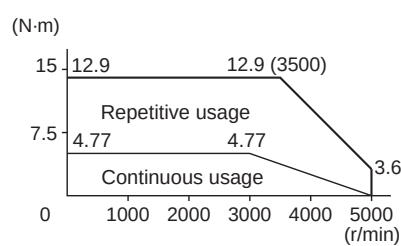


#### ♦ R88M-G2K030T (2 kW)

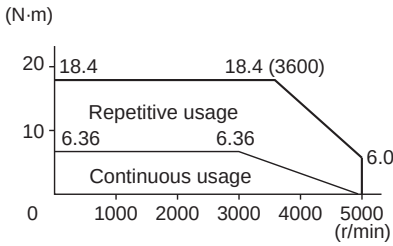


#### ♦ R88M-G3K030T (3 kW)

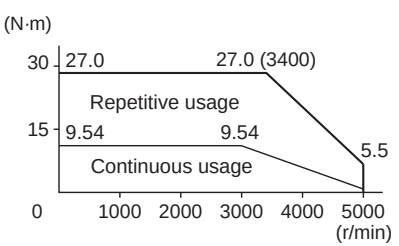

#### ♦ R88M-G4K030T (4 kW)

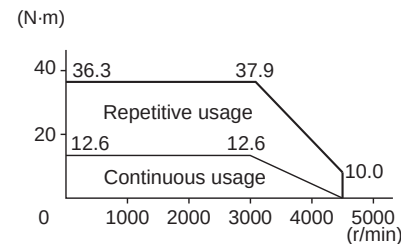

#### ♦ R88M-G5K030T (5 kW)

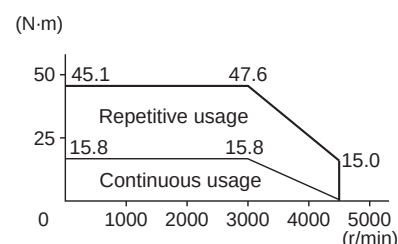


## 3-2 Servomotor Specifications


### Precautions for Correct Use

- Use the following Servomotors in the ranges shown in the graphs below. Using outside of these ranges may cause the Servomotor to generate heat, which could result in encoder malfunction.


- R88M-G05030H/T  
50 W (Without Oil Seal)

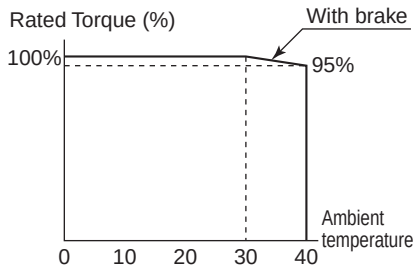


- R88M-G05030H/T  
50 W (With Oil Seal)

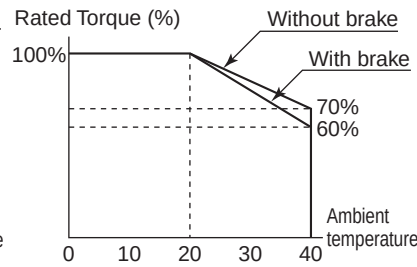


- R88M-G10030H/T  
100 W (Without Oil Seal)

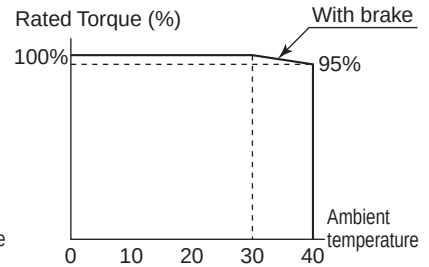


- R88M-G10030H/T  
100 W (With Oil Seal)

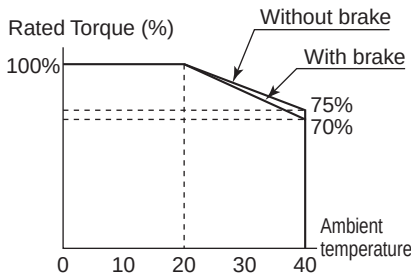


- R88M-G20030H/T  
200 W (With Oil Seal)

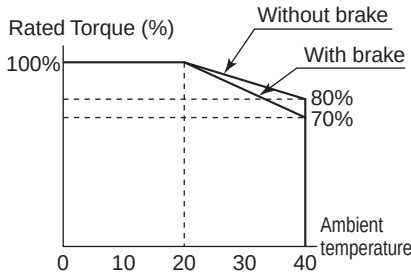


- R88M-G40030H/T  
400 W (Without Oil Seal)

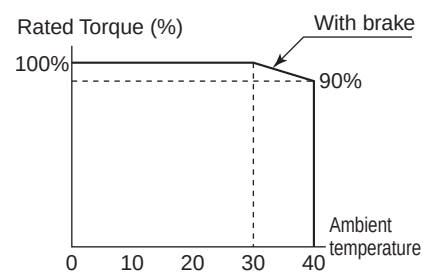


- R88M-G40030H/T  
400 W (With Oil Seal)

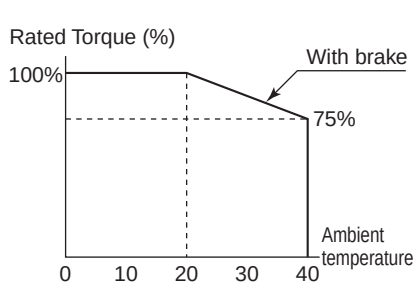


- R88M-G1K530T (1.5 kW)

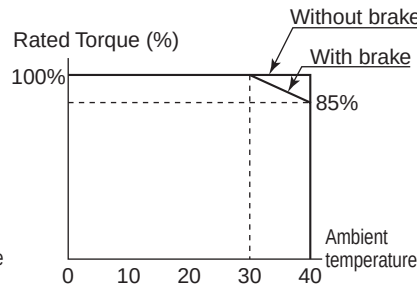


- R88M-G2K030T (2 kW)

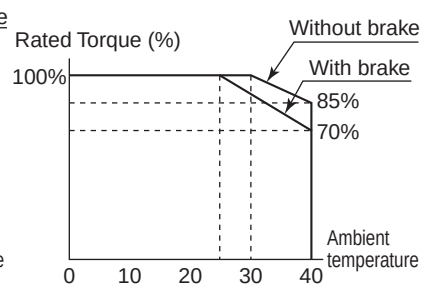


- R88M-G3K030T (3 kW)

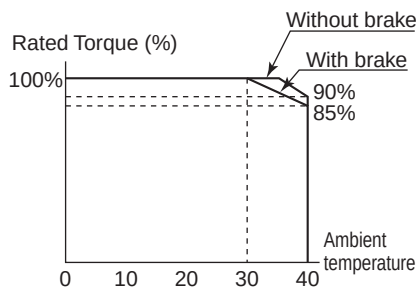

- R88M-G4K030T (4 kW)

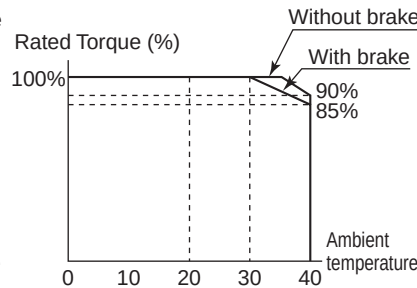

- R88M-G5K030T (5 kW)

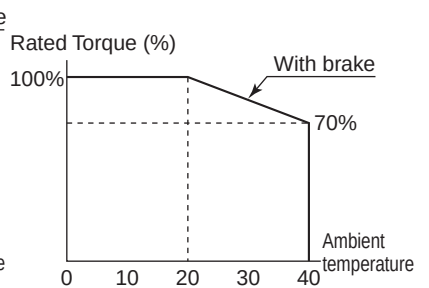


### ■ 3,000-r/min Flat Servomotors

| Model (R88M-)                          |                                           | 100 VAC                                       |                                                                                    |                        | 200 VAC                |                        |                        |
|----------------------------------------|-------------------------------------------|-----------------------------------------------|------------------------------------------------------------------------------------|------------------------|------------------------|------------------------|------------------------|
|                                        |                                           | GP10030L                                      | GP20030L                                                                           | GP40030L               | GP10030H               | GP20030H               | G40030H                |
| Item                                   | Unit                                      | GP10030S                                      | GP20030S                                                                           | GP40030S               | GP10030T               | GP20030T               | G40030T                |
| Rated output <sup>*1</sup>             | W                                         | 100                                           | 200                                                                                | 400                    | 100                    | 200                    | 400                    |
| Rated torque <sup>*1</sup>             | N·m                                       | 0.32                                          | 0.64                                                                               | 1.3                    | 0.32                   | 0.64                   | 1.3                    |
| Rated rotation speed                   | r/min                                     | 3000                                          |                                                                                    |                        | 3000                   |                        |                        |
| Max. momentary rotation speed          | r/min                                     | 5000                                          |                                                                                    | 4500                   | 5000                   |                        |                        |
| Max. momentary torque <sup>*1</sup>    | N·m                                       | 0.84                                          | 1.8                                                                                | 3.6                    | 0.86                   | 1.8                    | 3.65                   |
| Rated current <sup>*1</sup>            | A (rms)                                   | 1.6                                           | 2.5                                                                                | 4.4                    | 1                      | 1.6                    | 2.5                    |
| Max. momentary current <sup>*1</sup>   | A (rms)                                   | 4.9                                           | 7.5                                                                                | 13.3                   | 3.1                    | 4.9                    | 7.5                    |
| Rotor inertia                          | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | 1.0 × 10 <sup>-5</sup>                        | 3.5 × 10 <sup>-5</sup>                                                             | 6.5 × 10 <sup>-5</sup> | 1.0 × 10 <sup>-5</sup> | 3.5 × 10 <sup>-5</sup> | 6.4 × 10 <sup>-5</sup> |
| Applicable load inertia                | ---                                       | 20 times the rotor inertia max. <sup>*2</sup> |                                                                                    |                        |                        |                        |                        |
| Torque constant <sup>*1</sup>          | N·m/A                                     | 0.21                                          | 0.27                                                                               | 0.3                    | 0.34                   | 0.42                   | 0.54                   |
| Power rate <sup>*1</sup>               | kW/s                                      | 10.2                                          | 11.7                                                                               | 26.0                   | 10.2                   | 11.5                   | 25.5                   |
| Mechanical time constant               | ms                                        | 0.87                                          | 0.75                                                                               | 0.55                   | 1.05                   | 0.81                   | 0.59                   |
| Electrical time constant               | ms                                        | 3.4                                           | 6.7                                                                                | 6.7                    | 2.9                    | 5.6                    | 6.6                    |
| Allowable radial load <sup>*3</sup>    | N                                         | 68                                            | 245                                                                                | 245                    | 68                     | 245                    | 245                    |
| Allowable thrust load <sup>*3</sup>    | N                                         | 58                                            | 98                                                                                 | 98                     | 58                     | 98                     | 98                     |
| Weight                                 | Without brake                             | kg                                            | Approx. 0.7                                                                        | Approx. 1.3            | Approx. 1.8            | Approx. 0.7            | Approx. 1.3            |
|                                        | With brake                                | kg                                            | Approx. 0.9                                                                        | Approx. 2              | Approx. 2.5            | Approx. 0.9            | Approx. 2              |
| Radiation shield dimensions (material) |                                           | 130 × 120 × t10 (Al)                          | 170 × 160 × t12 (Al)                                                               |                        | 130 × 120 × t10 (Al)   | 170 × 160 × t12 (Al)   |                        |
| Applicable Servo Drives (R88D-)        |                                           | GN01L-ML2                                     | GN02L-ML2                                                                          | GN04L-ML2              | GN01H-ML2              | GN02H-ML2              | GN04H-ML2              |
| Brake specifications                   | Brake inertia                             | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4)     | 3 × 10 <sup>-6</sup>                                                               | 9 × 10 <sup>-6</sup>   | 9 × 10 <sup>-6</sup>   | 3 × 10 <sup>-6</sup>   | 9 × 10 <sup>-6</sup>   |
|                                        | Excitation voltage <sup>*4</sup>          | V                                             | 24 VDC ±10%                                                                        |                        |                        | 24 VDC ±10%            |                        |
|                                        | Power consumption (at 20°C)               | W                                             | 7                                                                                  | 10                     | 10                     | 7                      | 10                     |
|                                        | Current consumption (at 20°C)             | A                                             | 0.29                                                                               | 0.41                   | 0.41                   | 0.29                   | 0.41                   |
|                                        | Static friction torque                    | N·m                                           | 0.29 min.                                                                          | 1.27 min.              | 1.27 min.              | 0.29 min.              | 1.27 min.              |
|                                        | Attraction time <sup>*5</sup>             | ms                                            | 50 max.                                                                            | 60 max.                | 60 max.                | 50 max.                | 60 max.                |
|                                        | Release time <sup>*5</sup>                | ms                                            | 15 max.                                                                            | 15 max.                | 15 max.                | 15 max.                | 15 max.                |
|                                        | Backlash                                  |                                               | 1° (reference value)                                                               |                        |                        | 1° (reference value)   |                        |
|                                        | Allowable work per braking                | J                                             | 137                                                                                | 196                    | 196                    | 137                    | 196                    |
|                                        | Allowable total work                      | J                                             | 44.1 × 10 <sup>3</sup>                                                             | 147 × 10 <sup>3</sup>  | 147 × 10 <sup>3</sup>  | 44.1 × 10 <sup>3</sup> | 147 × 10 <sup>3</sup>  |
|                                        | Allowable angular acceleration            | rad/s <sup>2</sup>                            | 10,000 max.<br>(Speed of 900 r/min or more must not be changed in less than 10 ms) |                        |                        |                        |                        |
|                                        | Brake life                                | ---                                           | 10,000,000 operations                                                              |                        |                        |                        |                        |
|                                        | Rating                                    | ---                                           | Continuous                                                                         |                        |                        | Continuous             |                        |
|                                        | Insulation grade                          | ---                                           | Type B                                                                             |                        |                        | Type B                 |                        |

## 3-2 Servomotor Specifications

- \*1. These are the values when the Servomotor is combined with a Servo Drive at room temperature (20°C, 65%). The maximum momentary torque indicates the standard value.
- \*2. Applicable Load Inertia
  - ♦ The operable load inertia ratio (load inertia/rotor inertia) depends on the mechanical configuration and its rigidity. For a machine with high rigidity, operation is possible even with high load inertia. Select an appropriate motor and confirm that operation is possible.
  - ♦ If the dynamic brake is activated frequently with high load inertia, the dynamic brake resistor may burn. Do not repeatedly turn the Servomotor ON and OFF while the dynamic brake is enabled.
- \*3. The allowable radial and thrust loads are the values determined for a service life of 20,000 hours at normal operating temperatures.  
The allowable radial loads are applied as shown in the following diagram.

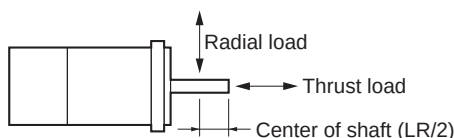


- \*4. This is an OFF brake. (It is reset when excitation voltage is applied).
- \*5. The operation time is the value (reference value) measured with a surge suppressor (CR50500 manufactured by Okaya Electric Industries Co., Ltd.).

### Torque-Rotational Speed Characteristics for 3,000-r/min Flat Servomotors


- ♦ 3,000-r/min Flat Servomotors with 100-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 100-VAC input.


#### ♦R88M-GP10030L/S (100 W)

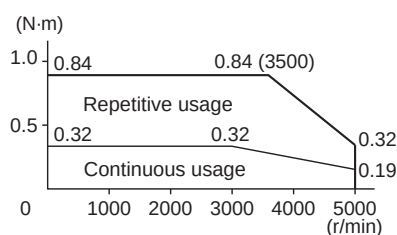

#### ♦R88M-GP20030L/S (200 W)

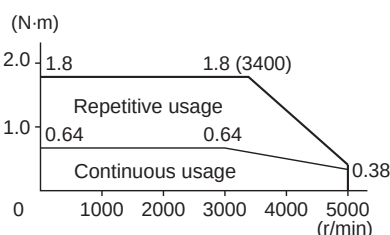


#### ♦R88M-GP40030L/S (400 W)

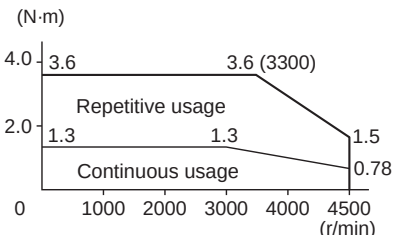


- ♦ 3,000-r/min Flat Servomotors with 200-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 200-VAC input.


#### ♦R88M-GP10030H/T (100 W)

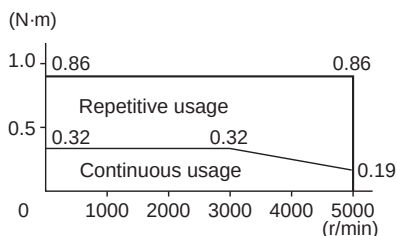

#### ♦R88M-GP20030H/T (200 W)

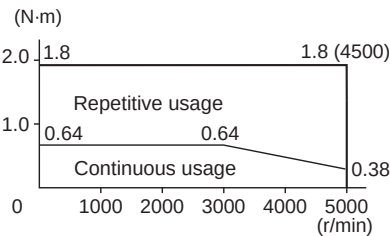

#### ♦R88M-GP40030H/T (400 W)

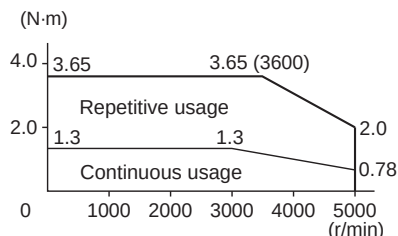




## ■ 2,000-r/min Servomotors

| Model (R88M-)                          |                                           | 200 VAC                                       |                                                                                    |                       |                       |                       |                       |                      |
|----------------------------------------|-------------------------------------------|-----------------------------------------------|------------------------------------------------------------------------------------|-----------------------|-----------------------|-----------------------|-----------------------|----------------------|
|                                        |                                           | G1K020T                                       | G1K520T                                                                            | G2K020T               | G3K020T               | G4K020T               | G5K020T               | G7K515T              |
| Item                                   | Unit                                      |                                               |                                                                                    |                       |                       |                       |                       |                      |
| Rated output <sup>*1</sup>             | W                                         | 1000                                          | 1500                                                                               | 2000                  | 3000                  | 4000                  | 5000                  | 7500                 |
| Rated torque <sup>*1</sup>             | N·m                                       | 4.8                                           | 7.15                                                                               | 9.54                  | 14.3                  | 18.8                  | 23.8                  | 48                   |
| Rated rotation speed                   | r/min                                     | 2000                                          |                                                                                    |                       |                       |                       |                       | 1500                 |
| Max. momentary rotation speed          | r/min                                     | 3000                                          |                                                                                    |                       |                       |                       |                       | 2000                 |
| Max. momentary torque <sup>*1</sup>    | N·m                                       | 13.5                                          | 19.6                                                                               | 26.5                  | 41.2                  | 54.9                  | 70.6                  | 111                  |
| Rated current <sup>*1</sup>            | A (rms)                                   | 5.6                                           | 9.4                                                                                | 12.3                  | 17.8                  | 23.4                  | 28                    | 46.6                 |
| Max. momentary current <sup>*1</sup>   | A (rms)                                   | 17.1                                          | 28.5                                                                               | 37.1                  | 54.2                  | 71.4                  | 85.7                  | 117.8                |
| Rotor inertia                          | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | $6.17 \times 10^{-4}$                         | $1.12 \times 10^{-3}$                                                              | $1.52 \times 10^{-3}$ | $2.23 \times 10^{-3}$ | $4.25 \times 10^{-3}$ | $6.07 \times 10^{-3}$ | $9.9 \times 10^{-3}$ |
| Applicable load inertia                | ---                                       | 10 times the rotor inertia max. <sup>*2</sup> |                                                                                    |                       |                       |                       |                       |                      |
| Torque constant <sup>*1</sup>          | N·m/A                                     | 0.88                                          | 0.76                                                                               | 0.78                  | 0.81                  | 0.81                  | 0.85                  | 1.03                 |
| Power rate <sup>*1</sup>               | kW/s                                      | 37.3                                          | 45.8                                                                               | 60                    | 91.6                  | 83.2                  | 93.5                  | 230                  |
| Mechanical time constant               | ms                                        | 0.7                                           | 0.81                                                                               | 0.75                  | 0.72                  | 1                     | 0.9                   | 0.71                 |
| Electrical time constant               | ms                                        | 18                                            | 19                                                                                 | 21                    | 20                    | 24                    | 32                    | 34                   |
| Allowable radial load <sup>*3</sup>    | N                                         | 490                                           | 490                                                                                | 490                   | 784                   | 784                   | 784                   | 1176                 |
| Allowable thrust load <sup>*3</sup>    | N                                         | 196                                           | 196                                                                                | 196                   | 343                   | 343                   | 343                   | 490                  |
| Weight                                 | Without brake                             | kg                                            | Approx. 6.8                                                                        | Approx. 8.5           | Approx. 10.6          | Approx. 14.6          | Approx. 18.8          | Approx. 25           |
|                                        | With brake                                | kg                                            | Approx. 8.7                                                                        | Approx. 10.1          | Approx. 12.5          | Approx. 16.5          | Approx. 21.3          | Approx. 28.5         |
| Radiation shield dimensions (material) |                                           | 275 × 260 × t15 (Al)                          |                                                                                    |                       | 380 × 350 × t30 (Al)  | 470 × 440 × t30 (Al)  |                       |                      |
| Applicable Servo Drives (R88D-)        |                                           | GN10H-ML2                                     | GN15H-ML2                                                                          | GN20H-ML2             | GN30H-ML2             | GN50H-ML2             | GN50H-ML2             | GN75H-ML2            |
| Brake specifications                   | Brake inertia                             | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4)     | $1.35 \times 10^{-4}$                                                              |                       |                       | $4.25 \times 10^{-4}$ | $4.7 \times 10^{-4}$  | $4.7 \times 10^{-4}$ |
|                                        | Excitation voltage <sup>*4</sup>          | V                                             | 24 VDC ±10%                                                                        |                       |                       |                       |                       |                      |
|                                        | Power consumption (at 20°C)               | W                                             | 14                                                                                 | 19                    | 19                    | 22                    | 26                    | 31                   |
|                                        | Current consumption (at 20°C)             | A                                             | 0.59                                                                               | 0.79                  | 0.79                  | 0.9                   | 1.1                   | 1.3                  |
|                                        | Static friction torque                    | N·m                                           | 4.9 min.                                                                           | 13.7 min.             | 13.7 min.             | 16.1 min.             | 21.5 min.             | 24.5 min.            |
|                                        | Attraction time <sup>*5</sup>             | ms                                            | 80 max.                                                                            | 100 max.              | 100 max.              | 110 max.              | 90 max.               | 80 max.              |
|                                        | Release time <sup>*5</sup>                | ms                                            | 70 max.                                                                            | 50 max.               | 50 max.               | 50 max.               | 35 min.               | 25 min.              |
|                                        | Backlash                                  |                                               | 1° (reference value)                                                               |                       |                       |                       |                       |                      |
|                                        | Allowable work per braking                | J                                             | 588                                                                                | 1176                  | 1176                  | 1170                  | 1078                  | 1372                 |
|                                        | Allowable total work                      | J                                             | $7.8 \times 10^5$                                                                  | $1.5 \times 10^6$     | $1.5 \times 10^6$     | $2.2 \times 10^6$     | $2.5 \times 10^6$     | $2.9 \times 10^6$    |
|                                        | Allowable angular acceleration            | rad/s <sup>2</sup>                            | 10,000 max.<br>(Speed of 900 r/min or more must not be changed in less than 10 ms) |                       |                       |                       |                       |                      |
|                                        | Brake life                                | ---                                           | 10,000,000 operations                                                              |                       |                       |                       |                       |                      |
|                                        | Rating                                    | ---                                           | Continuous                                                                         |                       |                       |                       |                       |                      |
|                                        | Insulation grade                          | ---                                           | Type F                                                                             |                       |                       |                       |                       |                      |

- \*1. These are the values when the Servomotor is combined with a Servo Drive at room temperature (20°C, 65%). The maximum momentary torque indicates the standard value.
- \*2. Applicable Load Inertia
  - ♦ The operable load inertia ratio (load inertia/rotor inertia) depends on the mechanical configuration and its rigidity. For a machine with high rigidity, operation is possible even with high load inertia. Select an appropriate motor and confirm that operation is possible.
  - ♦ If the dynamic brake is activated frequently with high load inertia, the dynamic brake resistor may burn. Do not repeatedly turn the Servomotor ON and OFF while the dynamic brake is enabled.
- \*3. The allowable radial and thrust loads are the values determined for a service life of 20,000 hours at normal operating temperatures. The allowable radial loads are applied as shown in the following diagram.

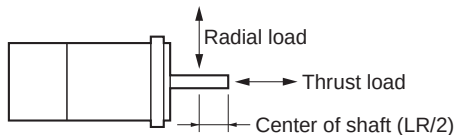


- \*4. This is an OFF brake. (It is reset when excitation voltage is applied).
- \*5. The operation time is the value (reference value) measured with a surge suppressor (CR50500 manufactured by Okaya Electric Industries Co., Ltd.).

### Torque-Rotational Speed Characteristics for 2,000-r/min Servomotors


♦ 2,000-r/min Servomotors with 200-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 200-VAC input.


♦ R88M-G1K020T (1 kW)

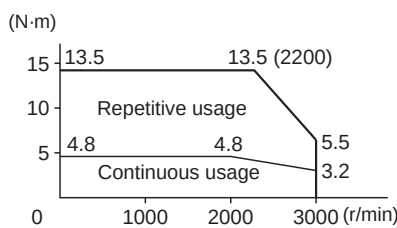


♦ R88M-G1K520T (1.5 kW)

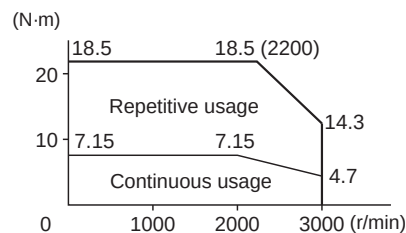


♦ R88M-G2K020T (2 kW)

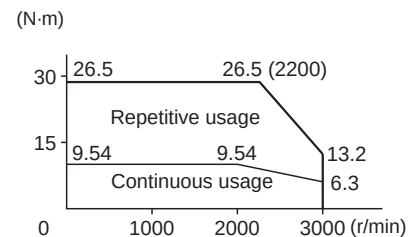


♦ R88M-G3K020T (3 kW)

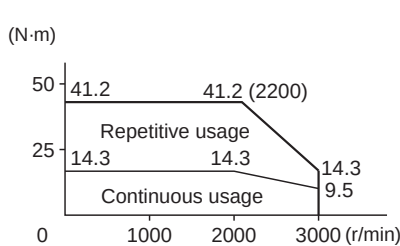


♦ R88M-G4K020T (4 kW)

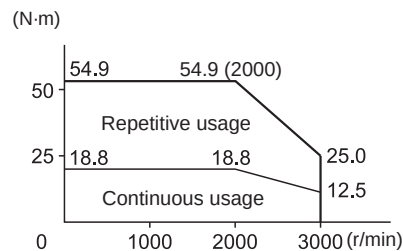

♦ R88M-G5K020T (5 kW)

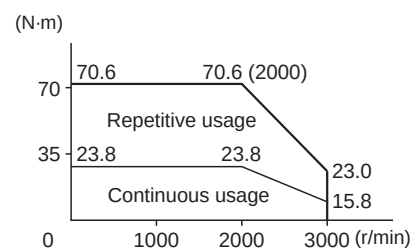

♦ R88M-G7K515T (7.5 kW)

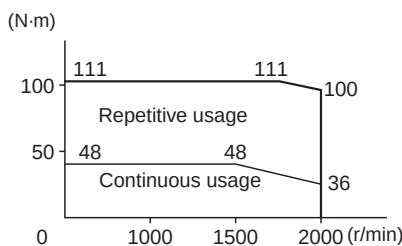


## ■ 1,000-r/min Servomotors

| Model (R88M-)                          |                                  |                                           | 200 VAC                                                                            |                         |                         |                         |                        |
|----------------------------------------|----------------------------------|-------------------------------------------|------------------------------------------------------------------------------------|-------------------------|-------------------------|-------------------------|------------------------|
|                                        |                                  |                                           | G90010T                                                                            | G2K010T                 | G3K010T                 | G4K510T                 | G6K010T                |
| Item                                   |                                  | Unit                                      |                                                                                    |                         |                         |                         |                        |
| Rated output <sup>*1</sup>             |                                  | W                                         | 900                                                                                | 2000                    | 3000                    | 4500                    | 6000                   |
| Rated torque <sup>*1</sup>             |                                  | N·m                                       | 8.62                                                                               | 19.1                    | 28.4                    | 42.9                    | 57.2                   |
| Rated rotation speed                   |                                  | r/min                                     | 1000                                                                               |                         |                         |                         |                        |
| Max. momentary rotation speed          |                                  | r/min                                     | 2000                                                                               |                         |                         |                         |                        |
| Max. momentary torque <sup>*1</sup>    |                                  | N·m                                       | 18.4                                                                               | 41.5                    | 60                      | 101                     | 130                    |
| Rated current <sup>*1</sup>            |                                  | A (rms)                                   | 7.6                                                                                | 18.5                    | 24                      | 33                      | 57.2                   |
| Max. momentary current <sup>*1</sup>   |                                  | A (rms)                                   | 17.1                                                                               | 44                      | 57.1                    | 84.2                    | 121.4                  |
| Rotor inertia                          |                                  | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | 1.12 × 10 <sup>-3</sup>                                                            | 3.55 × 10 <sup>-3</sup> | 5.57 × 10 <sup>-3</sup> | 8.09 × 10 <sup>-3</sup> | 9.9 × 10 <sup>-3</sup> |
| Applicable load inertia                |                                  | ---                                       | 10 times the rotor inertia max. <sup>*2</sup>                                      |                         |                         |                         |                        |
| Torque constant <sup>*1</sup>          |                                  | N·m/A                                     | 1.13                                                                               | 1                       | 1.1                     | 1.3                     | 1.22                   |
| Power rate <sup>*1</sup>               |                                  | kW/s                                      | 66.3                                                                               | 103                     | 145                     | 228                     | 331                    |
| Mechanical time constant               |                                  | ms                                        | 0.88                                                                               | 0.97                    | 0.74                    | 0.7                     | 0.65                   |
| Electrical time constant               |                                  | ms                                        | 20                                                                                 | 25                      | 30                      | 31                      | 46.2                   |
| Allowable radial load <sup>*3</sup>    |                                  | N                                         | 686                                                                                | 1176                    | 1470                    | 1470                    | 1764                   |
| Allowable thrust load <sup>*3</sup>    |                                  | N                                         | 196                                                                                | 490                     | 490                     | 490                     | 588                    |
| Weight                                 | Without brake                    | kg                                        | Approx. 8.5                                                                        | Approx. 17.5            | Approx. 25              | Approx. 34              | Approx. 41             |
|                                        | With brake                       | kg                                        | Approx. 10                                                                         | Approx. 21              | Approx. 28.5            | Approx. 39.5            | Approx. 45             |
| Radiation shield dimensions (material) |                                  |                                           | 275 × 260 × t15 (Al)                                                               | 470 × 440 × t30 (Al)    |                         |                         |                        |
| Applicable Servo Drives (R88D-)        |                                  |                                           | GN15H-ML2                                                                          | GN30H-ML2               | GN50H-ML2               | GN50H-ML2               | GN75H-ML2              |
| Brake specifications                   | Brake inertia                    | kg·m <sup>2</sup><br>(GD <sup>2</sup> /4) | 1.35 × 10 <sup>-4</sup>                                                            | 4.7 × 10 <sup>-4</sup>  | 4.7 × 10 <sup>-4</sup>  | 4.7 × 10 <sup>-4</sup>  | 4.7 × 10 <sup>-4</sup> |
|                                        | Excitation voltage <sup>*4</sup> | V                                         | 24 VDC ±10%                                                                        |                         |                         |                         |                        |
|                                        | Power consumption (at 20°C)      | W                                         | 19                                                                                 | 31                      | 34                      | 34                      | 34                     |
|                                        | Current consumption (at 20°C)    | A                                         | 0.79                                                                               | 1.3                     | 1.4                     | 1.4                     | 1.4                    |
|                                        | Static friction torque           | N·m                                       | 13.7 min.                                                                          | 24.5 min.               | 58.8 min.               | 58.8 min.               | 58.8 min.              |
|                                        | Attraction time <sup>*5</sup>    | ms                                        | 100 max.                                                                           | 80 max.                 | 150 max.                | 150 max.                | 150 max.               |
|                                        | Release time <sup>*5</sup>       | ms                                        | 50 max.                                                                            | 25 max.                 | 50 max.                 | 50 max.                 | 50 max.                |
|                                        | Backlash                         |                                           | 1° (reference value)                                                               |                         |                         |                         |                        |
|                                        | Allowable work per braking       | J                                         | 1176                                                                               | 1372                    | 1372                    | 1372                    | 1372                   |
|                                        | Allowable total work             | J                                         | 1.6 × 10 <sup>6</sup>                                                              | 2.9 × 10 <sup>6</sup>   | 2.9 × 10 <sup>6</sup>   | 2.9 × 10 <sup>6</sup>   | 2.9 × 10 <sup>6</sup>  |
|                                        | Allowable angular acceleration   | rad/s <sup>2</sup>                        | 10,000 max.<br>(Speed of 900 r/min or more must not be changed in less than 10 ms) |                         |                         |                         |                        |
|                                        | Brake life                       | ---                                       | 10,000,000 operations                                                              |                         |                         |                         |                        |
|                                        | Rating                           | ---                                       | Continuous                                                                         |                         |                         |                         |                        |
| Insulation grade                       | ---                              | Type F                                    |                                                                                    |                         |                         |                         |                        |

## 3-2 Servomotor Specifications

- \*1. These are the values when the Servomotor is combined with a Servo Drive at room temperature (20°C, 65%). The maximum momentary torque indicates the standard value.
- \*2. Applicable Load Inertia
  - The operable load inertia ratio (load inertia/rotor inertia) depends on the mechanical configuration and its rigidity. For a machine with high rigidity, operation is possible even with high load inertia. Select an appropriate motor and confirm that operation is possible.
  - If the dynamic brake is activated frequently with high load inertia, the dynamic brake resistor may burn. Do not repeatedly turn the Servomotor ON and OFF while the dynamic brake is enabled.
- \*3. The allowable radial and thrust loads are the values determined for a service life of 20,000 hours at normal operating temperatures. The allowable radial loads are applied as shown in the following diagram.

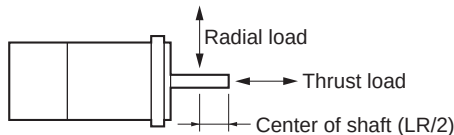


- \*4. This is an OFF brake. (It is reset when excitation voltage is applied).
- \*5. The operation time is the value (reference value) measured with a surge suppressor (CR50500 manufactured by Okaya Electric Industries Co., Ltd.).

### Torque-Rotational Speed Characteristics for 1,000-r/min Servomotors


♦ 1,000-r/min Servomotors with 200-VAC Power Input

The following graphs show the characteristics with a 3-m standard cable and a 200-VAC input.


♦ R88M-G90010T (900 W)

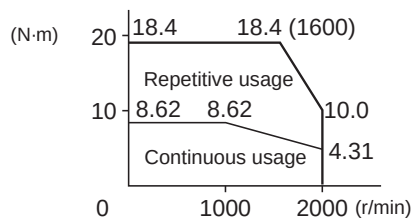


♦ R88M-G2K010T (2 kW)

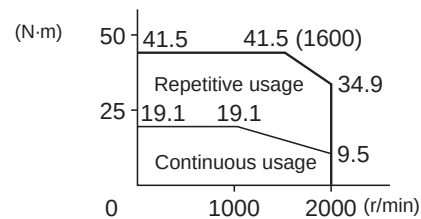


♦ R88M-G3K010T (3 kW)

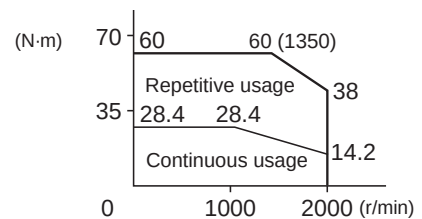

♦ R88M-G4K510 (4.5 kW)

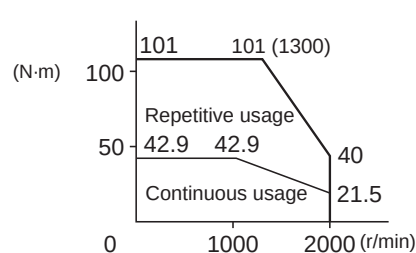

♦ R88M-G6K010T (6 kW)

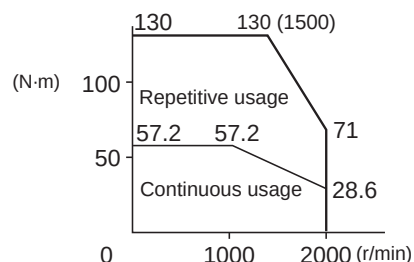


## Precautions for Correct Use

- ♦ Use the following Servomotors in the ranges shown in the graphs below. Using outside of these ranges may cause the Servomotor to generate heat, which could result in encoder malfunction.


### ♦ R88M-G4K510

4.5 kW (Without Oil Seal)

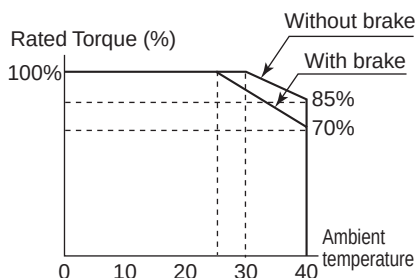

### ♦ R88M-G6K010T

6 kW (With Oil Seal)

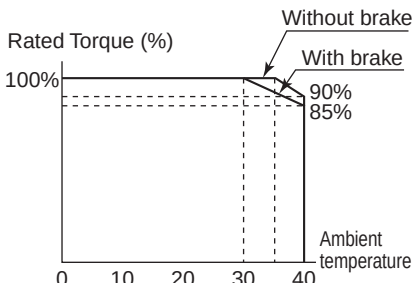

## ■ Temperature Characteristics of the Servomotor and Mechanical System

- ♦ OMNUC G-Series AC Servomotors use rare earth magnets (neodymium-iron magnets). The temperature coefficient for these magnets is approximately  $-0.13\%/^{\circ}\text{C}$ . As the temperature drops, the Servomotor's maximum momentary torque increases, and as the temperature rises, the Servomotor's maximum momentary torque decreases.
- ♦ The maximum momentary torque rises by 4% at a normal temperature of  $20^{\circ}\text{C}$  compared to a temperature of  $-10^{\circ}\text{C}$ .  
Conversely, the maximum momentary torque decreases about 8% when the magnet warms up to  $80^{\circ}\text{C}$  from the normal temperature.
- ♦ Generally, when the temperature drops in a mechanical system, the friction torque and the load torque increase.  
For that reason, overloading may occur at low temperatures. In particular, in systems that use a Decelerator, the load torque at low temperatures may be nearly twice as much as the load torque at normal temperatures.  
Check whether overloading may occur at low temperature startup.  
Also check to see whether abnormal Servomotor overheating or alarms occur at high temperatures.
- ♦ An increase in load friction torque seemingly increases load inertia.  
Therefore, even if the Servo Drive gains are adjusted at a normal temperature, the Servomotor may not operate properly at low temperatures.  
Check to see whether there is optimal operation even at low temperatures.

### Encoder Specifications

#### ■ Incremental Encoders

| Item                 | Specifications                                                     |
|----------------------|--------------------------------------------------------------------|
| Encoder system       | Optical encoder                                                    |
| No. of output pulses | Phases A and B: 2,500 pulses/rotation<br>Phase Z: 1 pulse/rotation |
| Power supply voltage | 5 VDC $\pm 5\%$                                                    |
| Power supply current | 180 mA (max.)                                                      |
| Output signals       | +S, -S                                                             |
| Output interface     | RS-485 compliance                                                  |

#### ■ Absolute Encoders

| Item                           | Specifications                                                                                                                                                              |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Encoder system                 | Optical encoder                                                                                                                                                             |
|                                | 17 bits                                                                                                                                                                     |
| No. of output pulses           | Phases A and B: 32,768 pulses/rotation<br>Phase Z: 1 pulse/rotation                                                                                                         |
| Maximum rotations              | -32,768 to +32,767 rotations or 0 to 65,534 rotations                                                                                                                       |
| Power supply voltage           | 5 VDC $\pm 5\%$                                                                                                                                                             |
| Power supply current           | 110 mA (max.)                                                                                                                                                               |
| Applicable battery voltage     | 3.6 VDC                                                                                                                                                                     |
| Current consumption of battery | 265 $\mu$ A for a maximum of 5 s right after power interruption<br>100 $\mu$ A for operation during power interruption<br>3.6 $\mu$ A when power is supplied to Servo Drive |
| Output signals                 | +S, -S                                                                                                                                                                      |
| Output interface               | RS-485 compliance                                                                                                                                                           |

## 3-3 Decelerator Specifications

The following Decelerators are available for use with OMNUC G-Series Servomotors. Select a Decelerator matching the Servomotor capacity.

### Standard Models and Specifications

■ Backlash = 3' Max.

#### Decelerators for 3,000-r/min Servomotors

| Model |      |                    | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|--------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                    | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 50 W  | 1/5  | R88G-HPG11A05100B□ | 600                  | 0.60         | 75         | 1000                             | 1.68                     | $5.00 \times 10^{-7}$ | 135                   | 538                   | 0.29   |
|       | 1/9  | R88G-HPG11A09050B□ | 333                  | 1.17         | 81         | 555                              | 3.29                     | $3.00 \times 10^{-7}$ | 161                   | 642                   | 0.29   |
|       | 1/21 | R88G-HPG14A21100B□ | 143                  | 2.18         | 65         | 238                              | 6.13                     | $5.00 \times 10^{-6}$ | 340                   | 1358                  | 1.04   |
|       | 1/33 | R88G-HPG14A33050B□ | 91                   | 3.73         | 71         | 151                              | 10.5                     | $4.40 \times 10^{-6}$ | 389                   | 1555                  | 1.04   |
|       | 1/45 | R88G-HPG14A45050B□ | 67                   | 5.09         | 71         | 111                              | 14.3                     | $4.40 \times 10^{-6}$ | 427                   | 1707                  | 1.04   |
| 100 W | 1/5  | R88G-HPG11A05100B□ | 600                  | 1.37         | 86         | 1000                             | 3.8                      | $5.00 \times 10^{-7}$ | 135                   | 538                   | 0.29   |
|       | 1/11 | R88G-HPG14A11100B□ | 273                  | 2.63         | 75         | 454                              | 7.39                     | $6.00 \times 10^{-6}$ | 280                   | 1119                  | 1.04   |
|       | 1/21 | R88G-HPG14A21100B□ | 143                  | 5.40         | 80         | 238                              | 15.2                     | $5.00 \times 10^{-6}$ | 340                   | 1358                  | 1.04   |
|       | 1/33 | R88G-HPG20A33100B□ | 91                   | 6.91         | 65         | 151                              | 19.4                     | $6.50 \times 10^{-5}$ | 916                   | 3226                  | 2.4    |
|       | 1/45 | R88G-HPG20A45100B□ | 67                   | 9.42         | 65         | 111                              | 26.5                     | $6.50 \times 10^{-5}$ | 1006                  | 3541                  | 2.4    |
| 200 W | 1/5  | R88G-HPG14A05200B□ | 600                  | 2.49         | 78         | 1000                             | 6.93                     | $2.07 \times 10^{-5}$ | 221                   | 883                   | 1.02   |
|       | 1/11 | R88G-HPG14A11200B□ | 273                  | 6.01         | 85         | 454                              | 16.7                     | $1.93 \times 10^{-5}$ | 280                   | 1119                  | 1.09   |
|       | 1/21 | R88G-HPG20A21200B□ | 143                  | 10.2         | 76         | 238                              | 28.5                     | $4.90 \times 10^{-5}$ | 800                   | 2817                  | 2.9    |
|       | 1/33 | R88G-HPG20A33200B□ | 91                   | 17.0         | 81         | 151                              | 47.4                     | $4.50 \times 10^{-5}$ | 916                   | 3226                  | 2.9    |
|       | 1/45 | R88G-HPG20A45200B□ | 67                   | 23.2         | 81         | 111                              | 64.6                     | $4.50 \times 10^{-5}$ | 1006                  | 3541                  | 2.9    |

### 3-3 Decelerator Specifications

| Model  |      |                    | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|--------|------|--------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|        |      |                    | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 400 W  | 1/5  | R88G-HPG14A05400B□ | 600                  | 5.66         | 87         | 1000                             | 16.0 (15.7)              | $2.07 \times 10^{-5}$ | 221                   | 883                   | 1.09   |
|        | 1/11 | R88G-HPG20A11400B□ | 273                  | 11.7         | 82         | 454                              | 33.1 (32.5)              | $5.70 \times 10^{-5}$ | 659                   | 2320                  | 2.9    |
|        | 1/21 | R88G-HPG20A21400B□ | 143                  | 23.5         | 86         | 238                              | 66.5 (65.2)              | $4.90 \times 10^{-5}$ | 800                   | 2547                  | 2.9    |
|        | 1/33 | R88G-HPG32A33400B□ | 91                   | 34.7         | 81         | 151                              | 98.2 (96.3)              | $6.20 \times 10^{-5}$ | 1565                  | 6240                  | 7.5    |
|        | 1/45 | R88G-HPG32A45400B□ | 67                   | 47.4         | 81         | 111                              | 133.9 (131.4)            | $6.10 \times 10^{-5}$ | 1718                  | 6848                  | 7.5    |
| 750 W  | 1/5  | R88G-HPG20A05750B□ | 600                  | 9.94         | 83         | 1000                             | 29.2                     | $6.80 \times 10^{-5}$ | 520                   | 1832                  | 2.9    |
|        | 1/11 | R88G-HPG20A11750B□ | 273                  | 23.2         | 88         | 454                              | 68.1                     | $6.00 \times 10^{-5}$ | 659                   | 2320                  | 3.1    |
|        | 1/21 | R88G-HPG32A21750B□ | 143                  | 42.3         | 84         | 238                              | 124.3                    | $3.00 \times 10^{-4}$ | 1367                  | 5448                  | 7.8    |
|        | 1/33 | R88G-HPG32A33750B□ | 91                   | 69.7         | 88         | 151                              | 204.7                    | $2.70 \times 10^{-4}$ | 1565                  | 6240                  | 7.8    |
|        | 1/45 | R88G-HPG32A45750B□ | 67                   | 95.0         | 88         | 111                              | 279.2                    | $2.70 \times 10^{-4}$ | 1718                  | 6848                  | 7.8    |
| 1 kW   | 1/5  | R88G-HPG32A051K0B□ | 600                  | 11.5         | 72         | 1000                             | 32.9                     | $3.90 \times 10^{-4}$ | 889                   | 3542                  | 7.3    |
|        | 1/11 | R88G-HPG32A111K0B□ | 273                  | 28.9         | 83         | 454                              | 82.6                     | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.8    |
|        | 1/21 | R88G-HPG32A211K0B□ | 143                  | 58.1         | 87         | 238                              | 166.1                    | $3.00 \times 10^{-4}$ | 1367                  | 5488                  | 7.8    |
|        | 1/33 | R88G-HPG32A331K0B□ | 91                   | 94.3         | 90         | 151                              | 270.0                    | $2.80 \times 10^{-4}$ | 1565                  | 6240                  | 7.8    |
|        | 1/45 | R88G-HPG50A451K0B□ | 67                   | 124.2        | 87         | 100 <sup>*1</sup>                | 355.4                    | $4.70 \times 10^{-4}$ | 4538                  | 15694                 | 19.0   |
| 1.5 kW | 1/5  | R88G-HPG32A052K0B□ | 600                  | 19.1         | 80         | 1000                             | 51.3                     | $3.90 \times 10^{-4}$ | 889                   | 3542                  | 7.4    |
|        | 1/11 | R88G-HPG32A112K0B□ | 273                  | 45.7         | 87         | 454                              | 122.5                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.9    |
|        | 1/21 | R88G-HPG32A211K5B□ | 143                  | 90.1         | 90         | 238                              | 241.9                    | $3.00 \times 10^{-4}$ | 1367                  | 5448                  | 7.9    |
|        | 1/33 | R88G-HPG50A332K0B□ | 91                   | 141.5        | 90         | 136 <sup>*1</sup>                | 379.7                    | $4.80 \times 10^{-4}$ | 4135                  | 14300                 | 19.0   |
|        | 1/45 | R88G-HPG50A451K5B□ | 67                   | 192.9        | 90         | 100 <sup>*1</sup>                | 517.8                    | $4.70 \times 10^{-4}$ | 4538                  | 15694                 | 19.0   |



| Model |      |                    | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|--------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                    | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 2 kW  | 1/5  | R88G-HPG32A052K0B□ | 600                  | 26.7         | 84         | 1000                             | 77.4                     | $3.90 \times 10^{-4}$ | 889                   | 3542                  | 7.4    |
|       | 1/11 | R88G-HPG32A112K0B□ | 273                  | 62.4         | 89         | 454                              | 180.7                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.9    |
|       | 1/21 | R88G-HPG50A212K0B□ | 143                  | 118.9        | 89         | 214 <sup>*1</sup>                | 343.9                    | $5.80 \times 10^{-4}$ | 3611                  | 12486                 | 19.0   |
|       | 1/33 | R88G-HPG50A332K0B□ | 91                   | 191.8        | 91         | 136 <sup>*1</sup>                | 555.0                    | $4.80 \times 10^{-4}$ | 4135                  | 14300                 | 19.0   |
| 3 kW  | 1/5  | R88G-HPG32A053K0B□ | 600                  | 42.0         | 88         | 1000                             | 118.9                    | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.3    |
|       | 1/11 | R88G-HPG50A113K0B□ | 273                  | 92.3         | 88         | 409 <sup>*1</sup>                | 261.4                    | $7.70 \times 10^{-4}$ | 2974                  | 10285                 | 19.0   |
|       | 1/21 | R88G-HPG50A213K0B□ | 143                  | 183.0        | 91         | 214 <sup>*1</sup>                | 517.7                    | $5.80 \times 10^{-4}$ | 3611                  | 12486                 | 19.0   |
| 4 kW  | 1/5  | R88G-HPG32A054K0B□ | 600                  | 53.9         | 90         | 900 <sup>*1</sup>                | 163.4                    | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.9    |
|       | 1/11 | R88G-HPG50A115K0B□ | 273                  | 124.6        | 90         | 409 <sup>*1</sup>                | 359.0                    | $8.80 \times 10^{-4}$ | 2974                  | 10285                 | 19.1   |
| 5 kW  | 1/5  | R88G-HPG50A055K0B□ | 600                  | 69.3         | 88         | 900 <sup>*1</sup>                | 197.8                    | $1.20 \times 10^{-3}$ | 2347                  | 8118                  | 18.6   |
|       | 1/11 | R88G-HPG50A115K0B□ | 273                  | 158.4        | 91         | 409 <sup>*1</sup>                | 451.9                    | $8.80 \times 10^{-4}$ | 2974                  | 10285                 | 19.1   |

\*1. Keep the maximum rotation speed at 4,500 r/min or less.

**Note 1.** The values inside parentheses ( ) are for 100-V Servomotors.

**Note 2.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 3.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 4.** The allowable radial load is the value at the LR/2 position.

**Note 5.** The standard models have a straight shaft. Models with a key and tap are indicated with "J" at the end of the model number (the suffix in the box).

### 3-3 Decelerator Specifications

#### Decelerators for 2,000-r/min Servomotors

| Model  |      |                     | Rated rotation speed | Rated torque        | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|--------|------|---------------------|----------------------|---------------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|        |      |                     | r/min                | N·m                 | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 1 kW   | 1/5  | R88G-HPG32A053K0B□  | 400                  | 20.4                | 85         | 600                              | 57.4                     | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.3    |
|        | 1/11 | R88G-HPG32A112K0SB□ | 182                  | 47.3                | 90         | 273                              | 133.1                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.8    |
|        | 1/21 | R88G-HPG32A211K0SB□ | 95                   | 92.3                | 92         | 143                              | 259.7                    | $2.90 \times 10^{-4}$ | 1367                  | 5448                  | 7.8    |
|        | 1/33 | R88G-HPG50A332K0SB□ | 60                   | 144.9               | 92         | 91                               | 407.6                    | $4.70 \times 10^{-4}$ | 4135                  | 14300                 | 19.0   |
|        | 1/45 | R88G-HPG50A451K0SB□ | 44                   | 197.7               | 92         | 67                               | 555.9                    | $4.70 \times 10^{-4}$ | 4538                  | 15694                 | 19.0   |
| 1.5 kW | 1/5  | R88G-HPG32A053K0B□  | 400                  | 31.7                | 89         | 600                              | 86.8                     | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.3    |
|        | 1/11 | R88G-HPG32A112K0SB□ | 182                  | 72.1                | 92         | 273                              | 197.7                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.8    |
|        | 1/21 | R88G-HPG50A213K0B□  | 95                   | 137.5               | 92         | 143                              | 377.0                    | $5.80 \times 10^{-4}$ | 3611                  | 12486                 | 19.0   |
|        | 1/33 | R88G-HPG50A332K0SB□ | 60                   | 219.4               | 93         | 91                               | 601.5                    | $4.70 \times 10^{-4}$ | 4135                  | 14300                 | 19.0   |
| 2 kW   | 1/5  | R88G-HPG32A053K0B□  | 400                  | 43.2                | 91         | 600                              | 119.9                    | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.3    |
|        | 1/11 | R88G-HPG32A112K0SB□ | 182                  | 97.4                | 93         | 273                              | 270.5                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 7.8    |
|        | 1/21 | R88G-HPG50A213K0B□  | 95                   | 185.6               | 93         | 143                              | 515.9                    | $5.80 \times 10^{-4}$ | 3611                  | 12486                 | 19.0   |
|        | 1/33 | R88G-HPG50A332K0SB□ | 60                   | 270.0 <sup>*1</sup> | 93         | 91                               | 815.0                    | $4.70 \times 10^{-4}$ | 4135                  | 14300                 | 19.0   |

| Model  |      |                     | Rated rotation speed | Rated torque        | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|--------|------|---------------------|----------------------|---------------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|        |      |                     | r/min                | N·m                 | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 3 kW   | 1/5  | R88G-HPG32A054K0B□  | 400                  | 66.0                | 92         | 600                              | 190.1                    | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.9    |
|        | 1/11 | R88G-HPG50A115K0B□  | 182                  | 145.2               | 92         | 273                              | 418.3                    | $8.80 \times 10^{-4}$ | 2974                  | 10285                 | 19.1   |
|        | 1/21 | R88G-HPG50A213K0SB□ | 95                   | 260.0 <sup>*1</sup> | 93         | 143                              | 806.4                    | $6.90 \times 10^{-4}$ | 3611                  | 12486                 | 19.1   |
|        | 1/25 | R88G-HPG65A253K0SB□ | 80                   | 322.9               | 90         | 120                              | 930.1                    | $3.00 \times 10^{-3}$ | 7846                  | 28654                 | 52.0   |
| 4 kW   | 1/5  | R88G-HPG50A054K0SB□ | 400                  | 85.8                | 91         | 600                              | 250.3                    | $1.20 \times 10^{-3}$ | 2347                  | 8118                  | 18.6   |
|        | 1/11 | R88G-HPG50A114K0SB□ | 182                  | 192.7               | 93         | 273                              | 562.8                    | $8.70 \times 10^{-4}$ | 2974                  | 10285                 | 20.1   |
|        | 1/20 | R88G-HPG65A204K0SB□ | 100                  | 342.2               | 91         | 150                              | 999.2                    | $3.28 \times 10^{-3}$ | 7338                  | 26799                 | 52.0   |
|        | 1/25 | R88G-HPG65A254K0SB□ | 80                   | 430.9               | 92         | 120                              | 1258.6                   | $3.24 \times 10^{-3}$ | 7846                  | 28654                 | 52.0   |
| 5 kW   | 1/5  | R88G-HPG50A055K0SB□ | 400                  | 109.8               | 92         | 600                              | 325.5                    | $1.10 \times 10^{-3}$ | 2347                  | 8118                  | 22.0   |
|        | 1/11 | R88G-HPG50A115K0SB□ | 182                  | 200.0 <sup>*1</sup> | 93         | 273                              | 723.8                    | $8.40 \times 10^{-4}$ | 2974                  | 10285                 | 23.5   |
|        | 1/20 | R88G-HPG65A205K0SB□ | 100                  | 438.2               | 92         | 150                              | 1300.5                   | $2.85 \times 10^{-3}$ | 7338                  | 26799                 | 55.4   |
|        | 1/25 | R88G-HPG65A255K0SB□ | 80                   | 550.9               | 93         | 120                              | 1634.4                   | $2.81 \times 10^{-3}$ | 7846                  | 28654                 | 55.4   |
| 7.5 kW | 1/5  | R88G-HPG65A057K5SB□ | 300                  | 221.1               | 92         | 400                              | 511.2                    | $2.07 \times 10^{-2}$ | 4841                  | 17681                 | 48.0   |
|        | 1/12 | R88G-HPG65A127K5SB□ | 125                  | 540.8               | 94         | 166                              | 1250.7                   | $2.02 \times 10^{-2}$ | 6295                  | 22991                 | 52.0   |

\*1."Rated torque" indicates the allowable rated torque for the decelerator. Do not exceed this value.

**Note 1.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 2.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 3.** The allowable radial load is the value at the LR/2 position.

**Note 4.** The standard models have a straight shaft. Models with a key and tap are indicated with "J" at the end of the model number (the suffix in the box).

### 3-3 Decelerator Specifications

#### Decelerators for 1,000-r/min Servomotors

| Model  |      |                     | Rated rotation speed | Rated torque        | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|--------|------|---------------------|----------------------|---------------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|        |      |                     | r/min                | N·m                 | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 900 W  | 1/5  | R88G-HPG32A05900TB□ | 200                  | 39.9                | 93         | 400                              | 85.2                     | $3.80 \times 10^{-4}$ | 889                   | 3542                  | 7.9    |
|        | 1/11 | R88G-HPG32A11900TB□ | 90                   | 89.0                | 94         | 182                              | 190.1                    | $3.40 \times 10^{-4}$ | 1126                  | 4488                  | 8.4    |
|        | 1/21 | R88G-HPG50A21900TB□ | 47                   | 169.8               | 94         | 95                               | 362.4                    | $7.00 \times 10^{-4}$ | 3611                  | 12486                 | 19.1   |
|        | 1/33 | R88G-HPG50A33900TB□ | 30                   | 268.5               | 94         | 60                               | 573.2                    | $5.90 \times 10^{-4}$ | 4135                  | 14300                 | 19.1   |
| 2 kW   | 1/5  | R88G-HPG32A052K0TB□ | 200                  | 90.2                | 95         | 400                              | 196.1                    | $4.90 \times 10^{-4}$ | 889                   | 3542                  | 8.9    |
|        | 1/11 | R88G-HPG50A112K0TB□ | 90                   | 198.4               | 94         | 182                              | 430.9                    | $8.40 \times 10^{-4}$ | 2974                  | 10285                 | 20.1   |
|        | 1/21 | R88G-HPG50A212K0TB□ | 47                   | 320.0 <sup>*1</sup> | 95         | 95                               | 786.8                    | $6.50 \times 10^{-4}$ | 3611                  | 12486                 | 20.1   |
|        | 1/25 | R88G-HPG65A255K0SB□ | 40                   | 446.7               | 94         | 80                               | 971.1                    | $2.81 \times 10^{-3}$ | 7846                  | 28654                 | 55.4   |
| 3 kW   | 1/5  | R88G-HPG50A055K0SB□ | 200                  | 133.9               | 94         | 400                              | 282.9                    | $1.10 \times 10^{-3}$ | 2347                  | 8118                  | 22.0   |
|        | 1/11 | R88G-HPG50A115K0SB□ | 90                   | 246.0 <sup>*1</sup> | 95         | 182                              | 684.0                    | $8.40 \times 10^{-3}$ | 2974                  | 10285                 | 23.5   |
|        | 1/20 | R88G-HPG65A205K0SB□ | 50                   | 534.7               | 94         | 100                              | 1129.2                   | $2.85 \times 10^{-3}$ | 7338                  | 26799                 | 55.4   |
|        | 1/25 | R88G-HPG65A255K0SB□ | 40                   | 669.9               | 94         | 80                               | 1411.5                   | $2.81 \times 10^{-3}$ | 7846                  | 28654                 | 55.4   |
| 4.5 kW | 1/5  | R88G-HPG50A054K5TB□ | 200                  | 203.5               | 95         | 400                              | 479.2                    | $1.20 \times 10^{-3}$ | 2347                  | 8118                  | 22.0   |
|        | 1/12 | R88G-HPG65A127K5SB□ | 83                   | 485.6               | 94         | 166                              | 1142.9                   | $2.02 \times 10^{-2}$ | 6295                  | 22991                 | 52.0   |
|        | 1/20 | R88G-HPG65A204K5TB□ | 50                   | 813.1               | 95         | 100                              | 1915.0                   | $1.92 \times 10^{-2}$ | 7338                  | 26799                 | 52.0   |
| 6 kW   | 1/5  | R88G-HPG65A057K5SB□ | 200                  | 268.1               | 94         | 400                              | 609.7                    | $2.07 \times 10^{-2}$ | 4841                  | 17681                 | 48.0   |
|        | 1/12 | R88G-HPG65A127K5SB□ | 83                   | 650.3               | 95         | 166                              | 1477.3                   | $2.02 \times 10^{-2}$ | 6295                  | 22991                 | 52.0   |

\*1."Rated torque" indicates the allowable rated torque for the decelerator. Do not exceed this value.

**Note 1.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 2.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 3.** The allowable radial load is the value at the LR/2 position.

**Note 4.** The standard models have a straight shaft. Models with a key and tap are indicated with "J" at the end of the model number (the suffix in the box).

## Decelerators for 3,000-r/min Flat Servomotor

| Model |      |                     | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|---------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                     | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 100 W | 1/5  | R88G-HPG11A05100PB□ | 600                  | 1.37         | 85         | 1000                             | 3.67 (3.59)              | $5.00 \times 10^{-7}$ | 135                   | 538                   | 0.34   |
|       | 1/11 | R88G-HPG14A11100PB□ | 273                  | 2.63         | 75         | 454                              | 7.06 (6.89)              | $6.00 \times 10^{-6}$ | 280                   | 1119                  | 1.04   |
|       | 1/21 | R88G-HPG14A21100PB□ | 143                  | 5.40         | 80         | 238                              | 14.5 (14.2)              | $5.00 \times 10^{-6}$ | 340                   | 1358                  | 1.04   |
|       | 1/33 | R88G-HPG20A33100PB□ | 91                   | 6.91         | 65         | 151                              | 18.6 (18.1)              | $4.50 \times 10^{-5}$ | 916                   | 3226                  | 2.9    |
|       | 1/45 | R88G-HPG20A45100PB□ | 67                   | 9.42         | 65         | 111                              | 25.3 (24.7)              | $4.50 \times 10^{-5}$ | 1006                  | 3541                  | 2.9    |
| 200 W | 1/5  | R88G-HPG14A05200PB□ | 600                  | 2.49         | 78         | 1000                             | 7.01                     | $2.07 \times 10^{-5}$ | 221                   | 883                   | 0.99   |
|       | 1/11 | R88G-HPG20A11200PB□ | 273                  | 4.75         | 68         | 454                              | 13.4                     | $5.80 \times 10^{-5}$ | 659                   | 2320                  | 3.1    |
|       | 1/21 | R88G-HPG20A21200PB□ | 143                  | 10.2         | 76         | 238                              | 28.8                     | $4.90 \times 10^{-5}$ | 800                   | 2817                  | 3.1    |
|       | 1/33 | R88G-HPG20A33200PB□ | 91                   | 17.0         | 81         | 151                              | 47.9                     | $4.50 \times 10^{-5}$ | 916                   | 3226                  | 3.1    |
|       | 1/45 | R88G-HPG20A45200PB□ | 67                   | 23.2         | 81         | 111                              | 65.4                     | $4.50 \times 10^{-5}$ | 1006                  | 3541                  | 3.1    |
| 400 W | 1/5  | R88G-HPG20A05400PB□ | 600                  | 4.67         | 72         | 1000 (900)                       | 13.1 (12.9)              | $7.10 \times 10^{-5}$ | 520                   | 1832                  | 3.1    |
|       | 1/11 | R88G-HPG20A11400PB□ | 273                  | 11.7         | 82         | 454 (409)                        | 32.9 (32.4)              | $5.80 \times 10^{-5}$ | 659                   | 2320                  | 3.1    |
|       | 1/21 | R88G-HPG20A21400PB□ | 143                  | 23.5         | 86         | 238 (214)                        | 66.2 (65.2)              | $4.90 \times 10^{-5}$ | 800                   | 2817                  | 3.1    |
|       | 1/33 | R88G-HPG32A33400PB□ | 91                   | 34.7         | 81         | 151 (136)                        | 97.6 (96.2)              | $2.80 \times 10^{-4}$ | 1565                  | 6240                  | 7.8    |
|       | 1/45 | R88G-HPG32A45400PB□ | 67                   | 47.4         | 81         | 111 (100)                        | 133.0 (131.2)            | $2.80 \times 10^{-4}$ | 1718                  | 6848                  | 7.8    |

**Note 1.** The values inside parentheses ( ) are for 100-V Servomotors.

**Note 2.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 3.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 4.** The allowable radial load is the value at the LR/2 position.

**Note 5.** The standard models have a straight shaft. Models with a key and tap are indicated with "J" at the end of the model number (the suffix in the box).

### 3-3 Decelerator Specifications

■ Backlash = 15' Max.

#### Decelerators for 3,000-r/min Servomotors

| Model |      |                   | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|-------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                   | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 50 W  | 1/5  | R88G-VRSF05B100CJ | 600                  | 0.52         | 65         | 1000                             | 1.46                     | $4.00 \times 10^{-6}$ | 392                   | 196                   | 0.55   |
|       | 1/9  | R88G-VRSF09B100CJ | 333                  | 0.93         | 65         | 556                              | 2.63                     | $3.50 \times 10^{-6}$ | 441                   | 220                   | 0.55   |
|       | 1/15 | R88G-VRSF15B100CJ | 200                  | 1.67         | 70         | 333                              | 4.73                     | $3.50 \times 10^{-6}$ | 588                   | 294                   | 0.70   |
|       | 1/25 | R88G-VRSF25B100CJ | 120                  | 2.78         | 70         | 200                              | 7.88                     | $3.25 \times 10^{-6}$ | 686                   | 343                   | 0.70   |
| 100 W | 1/5  | R88G-VRSF05B100CJ | 600                  | 1.19         | 75         | 1000                             | 3.38                     | $4.00 \times 10^{-6}$ | 392                   | 196                   | 0.55   |
|       | 1/9  | R88G-VRSF09B100CJ | 333                  | 2.29         | 80         | 556                              | 6.48                     | $3.50 \times 10^{-6}$ | 441                   | 220                   | 0.55   |
|       | 1/15 | R88G-VRSF15B100CJ | 200                  | 3.81         | 80         | 333                              | 10.8                     | $3.50 \times 10^{-6}$ | 588                   | 294                   | 0.70   |
|       | 1/25 | R88G-VRSF25B100CJ | 120                  | 6.36         | 80         | 200                              | 18.0                     | $3.25 \times 10^{-6}$ | 686                   | 343                   | 0.70   |
| 200 W | 1/5  | R88G-VRSF05B200CJ | 600                  | 2.70         | 85         | 1000                             | 7.57                     | $1.18 \times 10^{-5}$ | 392                   | 196                   | 0.72   |
|       | 1/9  | R88G-VRSF09C200CJ | 333                  | 3.77         | 66         | 556                              | 10.6                     | $2.75 \times 10^{-5}$ | 931                   | 465                   | 1.70   |
|       | 1/15 | R88G-VRSF15C200CJ | 200                  | 6.29         | 66         | 333                              | 17.6                     | $3.00 \times 10^{-5}$ | 1176                  | 588                   | 2.10   |
|       | 1/25 | R88G-VRSF25C200CJ | 120                  | 11.1         | 70         | 200                              | 31.2                     | $2.88 \times 10^{-5}$ | 1323                  | 661                   | 2.10   |

| Model |      |                   | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|-------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                   | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 400 W | 1/5  | R88G-VRSF05C400CJ | 600                  | 5.40         | 85         | 1000                             | 15.6 (15.3)              | $3.63 \times 10^{-5}$ | 784                   | 392                   | 1.70   |
|       | 1/9  | R88G-VRSF09C400CJ | 333                  | 9.50         | 83         | 556                              | 27.4 (26.8)              | $2.75 \times 10^{-5}$ | 931                   | 465                   | 1.70   |
|       | 1/15 | R88G-VRSF15C400CJ | 200                  | 15.8         | 83         | 333                              | 45.7 (44.8)              | $3.00 \times 10^{-5}$ | 1176                  | 588                   | 2.10   |
|       | 1/25 | R88G-VRSF25C400CJ | 120                  | 26.4         | 83         | 200                              | 76.1 (74.7)              | $2.88 \times 10^{-5}$ | 1323                  | 661                   | 2.10   |
| 750 W | 1/5  | R88G-VRSF05C750CJ | 600                  | 10.7         | 90         | 1000                             | 31.7                     | $7.13 \times 10^{-5}$ | 784                   | 392                   | 2.10   |
|       | 1/9  | R88G-VRSF09D750CJ | 333                  | 18.2         | 85         | 556                              | 53.9                     | $6.50 \times 10^{-5}$ | 1176                  | 588                   | 3.40   |
|       | 1/15 | R88G-VRSF15D750CJ | 200                  | 30.4         | 85         | 333                              | 89.9                     | $7.00 \times 10^{-5}$ | 1372                  | 686                   | 3.80   |
|       | 1/25 | R88G-VRSF25D750CJ | 120                  | 50.7         | 85         | 200                              | 149.8                    | $6.80 \times 10^{-5}$ | 1617                  | 808                   | 3.80   |

**Note 1.** The values inside parentheses ( ) are for 100-V Servomotors.

**Note 2.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 3.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 4.** The allowable radial load is the value at the LR/2 position.

**Note 5.** The standard models have a straight shaft with a key.

### 3-3 Decelerator Specifications

#### Decelerators for 3,000-r/min Flat Servomotors

| Model |      |                    | Rated rotation speed | Rated torque | Efficiency | Maximum momentary rotation speed | Maximum momentary torque | Decelerator inertia   | Allowable radial load | Allowable thrust load | Weight |
|-------|------|--------------------|----------------------|--------------|------------|----------------------------------|--------------------------|-----------------------|-----------------------|-----------------------|--------|
|       |      |                    | r/min                | N·m          | %          | r/min                            | N·m                      | kg·m <sup>2</sup>     | N                     | N                     | kg     |
| 100 W | 1/5  | R88G-VRSF05B100PCJ | 600                  | 1.19         | 75         | 1000                             | 3.15                     | $4.00 \times 10^{-6}$ | 392                   | 196                   | 0.72   |
|       | 1/9  | R88G-VRSF09B100PCJ | 333                  | 2.29         | 80         | 556                              | 6.048                    | $3.50 \times 10^{-6}$ | 441                   | 220                   | 0.72   |
|       | 1/15 | R88G-VRSF15B100PCJ | 200                  | 3.81         | 80         | 333                              | 10.08                    | $3.50 \times 10^{-6}$ | 588                   | 294                   | 0.87   |
|       | 1/25 | R88G-VRSF25B100PCJ | 120                  | 6.36         | 80         | 200                              | 16.8                     | $3.25 \times 10^{-6}$ | 686                   | 343                   | 0.85   |
| 200 W | 1/5  | R88G-VRSF05B200PCJ | 600                  | 2.70         | 85         | 1000                             | 7.65                     | $1.18 \times 10^{-5}$ | 392                   | 196                   | 0.85   |
|       | 1/9  | R88G-VRSF09C200PCJ | 333                  | 3.77         | 66         | 556                              | 10.692                   | $2.75 \times 10^{-5}$ | 931                   | 465                   | 1.80   |
|       | 1/15 | R88G-VRSF15C200PCJ | 200                  | 6.29         | 66         | 333                              | 17.82                    | $3.00 \times 10^{-5}$ | 1176                  | 588                   | 2.20   |
|       | 1/25 | R88G-VRSF25C200PCJ | 120                  | 11.1         | 70         | 200                              | 31.5                     | $2.88 \times 10^{-5}$ | 1323                  | 661                   | 2.20   |
| 400 W | 1/5  | R88G-VRSF05C400PCJ | 600                  | 5.40         | 85         | 1000 (900)                       | 15.5 (15.3)              | $3.63 \times 10^{-5}$ | 784                   | 392                   | 1.80   |
|       | 1/9  | R88G-VRSF09C400PCJ | 333                  | 9.50         | 83         | 556 (500)                        | 27.3 (26.9)              | $2.75 \times 10^{-5}$ | 931                   | 465                   | 1.80   |
|       | 1/15 | R88G-VRSF15C400PCJ | 200                  | 15.8         | 83         | 333 (300)                        | 45.4 (44.8)              | $3.00 \times 10^{-5}$ | 1176                  | 588                   | 2.20   |
|       | 1/25 | R88G-VRSF25C400PCJ | 120                  | 26.4         | 83         | 200 (180)                        | 75.7 (74.7)              | $2.88 \times 10^{-5}$ | 1323                  | 661                   | 2.20   |

**Note 1.** The values inside parentheses ( ) are for 100-V Servomotors.

**Note 2.** The Decelerator inertia is the Servomotor shaft conversion value.

**Note 3.** The protective structure for Servomotors with Decelerators satisfies IP44.

**Note 4.** The allowable radial load is the value at the LR/2 position.

**Note 5.** The standard models have a straight shaft with a key.



# 3-4 Cable and Connector Specifications

## Encoder Cable Specifications

These cables are used to connect the encoder between a Servo Drive and Servomotor. Select the Encoder Cable matching the Servomotor.

### Encoder Cables (Standard Cables)


#### R88A-CRGA□C

##### Cable Models

For absolute encoders: 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CRGA003C | 3 m        | 6.5 dia.                 | Approx. 0.2 kg |
| R88A-CRGA005C | 5 m        |                          | Approx. 0.3 kg |
| R88A-CRGA010C | 10 m       |                          | Approx. 0.6 kg |
| R88A-CRGA015C | 15 m       |                          | Approx. 0.9 kg |
| R88A-CRGA020C | 20 m       |                          | Approx. 1.2 kg |
| R88A-CRGA030C | 30 m       | 6.8 dia.                 | Approx. 2.4 kg |
| R88A-CRGA040C | 40 m       |                          | Approx. 3.2 kg |
| R88A-CRGA050C | 50 m       |                          | Approx. 4.0 kg |

##### Connection Configuration and Dimensions

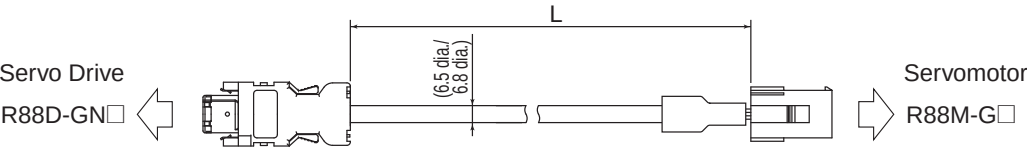

##### Wiring

| Servo Drive |       |              | Servomotor |        |
|-------------|-------|--------------|------------|--------|
| Signal      | No.   |              | No.        | Signal |
| E5V         | 1     | Red          | 7          | E5V    |
| E0V         | 2     | Black        | 8          | E0V    |
| BAT+        | 3     | Orange       | 1          | BAT+   |
| BAT-        | 4     | Orange/White | 2          | BAT-   |
| S+          | 5     | Blue         | 4          | S+     |
| S-          | 6     | Blue/White   | 5          | S-     |
| FG          | Shell |              | 3          | FG     |

Cable:  
 AWG22×2C + AWG24×2P UL20276 (3 to 20 m)  
 AWG16×2C + AWG26×2P UL20276 (30 to 50 m)

Servo Drive Connector  
 Connector:  
 3 to 20 m: Crimp-type I/O Connector (Molex Japan)  
 30 to 50 m: 55100-0670 (Molex Japan)  
 Connector pins:  
 50639-8028 (Molex Japan)

Servomotor Connector  
 Connector:  
 172161-1 (Tyco Electronics AMP KK)  
 Connector pins:  
 170365-1 (Tyco Electronics AMP KK)  
 171639-1 (Tyco Electronics AMP KK)  
 for AWG16


R88A-CRGB□C

Cable Models


For incremental encoders: 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CRGB003C | 3 m        | 6.5 dia.                 | Approx. 0.2 kg |
| R88A-CRGB005C | 5 m        |                          | Approx. 0.3 kg |
| R88A-CRGB010C | 10 m       |                          | Approx. 0.6 kg |
| R88A-CRGB015C | 15 m       |                          | Approx. 0.9 kg |
| R88A-CRGB020C | 20 m       |                          | Approx. 1.2 kg |
| R88A-CRGB030C | 30 m       | 6.8 dia.                 | Approx. 2.4 kg |
| R88A-CRGB040C | 40 m       |                          | Approx. 3.2 kg |
| R88A-CRGB050C | 50 m       |                          | Approx. 4.0 kg |

Connection Configuration and Dimensions

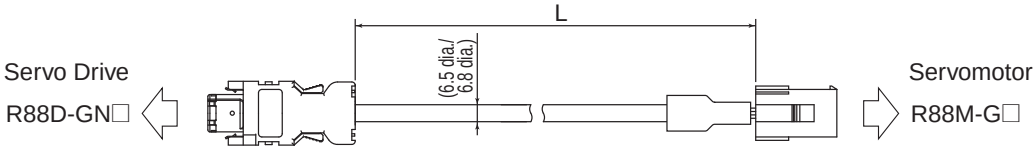

Wiring

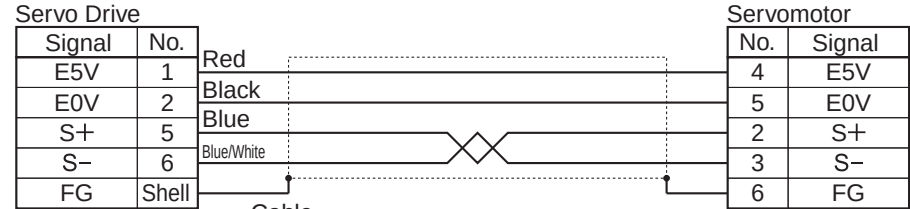

Servo Drive Connector  
Connector:  
3 to 20 m: Crimp-type I/O Connector (Molex Japan)  
30 to 50 m: 55100-0670 (Molex Japan)  
Connector pins:  
50639-8028 (Molex Japan)

Servomotor Connector  
Connector:  
172160-1 (Tyco Electronics AMP KK)  
Connector pins:  
170365-1 (Tyco Electronics AMP KK)  
171639-1 (Tyco Electronics AMP KK)  
for AWG16


R88A-CRGC□N

Cable Models

For both absolute encoders and incremental encoders: 3,000-r/min Servomotors of 1 to 5 kW, 2,000-r/min Servomotors of 1 to 5 kW, 1,500-r/min Servomotors of 7.5 kW, and 1,000-r/min Servomotors of 900 W to 6 kW

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CRGC003N | 3 m        | 6.5 dia.                 | Approx. 0.3 kg |
| R88A-CRGC005N | 5 m        |                          | Approx. 0.4 kg |
| R88A-CRGC010N | 10 m       |                          | Approx. 0.7 kg |
| R88A-CRGC015N | 15 m       |                          | Approx. 1.0 kg |
| R88A-CRGC020N | 20 m       |                          | Approx. 1.5 kg |
| R88A-CRGC030N | 30 m       | 6.8 dia.                 | Approx. 2.5 kg |
| R88A-CRGC040N | 40 m       |                          | Approx. 3.3 kg |
| R88A-CRGC050N | 50 m       |                          | Approx. 4.1 kg |

Connection Configuration and Dimensions

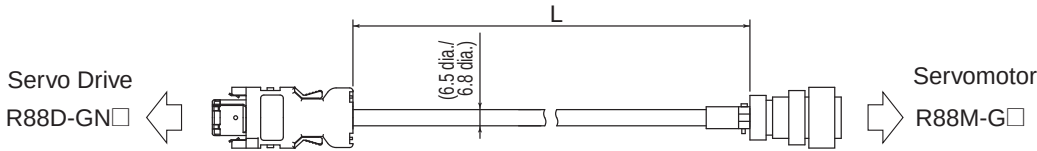

Wiring

| Signal | No.   |              | No. | Signal |
|--------|-------|--------------|-----|--------|
| E5V    | 1     | Red          | H   | E5V    |
| E0V    | 2     | Black        | G   | E0V    |
| BAT +  | 3     | Orange       | T   | BAT +  |
| BAT -  | 4     | Orange/White | S   | BAT -  |
| S+     | 5     | Blue         | K   | S+     |
| S-     | 6     | Blue/White   | L   | S-     |
| FG     | Shell |              | J   | FG     |

Cable:  
AWG22×2C + AWG24×2P UL20276 (3 to 20 m)  
AWG16×2C + AWG26×2P UL20276 (30 to 50 m)

Servo Drive Connector  
Connector:  
3 to 20 m: Crimp-type I/O Connector (Molex Japan)  
30 to 50 m: 55100-0670 (Molex Japan)  
Connector pins:  
50639-8028 (Molex Japan)

Servomotor Connector  
Straight plug:  
N/MS3106B20-29S  
(Japan Aviation Electronics)  
Cable clamp:  
N/MS3057-12A  
(Japan Aviation Electronics)

Encoder Cables (Robot Cables)


R88A-CRGA□CR

Cable Models


For absolute encoders: 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model          | Length (L) | Outer diameter of sheath | Weight         |
|----------------|------------|--------------------------|----------------|
| R88A-CRGA003CR | 3 m        | 7.5 dia.                 | Approx. 0.2 kg |
| R88A-CRGA005CR | 5 m        |                          | Approx. 0.4 kg |
| R88A-CRGA010CR | 10 m       |                          | Approx. 0.8 kg |
| R88A-CRGA015CR | 15 m       |                          | Approx. 1.1 kg |
| R88A-CRGA020CR | 20 m       |                          | Approx. 1.5 kg |
| R88A-CRGA030CR | 30 m       | 8.2 dia.                 | Approx. 2.8 kg |
| R88A-CRGA040CR | 40 m       |                          | Approx. 3.7 kg |
| R88A-CRGA050CR | 50 m       |                          | Approx. 4.6 kg |


Connection Configuration and Dimensions

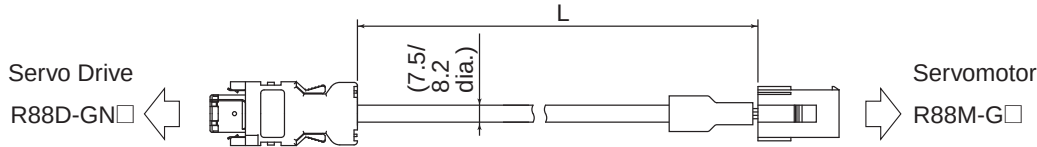

Wiring (3 to 20 m)

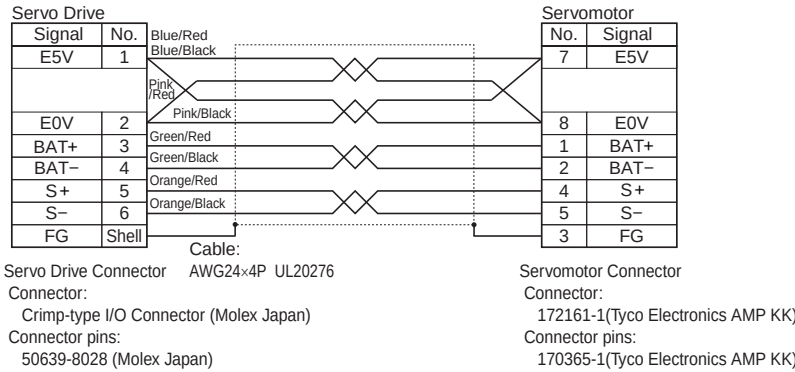

Wiring (30 to 50 m)

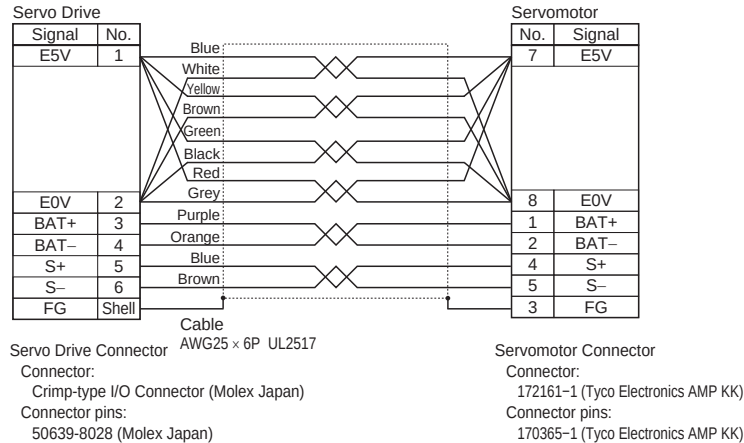


## R88A-CRGB□CR

### Cable Models


For incremental encoders: 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model          | Length (L) | Outer diameter of sheath | Weight         |
|----------------|------------|--------------------------|----------------|
| R88A-CRGB003CR | 3 m        | 7.5 dia.                 | Approx. 0.2 kg |
| R88A-CRGB005CR | 5 m        |                          | Approx. 0.4 kg |
| R88A-CRGB010CR | 10 m       |                          | Approx. 0.8 kg |
| R88A-CRGB015CR | 15 m       |                          | Approx. 1.1 kg |
| R88A-CRGB020CR | 20 m       |                          | Approx. 1.5 kg |
| R88A-CRGB030CR | 30 m       | 8.2 dia.                 | Approx. 2.8 kg |
| R88A-CRGB040CR | 40 m       |                          | Approx. 3.7 kg |
| R88A-CRGB050CR | 50 m       |                          | Approx. 4.6 kg |

### Connection Configuration and Dimensions

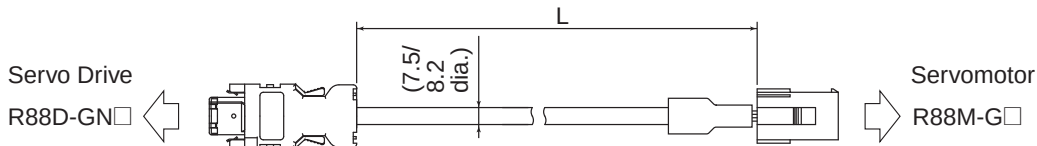


### Wiring (3 to 20 m)

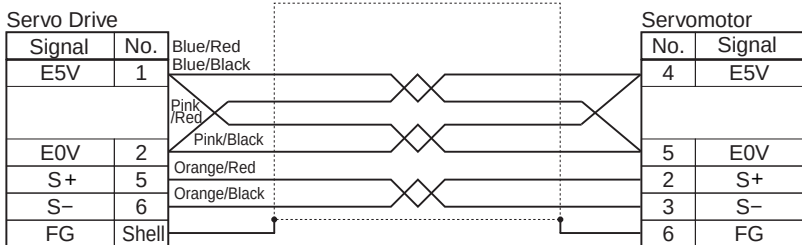

Servo Drive Connector  
Connector:  
Crimp-type I/O Connector (Molex Japan)  
Connector pins:  
50639-8028 (Molex Japan)

Servomotor Connector  
Connector:  
172160-1 (Tyco Electronics AMP KK)  
Connector pins:  
170365-1 (Tyco Electronics AMP KK)

### Wiring (30 to 50 m)

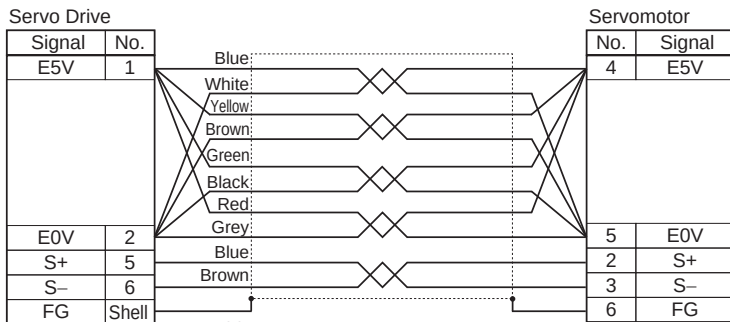

Servo Drive Connector  
Connector:  
Crimp-type I/O Connector (Molex Japan)  
Connector pins:  
50639-8028 (Molex Japan)

Servomotor Connector  
Connector:  
172160-1 (Tyco Electronics AMP KK)  
Connector pins:  
170365-1 (Tyco Electronics AMP KK)


R88A-CRGC□NR

Cable Models


For both absolute encoders and incremental encoders: 3,000-r/min Servomotors of 1 to 5 kW, 2,000-r/min Servomotors of 1 to 5 kW, 1,000-r/min Servomotors of 900 W to 4.5 kW

| Model          | Length (L) | Outer diameter of sheath | Weight         |
|----------------|------------|--------------------------|----------------|
| R88A-CRGC003NR | 3 m        | 7.5 dia.                 | Approx. 0.4 kg |
| R88A-CRGC005NR | 5 m        |                          | Approx. 0.5 kg |
| R88A-CRGC010NR | 10 m       |                          | Approx. 0.9 kg |
| R88A-CRGC015NR | 15 m       |                          | Approx. 1.3 kg |
| R88A-CRGC020NR | 20 m       |                          | Approx. 1.6 kg |
| R88A-CRGC010NR | 30 m       | 8.2 dia.                 | Approx. 2.9 kg |
| R88A-CRGC015NR | 40 m       |                          | Approx. 3.8 kg |
| R88A-CRGC020NR | 50 m       |                          | Approx. 4.7 kg |


Connection Configuration and Dimensions

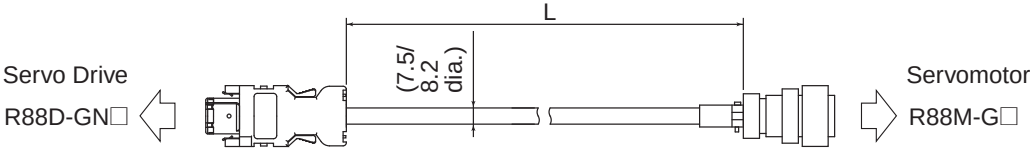

Wiring (3 to 20 m)

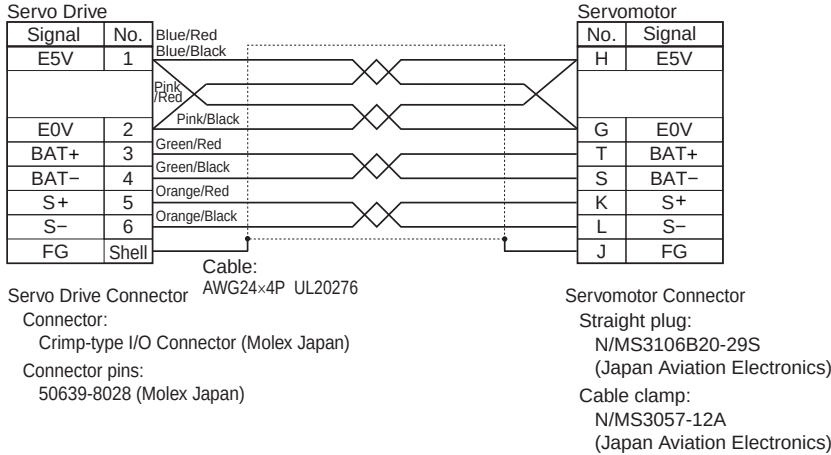

Wiring (30 to 50 m)

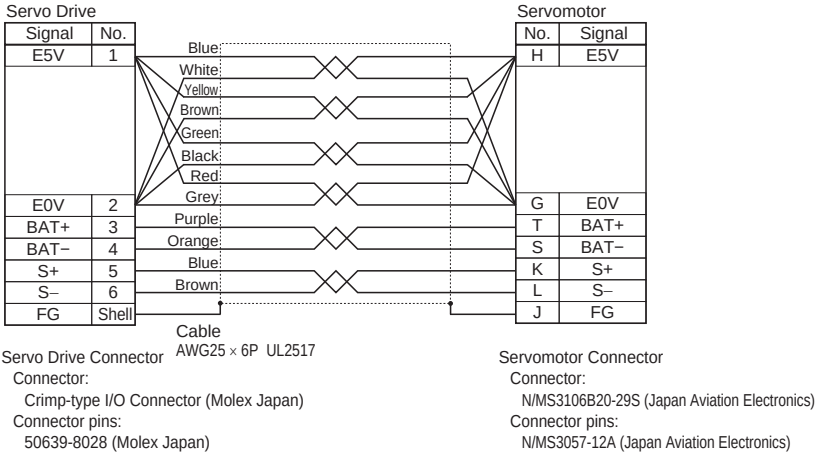


Absolute Encoder Battery Cable Specifications **ABS**


Cable Models

| Model         | Length (L) |
|---------------|------------|
| R88A-CRGD0R3C | 0.3 m      |

Connection Configuration and Dimensions

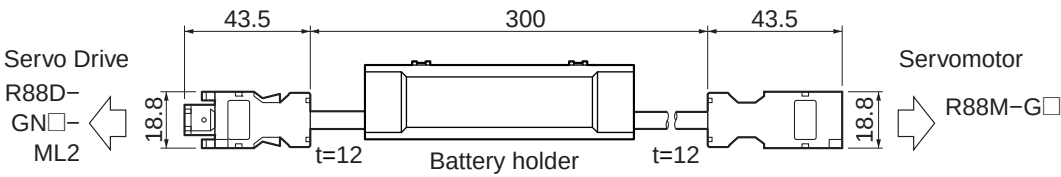

Wiring

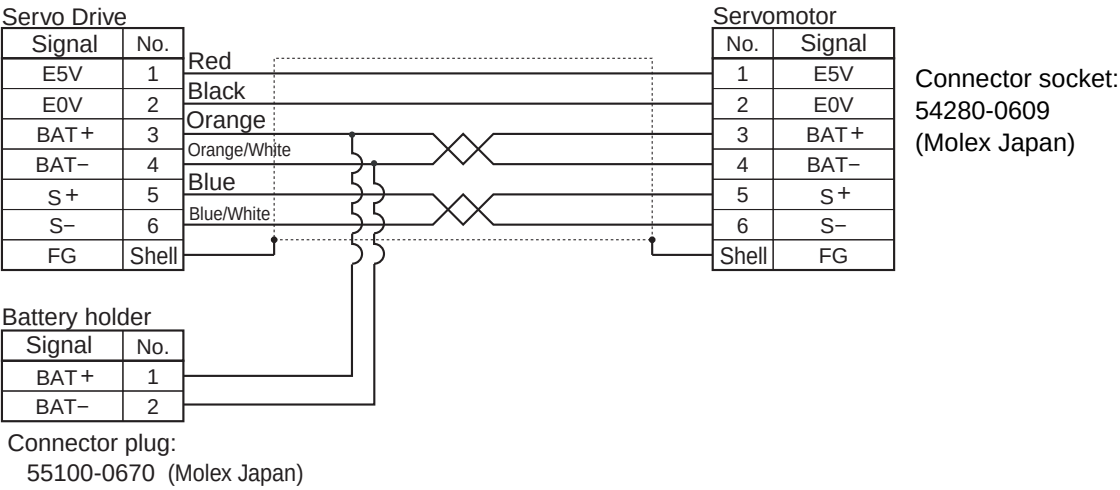

### Servomotor Power Cable Specifications

These cables connect the Servo Drive and Servomotor. Select the cable matching the Servomotor.

**Precautions  
for Correct Use**

- ◆ Use a robot cable if the Servomotor is to be used on moving parts.

#### ■ Power Cables for Servomotors without Brakes (Standard Cables)


##### R88A-CAGA□S

**Cable Models**


For 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CAGA003S | 3 m        | 6.2 dia.                 | Approx. 0.2 kg |
| R88A-CAGA005S | 5 m        |                          | Approx. 0.3 kg |
| R88A-CAGA010S | 10 m       |                          | Approx. 0.6 kg |
| R88A-CAGA015S | 15 m       |                          | Approx. 0.9 kg |
| R88A-CAGA020S | 20 m       |                          | Approx. 1.2 kg |
| R88A-CAGA030S | 30 m       |                          | Approx. 1.8 kg |
| R88A-CAGA040S | 40 m       |                          | Approx. 2.4 kg |
| R88A-CAGA050S | 50 m       |                          | Approx. 3.0 kg |

**Connection Configuration and Dimensions**

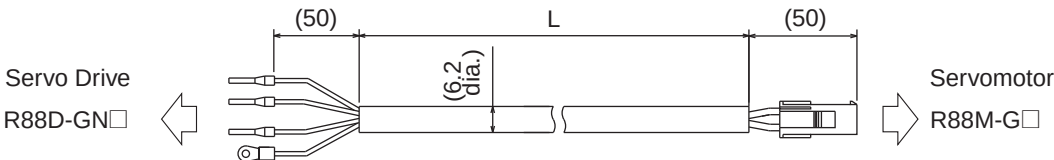

**Wiring**

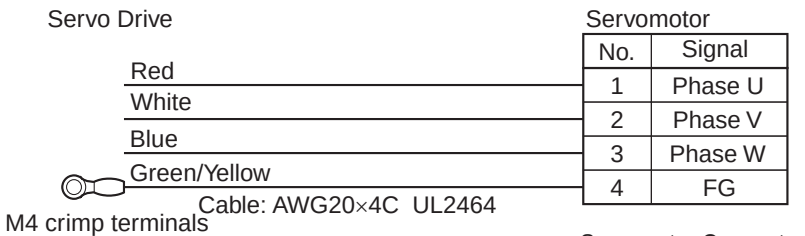

**Servomotor Connector**

Connector:

172159-1 (Tyco Electronics AMP KK)

Connector pins:

170362-1 (Tyco Electronics AMP KK)

170366-1 (Tyco Electronics AMP KK)




# R88A-CAGB□S

## Cable Models


For 3,000-r/min Servomotors of 1 to 1.5 kW, 2,000-r/min Servomotors of 1 to 1.5 kW, and 1,000-r/min Servomotors of 900 W

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CAGB003S | 3 m        | 10.4 dia.                | Approx. 0.7 kg |
| R88A-CAGB005S | 5 m        |                          | Approx. 1.0 kg |
| R88A-CAGB010S | 10 m       |                          | Approx. 2.0 kg |
| R88A-CAGB015S | 15 m       |                          | Approx. 2.9 kg |
| R88A-CAGB020S | 20 m       |                          | Approx. 3.8 kg |
| R88A-CAGB030S | 30 m       |                          | Approx. 5.6 kg |
| R88A-CAGB040S | 40 m       |                          | Approx. 7.4 kg |
| R88A-CAGB050S | 50 m       |                          | Approx. 9.2 kg |

## Connection Configuration and Dimensions

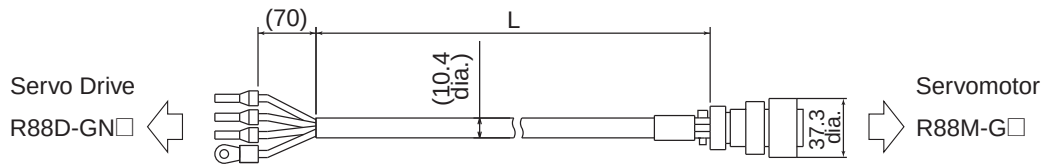

## Wiring

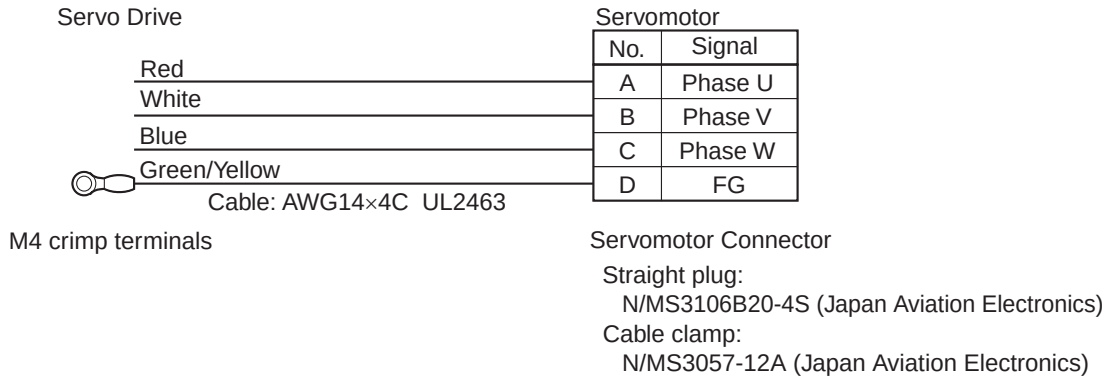


R88A-CAGC□S

Cable Models


For 3,000-r/min Servomotors of 2 kW and 2,000-r/min Servomotors of 2 kW

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CAGC003S | 3 m        | 10.4 dia.                | Approx. 0.7 kg |
| R88A-CAGC005S | 5 m        |                          | Approx. 1.0 kg |
| R88A-CAGC010S | 10 m       |                          | Approx. 2.0 kg |
| R88A-CAGC015S | 15 m       |                          | Approx. 2.9 kg |
| R88A-CAGC020S | 20 m       |                          | Approx. 3.8 kg |
| R88A-CAGC030S | 30 m       |                          | Approx. 5.6 kg |
| R88A-CAGC040S | 40 m       |                          | Approx. 7.4 kg |
| R88A-CAGC050S | 50 m       |                          | Approx. 9.2 kg |

Connection Configuration and Dimensions

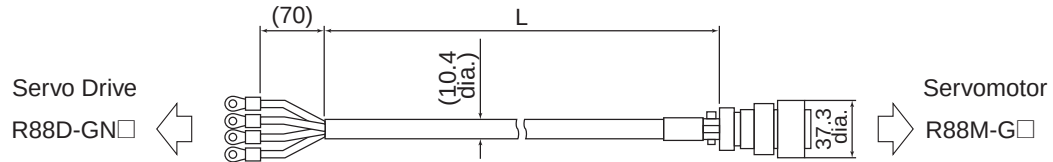

Wiring

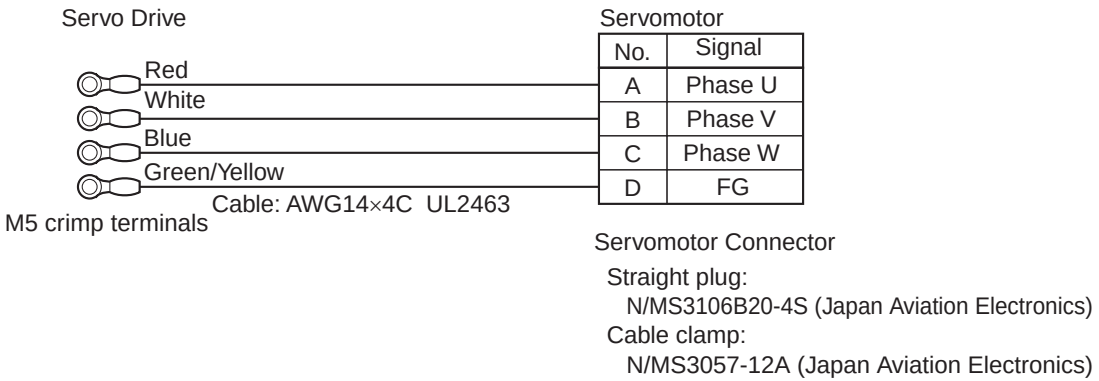


R88A-CAGD□S

Cable Models

For 3,000-r/min Servomotors of 3 to 5 kW, 2,000-r/min Servomotors of 3 to 5 kW, and 1,000-r/min Servomotors of 2 to 4.5 kW

| Model         | Length (L) | Outer diameter of sheath | Weight          |
|---------------|------------|--------------------------|-----------------|
| R88A-CAGD003S | 3 m        | 14.7 dia.                | Approx. 1.3 kg  |
| R88A-CAGD005S | 5 m        |                          | Approx. 2.1 kg  |
| R88A-CAGD010S | 10 m       |                          | Approx. 4.0 kg  |
| R88A-CAGD015S | 15 m       |                          | Approx. 6.0 kg  |
| R88A-CAGD020S | 20 m       |                          | Approx. 8.0 kg  |
| R88A-CAGD030S | 30 m       |                          | Approx. 11.9 kg |
| R88A-CAGD040S | 40 m       |                          | Approx. 15.8 kg |
| R88A-CAGD050S | 50 m       |                          | Approx. 19.7 kg |

Connection Configuration and Dimensions

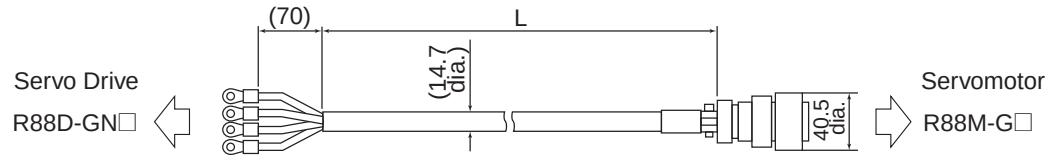

Wiring

Servo Drive

|              |   |         |
|--------------|---|---------|
| Red          | A | Phase U |
| White        | B | Phase V |
| Blue         | C | Phase W |
| Green/Yellow | D | FG      |

Cable: AWG10×4C UL2463

M5 crimp terminals

Servomotor

| No. | Signal  |
|-----|---------|
| A   | Phase U |
| B   | Phase V |
| C   | Phase W |
| D   | FG      |

Servomotor Connector

Straight plug:  
N/MS3106B22-22S (Japan Aviation Electronics)

Cable clamp:  
N/MS3057-12A (Japan Aviation Electronics)

3-4 Cable and Connector Specifications


R88A-CAGE□S

Cable Models

For 1,500-r/min Servomotors of 7.5 kW and 1,000-r/min Servomotors of 6 kW

| Model         | Length (L) | Outer diameter of sheath | Weight          |
|---------------|------------|--------------------------|-----------------|
| R88A-CAGE003S | 3 m        | 28.5 dia.                | Approx. 4.0 kg  |
| R88A-CAGE005S | 5 m        |                          | Approx. 6.5 kg  |
| R88A-CAGE010S | 10 m       |                          | Approx. 12.6 kg |
| R88A-CAGE015S | 15 m       |                          | Approx. 18.8 kg |
| R88A-CAGE020S | 20 m       |                          | Approx. 24.9 kg |
| R88A-CAGE030S | 30 m       |                          | Approx. 37.2 kg |
| R88A-CAGE040S | 40 m       |                          | Approx. 49.5 kg |
| R88A-CAGE050S | 50 m       |                          | Approx. 61.8 kg |

Connection Configuration and Dimensions

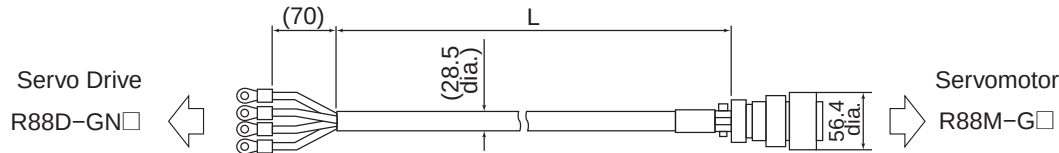

Wiring

Servo Drive

M5 crimp terminals

Cable: AWG6×4C UL62

|     |       |      |              |
|-----|-------|------|--------------|
| Red | White | Blue | Green/Yellow |
|-----|-------|------|--------------|

Servomotor

| No. | Signal  |
|-----|---------|
| A   | Phase U |
| B   | Phase V |
| C   | Phase W |
| D   | FG      |

Servomotor Connector

Straight plug:  
N/MS3106B32-17S (Japan Aviation Electronics)

Cable clamp:  
N/MS3057-20A (Japan Aviation Electronics)

■ Power Cables for Servomotors without Brakes (Robot Cables)


R88A-CAGA□□SR

Cable Models

For 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model          | Length (L) | Outer diameter of sheath | Weight         |
|----------------|------------|--------------------------|----------------|
| R88A-CAGA003SR | 3 m        | 6.9 dia.                 | Approx. 0.2 kg |
| R88A-CAGA005SR | 5 m        |                          | Approx. 0.3 kg |
| R88A-CAGA010SR | 10 m       |                          | Approx. 0.7 kg |
| R88A-CAGA015SR | 15 m       |                          | Approx. 1.0 kg |
| R88A-CAGA020SR | 20 m       |                          | Approx. 1.3 kg |
| R88A-CAGA030SR | 30 m       |                          | Approx. 1.9 kg |
| R88A-CAGA040SR | 40 m       |                          | Approx. 2.6 kg |
| R88A-CAGA050SR | 50 m       |                          | Approx. 3.2 kg |

Connection Configuration and Dimensions

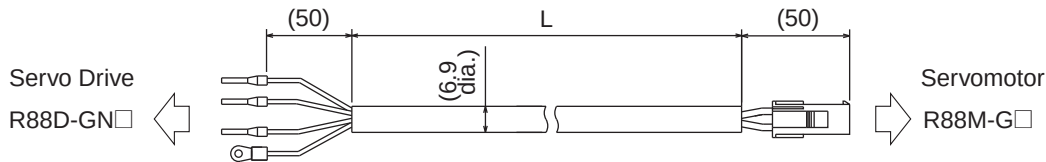

Wiring

Servo Drive

Red  
White  
Black  
Green/Yellow



Cable: AWG20×4C UL2464

M4 crimp terminals

Servomotor

| No. | Signal  |
|-----|---------|
| 1   | Phase U |
| 2   | Phase V |
| 3   | Phase W |
| 4   | FG      |

Servomotor Connector

Connector:

172159-1(Tyco Electronics AMP KK)

Connector pins:

170362-1(Tyco Electronics AMP KK)

170366-1(Tyco Electronics AMP KK)

3-4 Cable and Connector Specifications


R88A-CAGB□SR

Cable Models

For 3,000-r/min Servomotors of 1 to 1.5 kW, 2,000-r/min Servomotors of 1 to 1.5 kW, and 1,000-r/min Servomotors of 900 W

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGB003SR | 3 m        | 12.7 dia.                | Approx. 0.8 kg  |
| R88A-CAGB005SR | 5 m        |                          | Approx. 1.3 kg  |
| R88A-CAGB010SR | 10 m       |                          | Approx. 2.4 kg  |
| R88A-CAGB015SR | 15 m       |                          | Approx. 3.5 kg  |
| R88A-CAGB020SR | 20 m       |                          | Approx. 4.6 kg  |
| R88A-CAGB030SR | 30 m       |                          | Approx. 6.9 kg  |
| R88A-CAGB040SR | 40 m       |                          | Approx. 9.2 kg  |
| R88A-CAGB050SR | 50 m       |                          | Approx. 11.4 kg |

Connection Configuration and Dimensions

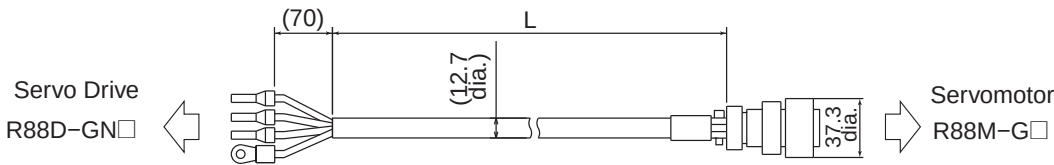

Wiring

Servo Drive

|              |   |         |
|--------------|---|---------|
| Red          | A | Phase U |
| White        | B | Phase V |
| Blue         | C | Phase W |
| Green/Yellow | D | FG      |

Cable: AWG14×4C UL2501

M4 crimp terminals

Servomotor

| No. | Signal  |
|-----|---------|
| A   | Phase U |
| B   | Phase V |
| C   | Phase W |
| D   | FG      |

Servomotor Connector

Straight plug:  
N/MS3106B20-4S  
(Japan Aviation Electronics)

Cable clamp:  
N/MS3057-12A  
(Japan Aviation Electronics)


R88A-CAGC□SR

Cable Models


For 3,000-r/min Servomotors of 2 kW and 2,000-r/min Servomotors of 2 kW

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGC003SR | 3 m        | 12.7 dia.                | Approx. 0.8 kg  |
| R88A-CAGC005SR | 5 m        |                          | Approx. 1.3 kg  |
| R88A-CAGC010SR | 10 m       |                          | Approx. 2.4 kg  |
| R88A-CAGC015SR | 15 m       |                          | Approx. 3.5 kg  |
| R88A-CAGC020SR | 20 m       |                          | Approx. 4.6 kg  |
| R88A-CAGC030SR | 30 m       |                          | Approx. 6.9 kg  |
| R88A-CAGC040SR | 40 m       |                          | Approx. 9.2 kg  |
| R88A-CAGC050SR | 50 m       |                          | Approx. 11.4 kg |

Connection Configuration and Dimensions

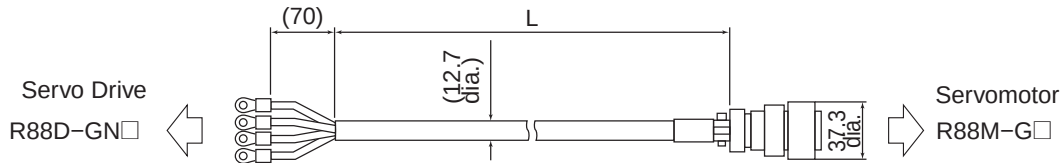

Wiring

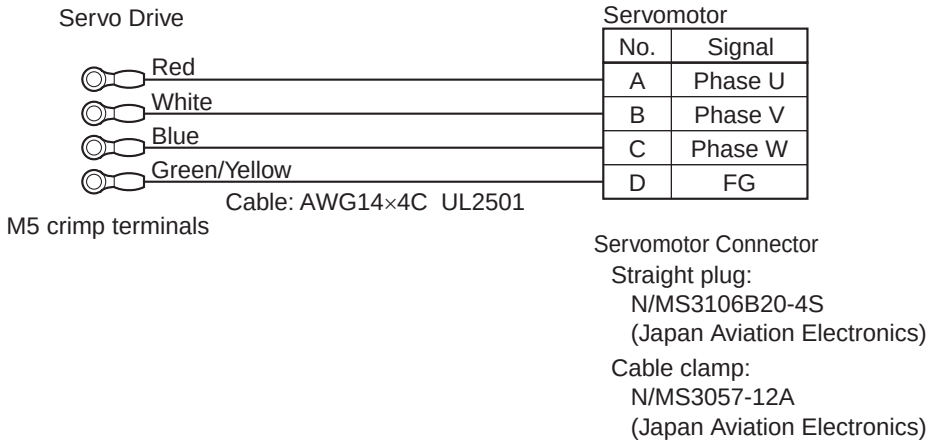

3-4 Cable and Connector Specifications


R88A-CAGD□SR

Cable Models

For 3,000-r/min Servomotors of 3 to 5 kW, 2,000-r/min Servomotors of 3 to 5 kW, and 1,000-r/min Servomotors of 2 to 4.5 kW

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGD003SR | 3 m        | 15.6 dia.                | Approx. 1.4 kg  |
| R88A-CAGD005SR | 5 m        |                          | Approx. 2.2 kg  |
| R88A-CAGD010SR | 10 m       |                          | Approx. 4.2 kg  |
| R88A-CAGD015SR | 15 m       |                          | Approx. 6.3 kg  |
| R88A-CAGD020SR | 20 m       |                          | Approx. 8.3 kg  |
| R88A-CAGD030SR | 30 m       |                          | Approx. 12.4 kg |
| R88A-CAGD040SR | 40 m       |                          | Approx. 16.5 kg |
| R88A-CAGD050SR | 50 m       |                          | Approx. 20.5 kg |

Connection Configuration and Dimensions

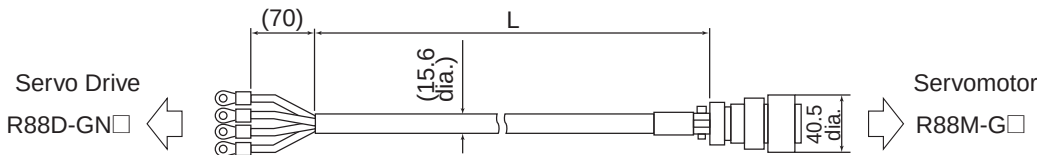

Wiring

Servo Drive

M5 crimp terminals

Red

White

Blue

Green/Yellow

Cable: AWG10×4C UL2501

Servomotor

| No. | Signal  |
|-----|---------|
| A   | Phase U |
| B   | Phase V |
| C   | Phase W |
| D   | FG      |

Servomotor Connector

Straight plug:  
N/MS3106B22-22S  
(Japan Aviation Electronics)

Cable clamp:  
N/MS3057-12A  
(Japan Aviation Electronics)



## ■ Power Cables for Servomotors with Brakes (Standard Cables)


### R88A-CAGB□B

#### Cable Models


For 3,000-r/min Servomotors of 1 to 1.5 kW, 2,000-r/min Servomotors of 1 to 1.5 kW, and 1,000-r/min Servomotors of 900 W

| Model         | Length (L) | Outer diameter of sheath | Weight          |
|---------------|------------|--------------------------|-----------------|
| R88A-CAGB003B | 3 m        | 10.4/5.4 dia.            | Approx. 0.8 kg  |
| R88A-CAGB005B | 5 m        |                          | Approx. 1.3 kg  |
| R88A-CAGB010B | 10 m       |                          | Approx. 2.4 kg  |
| R88A-CAGB015B | 15 m       |                          | Approx. 3.5 kg  |
| R88A-CAGB020B | 20 m       |                          | Approx. 4.6 kg  |
| R88A-CAGB030B | 30 m       |                          | Approx. 6.8 kg  |
| R88A-CAGB040B | 40 m       |                          | Approx. 9.1 kg  |
| R88A-CAGB050B | 50 m       |                          | Approx. 11.3 kg |

#### Connection Configuration and Dimensions

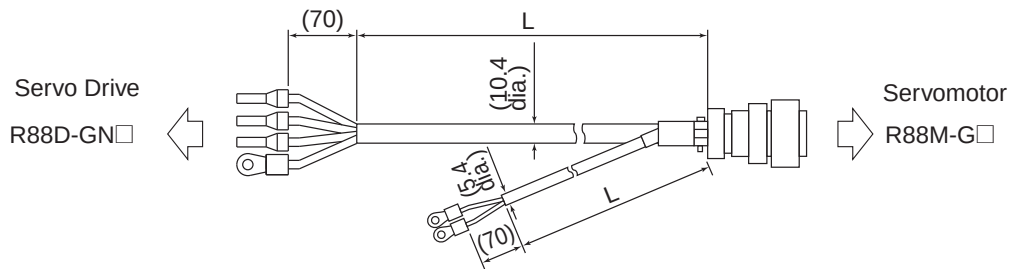

#### Wiring

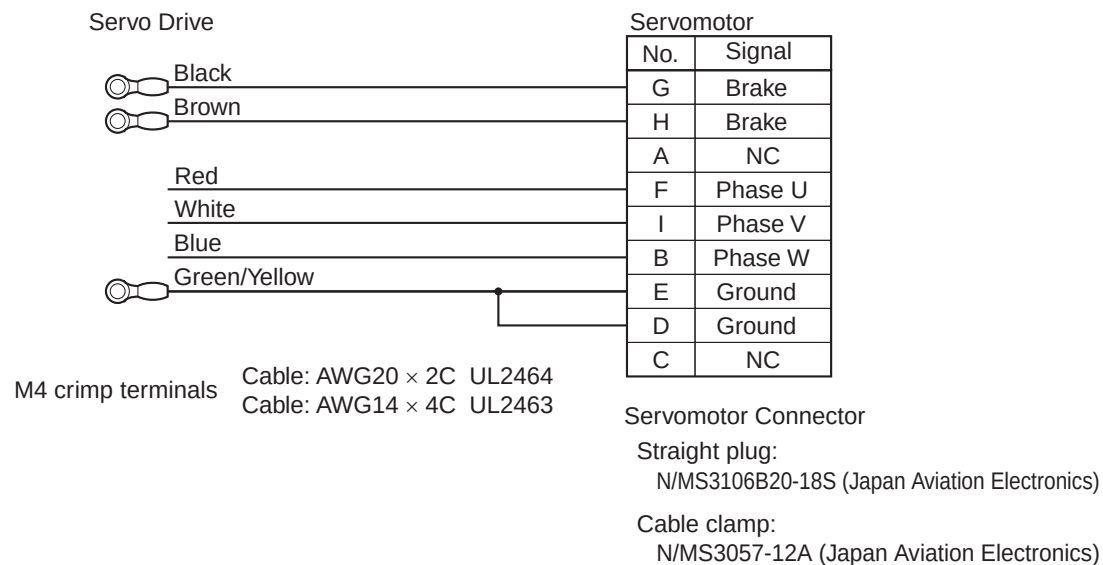


R88A-CAGC□B

Cable Models


For 3,000-r/min Servomotors of 2 kW and 2,000-r/min Servomotors of 2 kW

| Model         | Length (L) | Outer diameter of sheath | Weight          |
|---------------|------------|--------------------------|-----------------|
| R88A-CAGC003B | 3 m        | 10.4/5.4 dia.            | Approx. 0.8 kg  |
| R88A-CAGC005B | 5 m        |                          | Approx. 1.3 kg  |
| R88A-CAGC010B | 10 m       |                          | Approx. 2.4 kg  |
| R88A-CAGC015B | 15 m       |                          | Approx. 3.5 kg  |
| R88A-CAGC020B | 20 m       |                          | Approx. 4.6 kg  |
| R88A-CAGC030B | 30 m       |                          | Approx. 6.8 kg  |
| R88A-CAGC040B | 40 m       |                          | Approx. 9.1 kg  |
| R88A-CAGC050B | 50 m       |                          | Approx. 11.3 kg |

Connection Configuration and Dimensions

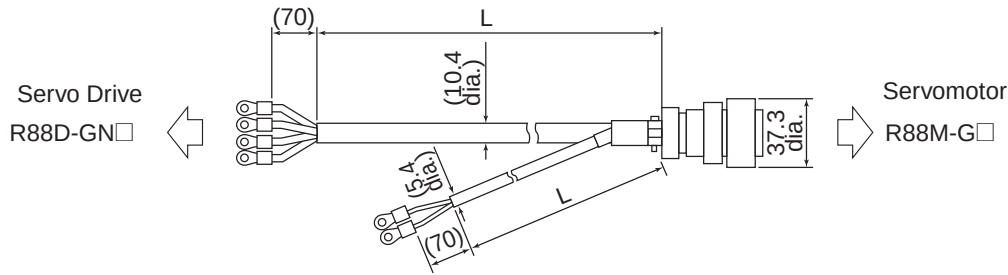

Wiring

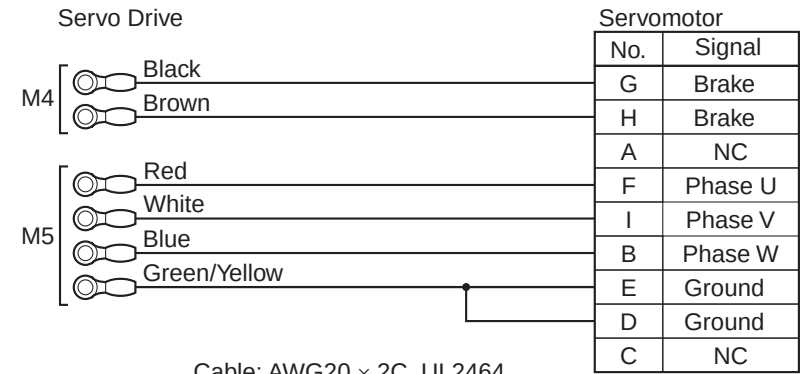

Crimp terminals Cable: AWG20 × 2C UL2464  
Cable: AWG14 × 4C UL2463

Servomotor Connector  
Straight plug:  
N/MS3106B20-18S (Japan Aviation Electronics)  
Cable clamp:  
N/MS3057-12A (Japan Aviation Electronics)


R88A-CAGD□B

**Cable Models**


For 3,000-r/min Servomotors of 3 to 5 kW, 2,000-r/min Servomotors of 3 to 5 kW, and 1,000-r/min Servomotors of 2 to 4.5 kW

| Model         | Length (L) | Outer diameter of sheath | Weight          |
|---------------|------------|--------------------------|-----------------|
| R88A-CAGD003B | 3 m        | 14.7/5.4 dia.            | Approx. 1.5 kg  |
| R88A-CAGD005B | 5 m        |                          | Approx. 2.4 kg  |
| R88A-CAGD010B | 10 m       |                          | Approx. 4.5 kg  |
| R88A-CAGD015B | 15 m       |                          | Approx. 6.7 kg  |
| R88A-CAGD020B | 20 m       |                          | Approx. 8.8 kg  |
| R88A-CAGD030B | 30 m       |                          | Approx. 13.1 kg |
| R88A-CAGD040B | 40 m       |                          | Approx. 17.4 kg |
| R88A-CAGD050B | 50 m       |                          | Approx. 21.8 kg |

**Connection Configuration and Dimensions**

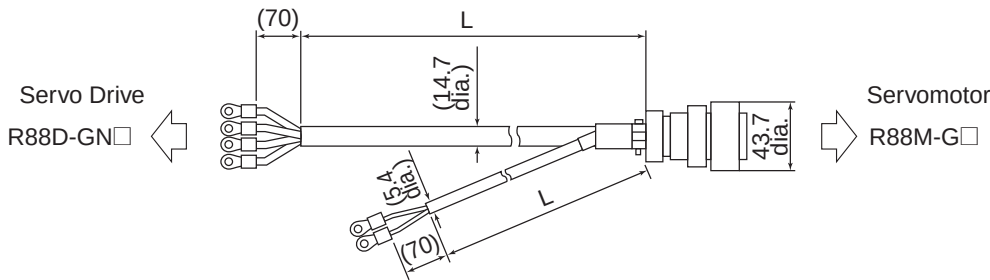

**Wiring**

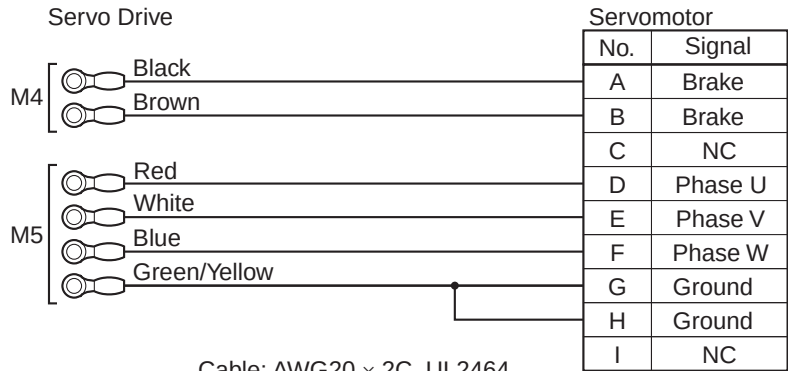

Crimp terminals Cable: AWG20 × 2C UL2464  
Cable: AWG10 × 4C UL2463

**Servomotor Connector**

Straight plug:  
N/MS3106B24-11S (Japan Aviation Electronics)  
Cable clamp:  
N/MS3057-16A (Japan Aviation Electronics)

■ Power Cables for Servomotors with Brakes (Robot Cables)


R88A-CAGB□BR

Cable Models


For 3,000-r/min Servomotors of 1 to 1.5 kW, 2,000-r/min Servomotors of 1 to 1.5 kW, and 1,000-r/min Servomotors of 900 W

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGB003BR | 3 m        | 12.7/6.1 dia.            | Approx. 0.9 kg  |
| R88A-CAGB005BR | 5 m        |                          | Approx. 1.5 kg  |
| R88A-CAGB010BR | 10 m       |                          | Approx. 2.8 kg  |
| R88A-CAGB015BR | 15 m       |                          | Approx. 4.2 kg  |
| R88A-CAGB020BR | 20 m       |                          | Approx. 5.5 kg  |
| R88A-CAGB030BR | 30 m       |                          | Approx. 8.2 kg  |
| R88A-CAGB040BR | 40 m       |                          | Approx. 10.9 kg |
| R88A-CAGB050BR | 50 m       |                          | Approx. 13.6 kg |

Connection Configuration and Dimensions

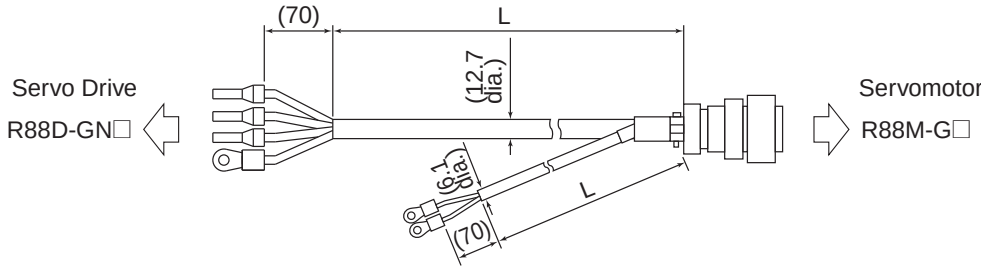

Wiring

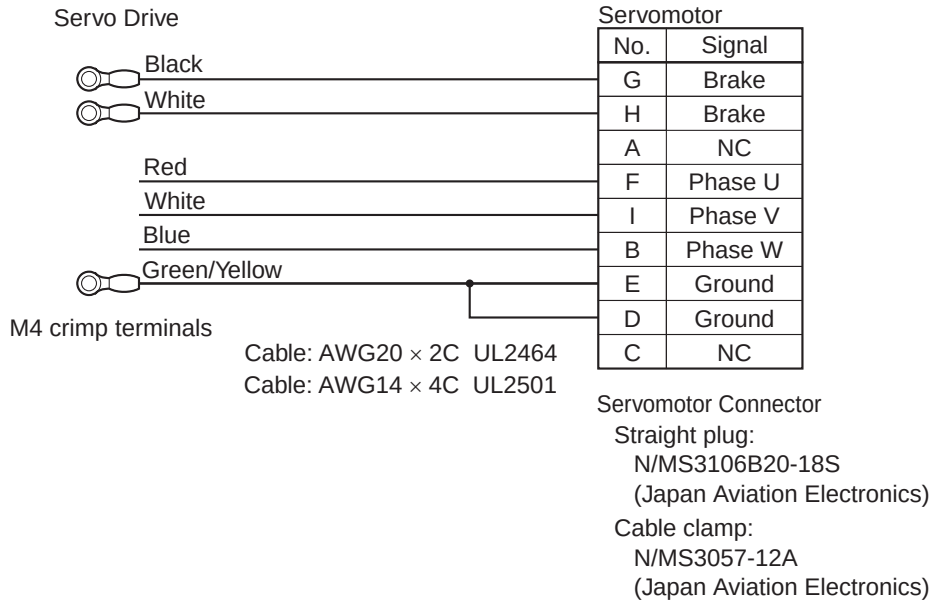


R88A-CAGC□BR

Cable Models


For 3,000-r/min Servomotors of 2 kW and 2,000-r/min Servomotors of 2 kW

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGC003BR | 3 m        | 12.7/6.1 dia.            | Approx. 0.9 kg  |
| R88A-CAGC005BR | 5 m        |                          | Approx. 1.5 kg  |
| R88A-CAGC010BR | 10 m       |                          | Approx. 2.8 kg  |
| R88A-CAGC015BR | 15 m       |                          | Approx. 4.2 kg  |
| R88A-CAGC020BR | 20 m       |                          | Approx. 5.5 kg  |
| R88A-CAGC030BR | 30 m       |                          | Approx. 8.2 kg  |
| R88A-CAGC040BR | 40 m       |                          | Approx. 10.9 kg |
| R88A-CAGC050BR | 50 m       |                          | Approx. 13.6 kg |

Connection Configuration and Dimensions

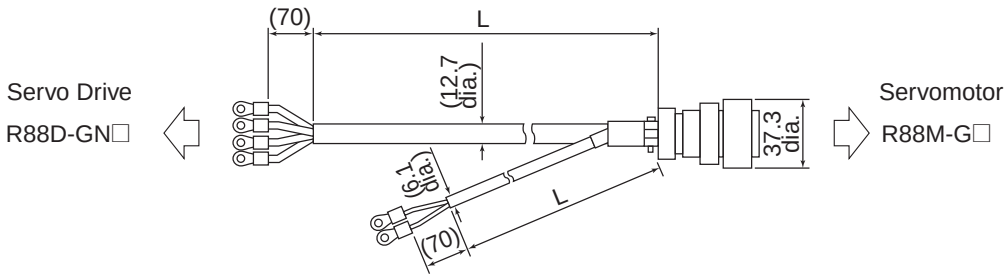

Wiring

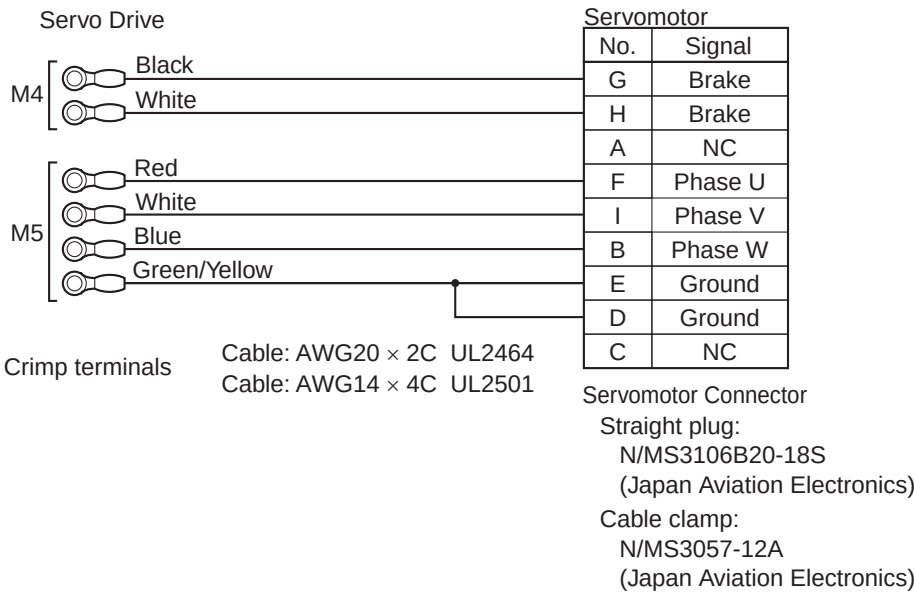


R88A-CAGD□BR

Cable Models


For 3,000-r/min Servomotors of 3 to 5 kW, 2,000-r/min Servomotors of 3 to 5 kW, and 1,000-r/min Servomotors of 2 to 4.5 kW

| Model          | Length (L) | Outer diameter of sheath | Weight          |
|----------------|------------|--------------------------|-----------------|
| R88A-CAGD003BR | 3 m        | 15.6/6.1 dia.            | Approx. 1.6 kg  |
| R88A-CAGD005BR | 5 m        |                          | Approx. 2.5 kg  |
| R88A-CAGD010BR | 10 m       |                          | Approx. 4.7 kg  |
| R88A-CAGD015BR | 15 m       |                          | Approx. 7.0 kg  |
| R88A-CAGD020BR | 20 m       |                          | Approx. 9.2 kg  |
| R88A-CAGD030BR | 30 m       |                          | Approx. 13.7 kg |
| R88A-CAGD040BR | 40 m       |                          | Approx. 18.2 kg |
| R88A-CAGD050BR | 50 m       |                          | Approx. 22.7 kg |

Connection Configuration and Dimensions

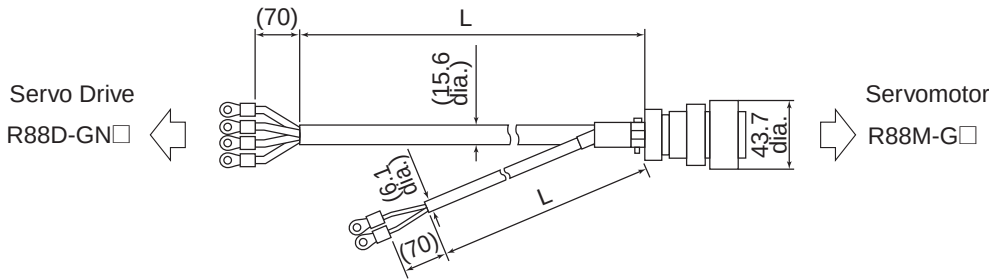

Wiring

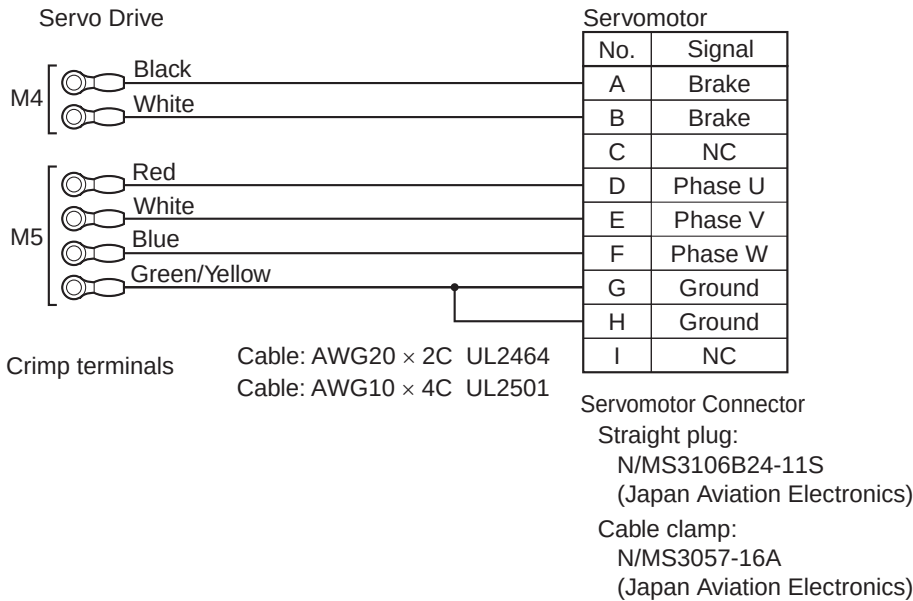

■ Brake Cables (Standard Cables)


R88A-CAGA□B

Cable Models


For 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CAGA003B | 3 m        | 5.4 dia.                 | Approx. 0.1 kg |
| R88A-CAGA005B | 5 m        |                          | Approx. 0.2 kg |
| R88A-CAGA010B | 10 m       |                          | Approx. 0.4 kg |
| R88A-CAGA015B | 15 m       |                          | Approx. 0.6 kg |
| R88A-CAGA020B | 20 m       |                          | Approx. 0.8 kg |
| R88A-CAGA030B | 30 m       |                          | Approx. 1.2 kg |
| R88A-CAGA040B | 40 m       |                          | Approx. 1.6 kg |
| R88A-CAGA050B | 50 m       |                          | Approx. 2.1 kg |

Connection Configuration and Dimensions

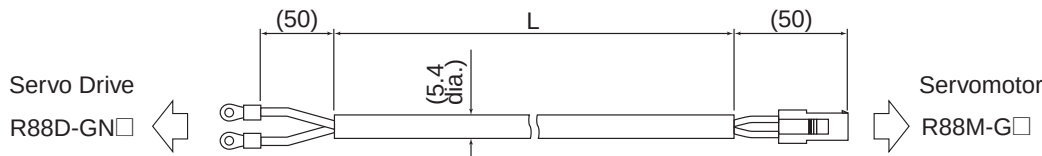

Wiring

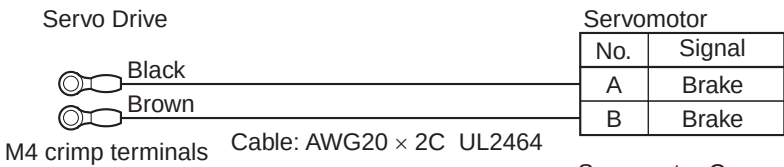

Servomotor Connector  
 Connector:  
 172157-1 (Tyco Electronics AMP KK)  
 Connector pins:  
 170362-1 (Tyco Electronics AMP KK)  
 170366-1 (Tyco Electronics AMP KK)

3-4 Cable and Connector Specifications


R88A-CAGE□B

Cable Models


For 1,500-r/min Servomotors of 7.5 kW and 1,000-r/min Servomotors of 6 kW

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CAGE003B | 3 m        | 5.4 dia.                 | Approx. 0.2 kg |
| R88A-CAGE005B | 5 m        |                          | Approx. 0.3 kg |
| R88A-CAGE010B | 10 m       |                          | Approx. 0.5 kg |
| R88A-CAGE015B | 15 m       |                          | Approx. 0.7 kg |
| R88A-CAGE020B | 20 m       |                          | Approx. 0.9 kg |
| R88A-CAGE030B | 30 m       |                          | Approx. 1.3 kg |
| R88A-CAGE040B | 40 m       |                          | Approx. 1.7 kg |
| R88A-CAGE050B | 50 m       |                          | Approx. 2.1 kg |

Connection Configuration and Dimensions

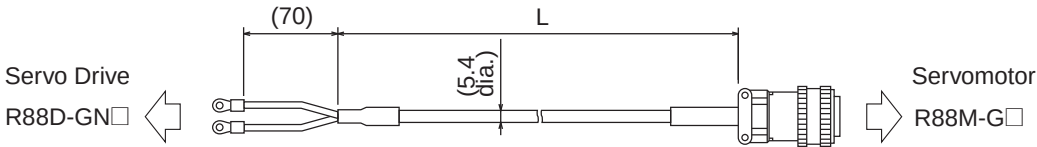

Wiring

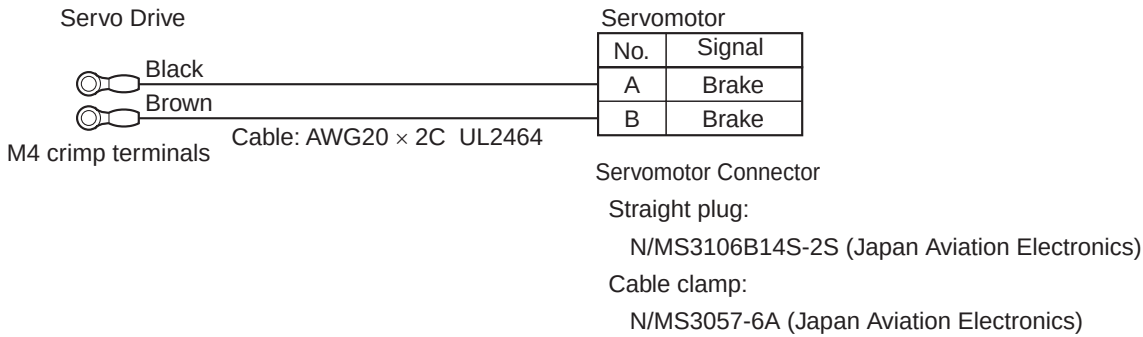



■ Brake Cables (Robot Cables)


R88A-CAGA□BR

Cable Models


For 3,000-r/min Servomotors of 50 to 750 W and 3,000-r/min Flat Servomotors of 100 to 400 W

| Model          | Length (L) | Outer diameter of sheath | Weight         |
|----------------|------------|--------------------------|----------------|
| R88A-CAGA003BR | 3 m        | 6.1 dia.                 | Approx. 0.1 kg |
| R88A-CAGA005BR | 5 m        |                          | Approx. 0.2 kg |
| R88A-CAGA010BR | 10 m       |                          | Approx. 0.4 kg |
| R88A-CAGA015BR | 15 m       |                          | Approx. 0.7 kg |
| R88A-CAGA020BR | 20 m       |                          | Approx. 0.9 kg |
| R88A-CAGA030BR | 30 m       |                          | Approx. 1.3 kg |
| R88A-CAGA040BR | 40 m       |                          | Approx. 1.8 kg |
| R88A-CAGA050BR | 50 m       |                          | Approx. 2.2 kg |

Connection Configuration and Dimensions

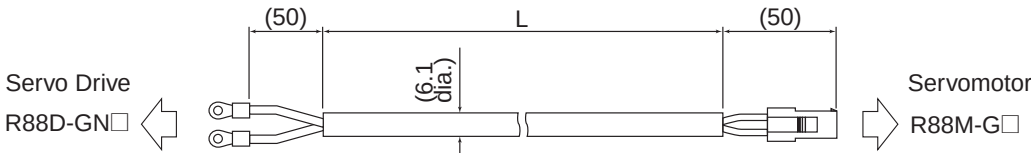

Wiring

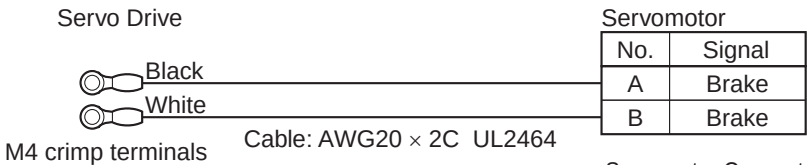

Servomotor Connector  
Connector:  
172157-1 (Tyco Electronics AMP KK)  
Connector pins:  
170362-1 (Tyco Electronics AMP KK)  
170366-1 (Tyco Electronics AMP KK)

Communications Cable Specifications


■ Computer Monitor Cable

Cable Models


Cables for RS-232 Communications

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| R88A-CCG002P2 | 2 m        | 4.2 dia.                 | Approx. 0.1 kg |

Connection Configuration and Dimensions

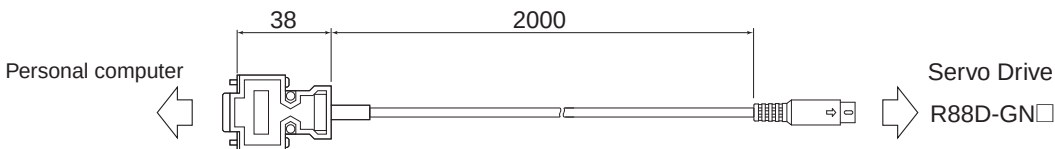

Wiring

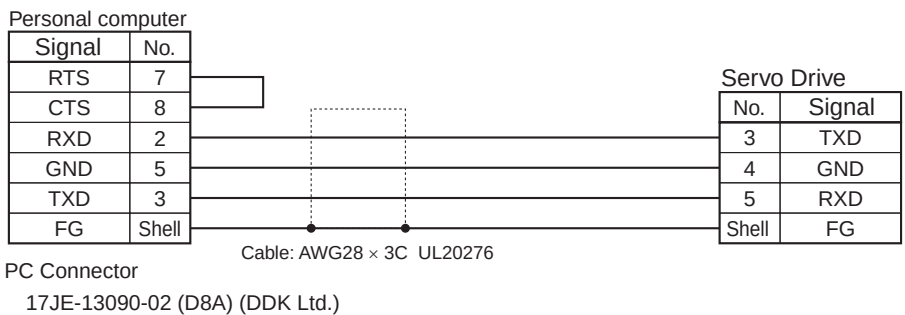

Precautions  
for Correct Use


- ◆ Communications with the Host Device  
After confirming the startup of the Servo Drive, initiate communications with the host device.  
Note that irregular signals may be received from the host interface during startup. For this reason, take appropriate initialization measures such as clearing the receive buffer.

## Connector Specifications

### ■ Control I/O Connector (R88A-CNU01C)

This connector connects to the control I/O connector (CN1) on the Servo Drive.  
Use this connector when preparing a control cable yourself.

#### Dimensions

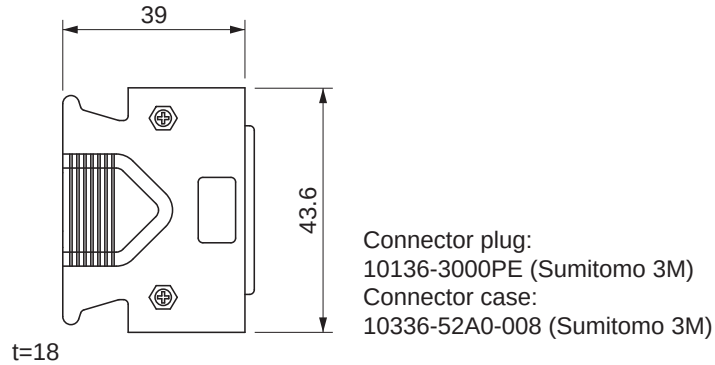

### ■ Encoder Connectors


These connectors are used for encoder cables.  
Use them when preparing an encoder cable yourself.

#### Dimensions

R88A-CNW01R (for Servo Drive's CN2 Connector)

This connector is a soldering type.  
Use the following cable.

- ◆ Applicable wire: AWG16 max.
- ◆ Insulating cover outer diameter: 2.1 mm dia. max.
- ◆ Outer diameter of sheath: 6.7 dia.  $\pm 0.5$  mm

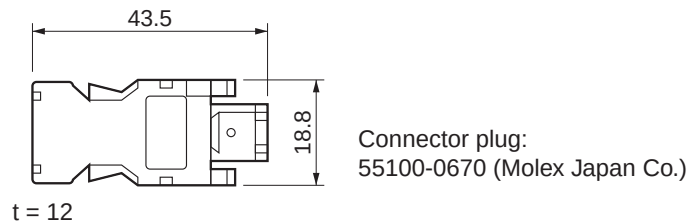



### 3-4 Cable and Connector Specifications

#### R88A-CNG01R (for Servomotor Connector)


**ABS**

Use the following cable.

- ♦ Applicable wire: AWG22 max.
- ♦ Outer diameter of sheath: 1.75 mm dia. max.

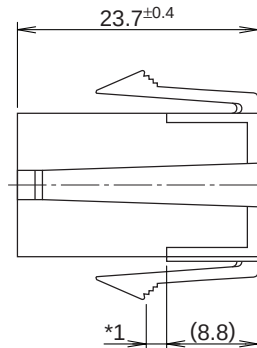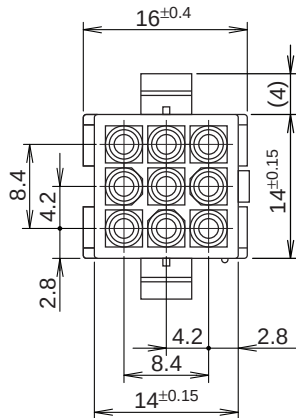

#### Panel Mounting Hole

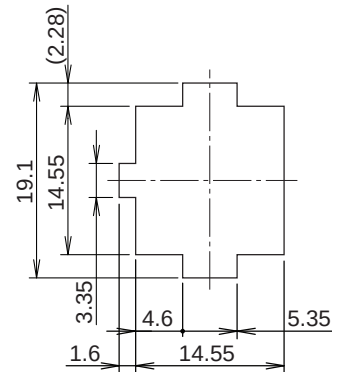

Connector housing:

172161-1 (Tyco Electronics AMP KK)

Contact socket:

170365-1 (Tyco Electronics AMP KK)



\*1. Applicable panel thickness:  
0.8 to 2.0 mm

#### R88A-CNG02R (for Servomotor Connector)


**INC**

Use the following cable.

- ♦ Applicable wire: AWG22 max.
- ♦ Outer diameter of sheath: 1.75 mm dia. max.

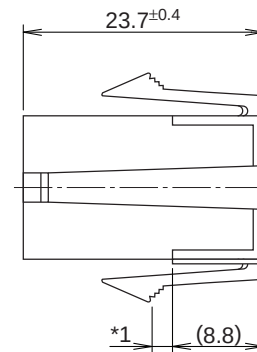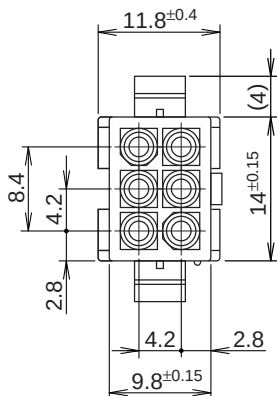

#### Panel Mounting Hole

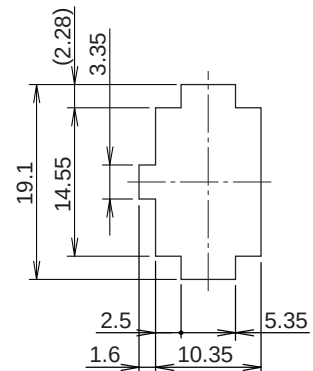

Connector housing:

172160-1 (Tyco Electronics AMP KK)



Contact socket:

170365-1 (Tyco Electronics AMP KK)


\*1. Applicable panel thickness:  
0.8 to 2.0 mm

## ■ Power Cable Connector (R88A-CNG01A)

This connector is used for power cables.  
Use it when preparing a power cable yourself.

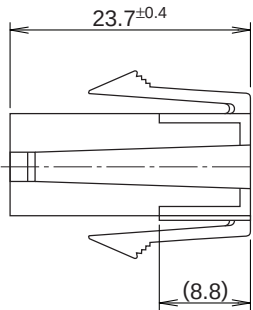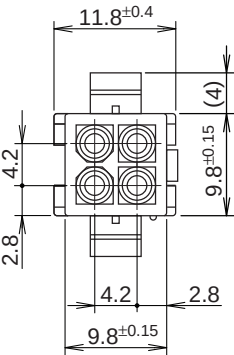

Panel Mounting Hole


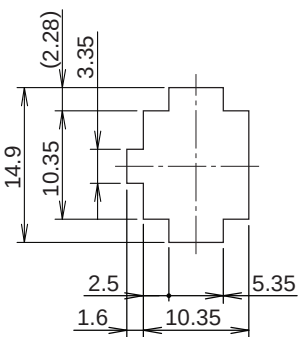


Connector housing:  
172159-1 (Tyco Electronics AMP KK)  
Contact socket:  
170366-1 (Tyco Electronics AMP KK)


Applicable panel thickness:  
0.8 to 2.0 mm

## ■ Brake Cable Connector (R88A-CNG01B)

This connector is used for brake cables.  
Use it when preparing a brake cable yourself.

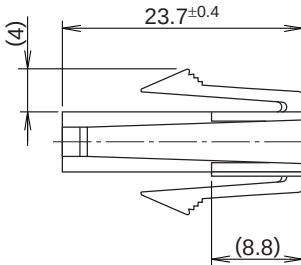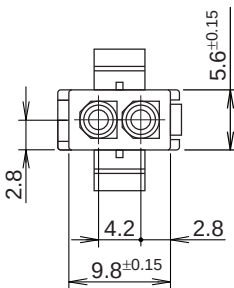

Panel Mounting Hole

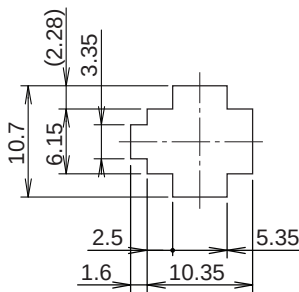

Connector housing:  
172157-1 (Tyco Electronics AMP KK)  
Contact socket:  
170366-1 (Tyco Electronics AMP KK)

Applicable panel thickness:  
0.8 to 2.0 mm

MECHATROLINK-II Communications Cable Specifications

- MECHATROLINK Communications Cable (With Connectors and ferrite cores on both ends) (FNY-W6003-□□)

Cable Models


| Model                                | Model        | Length (L) |
|--------------------------------------|--------------|------------|
| MECHATROLINK-II cable                | FNY-W6003-A5 | 0.5 m      |
|                                      | FNY-W6003-01 | 1 m        |
|                                      | FNY-W6003-03 | 3 m        |
|                                      | FNY-W6003-05 | 5 m        |
|                                      | FNY-W6003-10 | 10 m       |
|                                      | FNY-W6003-20 | 20 m       |
|                                      | FNY-W6003-30 | 30 m       |
| MECHATROLINK-II termination resistor | FNY-W6022    | ---        |

Connection Configuration and Dimensions

MECHATROLINK-II Communications Cable



MECHATROLINK-II termination resistor

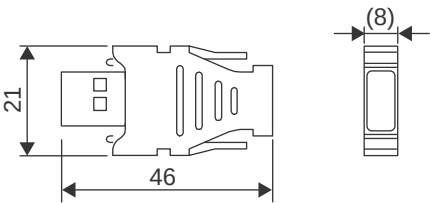



Control Cable Specifications


■ Connector Terminal Block Cables (XW2Z-□J-B33)

This is the connector terminal block cable for the G-Series Servo Drive (with built-in MECHATROLINK-II).

Cable Models

| Model         | Length (L) | Outer diameter of sheath | Weight         |
|---------------|------------|--------------------------|----------------|
| XW2Z-100J-B33 | 1 m        | 8.0 dia.                 | Approx. 0.1 kg |
| XW2Z-200J-B33 | 2 m        |                          | Approx. 0.2 kg |

Connection Configuration and Dimensions

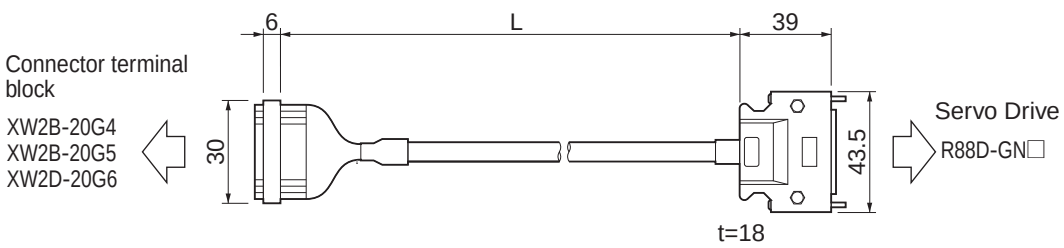

Wiring

| Terminal block |     | Connector |  | Servo Drive |          |
|----------------|-----|-----------|--|-------------|----------|
| Signal         | No. | No.       |  | No.         | Signal   |
| +24VIN         | 1   | 1         |  | 1           | +24VIN   |
| 0V             | 2   | 2         |  |             |          |
| +24VIN         | 3   | 3         |  |             |          |
| 0V             | 4   | 4         |  |             |          |
| +24VIN         | 5   | 5         |  |             |          |
| 0V             | 6   | 6         |  |             |          |
| STOP           | 7   | 7         |  | 2           | STOP     |
| DEC            | 8   | 8         |  | 21          | DEC      |
| POT            | 9   | 9         |  | 19          | POT      |
| NOT            | 10  | 10        |  | 20          | NOT      |
| EXT1           | 11  | 11        |  | 5           | EXT1     |
| EXT2           | 12  | 12        |  | 4           | EXT2     |
| EXT3           | 13  | 13        |  | 3           | EXT3     |
| BATCOM         | 14  | 14        |  | 33          | BATCOM   |
| BAT            | 15  | 15        |  | 34          | BAT      |
| OUTM1COM       | 16  | 16        |  | 35          | OUTM1COM |
| OUTM1          | 17  | 17        |  | 36          | OUTM1    |
| ALMCOM         | 18  | 18        |  | 16          | ALMCOM   |
| /ALM           | 19  | 19        |  | 15          | /ALM     |
| FG             | 20  | 20        |  | Shell       | FG       |

Wires with the same wire color and the same number of marks form a twisted pair.

Example:  
A yellow/black (1) wire and pink/black (1) wire form a twisted pair.

Servo Drive Connector  
Connector plug:  
10136-3000PE (Sumitomo 3M)  
Connector case:  
10336-52A0-008 (Sumitomo 3M)

Terminal Block Connector  
Connector socket: XG4M-2030 (OMRON)  
Strain relief: XG4T-2004 (OMRON)


Cable  
AWG28×10P UL2464




## ■ Connector-Terminal Block Conversion Unit

The Connector-Terminal Block Conversion Unit can be used along with a Connector Terminal Block Cable (XW2Z-□J-B33) to convert the Servo Drive's control I/O connector (CN1) to a terminal block.

### XW2B-20G4 (M3 screw terminal block)

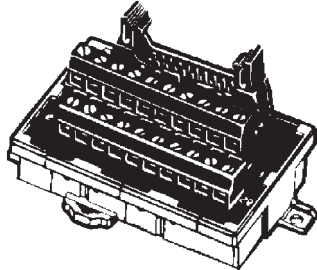


## ◆ Dimensions

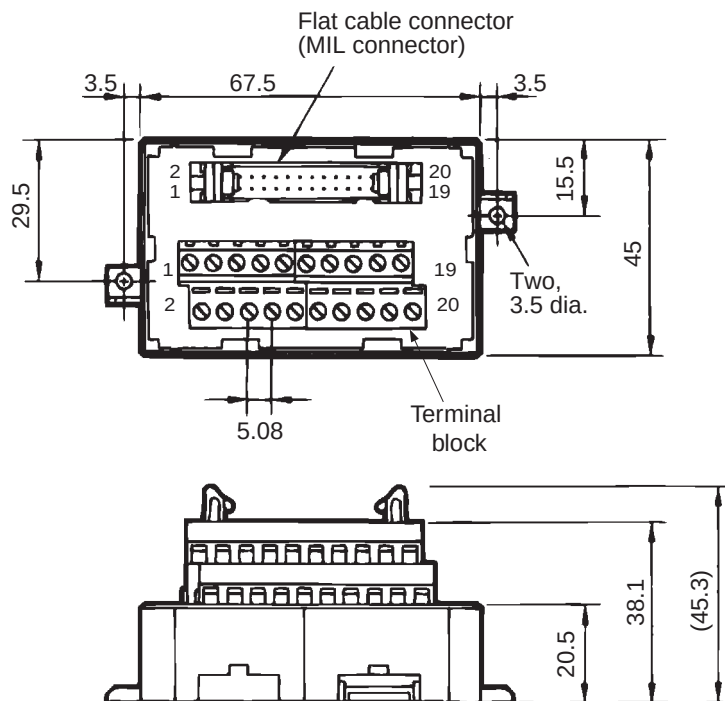


## Precautions for Correct Use

- Use 0.30 to 1.25 mm<sup>2</sup> wire (AWG22 to AWG16).
- The wire inlet is 1.8 mm (height) × 2.5 mm (width).
- Strip the insulation from the end of the wire for 6 mm as shown below.

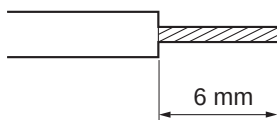


### ◆ Dimensions

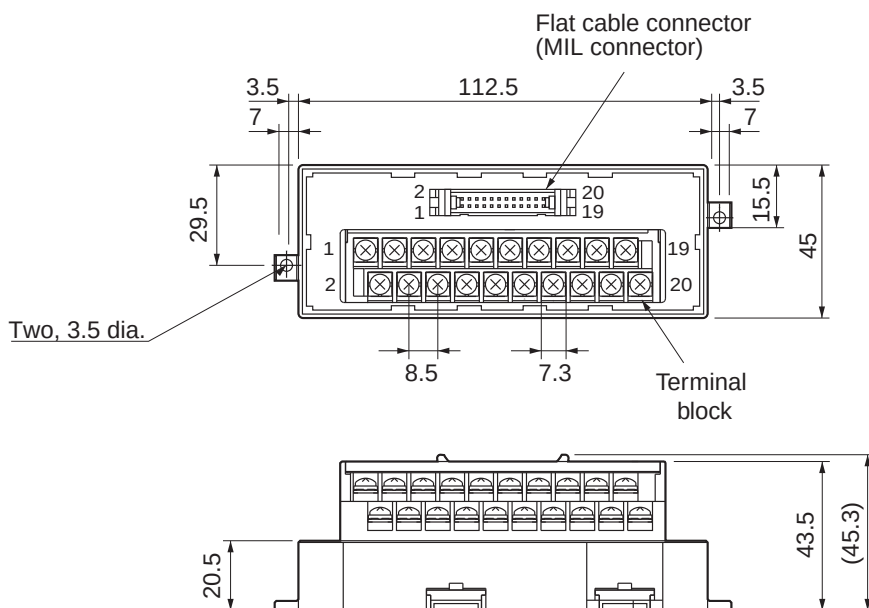

- ♦ Terminal block pitch: 8.5 mm


- ◆ When using crimp terminals, use crimp terminals with the following dimensions.
- ◆ When connecting wires and crimp terminals to a terminal block, tighten them with a tightening torque of 0.59 N·m.

## Fork Terminals

 


| Applicable Crimp Terminals |         | Applicable Wires                           |
|----------------------------|---------|--------------------------------------------|
| Round Crimp Terminals      | 1.25-3  | AWG22-16<br>(0.3 to 1.25 mm <sup>2</sup> ) |
|                            | 2-3.5   | AWG16-14<br>(1.25 to 2.0 mm <sup>2</sup> ) |
| Fork Terminals             | 1.25Y-3 | AWG22-16<br>(0.3 to 1.25 mm <sup>2</sup> ) |
|                            | 2-3.5   | AWG16-14<br>(1.25 to 2.0 mm <sup>2</sup> ) |

**XW2D-20G6 (M3 screw terminal block)**

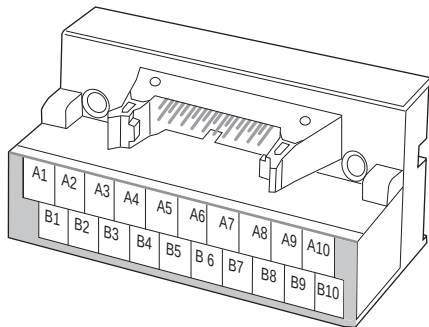

◆ Dimensions

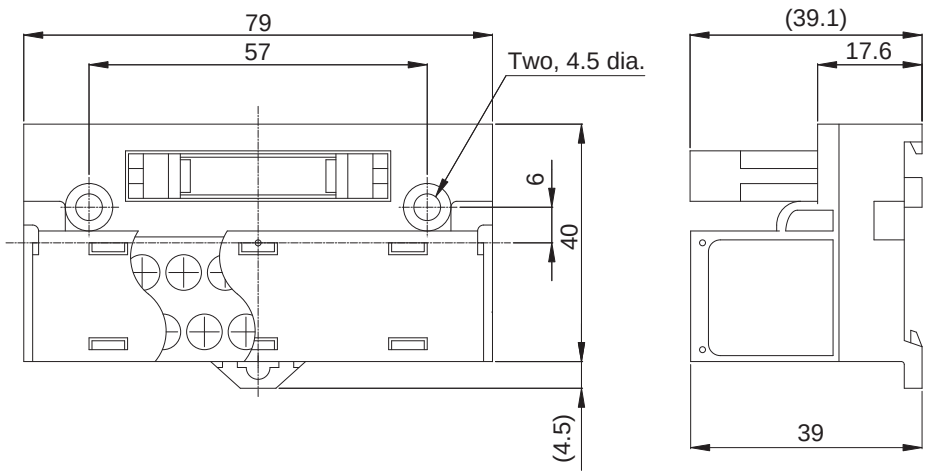


**Precautions  
for Correct Use**

- ◆ When using crimp terminals, use crimp terminals with the following dimensions.
- ◆ When connecting wires and crimp terminals to a terminal block, tighten them with a tightening torque of 0.7 N·m.

Round Crimp Terminals

Fork Terminals

 3.2-mm dia.




| Applicable Crimp Terminals |         | Applicable Wires                           |
|----------------------------|---------|--------------------------------------------|
| Round Crimp Terminals      | 1.25-3  | AWG22-16<br>(0.3 to 1.25 mm <sup>2</sup> ) |
| Fork Terminals             | 1.25Y-3 | AWG22-16<br>(0.3 to 1.25 mm <sup>2</sup> ) |

The diagram on the next page shows a typical connection between a host device and the Servo Drive using a MECHATROLINK-II communications cable.

3-4 Cable and Connector Specifications

♦ Terminal Block Wiring Example (common for XW2B-20G4/-20G5, XW2D-20G6)

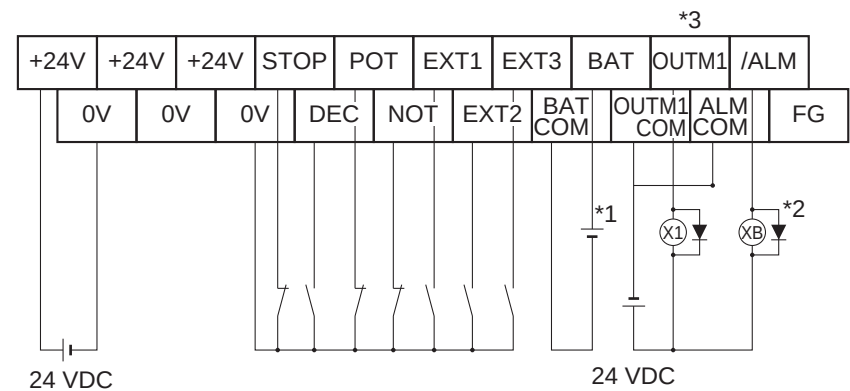

\*1. Absolute encoder backup battery 3.6 to 4.5 V

\*2. The XB contacts are used to turn ON/OFF the electromagnetic brake.

\*3. Assign BKIR (brake interlock) to CN1-36 pin to use.

**Note 1.** The absolute encoder backup battery is not required when using a Servomotor with an incremental encoder.

**Note 2.** Connect the absolute encoder backup battery to only one of either the connector terminal block or absolute encoder backup battery cable.

**Note 3.** Use cable clips with double-sided adhesive tape to secure the absolute encoder backup battery in place.

# 3-5 Parameter Unit Specifications

## ■ R88A-PR02G Hand-held Parameter Unit

The Parameter Unit is required to operate the Servo Drive from a distance away from the Servo Drive, or to operate and monitor the Servo Drive from a control panel.  
The cable connected to the Parameter Unit is 1.5 m long.

## ■ General Specifications

| Item                                       | Specifications                                  |
|--------------------------------------------|-------------------------------------------------|
| Ambient operating temperature and humidity | 0 to 55°C, 90% RH max. (with no condensation)   |
| Ambient storage temperature and humidity   | −20 to 80°C, 90% RH max. (with no condensation) |
| Operating and storage atmosphere           | No corrosive gases                              |
| Vibration resistance                       | 5.9 m/s <sup>2</sup> max.                       |

## ■ Performance Specifications

| Item                          |                       | Specifications                   |
|-------------------------------|-----------------------|----------------------------------|
| Type                          |                       | Hand-held                        |
| Cable length                  |                       | 1.5 m                            |
| Connectors                    |                       | Mini DIN 8-pin MD connector      |
| Display                       |                       | Seven-segment LED display        |
| Outer diameter                |                       | 62 (W) × 114 (H) × 15 (D) mm     |
| Weight                        |                       | Approx. 0.1 kg (including cable) |
| Communications specifications | Standard              | RS-232                           |
|                               | Communications method | Asynchronous (ASYNC)             |
|                               | Baud rate             | 9,600 bps                        |
|                               | Start bits            | 1 bit                            |
|                               | Data                  | 8 bits                           |
|                               | Parity                | No                               |
|                               | Stop bits             | 1 bit                            |

# 3-6 External Regeneration Resistor Specifications

## External Regeneration Resistor Specifications

### ■ R88A- RR08050S

| Model         | Resistance | Nominal capacity | Regeneration absorption for 120°C temperature rise | Heat radiation condition            | Thermal switch output specifications                                             |
|---------------|------------|------------------|----------------------------------------------------|-------------------------------------|----------------------------------------------------------------------------------|
| R88A-RR08050S | 50 Ω       | 80 W             | 20 W                                               | Aluminum, 250 × 250, Thickness: 3.0 | Operating temperature: 150°C ±5%, NC contact<br>Rated output: 30 VDC, 50 mA max. |

### ■ R88A-RR080100S

| Model          | Resistance | Nominal capacity | Regeneration absorption for 120°C temperature rise | Heat radiation condition            | Thermal switch output specifications                                             |
|----------------|------------|------------------|----------------------------------------------------|-------------------------------------|----------------------------------------------------------------------------------|
| R88A-RR080100S | 100 Ω      | 80 W             | 20 W                                               | Aluminum, 250 × 250, Thickness: 3.0 | Operating temperature: 150°C ±5%, NC contact<br>Rated output: 30 VDC, 50 mA max. |

### ■ R88A-RR22047S

| Model         | Resistance | Nominal capacity | Regeneration absorption for 120°C temperature rise | Heat radiation condition            | Thermal switch output specifications                                               |
|---------------|------------|------------------|----------------------------------------------------|-------------------------------------|------------------------------------------------------------------------------------|
| R88A-RR22047S | 47 Ω       | 220 W            | 70 W                                               | Aluminum, 350 × 350, Thickness: 3.0 | Operating temperature: 170°C ±7°C, NC contact<br>Rated output: 250 VAC, 0.2 A max. |

### ■ R88A-RR50020S

| Model         | Resistance | Nominal capacity | Regeneration absorption for 120°C temperature rise | Heat radiation condition            | Thermal switch output specifications                                                                     |
|---------------|------------|------------------|----------------------------------------------------|-------------------------------------|----------------------------------------------------------------------------------------------------------|
| R88A-RR50020S | 20 Ω       | 500 W            | 180 W                                              | Aluminum, 600 × 600, Thickness: 3.0 | Operating temperature: 200°C ±7°C, NC contact<br>Rated output: 250 VAC, 0.2 A max.<br>24 VDC, 0.2 A max. |

# 3-7 Reactor Specifications

Connect a Reactor to the Servo Drive as a harmonic current control measure. Select a model matching the Servo Drive to be used.

■ Specifications

| Servo Drive Model                                  | Reactor specifications |               |            |                    | Reactor type |
|----------------------------------------------------|------------------------|---------------|------------|--------------------|--------------|
|                                                    | Model                  | Rated current | Inductance | Weight             |              |
| R88D-GNA5L-ML2<br>R88D-GN01H-ML2                   | 3G3AX-DL2002           | 1.6 A         | 21.4 mH    | Approx.<br>0.8 kg  | Single-phase |
| R88D-GN01L-ML2<br>R88D-GN02H-ML2                   | 3G3AX-DL2004           | 3.2 A         | 10.7 mH    | Approx.<br>1.0 kg  | Single-phase |
| R88D-GN02L-ML2<br>R88D-GN04H-ML2                   | 3G3AX-DL2007           | 6.1 A         | 6.75 mH    | Approx.<br>1.3 kg  | Single-phase |
| R88D-GN04L-ML2<br>R88D-GN08H-ML2<br>R88D-GN10H-ML2 | 3G3AX-DL2015           | 9.3 A         | 3.51 mH    | Approx.<br>1.6 kg  | Single-phase |
| R88D-GN15H-ML2                                     | 3G3AX-DL2022           | 13.8 A        | 2.51 mH    | Approx.<br>2.1 kg  | Single-phase |
| R88D-GN08H-ML2<br>R88D-GN10H-ML2<br>R88D-GN15H-ML2 | 3G3AX-AL2025           | 10.0 A        | 2.8 mH     | Approx.<br>2.8 kg  | Three-phase  |
| R88D-GN20H-ML2<br>R88D-GN30H-ML2                   | 3G3AX-AL2055           | 20.0 A        | 0.88 mH    | Approx.<br>4.0 kg  | Three-phase  |
| R88D-GN50H-ML2                                     | 3G3AX-AL2110           | 34.0 A        | 0.35 mH    | Approx.<br>5.0 kg  | Three-phase  |
| R88D-GN75H-ML2                                     | 3G3AX-AL2220           | 67.0 A        | 0.18 mH    | Approx.<br>10.0 kg | Three-phase  |





# Chapter 4

## System Design


|     |                                                                               |      |
|-----|-------------------------------------------------------------------------------|------|
| 4-1 | Installation Conditions .....                                                 | 4-1  |
|     | Servo Drives .....                                                            | 4-1  |
|     | Servomotors.....                                                              | 4-3  |
|     | Decelerators.....                                                             | 4-7  |
| 4-2 | Wiring .....                                                                  | 4-11 |
|     | Connecting Cables.....                                                        | 4-11 |
|     | Selecting Connecting Cables .....                                             | 4-12 |
|     | Peripheral Device Connection Examples.....                                    | 4-16 |
|     | Main Circuit and Servomotor Connector Specifications.....                     | 4-20 |
| 4-3 | Wiring Conforming to EMC Directives.....                                      | 4-26 |
|     | Wiring Method .....                                                           | 4-26 |
|     | Selecting Connection Components.....                                          | 4-31 |
| 4-4 | Regenerative Energy Absorption .....                                          | 4-44 |
|     | Calculating the Regenerative Energy .....                                     | 4-44 |
|     | Servo Drive Regenerative Energy Absorption<br>Capacity .....                  | 4-47 |
|     | Absorbing Regenerative Energy with an External<br>Regeneration Resistor ..... | 4-48 |
|     | Connecting an External Regeneration Resistor .....                            | 4-49 |

# 4-1 Installation Conditions

## Servo Drives

### ■ Space around Drives

- ♦ Install Servo Drives according to the dimensions shown in the following illustration to ensure proper heat dispersion and convection inside the panel. If the Servo Drives are to be installed side by side, install a fan for air circulation to prevent uneven temperatures from developing inside the panel.

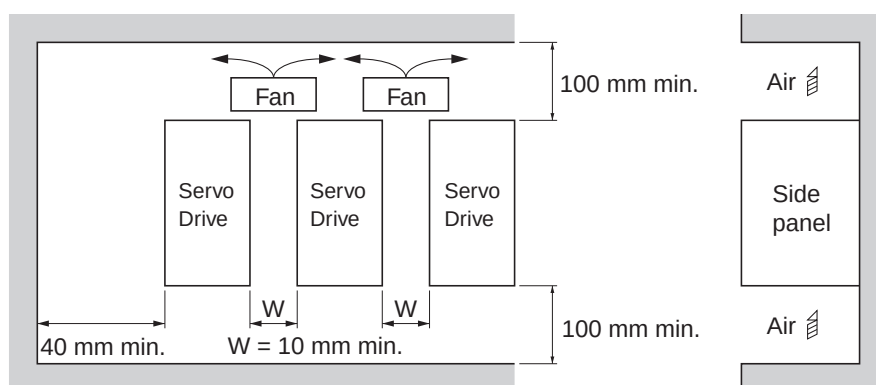

### ■ Mounting Direction

- ♦ Mount the Servo Drives in a direction (perpendicular) so that the model number can be seen properly.

### ■ Operating Environment

- ♦ The environment in which Servo Drives are operated must meet the following conditions. Servo Drives may malfunction if operated under any other conditions.
  - Ambient operating temperature: 0 to 55°C (Take into account temperature rises in the individual Servo Drives themselves.)
  - Ambient operating humidity: 90% RH max. (with no condensation)
  - Atmosphere: No corrosive gases.
  - Altitude: 1,000 m max.

### ■ Ambient Temperature Control

- ♦ Servo Drives should be operated in environments in which there is minimal temperature rise to maintain a high level of reliability.
- ♦ Temperature rise in any Unit installed in a closed space, such as the control box, will cause the Servo Drive's ambient temperature to rise. Use a fan or air conditioner to prevent the Servo Drive's ambient temperature from exceeding 55°C.
- ♦ Servo Drive surface temperatures may rise to as much as 30°C above the ambient temperature. Use heat-resistant materials for wiring, and keep its distance from any devices or wiring that are sensitive to heat.
- ♦ The service life of a Servo Drive is largely determined by the temperature around the internal electrolytic capacitors. The service life of an electrolytic capacitor is affected by a drop in electrostatic capacity and an increase in internal resistance, which can result in overvoltage alarms, malfunctioning due to noise, and damage to individual elements.

- ♦ If a Servo Drive is always operated at the ambient temperature of 55°C and with 100% of the rated torque and rated rotation speed, its service life is expected to be approximately 28,000 hours (excluding the axial-flow fan). A drop of 10°C in the ambient temperature will double the expected service life.

### ■ Keeping Foreign Objects Out of Units

- ♦ Place a cover over the Units or take other preventative measures to prevent foreign objects, such as drill filings, from getting into the Units during installation. Be sure to remove the cover after installation is complete. If the cover is left on during operation, Servo Drive's heat dissipation is blocked, which may result in malfunction.
- ♦ Take measures during installation and operation to prevent foreign objects such as metal particles, oil, machining oil, dust, or water from getting inside of Servo Drives.

### Servomotors

#### ■ Operating Environment

- ♦ The environment in which the Servomotor is operated must meet the following conditions. Operating the Servomotor outside of the following ranges may result in malfunction of the Servomotor.

Ambient operating temperature: 0 to 40°C (See note.)


Ambient operating humidity: 85% RH max. (with no condensation)

Atmosphere: No corrosive gases.

**Note** The ambient temperature is the temperature at a point 5 cm from the Servomotor.




#### ■ Impact and Load

- ♦ The Servomotor is resistant to impacts of up to 98 m/s<sup>2</sup>. Do not apply heavy impacts or loads during transport, installation, or removal.
- ♦ When transporting, hold the Servomotor body itself, and do not hold the encoder, cable, or connector areas. Doing so may damage the Servomotor.
- ♦ Always use a pulley remover to remove pulleys, couplings, or other objects from the shaft.
- ♦ Secure cables so that there is no impact or load placed on the cable connector areas.

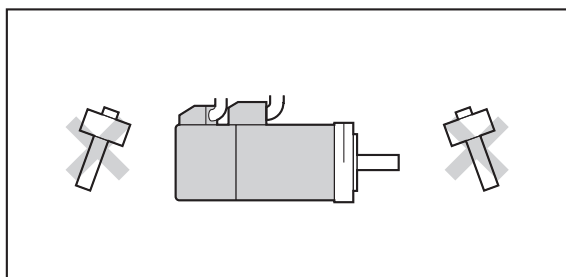


#### ■ Connecting to Mechanical Systems

- ♦ The axial loads for Servomotors are specified in *Characteristics* on page 3-18. If an axial load greater than that specified is applied to a Servomotor, it will reduce the service life of the motor bearings and may break the motor shaft.
- ♦ When connecting to a load, use couplings that can sufficiently absorb mechanical eccentricity and declination.
- ♦ For spur gears, an extremely large radial load may be applied depending on the gear precision. Use spur gears with a high degree of precision (for example, JIS class 2: normal line pitch error of 6 µm max. for a pitch circle diameter of 50 mm).
- ♦ If the gear precision is not adequate, allow backlash to ensure that no radial load is placed on the motor shaft.
- ♦ Bevel gears will cause a load to be applied in the thrust direction depending on the structural precision, the gear precision, and temperature changes. Provide appropriate backlash or take other measures to ensure that a thrust load larger than the specified level is not applied.
- ♦ Do not put rubber packing on the flange surface. If the flange is mounted with rubber packing, the motor flange may crack under the tightening force.

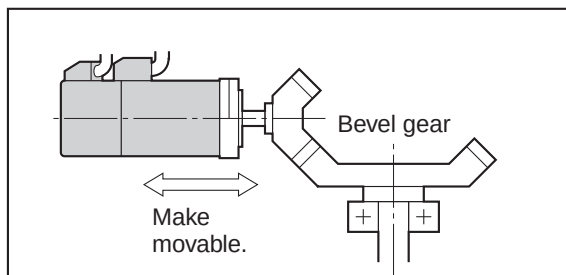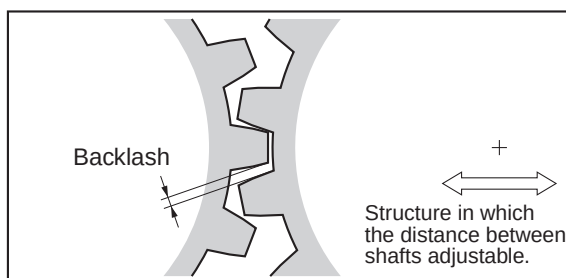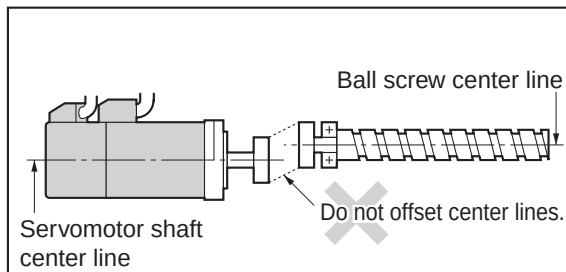

- ♦ When connecting to a V-belt or timing belt, consult the manufacturer for belt selection and tension.
- ♦ A radial load twice the belt tension will be placed on the motor shaft. Do not allow a radial load exceeding specifications to be placed on the motor shaft. If an excessive radial load is applied, the motor shaft and bearings may be damaged.
- ♦ Set up a movable pulley between the motor shaft and the load shaft so that the belt tension can be adjusted.

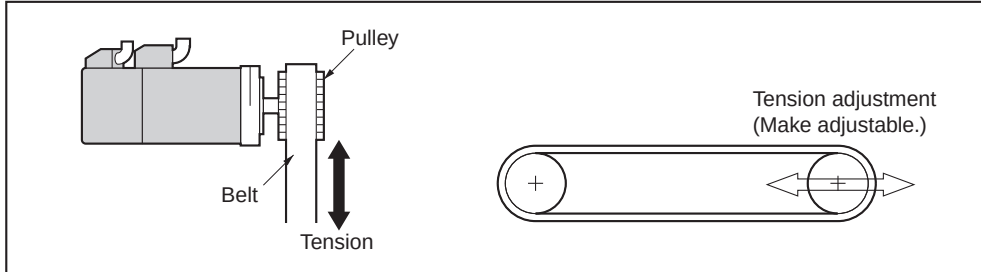

### ■ Water and Drip Resistance

- ♦ The protective structure for the Servomotors is as follows:  
IP65 (except for through-shaft parts and cable outlets)

### ■ Oil Seal Part Numbers

With OMNUC G-Series Servomotors, an oil seal can be installed afterwards.

Refer to the installation instructions from NOK Corporation for information on installing the oil seal. The following oil seals are not standard NOK products. Check with the manufacturer.

The expected service life of the oil seals is approximately 5,000 hours, but the actual life depends on the application conditions and environment.

| Motor model   | Shaft diameter (mm) | Outer diameter (mm) | Width (mm) | Material (rubber) | NOK part number (SC type) |
|---------------|---------------------|---------------------|------------|-------------------|---------------------------|
| R88M-G05030□  | 8.9                 | 17                  | 4          | A435              | BC6646-E0                 |
| R88M-G10030□  | 8.9                 | 17                  | 4          | A435              | BC6646-E0                 |
| R88M-G20030□  | 14                  | 28                  | 4          | A435              | BC5102-E1                 |
| R88M-G40030□  | 14                  | 28                  | 4          | A435              | BC5102-E1                 |
| R88M-G75030□  | 19.8                | 30                  | 4          | A435              | BC1141-E1                 |
| R88M-GP10030□ | 8.9                 | 22                  | 4          | A435              | BC5101-E1                 |
| R88M-GP20030□ | 14                  | 28                  | 4          | A435              | BC5102-E1                 |
| R88M-GP40030□ | 14                  | 28                  | 4          | A435              | BC5102-E1                 |
| R88M-G1K030□  | 20                  | 35                  | 7          | A435              | AC1012E2                  |
| R88M-G1K530□  | 20                  | 35                  | 7          | A435              | AC1012E2                  |
| R88M-G2K030□  | 20                  | 35                  | 7          | A435              | AC1012E2                  |
| R88M-G3K030□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G4K030□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G5K030□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G1K020□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G1K520□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G2K020□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G3K020□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G4K020□  | 30                  | 45                  | 7          | A435              | AC1677E1-RA0              |
| R88M-G5K020□  | 40                  | 58                  | 7          | A435              | AC2368E2                  |
| R88M-G7K515□  | 45                  | 62                  | 9          | A435              | AC2651E2                  |
| R88M-G90010□  | 24                  | 38                  | 7          | A435              | AC1251E1-RA0              |
| R88M-G2K010□  | 40                  | 58                  | 7          | A435              | AC2368E2                  |
| R88M-G3K010□  | 40                  | 58                  | 7          | A435              | AC2368E2                  |
| R88M-G4K510□  | 45                  | 62                  | 9          | A435              | AC2651E2                  |
| R88M-G6K010□  | 45                  | 62                  | 9          | A435              | AC2651E2                  |

### ■ Other Precautions

- ♦ Take measures to protect the shaft from corrosion.  
The shafts are coated with anti-corrosion oil when shipped, but anti-corrosion oil or grease should also be applied when connecting the shaft to a load.

|  <b>WARNING</b> |                                                                                             |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|                 | Do not apply commercial power directly to the Servomotor.<br>Doing so may result in fire.   |
|                 | Do not dismantle or repair the product.<br>Doing so may result in electric shock or injury. |

### Decelerators

#### ■ Installing Decelerators

##### Installing an R88G-HPG□□□ (Backlash = 3' Max.)

Use the following procedure to install the Decelerator on the Servomotor.

1. Turn the input joint and align the head of the bolt that secures the shaft with the rubber cap.
2. Apply sealant to the installation surface on the Servomotor (recommended sealant: Loctite 515).
3. Gently insert the Servomotor into the Decelerator.  
As shown in the figures on the next page, stand the Decelerator upright and slide the Servomotor shaft into the input shaft joint while making sure it does not fall over. If the Decelerator cannot be stood upright, tighten each bolt evenly little by little to ensure that the Servomotor is not inserted at a tilt.
4. Bolt together the Servomotor and the Decelerator flanges.

Bolt Tightening Torque for Aluminum

| Allen head bolt size    | M4  | M5  | M6   | M8   | M10  | M12  |
|-------------------------|-----|-----|------|------|------|------|
| Tightening torque (N·m) | 3.2 | 6.3 | 10.7 | 26.1 | 51.5 | 89.9 |

5. Tighten the input joint bolt.

Bolt Tightening Torque for Duralumin

| Allen head bolt size    | M4  | M5  | M6   | M8   | M10  | M12 |
|-------------------------|-----|-----|------|------|------|-----|
| Tightening torque (N·m) | 2.0 | 4.5 | 15.3 | 37.2 | 73.5 | 128 |


**Note** Always use the torque given in the table above. The Servomotor may slip or other problems may occur if the specified torque level is not satisfied.

The R88G-HPG11A□ uses two set screws for the connecting section.

| Allen head bolt size    | M3   |
|-------------------------|------|
| Tightening torque (N·m) | 0.69 |

6. Mount the supplied rubber cap to complete the installation procedure.  
(For the R88G-HPG11A□, mount two screws with gaskets.)



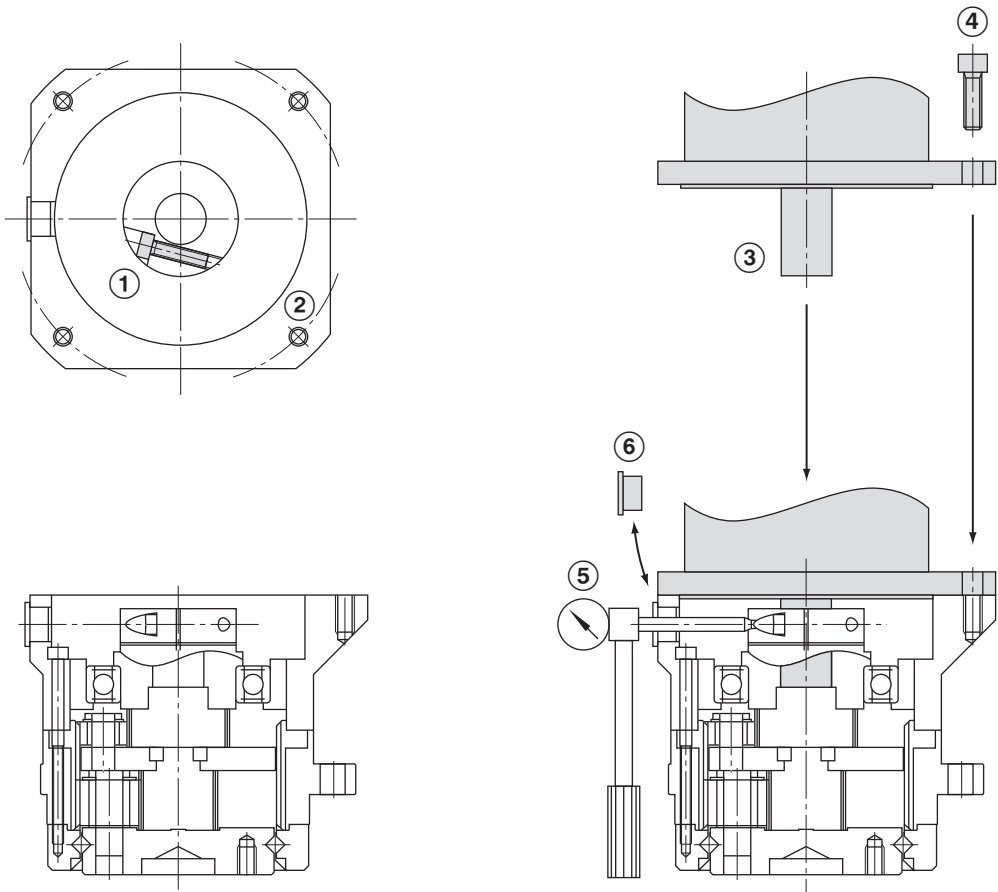

Installing the Decelerator

When installing the R88G-HPG□□□, first make sure that the mounting surface is flat and that there are no burrs on the tap sections, and then bolt on the mounting flanges.

Mounting Flange Bolt Tightening Torque for Aluminum

| R88G-HPG                | 11A | 14A | 20A  | 32A  | 50A | 65A |
|-------------------------|-----|-----|------|------|-----|-----|
| Number of bolts         | 4   | 4   | 4    | 4    | 4   | 4   |
| Bolt size               | M3  | M5  | M8   | M10  | M12 | M16 |
| Mounting PCD (mm)       | 46  | 70  | 105  | 135  | 190 | 260 |
| Tightening torque (N·m) | 1.4 | 6.3 | 26.1 | 51.5 | 103 | 255 |

4-1 Installation Conditions

Installing an R88G-VRSF□□□ (Backlash = 15' Max.)

Use the following procedure to install the Decelerator on the Servomotor.

1. Turn the input joint and align the head of the bolt that secures the shaft with the rubber cap.

Make sure the set bolts are loose.

2. Gently insert the Servomotor into the Decelerator.

As shown in the figures below, stand the Decelerator upright and slide the Servomotor shaft into the input shaft joint while making sure it does not fall over. If the Decelerator cannot be stood upright, tighten each bolt evenly little by little to ensure that the Servomotor is not inserted at a tilt.

3. Bolt together the Servomotor and the Decelerator flanges.

Bolt Tightening Torque

|                         |     |     |     |
|-------------------------|-----|-----|-----|
| Allen head bolt size    | M4  | M5  | M6  |
| Tightening torque (N·m) | 3.0 | 5.8 | 9.8 |


4. Tighten the input joint bolt.

Bolt Tightening Torque for Duralumin

|                         |     |     |     |
|-------------------------|-----|-----|-----|
| Allen head bolt size    | M3  | M4  | M5  |
| Tightening torque (N·m) | 1.5 | 4.5 | 7.1 |

**Note** Always use the torque given in the table above. The Servomotor may slip or other problems may occur if the specified torque level is not satisfied.

5. Mount the supplied rubber cap to complete the installation procedure.

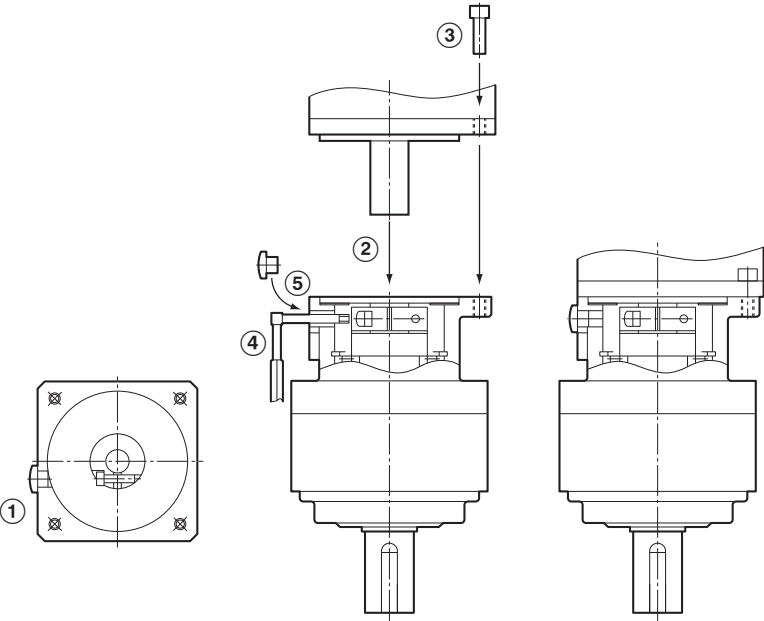

### Installing the Decelerator

When installing the R88G-VRSF□□□, first make sure that the mounting surface is flat and that there are no burrs on the tap sections, and then bolt on the mounting flanges.

Mounting Flange Bolt Tightening Torque for Aluminum

| R88G-VRSF               | B frame | C frame | D frame |
|-------------------------|---------|---------|---------|
| Number of bolts         | 4       | 4       | 4       |
| Bolt size               | M5      | M6      | M8      |
| Mounting PCD (mm)       | 60      | 90      | 115     |
| Tightening torque (N·m) | 5.8     | 9.8     | 19.6    |

### ■ Using Another Company's Decelerator (Reference Information)

If the system configuration requires another company's decelerator to be used in combination with an OMNUC G-Series Servomotor, select the decelerator so that the load on the motor shaft (i.e., both the radial and thrust loads) is within the allowable range.

(Refer to *Characteristics* on page 3-18 for details on the allowable loads for the motors.)

Also, select the decelerator so that the allowable input rotation speed and allowable input torque of the decelerator are not exceeded.

# 4-2 Wiring


## Connecting Cables

This section shows the types of connecting cables used in an OMNUC G-Series servo system.

### System Configuration

4

System Design

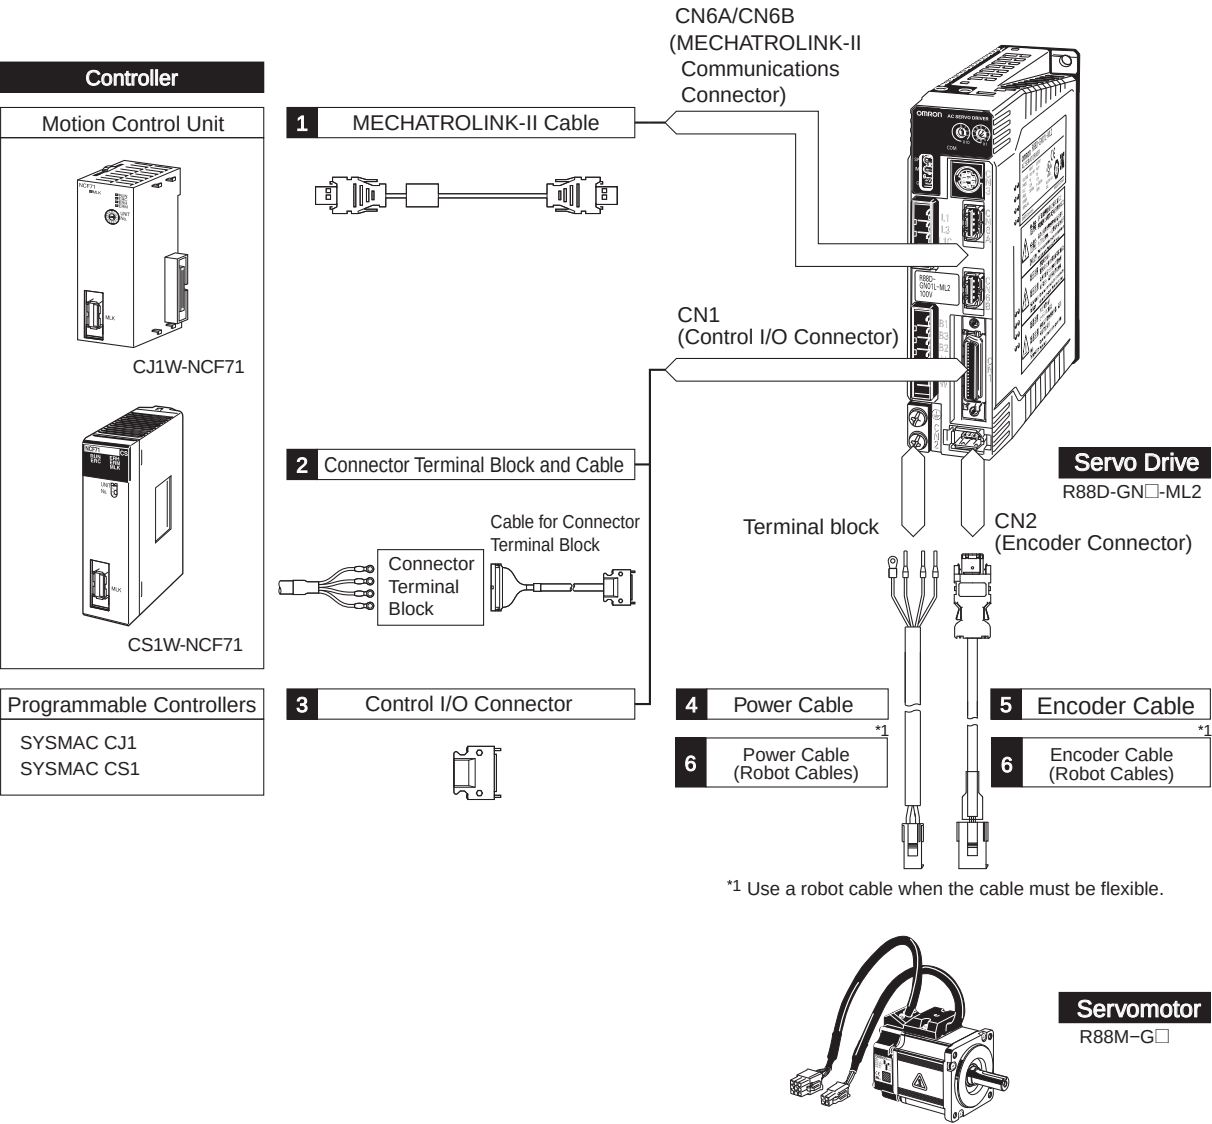

## Selecting Connecting Cables

### ■ Encoder Cables (Standard Cables)

Select an Encoder Cable matching the Servomotor to be used.

| Servomotor type                                      |                         | Encoder Cable | Comments                                                                                                                                                                 |
|------------------------------------------------------|-------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3,000-r/min Servomotors                              | 50 to 750 W <b>ABS</b>  | R88A-CRGA□□□C | The □□□ digits in the model number indicate the cable length(3 m, 5 m, 10 m, 15 m, 20 m, 30 m, 40 m, or 50 m).<br>Example model number for a 3-m cable:<br>R88A-CRGA003C |
|                                                      | 50 to 750 W <b>INC</b>  | R88A-CRGB□□□C |                                                                                                                                                                          |
|                                                      | 1 to 5 kW               | R88A-CRGC□□□N |                                                                                                                                                                          |
| 3,000-r/min Flat Servomotors                         | 100 to 400 W <b>ABS</b> | R88A-CRGA□□□C |                                                                                                                                                                          |
|                                                      | 100 to 400 W <b>INC</b> | R88A-CRGB□□□C |                                                                                                                                                                          |
| 2,000-r/min Servomotors<br>(1,500-r/min Servomotors) | 1 to 7.5 kW             | R88A-CRGC□□□N |                                                                                                                                                                          |
| 1,000-r/min Servomotors                              | 900 W to 6 kW           | R88A-CRGC□□□N |                                                                                                                                                                          |

## ■ Power Cables (Standard Cables)

Select a Power Cable matching the Servomotor to be used.

| Servomotor type                                      |              | Power Cables for Servomotors Without Brakes | Power Cables for Servomotors With Brakes                                         |
|------------------------------------------------------|--------------|---------------------------------------------|----------------------------------------------------------------------------------|
| 3,000-r/min Servomotors                              | 50 to 750 W  | R88A-CAGA□□□S                               | R88A-CAGA□□□S<br>(For Power Connector)<br>R88A-CAGA□□□B<br>(For Brake Connector) |
|                                                      | 1 to 1.5 kW  | R88A-CAGB□□□S                               | R88A-CAGB□□□B                                                                    |
|                                                      | 2 kW         | R88A-CAGC□□□S                               | R88A-CAGC□□□B                                                                    |
|                                                      | 3 to 5 kW    | R88A-CAGD□□□S                               | R88A-CAGD□□□B                                                                    |
| 3,000-r/min Flat Servomotors                         | 100 to 400 W | R88A-CAGA□□□S                               | R88A-CAGA□□□S<br>(For Power Connector)<br>R88A-CAGA□□□B<br>(For Brake Connector) |
| 2,000-r/min Servomotors<br>(1,500-r/min Servomotors) | 1 to 1.5 kW  | R88A-CAGB□□□S                               | R88A-CAGB□□□B                                                                    |
|                                                      | 2 kW         | R88A-CAGC□□□S                               | R88A-CAGC□□□B                                                                    |
|                                                      | 3 to 5 kW    | R88A-CAGD□□□S                               | R88A-CAGD□□□B                                                                    |
|                                                      | 7.5 kW       | R88A-CAGE□□□S                               | R88A-CAGE□□□S<br>(For Power Connector)<br>R88A-CAGE□□□B<br>(For Brake Connector) |
| 1,000-r/min Servomotors                              | 900 W        | R88A-CAGB□□□S                               | R88A-CAGB□□□B                                                                    |
|                                                      | 2 to 4.5 kW  | R88A-CAGD□□□S                               | R88A-CAGD□□□B                                                                    |
|                                                      | 6 kW         | R88A-CAGE□□□S                               | R88A-CAGE□□□S<br>(For Power Connector)<br>R88A-CAGE□□□B<br>(For Brake Connector) |

**Note 1.** The □□□ digits in the model number indicate the cable length (3 m, 5 m, 10 m, 15 m, 20 m, 30 m, 40 m, or 50 m). Example model number for a 3-m cable: R88A-CAGA003S

**Note 2.** For 50 to 750 W (3,000-r/min) Servomotors, Flat Servomotors, and 6-kW and higher Servomotors, there are separate connectors for power and brakes. Therefore, when a Servomotor with a brake is used, it will require both a Power Cable for a Servomotor without a brake and a Brake Cable.

## ■ Encoder Cables (Robot Cables)

Use a robot cable when the encoder cable must be flexible.

| Servomotor type              |                         | Encoder Cable  | Comments                                                                                                                                                                    |
|------------------------------|-------------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3,000-r/min Servomotors      | 50 to 750 W <b>ABS</b>  | R88A-CRGA□□□CR | The □□□ digits in the model number indicate the cable length.<br>(3 m, 5 m, 10 m, 15 m, 20 m, 30 m, 40 m, or 50 m).<br>Example model number for a 3-m cable: R88A-CRGA003CR |
|                              | 50 to 750 W <b>INC</b>  | R88A-CRGB□□□CR |                                                                                                                                                                             |
|                              | 1 to 5 kW               | R88A-CRGC□□□NR |                                                                                                                                                                             |
| 3,000-r/min Flat Servomotors | 100 to 400 W <b>ABS</b> | R88A-CRGA□□□CR |                                                                                                                                                                             |
|                              | 100 to 400 W <b>INC</b> | R88A-CRGB□□□CR |                                                                                                                                                                             |
| 2,000-r/min Servomotors      | 1 to 5 kW               | R88A-CRGC□□□NR |                                                                                                                                                                             |
| 1,000-r/min Servomotors      | 900 W to 4.5 kW         | R88A-CRGC□□□NR |                                                                                                                                                                             |

### ■ Power Cables (Robot Cables)

Use a robot cable when the power cable must be flexible.

| Servomotor type              |              | Power Cables for Servomotors without Brakes | Power Cables for Servomotors with Brakes                                           |
|------------------------------|--------------|---------------------------------------------|------------------------------------------------------------------------------------|
| 3,000-r/min Servomotors      | 50 to 750 W  | R88A-CAGA□□□SR                              | R88A-CAGA□□□SR<br>(For Power Connector)<br>R88A-CAGA□□□BR<br>(For Brake Connector) |
|                              | 1 to 1.5 kW  | R88A-CAGB□□□SR                              | R88A-CAGB□□□BR                                                                     |
|                              | 2 kW         | R88A-CAGC□□□SR                              | R88A-CAGC□□□BR                                                                     |
|                              | 3 to 5 kW    | R88A-CAGD□□□SR                              | R88A-CAGD□□□BR                                                                     |
| 3,000-r/min Flat Servomotors | 100 to 400 W | R88A-CAGA□□□SR                              | R88A-CAGA□□□SR<br>(For Power Connector)<br>R88A-CAGA□□□BR<br>(For Brake Connector) |
| 2,000-r/min Servomotors      | 1 to 1.5 kW  | R88A-CAGB□□□SR                              | R88A-CAGB□□□BR                                                                     |
|                              | 2 kW         | R88A-CAGC□□□SR                              | R88A-CAGC□□□BR                                                                     |
|                              | 3 to 5 kW    | R88A-CAGD□□□SR                              | R88A-CAGD□□□BR                                                                     |
| 1,000-r/min Servomotors      | 900 W        | R88A-CAGB□□□SR                              | R88A-CAGB□□□BR                                                                     |
|                              | 2 to 4.5 kW  | R88A-CAGD□□□SR                              | R88A-CAGD□□□BR                                                                     |

**Note 1.** The □□□ digits in the model number indicate the cable length (3 m, 5 m, 10 m, 15 m, 20 m, 30 m, 40 m, or 50 m). Example model number for a 3-m cable: R88A-CAGA003SR

**Note 2.** For 50 to 750 W (3,000-r/min) Servomotors and Flat Servomotors, there are separate connectors for power and brakes. Therefore, when a Servomotor with a brake is used, it will require both a Power Cable for a Servomotor without a brake and a Brake Cable.

### ■ Computer Monitor Cable

A Computer Monitor Cable and the Computer Monitor Software for Servo Drives (CX-Drive) are required to set Servo Drive parameters and perform monitoring with a personal computer.

| Name/specifications    |     | Model         | Remarks                            |
|------------------------|-----|---------------|------------------------------------|
| Computer Monitor Cable | 2 m | R88A-CCG002P2 | Only a 2-meter cable is available. |

### ■ Control I/O Connector

This connector is used when the cable for the Servo Drive's control I/O connector (CN1) is prepared by the user.

| Name                  | Model       | Remarks                                                                                                   |
|-----------------------|-------------|-----------------------------------------------------------------------------------------------------------|
| Control I/O Connector | R88A-CNU01C | This is the connector for connecting to the Control I/O Connector (CN1). (This item is a connector only.) |

■ Connector-Terminal Blocks and Cables


These are used to convert the Servo Drive's control I/O Connector (CN1) signals to a terminal block.

| Connector Terminal Block            | Cable         | Comments                                                                                                                           |
|-------------------------------------|---------------|------------------------------------------------------------------------------------------------------------------------------------|
| XW2B-20G4<br>XW2B-20G5<br>XW2D-20G6 | XW2Z-□□□J-B33 | The □□□ digits in the model number indicate the cable length (1 m and 2 m).<br>Example model number for a 2-m cable: XW2Z-200J-B33 |






R S T Three-phase 200 to 240 VAC, 50/60 Hz

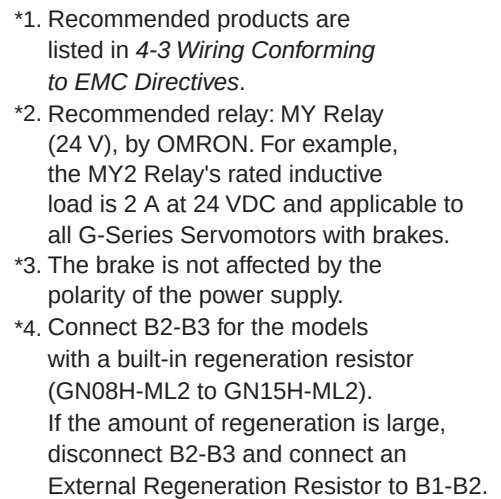


■ R88D-GN20H-ML2/-GN30H-ML2/-GN50H-ML2

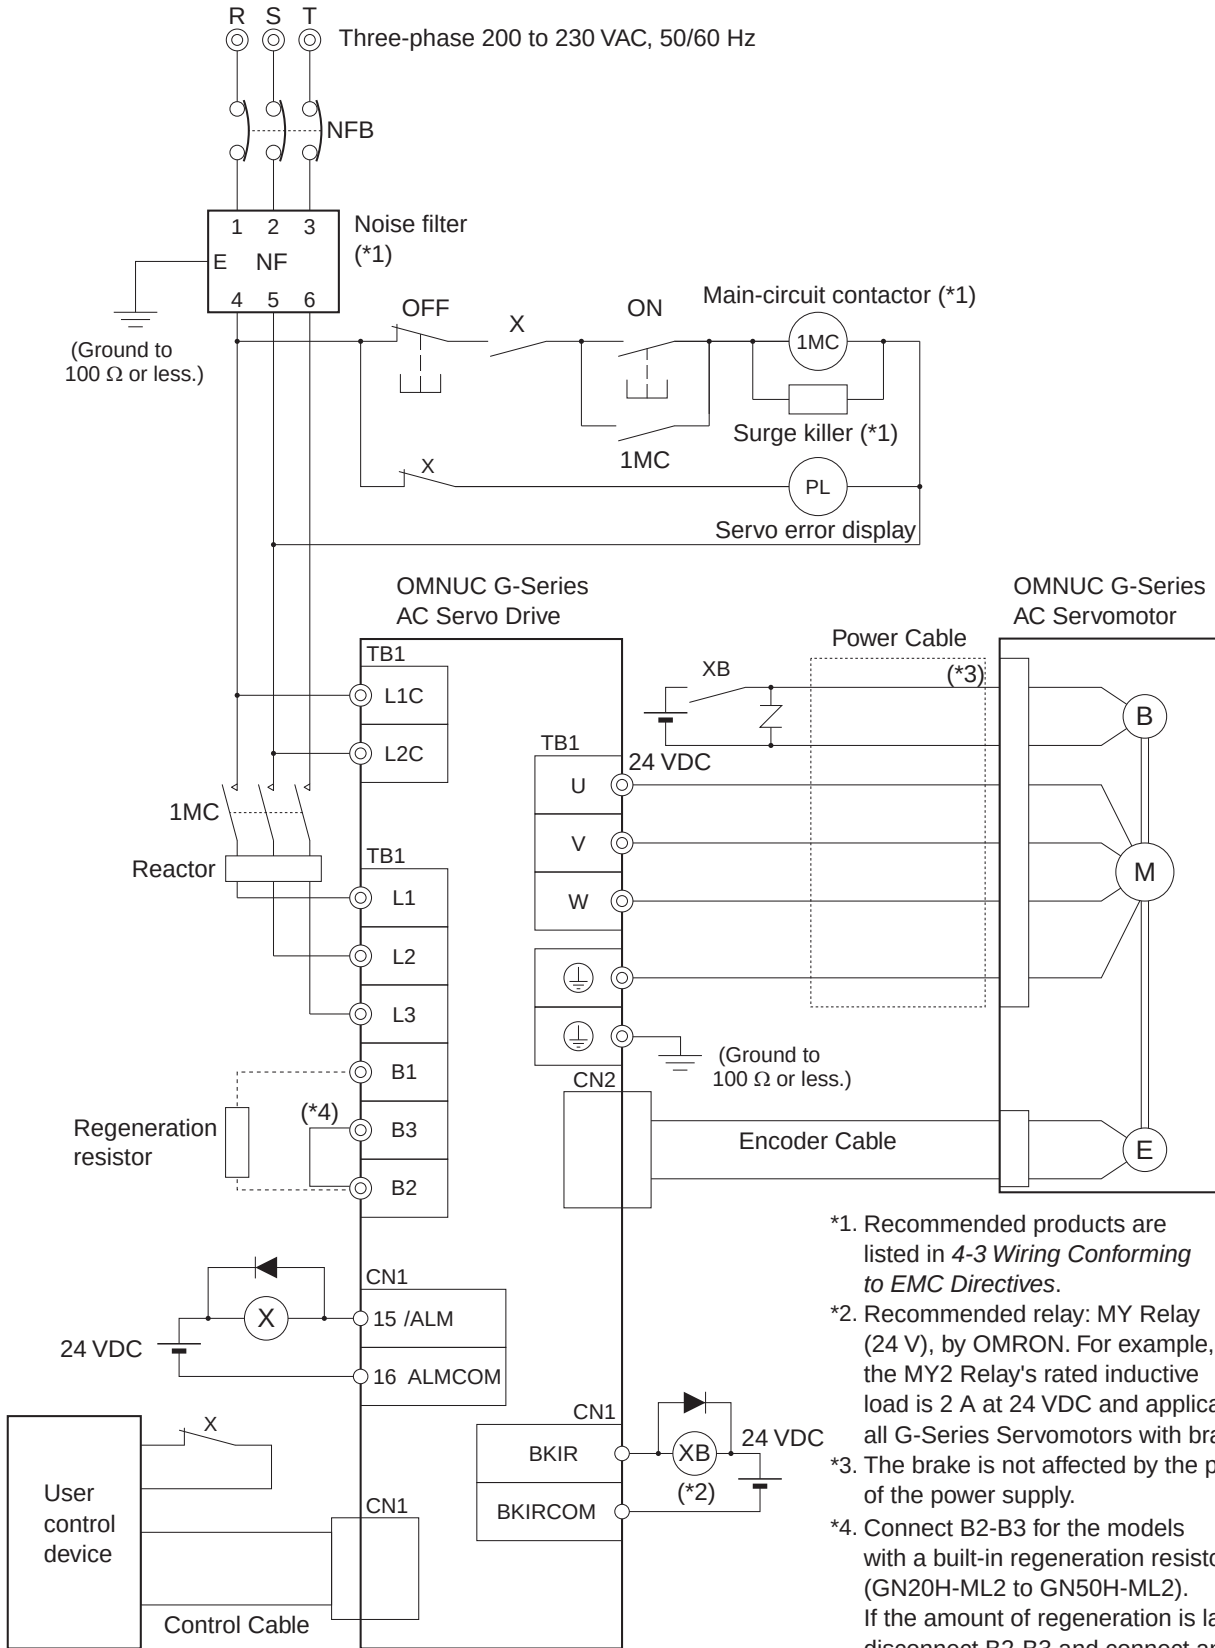

- \*1. Recommended products are listed in 4-3 Wiring Conforming to EMC Directives.
- \*2. Recommended relay: MY Relay (24 V), by OMRON. For example, the MY2 Relay's rated inductive load is 2 A at 24 VDC and applicable to all G-Series Servomotors with brakes.
- \*3. The brake is not affected by the polarity of the power supply.
- \*4. Connect B2-B3 for the models with a built-in regeneration resistor (GN20H-ML2 to GN50H-ML2). If the amount of regeneration is large, disconnect B2-B3 and connect an External Regeneration Resistor to B1-B2.

**4-19**

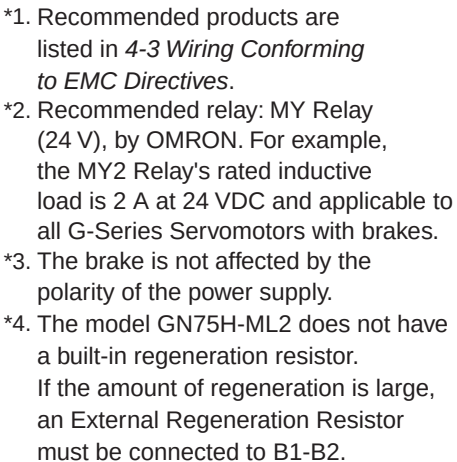

# Main Circuit and Servomotor Connector Specifications

When wiring the main circuit, use proper wire sizes, grounding systems, and anti-noise measures.

- R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN04L-ML2**  
**R88D-GN01H-ML2/-GN02H-ML2/-GN04H-ML2/-GN08H-ML2/-GN10H-ML2/-GN15H-ML2**

## Main Circuit Connector Specifications (CNA)

| Symbol | Name                               | Function                                                                             |
|--------|------------------------------------|--------------------------------------------------------------------------------------|
| L1     | Main circuit power supply input    | R88D-GN□L-ML2 (50 to 400 W): Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz     |
| L2     |                                    | R88D-GN□H-ML2 (50 W to 1.5 kW): Single-phase 200 to 240 VAC (170 to 264 V), 50/60 Hz |
| L3     |                                    | (750 W to 1.5 kW): Three-phase 200 to 240 VAC (170 to 264 V), 50/60Hz                |
| L1C    | Control circuit power supply input | R88D-GN□L-ML2 : Single-phase 100 to 115 VAC (85 to 127 V), 50/60 Hz                  |
| L2C    |                                    | R88D-GN□H-ML2: Single-phase 200 to 240 VAC (170 to 264V), 50/60 Hz                   |

## Servomotor Connector Specifications (CNB)

| Symbol | Name                                                | Function                                                                                                                                                                                                 |
|--------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| B1     | External Regeneration Resistor connection terminals | 50 to 400 W: These terminals normally do not need to be connected. If there is high regenerative energy, connect an External Regeneration Resistor between B1 and B2.                                    |
| B2     |                                                     | 750 W to 1.5 kW: Normally B2 and B3 are connected. If there is high regenerative energy, remove the short-circuit bar between B2 and B3 and connect an External Regeneration Resistor between B1 and B2. |
| B3     |                                                     |                                                                                                                                                                                                          |
| U      | Servomotor connection terminals                     | Red                                                                                                                                                                                                      |
| V      |                                                     | White                                                                                                                                                                                                    |
| W      |                                                     | Blue                                                                                                                                                                                                     |
| ⊕      |                                                     | Green/Yellow                                                                                                                                                                                             |
| ⊕      | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                                                                                                    |

■ R88D-GN20H-ML2/-GN30H-ML2/-GN50H-ML2

Main Circuit Terminal Block Specifications

| Symbol | Name                                                | Function                                                                                                                                                                                           |                                                                                   |
|--------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| L1     | Main circuit power supply input                     | R88D-GN□H-ML2 (2 to 5 kW): Three-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                                                                                                                      |                                                                                   |
| L2     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| L3     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| L1C    | Control circuit power supply input                  | R88D-GN□H-ML2 : Single-phase 200 to 230 VAC (170 to 253 V), 50/60 Hz                                                                                                                               |                                                                                   |
| L2C    |                                                     |                                                                                                                                                                                                    |                                                                                   |
| B1     | External Regeneration Resistor connection terminals | 2 to 5 kW: Normally B2 and B3 are connected. If there is high regenerative energy, remove the short-circuit bar between B2 and B3 and connect an External Regeneration Resistor between B1 and B2. |                                                                                   |
| B2     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| B3     |                                                     |                                                                                                                                                                                                    |                                                                                   |
| U      | Servomotor connection terminals                     | Red                                                                                                                                                                                                | These are the output terminals to the Servomotor. Be sure to wire them correctly. |
| V      |                                                     | White                                                                                                                                                                                              |                                                                                   |
| W      |                                                     | Blue                                                                                                                                                                                               |                                                                                   |
| ⊕      |                                                     | Green/ Yellow                                                                                                                                                                                      |                                                                                   |
| ⊕      | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                                                                                              |                                                                                   |

## ■ R88D-GN75H-ML2

### Main Circuit Terminal Block Specifications (TB1)

| Symbol | Name                                                | Function                                                                                                                               |                                                                                      |
|--------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| L1     | Main circuit power supply input                     | R88D-GN75H-ML2 (6 to 7.5 kW): Three-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                                                       |                                                                                      |
| L2     |                                                     |                                                                                                                                        |                                                                                      |
| L3     |                                                     |                                                                                                                                        |                                                                                      |
| B1     | External Regeneration Resistor connection terminals | 6 to 7.5 kW:    A regeneration resistor is not built in.<br>Connect an External Regeneration Resistor between B1 and B2, if necessary. |                                                                                      |
| B2     |                                                     |                                                                                                                                        |                                                                                      |
| U      | Servomotor connection terminals                     | Red                                                                                                                                    | These are the output terminals to the Servomotor.<br>Be sure to wire them correctly. |
| V      |                                                     | White                                                                                                                                  |                                                                                      |
| W      |                                                     | Blue                                                                                                                                   |                                                                                      |
| ⊕      |                                                     | Green/<br>Yellow                                                                                                                       |                                                                                      |
| ⊕      | Frame ground                                        | This is the ground terminal. Ground to 100 Ω or less.                                                                                  |                                                                                      |

### Main Circuit Terminal Block Specifications (TB2)

| Symbol | Name                               | Function                                                                                 |
|--------|------------------------------------|------------------------------------------------------------------------------------------|
| NC     | ---                                | Do not connect.                                                                          |
| L1C    | Control circuit power supply input | R88D-GN75H-ML2: Single-phase 200 to 230 VAC (170 to 253 V), 50/60Hz                      |
| L2C    |                                    |                                                                                          |
| ⊕      | Frame ground                       | This is the ground terminal. Ground to 100 Ω or less.                                    |
| NC     | ---                                | Do not connect.                                                                          |
| EX1    |                                    |                                                                                          |
| EX2    |                                    |                                                                                          |
| EX3    |                                    |                                                                                          |
| NC     |                                    |                                                                                          |
| FN(+)  | Fan Stop Output                    | Outputs a warning signal when the fan inside the Servo Drive stops. (30 VDC, 50 mA max). |
| FN(-)  |                                    |                                                                                          |

## ■ Terminal Block Wire Sizes

### 100-VAC Input: R88D-GN□□L-ML2

| Model (R88D-)                                                               |               |     | GNA5L-<br>ML2 | GN01L-<br>ML2 | GN02L-<br>ML2 | GN04L-<br>ML2 |
|-----------------------------------------------------------------------------|---------------|-----|---------------|---------------|---------------|---------------|
| Item                                                                        | Unit          |     |               |               |               |               |
| Power supply capacity                                                       | kVA           |     | 0.4           | 0.4           | 0.5           | 0.9           |
| Main circuit power supply input (L1 and L3 or L1, L2, and L3)* <sup>1</sup> | Rated current | A   | 1.4           | 2.2           | 3.7           | 6.6           |
|                                                                             | Wire size     | --- | AWG18         |               |               | AWG16         |
| Control circuit power supply input (L1C and L2C)                            | Rated current | A   | 0.09          | 0.09          | 0.09          | 0.09          |
|                                                                             | Wire size     | --- | AWG18         |               |               |               |
| Servomotor connection terminals (U, V, W, and GR)* <sup>2</sup>             | Rated current | A   | 1.2           | 1.7           | 2.5           | 4.6           |
|                                                                             | Wire size     | --- | AWG18         |               |               |               |
| Frame ground (GR)                                                           | Wire size     | --- | AWG14         |               |               |               |
|                                                                             | Screw size    | --- | M4            |               |               |               |
|                                                                             | Torque        | N·m | 1.2           |               |               |               |

### 200-VAC Input: R88D-GN□□H-ML2

| Model (R88D-)                                                                |               |     | GN01H-<br>ML2 | GN02H-<br>ML2 | GN04H-<br>ML2 | GN08H-<br>ML2         | GN10H-<br>ML2         |
|------------------------------------------------------------------------------|---------------|-----|---------------|---------------|---------------|-----------------------|-----------------------|
| Item                                                                         | Unit          |     |               |               |               |                       |                       |
| Power supply capacity                                                        | kVA           |     | 0.5           | 0.5           | 0.9           | 1.3                   | 1.8                   |
| Main circuit power supply input (L1 and L3, or L1, L2, and L3)* <sup>1</sup> | Rated current | A   | 1.3           | 2.0           | 3.7           | 5.0/3.3* <sup>1</sup> | 7.5/4.1* <sup>1</sup> |
|                                                                              | Wire size     | --- | AWG18         |               |               |                       | AWG16                 |
|                                                                              | Screw size    | --- | ---           | ---           | ---           | ---                   | ---                   |
|                                                                              | Torque        | N·m | ---           | ---           | ---           | ---                   | ---                   |
| Control circuit power supply input (L1C and L2C)                             | Rated current | A   | 0.05          | 0.05          | 0.05          | 0.05                  | 0.07                  |
|                                                                              | Wire size     | --- | AWG18         |               |               |                       |                       |
|                                                                              | Screw size    | --- | ---           | ---           | ---           | ---                   | ---                   |
|                                                                              | Torque        | N·m | ---           | ---           | ---           | ---                   | ---                   |
| Servomotor connection terminals (U, V, W, and GR)* <sup>2</sup>              | Rated current | A   | 1.2           | 1.6           | 2.6           | 4.0                   | 5.8                   |
|                                                                              | Wire size     | --- | AWG18         |               |               |                       | AWG16                 |
|                                                                              | Screw size    | --- | ---           | ---           | ---           | ---                   | ---                   |
|                                                                              | Torque        | N·m | ---           | ---           | ---           | ---                   | ---                   |
| Frame ground (GR)                                                            | Wire size     | --- | AWG14         |               |               |                       |                       |
|                                                                              | Screw size    | --- | M4            |               |               |                       |                       |
|                                                                              | Torque        | N·m | 1.2           |               |               |                       |                       |



| Model (R88D-)                                                     |               |     | GN15H-<br>ML2 | GN20H-<br>ML2 | GN30H-<br>ML2 | GN50H-<br>ML2 | GN75H-<br>ML2 |
|-------------------------------------------------------------------|---------------|-----|---------------|---------------|---------------|---------------|---------------|
| Item                                                              | Unit          |     |               |               |               |               |               |
| Power supply capacity                                             |               | kVA | 2.3           | 3.3           | 4.5           | 7.5           | 11            |
| Main circuit power supply input (L1 and L3, or L1, L2, and L3) *1 | Rated current | A   | 11.0/8.0*1    | 10.2          | 15.2          | 23.7          | 35.0          |
|                                                                   | Wire size     | --- | AWG14         |               | AWG12         | AWG10         | AWG8          |
|                                                                   | Screw size    | --- | ---           | M5            |               |               |               |
|                                                                   | Torque        | N·m | ---           | 2.0           |               |               |               |
| Control circuit power supply input (L1C and L2C)                  | Rated current | A   | 0.07          | 0.1           | 0.12          | 0.12          | 0.14          |
|                                                                   | Wire size     | --- | AWG18         |               |               |               |               |
|                                                                   | Screw size    | --- | ---           | M5            |               |               |               |
|                                                                   | Torque        | N·m | ---           | 2.0           |               |               |               |
| Servomotor connection terminals (U, V, W, and GR)*2               | Rated current | A   | 9.4           | 13.4          | 18.6          | 33.0          | 47.0          |
|                                                                   | Wire size     | --- | AWG14         |               | AWG12         | AWG8          | AWG6          |
|                                                                   | Screw size    | --- | ---           | M5            |               |               |               |
|                                                                   | Torque        | N·m | ---           | 2.0           |               |               |               |
| Frame ground (GR)                                                 | Wire size     | --- | AWG14         | AWG12         |               |               | AWG8          |
|                                                                   | Screw size    | --- | M4            | M5            |               |               |               |
|                                                                   | Torque        | N·m | 1.2           | 2.0           |               |               |               |

\*1. The left value is for single-phase input power, and the right value is for three-phase input power.

\*2. Use the same wire sizes for B1 and B2.

\*3. Connect an OMRON Servomotor Power Cable to the Servomotor connection terminals.

## ■ Wire Sizes and Allowable Current (Reference)

The following table shows the allowable current when there are three power supply wires.  
Use a current below these specified values.


### 600-V Heat-resistant Vinyl Wire (HIV)

| AWG size | Nominal cross-sectional area (mm <sup>2</sup> ) | Configuration (wires/mm <sup>2</sup> ) | Conductive resistance (Ω/km) | Allowable current (A) for ambient temperature |      |      |
|----------|-------------------------------------------------|----------------------------------------|------------------------------|-----------------------------------------------|------|------|
|          |                                                 |                                        |                              | 30°C                                          | 40°C | 50°C |
| 20       | 0.5                                             | 19/0.18                                | 39.5                         | 6.6                                           | 5.6  | 4.5  |
| ---      | 0.75                                            | 30/0.18                                | 26.0                         | 8.8                                           | 7.0  | 5.5  |
| 18       | 0.9                                             | 37/0.18                                | 24.4                         | 9.0                                           | 7.7  | 6.0  |
| 16       | 1.25                                            | 50/0.18                                | 15.6                         | 12.0                                          | 11.0 | 8.5  |
| 14       | 2.0                                             | 7/0.6                                  | 9.53                         | 23                                            | 20   | 16   |
| 12       | 3.5                                             | 7/0.8                                  | 5.41                         | 33                                            | 29   | 24   |
| 10       | 5.5                                             | 7/1.0                                  | 3.47                         | 43                                            | 38   | 31   |
| 8        | 8.0                                             | 7/1.2                                  | 2.41                         | 55                                            | 49   | 40   |
| 6        | 14.0                                            | 7/1.6                                  | 1.35                         | 79                                            | 70   | 57   |

## ■ Terminal Block Wiring Procedure

Connector-type Terminal Blocks are used for Servo Drives of 1.5 kW or less (R88D-GNA5L-ML2 to GN15H-ML2).

The procedure for wiring these Terminal Blocks is explained below.

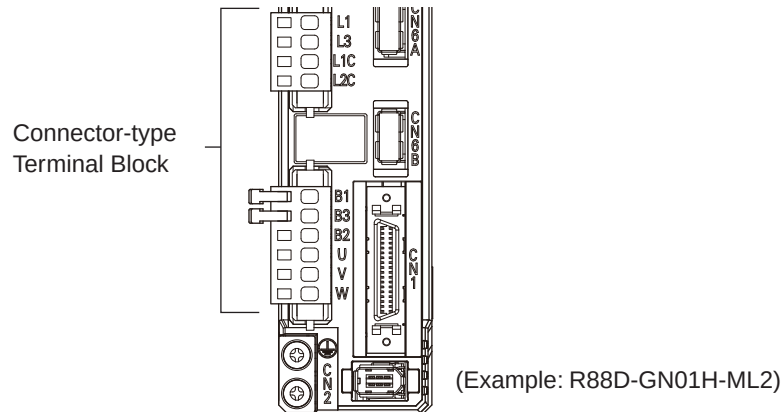


### 1. Remove the Terminal Block from the Servo Drive before wiring.

The Servo Drive will be damaged if the wiring is performed with the Terminal Block in place.

### 2. Strip off 8 to 9 mm of the covering from the end of each wire.

 Refer to *Terminal Block Wire Sizes* on page 4-23 for applicable wire sizes.



### 3. Open the wire insertion slots in the Terminal Block.

There are two ways to open the wire insertion slots:

- ♦ Pry the slot open using the lever that comes with the Servo Drive (as in Fig. A).
- ♦ Insert a flat-blade screwdriver (end width: 3.0 to 3.5 mm) into the opening for the screwdriver, and press down firmly to open the slot (as in Fig. B).

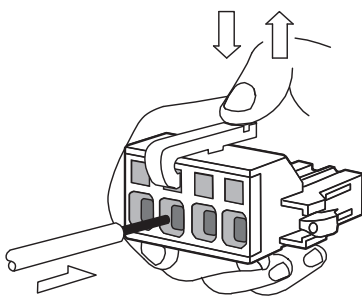


Fig. A

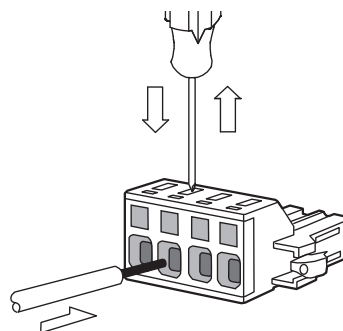


Fig. B

### 4. With the slot held open, insert the end of the wire.

After inserting the wire, let the slot close by releasing the pressure from the lever or the screwdriver.

### 5. Mount the Terminal Block to the Servo Drive.

After all of the terminals have been wired, return the Terminal Block to its original position on the Servo Drive.

## 4-3 Wiring Conforming to EMC Directives

Conformance to the EMC Directives (EN 55011 Class A Group 1 (EMI) and EN 61000-6-2 (EMS)) can be ensured by wiring under the conditions described below.


These conditions are for conformance of OMNUC G-Series products to the EMC Directives. EMC-related performance of these products, however, depends on the configuration, wiring, and other conditions of the equipment in which the products are installed. The EMC conformance of the system as a whole must be confirmed by the customer.

The following are the requirements for EMC Directive conformance.

- ♦ The Servo Drive must be installed in a metal case (control panel). (The Servomotor does not, however, have to be covered with a metal plate.)
- ♦ Noise filters and surge absorbers must be installed on power supply lines.
- ♦ Shielded cables must be used for all I/O signal lines and encoder lines. (Use tin-plated, mild steel wires for the shielding.)
- ♦ All cables, I/O wiring, and power lines connected to the Servo Drive must have clamp filters installed.
- ♦ The shields of all cables must be directly connected to a ground plate.

### Wiring Method

**R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN04L-ML2/-GN01H-ML2/-GN02H-ML2/-GN04H-ML2/-GN08H-ML2/-GN10H-ML2/-GN15H-ML2/-GN20H-ML2/-GN30H-ML2/-GN50H-ML2**

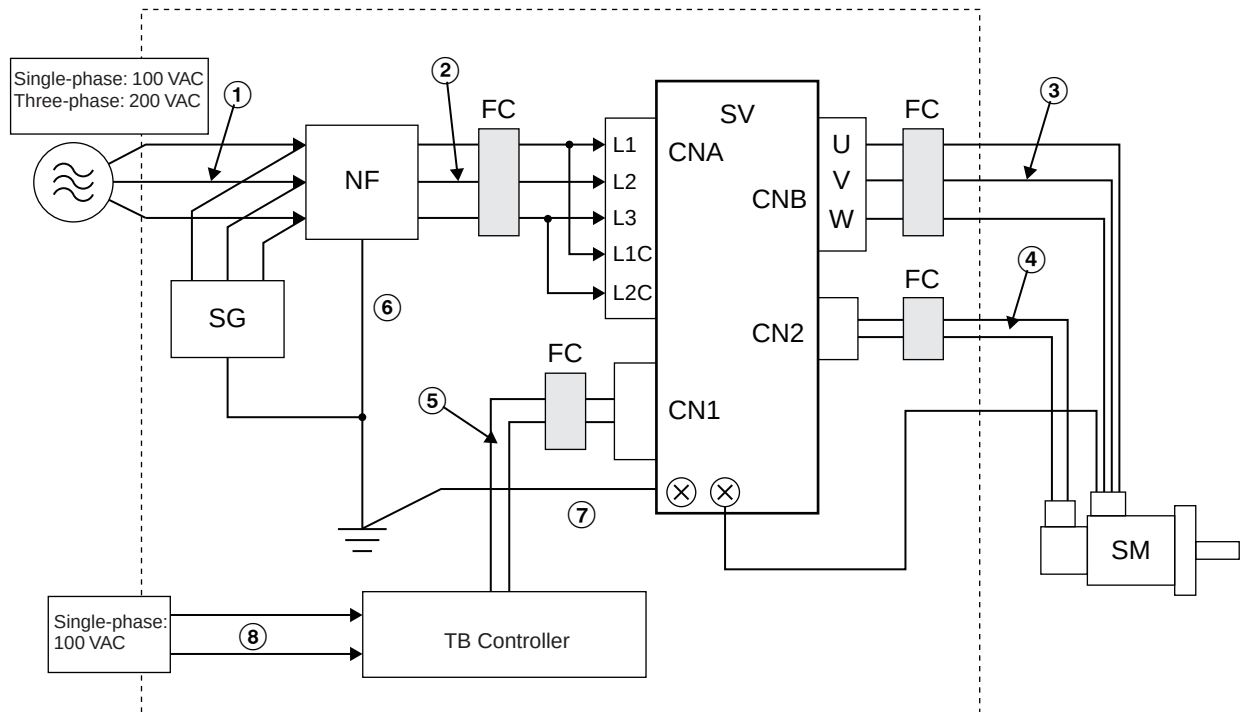


- \*1. For models with a single-phase power supply input (R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN04L-ML2/-GN01H-ML2/-GN02H-ML2/-GN04H-ML2/-GN08H-ML2), the main circuit power supply input terminals are L1 and L3.

- ♦ Ground the motor's frame to the machine ground when the motor is on a movable shaft.
- ♦ Use a ground plate for the frame ground for each Unit, as shown in the above diagrams, and ground to a single point.

## 4-3 Wiring Conforming to EMC Directives

- ♦ Use ground lines with a minimum thickness of 3.5 mm<sup>2</sup>, and arrange the wiring so that the ground lines are as short as possible.
- ♦ No-fuse breakers, surge absorbers, and noise filters should be positioned near the input terminal block (ground plate), and I/O lines should be separated and wired at the shortest distance.

### R88D-GN75H-ML2

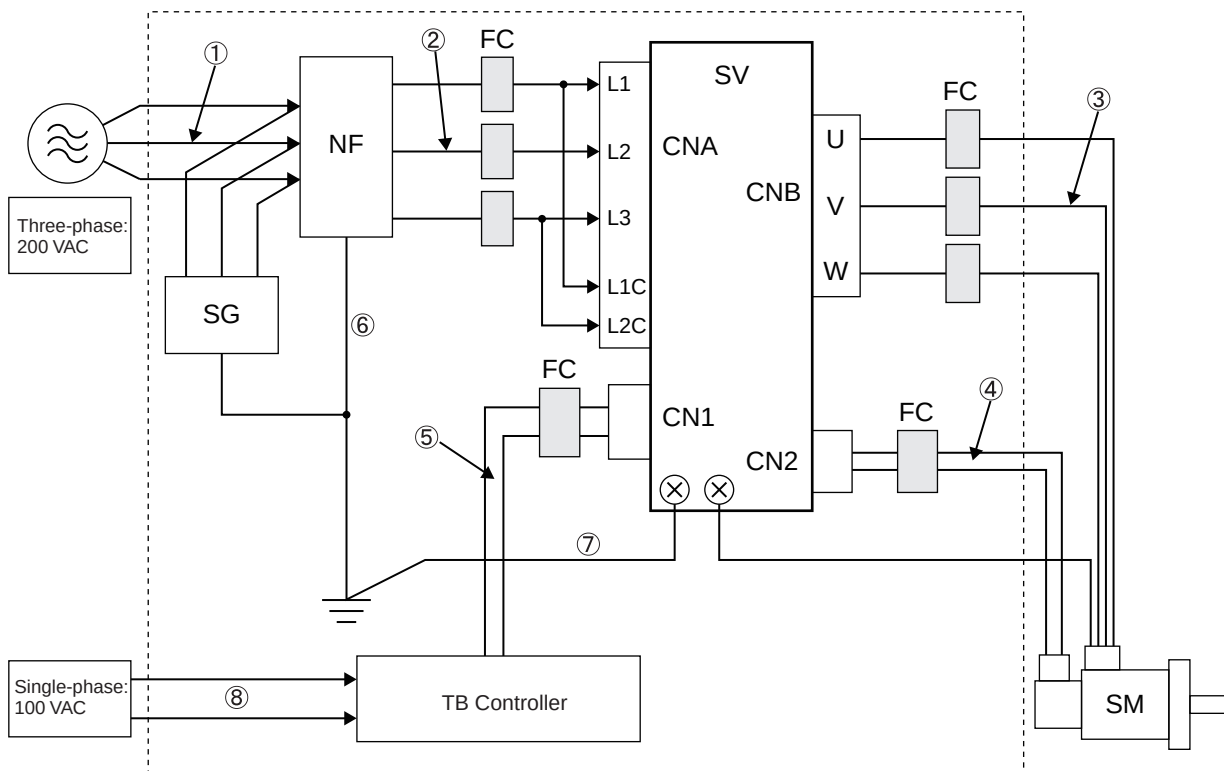

### Unit Details

| Symbol | Name           | Manufacturer                        | Model           | Remarks                        |
|--------|----------------|-------------------------------------|-----------------|--------------------------------|
| SG     | Surge absorber | Okaya Electric Industries Co., Ltd. | RAV781BWZ-4     | Single-phase 100 VAC           |
|        |                |                                     | RAV781BXZ-4     | Three-phase 200 VAC            |
| NF     | Noise filter   | Okaya Electric Industries Co., Ltd. | SUP-EK5-ER-6    | Single-phase 100/200 VAC (5 A) |
|        |                |                                     | 3SUP-HQ10-ER-6  | Three-phase 200 VAC (10A)      |
|        |                |                                     | 3SUP-HU30-ER-6  | Three-phase 200 VAC (30 A)     |
|        |                |                                     | 3SUP-HL50-ER-6B | Three-phase 200 VAC (50A)      |
| SV     | Servo Drive    | OMRON                               | ---             | *1                             |
| SM     | Servomotor     | OMRON                               | ---             | *1                             |
| FC     | Clamp core     | TDK                                 | ZACT305-1330    | ---                            |
| TB     | Controller     | ---                                 | ---             | Switch box                     |

\*1. A specified combination of Servo Drive and Servomotor must be used.

### Cable Details

| Symbol | Supplies from   | Connects to  | Cable name        | Length | Remarks                | Shielded | Ferrite |
|--------|-----------------|--------------|-------------------|--------|------------------------|----------|---------|
| ①      | AC power supply | Noise filter | Power supply line | 2 m    | Three-phase<br>200 VAC | No       | No      |
| ②      | Noise filter    | Servo Drive  | Power supply line | 2 m    | ---                    | No       | Yes     |
| ③      | Servo Drive     | Servomotor   | Power cable       | 20 m   | ---                    | Yes      | Yes     |
| ④      | Servo Drive     | Servomotor   | Encoder cable     | 20 m   | ---                    | No       | Yes     |
| ⑤      | Switch box      | Servo Drive  | I/O cable         | 2 m    | ---                    | No       | Yes     |
| ⑥      | Frame ground    | Noise filter | Frame ground line | 1.5 m  | ---                    | No       | No      |
| ⑦      | Frame ground    | Noise filter | Frame ground line | 1.5 m  | ---                    | No       | No      |
| ⑧      | AC power supply | Switch box   | Power supply line | 1.5 m  | ---                    | No       | No      |


### ■ Noise Filters for the Power Supply Input

Use the following noise filters for the Servo Drive power supply.


| Servo Drive model | Noise Filters for the Power Supply Input |               |        |                                 |                                     |
|-------------------|------------------------------------------|---------------|--------|---------------------------------|-------------------------------------|
|                   | Model                                    | Rated current | Phases | Maximum leakage current (60 Hz) | Manufacturer                        |
| R88D-GNA5L-ML2    | SUP-EK5-ER-6                             | 5 A           | Single | 1.0 mA<br>(at 250 VAC)          | Okaya Electric Industries Co., Ltd. |
| R88D-GN01L-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN02L-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN04L-ML2    | 3SUP-HQ10-ER-6                           | 10 A          | Three  | 3.5 mA<br>(at 500 VAC)          |                                     |
| R88D-GN01H-ML2    | SUP-EK5-ER-6                             | 5 A           | Single | 1.0 mA<br>(at 250 VAC)          |                                     |
| R88D-GN02H-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN04H-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN08H-ML2    | 3SUP-HQ10-ER-6                           | 10 A          | Three  | 3.5 mA<br>(at 500 VAC)          |                                     |
| R88D-GN10H-ML2    | 3SUP-HU30-ER-6                           | 30 A          | Three  | 3.5 mA<br>(at 500 VAC)          |                                     |
| R88D-GN15H-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN20H-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN30H-ML2    | 3SUP-HL50-ER-6B                          | 50 A          | Three  | 8.0 mA<br>(at 500 VAC)          |                                     |
| R88D-GN50H-ML2    |                                          |               |        |                                 |                                     |
| R88D-GN75H-ML2    |                                          |               |        |                                 |                                     |

- ♦ If no-fuse breakers are installed at the top and the power supply line is wired from the lower duct, use metal tubes for wiring or make sure that there is adequate distance between the input lines and the internal wiring. If input and output lines are wired together, noise resistance will decrease.
- ♦ Wire the noise filter as shown at the left in the following illustration. The noise filter must be installed as close as possible to the entrance of the control box.

### ○ Correct: Separate input and output

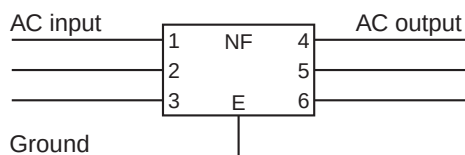


### ✗ Wrong: Noise not filtered effectively

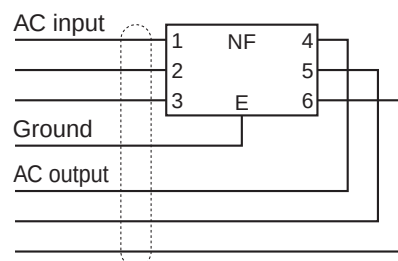


- ♦ Use twisted-pair cables for the power supply cables, or bind the cables.

### ○ Correct: Properly twisted

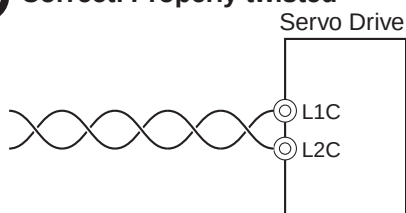

### ○ Correct: Cables are bound.

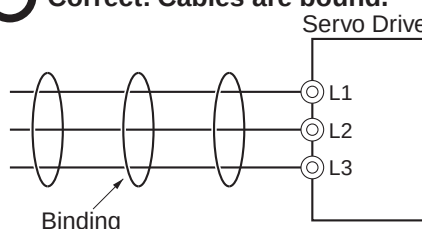

- ♦ Separate power supply cables and signal cables when wiring.

## ■ Control Panel Structure


Openings in the control panel, such as holes for cables, operating panel mounting holes, and gaps around the door, may allow electromagnetic waves into the panel. To prevent this, observe the recommendations described below when designing or selecting a control panel.

### Case Structure

- ♦ Use a metal control panel with welded joints at the top, bottom, and sides so that the surfaces will be electrically conductive.
- ♦ If assembly is required, strip the paint off the joint areas (or mask them during painting), to make them electrically conductive.
- ♦ The panel may warp and gaps may appear when screws are tightened. Be sure that no gaps appear when tightening screws.
- ♦ Do not leave any conductive part unconnected.
- ♦ Ground all Units within the case to the case itself.

### Door Structure

- ♦ Use a metal door.
- ♦ Use a water-draining structure where the door and case fit together, and leave no gaps. (Refer to the diagrams on the next page.)
- ♦ Use a conductive gasket between the door and the case. (Refer to the diagrams on the next page.)
- ♦ Strip the paint off the sections of the door and case that will be in contact with the conductive gasket (or mask them during painting), so that they will be electrically conductive.
- ♦ The panel may warp and gaps may appear when screws are tightened. Be sure that no gaps appear when tightening screws.

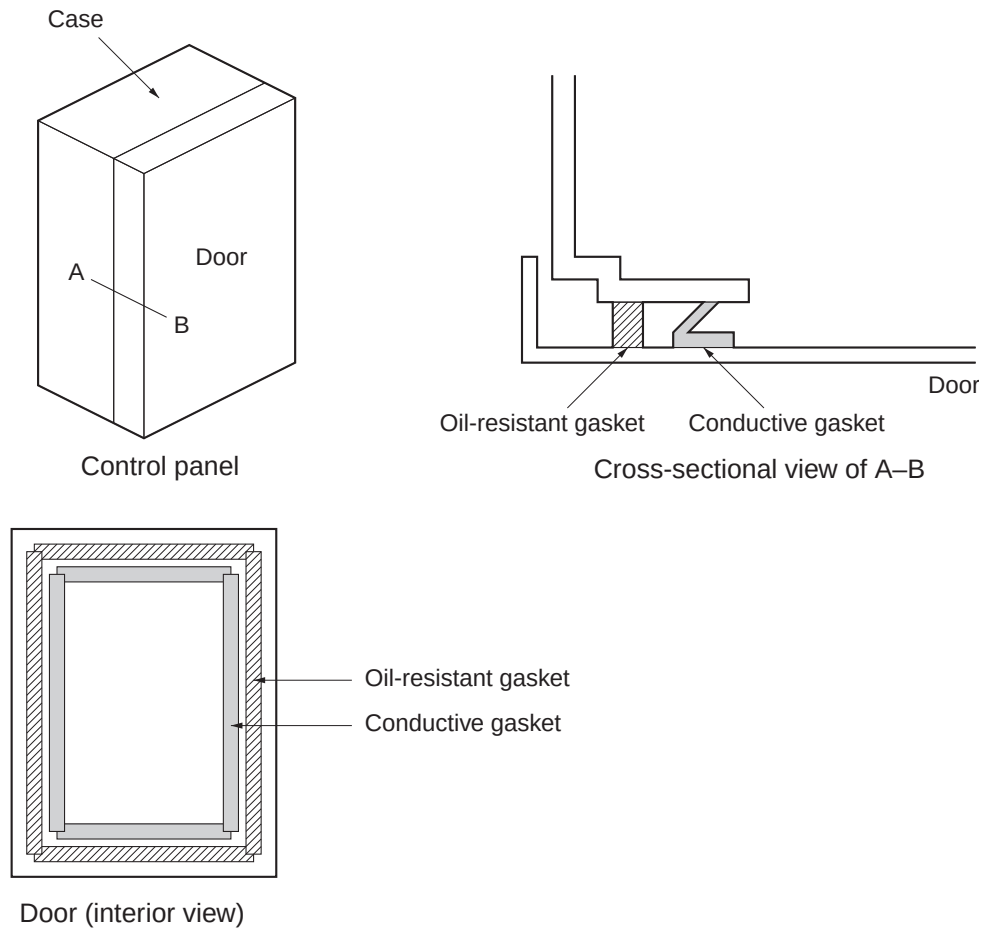

## Selecting Connection Components

This section explains the criteria for selecting the connection components required to improve noise resistance.

Understand each component's characteristics, such as its capacity, performance, and applicable conditions when selecting the components.

For more details, contact the manufacturers directly.

### 4

#### ■ No-fuse Breakers (NFB)

When selecting a no-fuse breaker, consider the maximum input current and the inrush current.

##### Maximum Input Current:

- ♦ The Servo Drive's maximum momentary output is approximately three times the rated output, and can be output for up to three seconds.  
Therefore, select no-fuse breakers with an operating time of at least five seconds at 300% of the rated current. General-purpose and low-speed no-fuse breakers are generally suitable.
- ♦ Select a no-fuse-breaker with a rated current greater than the total effective load current of all the Servomotors. The rated current of the power supply input for each Servomotor is provided in *Main Circuit and Servomotor Connector Specifications* on page 4-20.
- ♦ Add the current consumption of other controllers, and any other components, when selecting the NFB.

##### Inrush Current:

- ♦ The following table lists the Servo Drive inrush currents.
- ♦ With low-speed no-fuse breakers, an inrush current 10 times the rated current can flow for 0.02 second.
- ♦ When multiple Servo Drives are turned ON simultaneously, select a no-fuse-breaker with a 20-ms allowable current that is greater than the total inrush current, shown in the following table.

| Servo Drive model | Inrush current (Ao-p)     |                              |
|-------------------|---------------------------|------------------------------|
|                   | Main circuit power supply | Control circuit power supply |
| R88D-GNA5L-ML2    | 7                         | 14                           |
| R88D-GN01L-ML2    | 7                         | 14                           |
| R88D-GN02L-ML2    | 7                         | 14                           |
| R88D-GN04L-ML2    | 30                        | 14                           |
| R88D-GN01H-ML2    | 14                        | 28                           |
| R88D-GN02H-ML2    | 14                        | 28                           |
| R88D-GN04H-ML2    | 14                        | 28                           |
| R88D-GN08H-ML2    | 60                        | 28                           |
| R88D-GN10H-ML2    | 29                        | 28                           |
| R88D-GN15H-ML2    | 29                        | 28                           |
| R88D-GN20H-ML2    | 29                        | 14                           |
| R88D-GN30H-ML2    | 22                        | 14                           |
| R88D-GN50H-ML2    | 22                        | 14                           |
| R88D-GN75H-ML2    | 88                        | 66                           |



## ■ Leakage Breakers

- ♦ Select leakage breakers designed for protection against grounding faults.
- ♦ Because switching takes place inside the Servo Drives, high-frequency current leaks from the switching elements of the Servo Drive, the armature of the motor, and the cables.  
High-frequency breakers with surge withstand capability do not detect high-frequency current, preventing the breaker from operating with high-frequency leakage current.  
When using a general-purpose leakage breaker, use three times the sum of the leakage current given in the following table as a reference value.
- ♦ When selecting leakage breakers, remember to add the leakage current from devices other than the Servomotor, such as machines using a switching power supply, noise filters, inverters, and so on. To prevent malfunction due to inrush current, we recommend using a leakage breaker of ten times the total of all current values.
- ♦ The leakage breaker is activated at 50% of the rated current. Allow leeway when selecting a leakage breaker.
- ♦ For details on leakage breakers, refer to the manufacturer's catalog.
- ♦ The following table shows the Servomotor leakage current for each Servo Drive model.

| Servo Drive model | Input power        | Leakage current                              |                                                         |                          |
|-------------------|--------------------|----------------------------------------------|---------------------------------------------------------|--------------------------|
|                   |                    | Resistance method<br>Resistor plus capacitor | Clamping method<br>(Measurement filter ON at H10K13283) |                          |
|                   |                    | Motor cable length: 3 m                      | Motor cable length: 3 m                                 | Per meter of motor cable |
| R88D-GNA5L-ML2    | Single-phase 100 V | 0.42 mA                                      | 0.33 mA                                                 | 0.003 mA                 |
| R88D-GN01L-ML2    | Single-phase 100 V | 0.45 mA                                      | 0.35 mA                                                 | 0.002 mA                 |
| R88D-GN02L-ML2    | Single-phase 100 V | 0.46 mA                                      | 0.35 mA                                                 | 0.002 mA                 |
| R88D-GN04L-ML2    | Single-phase 100 V | 0.48 mA                                      | 0.35 mA                                                 | 0.002 mA                 |
| R88D-GN01H-ML2    | Single-phase 200V  | 0.92 mA                                      | 1.04 mA                                                 | 0.016 mA                 |
| R88D-GN02H-ML2    | Single-phase 200V  | 0.94 mA                                      | 1.06 mA                                                 | 0.013 mA                 |
| R88D-GN04H-ML2    | Single-phase 200V  | 1.15 mA                                      | 1.13 mA                                                 | 0.013 mA                 |
| R88D-GN08H-ML2    | Single-phase 200V  | 1.27 mA                                      | 1.09 mA                                                 | 0.014 mA                 |
| R88D-GN10H-ML2    | Single-phase 200V  | 1.27 mA                                      | 1.19 mA                                                 | 0.015 mA                 |
| R88D-GN15H-ML2    | Single-phase 200V  | 1.51 mA                                      | 1.20 mA                                                 | 0.015 mA                 |
| R88D-GN08H-ML2    | Three-phase 200 V  | 1.62 mA                                      | 0.98 mA                                                 | 0.009 mA                 |
| R88D-GN10H-ML2    | Three-phase 200 V  | 1.77 mA                                      | 1.03 mA                                                 | 0.008 mA                 |
| R88D-GN15H-ML2    | Three-phase 200 V  | 2.18 mA                                      | 1.04 mA                                                 | 0.003 mA                 |
| R88D-GN20H-ML2    | Three-phase 200 V  | 2.88 mA                                      | 1.08 mA                                                 | 0.008 mA                 |
| R88D-GN30H-ML2    | Three-phase 200 V  | 2.83 mA                                      | 1.15 mA                                                 | 0.011 mA                 |
| R88D-GN50H-ML2    | Three-phase 200 V  | 3.07 mA                                      | 1.14 mA                                                 | 0.011 mA                 |
| R88D-GN75H-ML2    | Three-phase 200 V  | 6.32 mA                                      | 1.23 mA                                                 | 0.013 mA                 |

**Note 1.** The above leakage current is for cases when Servomotor power cable length is 3 meters or shorter.  
(The leakage current depends on the power cable length and the insulation.)

**Note 2.** The resistor plus capacitor method provides a yardstick to measure the leakage current that may flow through the human body when the Servomotor or Servo Drive is not grounded correctly.  
The above leakage current is for normal temperature and humidity. (The leakage current depends on the temperature and humidity.)

■ Surge Absorbers

- ♦ Use surge absorbers to absorb lightning surge voltage and abnormal voltage from power supply input lines.
- ♦ When selecting surge absorbers, take into account the varistor voltage, the allowable surge current and the energy.
- ♦ For 200-VAC systems, use surge absorbers with a varistor voltage of 620 V.
- ♦ The surge absorbers shown in the following table are recommended.



| Manufacturer                        | Model          | Surge immunity  |         | Type  | Remarks                  |
|-------------------------------------|----------------|-----------------|---------|-------|--------------------------|
| Okaya Electric Industries Co., Ltd. | R·A·V-781BWZ-4 | 700 V $\pm$ 20% | 2,500 A | Block | Single-phase 100/200 VAC |
| Okaya Electric Industries Co., Ltd. | R·A·V-781BXZ-4 | 700 V $\pm$ 20% | 2,500 A |       | Three-phase 200 VAC      |

**Note 1.** Refer to the manufacturers' documentation for operating details.



**Note 2.** The surge immunity is for a standard impulse current of 8/20  $\mu$ s. If pulses are wide, either decrease the current or change to a larger-capacity surge absorber.

Dimensions

Single-phase BWZ Series

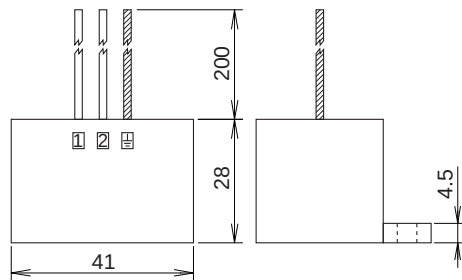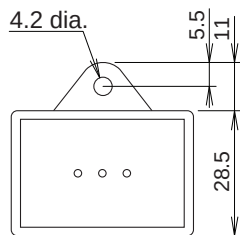


Three-phase BXZ Series

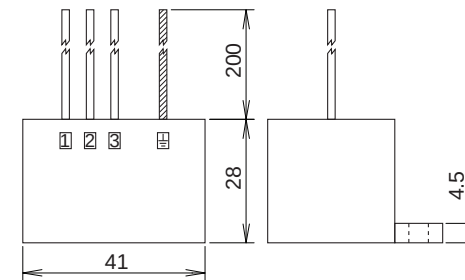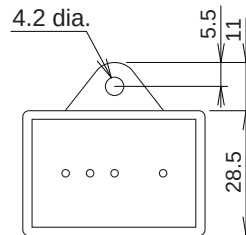


Equalizing Circuits

Single-phase BWZ Series

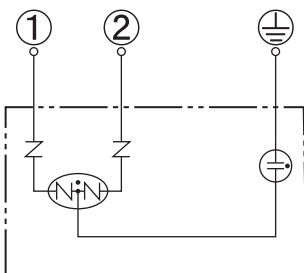

Three-phase BXZ Series

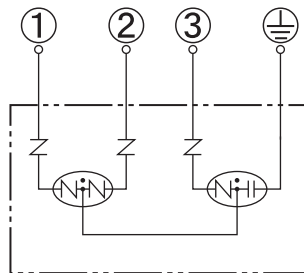


## ■ Noise Filters for the Power Supply Input

◆ Use the following noise filters for the Servo Drive's power supply.


| Servo Drive model | Noise filter for the Power Supply Input |               |                              |                                     |
|-------------------|-----------------------------------------|---------------|------------------------------|-------------------------------------|
|                   | Model                                   | Rated current | Max. leakage current (60 Hz) | Manufacturer                        |
| R88D-GNA5L-ML2    | SUP-EK5-ER-6                            | 5 A           | 1 mA<br>(at 250 VAC)         | Okaya Electric Industries Co., Ltd. |
| R88D-GN01L-ML2    |                                         |               |                              |                                     |
| R88D-GN02L-ML2    |                                         |               |                              |                                     |
| R88D-GN04L-ML2    | 3SUP-HQ10-ER-6                          | 10 A          | 3.5 mA<br>(at 500 VAC)       |                                     |
| R88D-GN01H-ML2    | SUP-EK5-ER-6                            | 5 A           | 1 mA<br>(at 250 VAC)         |                                     |
| R88D-GN02H-ML2    |                                         |               |                              |                                     |
| R88D-GN04H-ML2    |                                         |               |                              |                                     |
| R88D-GN08H-ML2    | 3SUP-HQ10-ER-6                          | 10 A          | 3.5 mA<br>(at 500 VAC)       |                                     |
| R88D-GN10H-ML2    | 3SUP-HU30-ER-6                          | 30 A          | 3.5 mA<br>(at 500 VAC)       |                                     |
| R88D-GN15H-ML2    |                                         |               |                              |                                     |
| R88D-GN20H-ML2    |                                         |               |                              |                                     |
| R88D-GN30H-ML2    | 3SUP-HL50-ER-6B                         | 50 A          | 8 mA<br>(at 500 VAC)         |                                     |
| R88D-GN50H-ML2    |                                         |               |                              |                                     |
| R88D-GN75H-ML2    |                                         |               |                              |                                     |

## Dimensions

SUP-EK5-ER-6

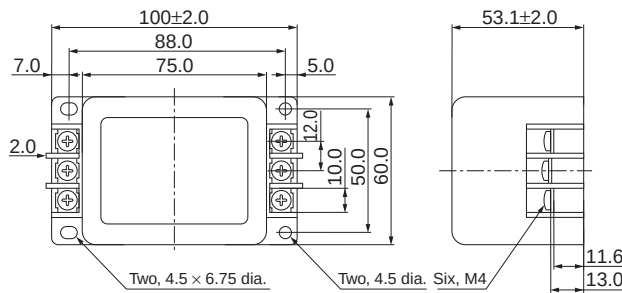


3SUP-HQ10-ER-6

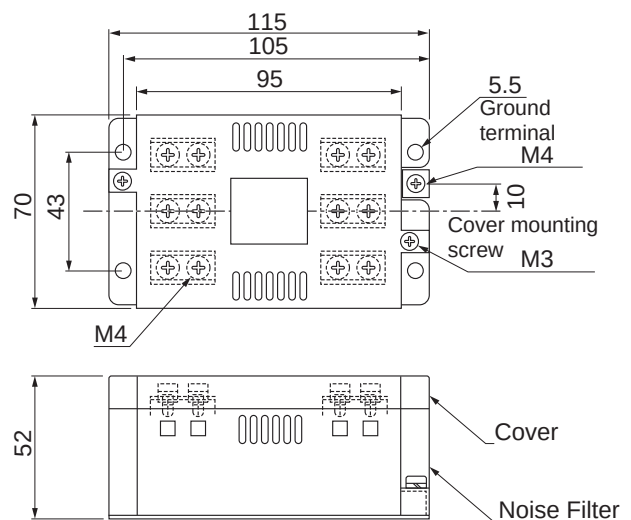


## 4-3 Wiring Conforming to EMC Directives

3SUP-HU30-ER-6

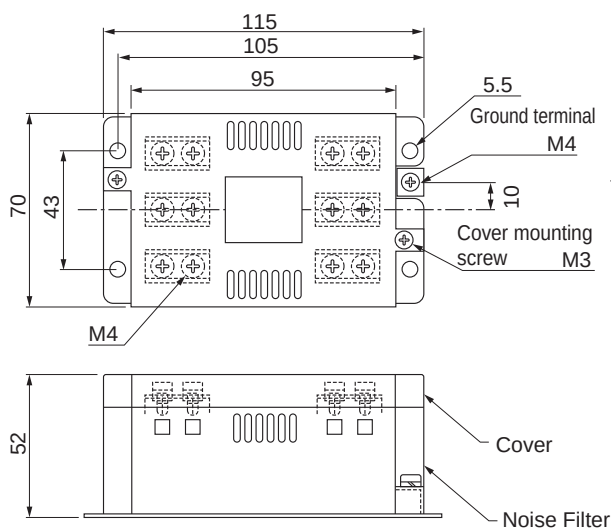


3SUP-HL50-ER-6B

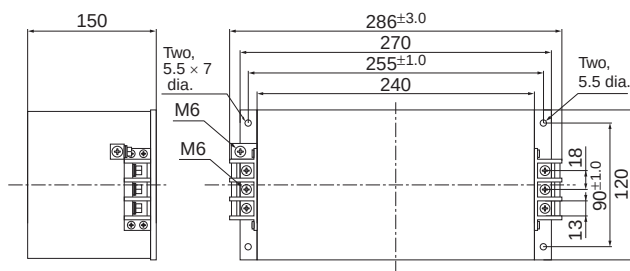


### Circuit Diagrams


SUP-EK5-ER-6

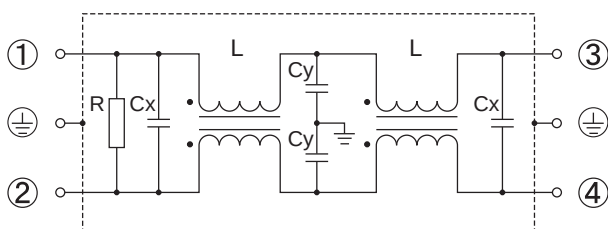


3SUP-HQ10-ER-6

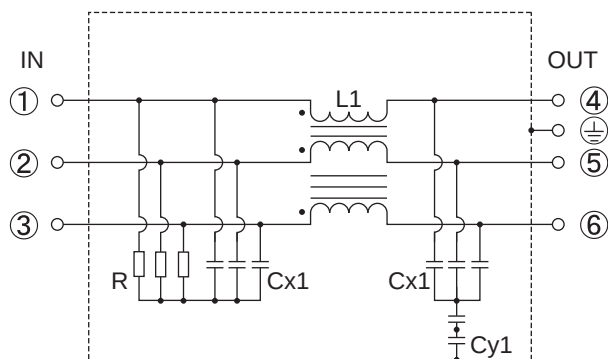

3SUP-HU30-ER-6

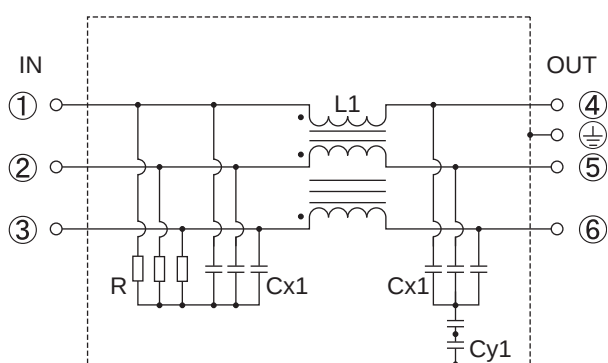

3SUP-HL50-ER-6B

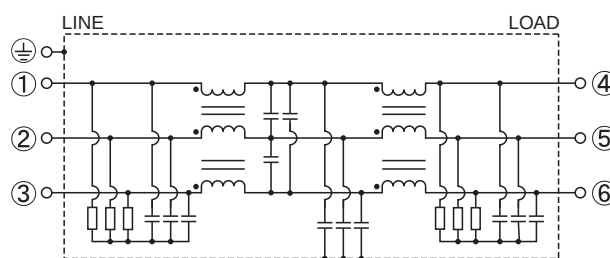

### ■ Noise Filter for the Brake Power Supply

♦ Use the following noise filter for the brake power supply.

| Model        | Rated current | Rated voltage | Leakage current                | Manufacturer                        |
|--------------|---------------|---------------|--------------------------------|-------------------------------------|
| SUP-EK5-ER-6 | 5 A           | 250 V         | 1.0 mA<br>(at 250 Vrms, 60 Hz) | Okaya Electric Industries Co., Ltd. |

**Note** Noise can also be reduced by using 1.5 turns with the ZCAT3035-1330 (TDK) Radio Noise Filter.

## ■ Radio Noise Filters and Emission Noise Prevention Clamp Cores

Use one of the following filters to prevent switching noise of PWM of the Servo Drive and to prevent noise emitted from the internal oscillation circuit.

| Model            | Manufacturer | Application                        |
|------------------|--------------|------------------------------------|
| 3G3AX-ZCL1 *1    | OMRON        | Servo Drive output and power cable |
| 3G3AX-ZCL2 *2    | OMRON        | Servo Drive output and power cable |
| ESD-R-47B *3     | NEC TOKIN    | Servo Drive output and power cable |
| ZCAT3035-1330 *4 | TDK          | Encoder cable and I/O cable        |

\*1. Generally used for 1.5 kW or higher.


\*2. Generally used for 1.5 kW or lower. The maximum number of windings is three turns.

\*3. Generally used for 50/100 W. The maximum number of windings is two turns.


\*4. Also used on the Servo Drive output power lines to comply with the EMC Directives. Only a clamp is used. This clamp can also be used to reduce noise current on a frame ground line.

### Dimensions


3G3AX-ZCL1

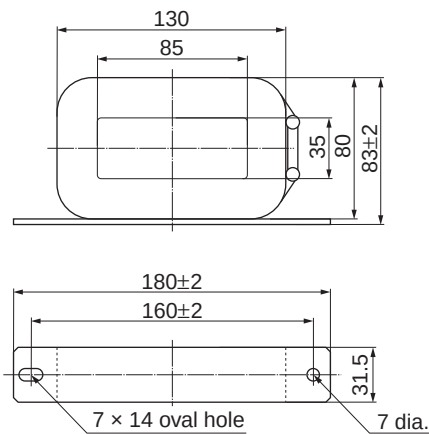


3G3AX-ZCL2

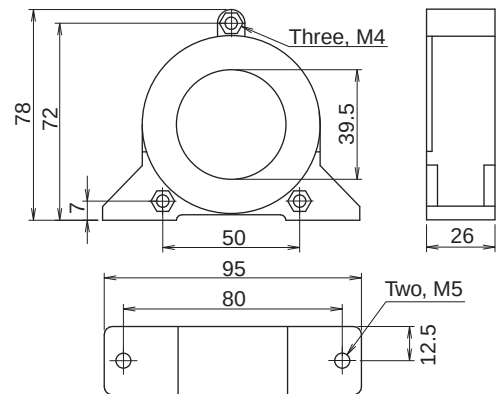

ESD-R-47B

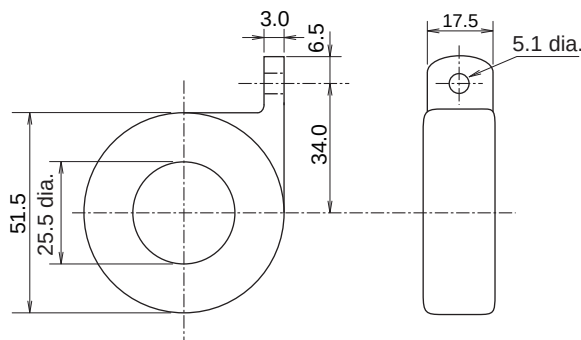


ZCAT 3035-1330

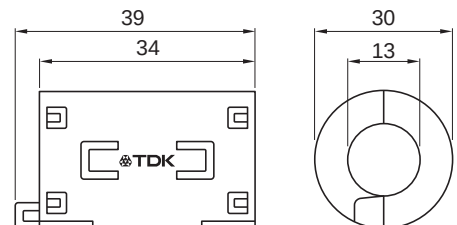


Impedance Characteristics


3G3AX-ZCL1

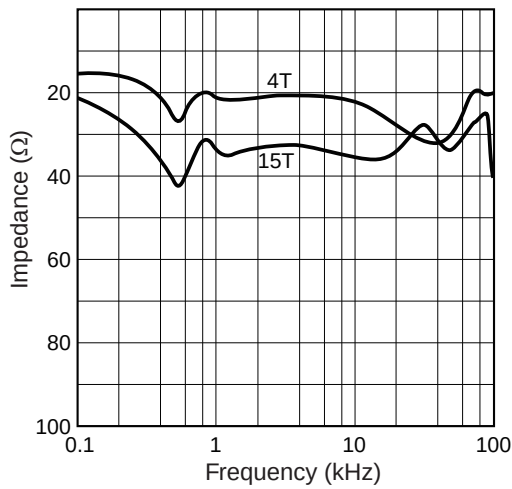


3G3AX-ZCL2

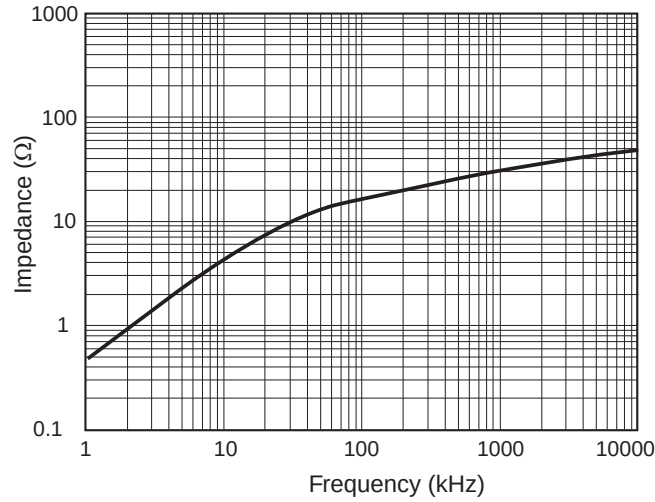

ESD-R-47B

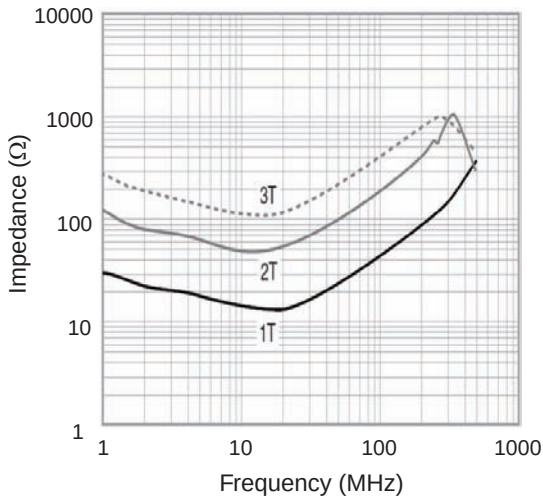

ZCAT 3035-1330

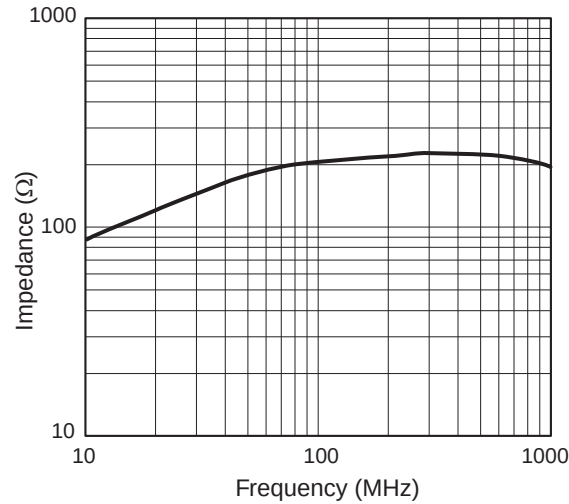

## ■ Surge Suppressors

- ♦ Install surge suppressors for loads that have induction coils, such as relays, solenoids, brakes, clutches, etc.
- ♦ The following table shows the types of surge suppressors and recommended products.

| Type                  | Features                                                                                                                                                                                                                                    | Recommended products                                                                                                                                                                     |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Diode                 | Diodes are used for relatively small loads when the reset time is not an issue, such as relays.<br>At power shutoff the surge voltage is the lowest, but the reset time takes longer.<br>Used for 24/48-VDC systems.                        | Use a fast-recovery diode with a short reverse recovery time (e.g. RU2 of Sanken Electric Co., Ltd.).                                                                                    |
| Thyristor or varistor | Thyristors and varistors are used for loads with large induction coils, as in electromagnetic brakes, solenoids, etc., and when reset time is an issue. The surge voltage at power shutoff is approximately 1.5 times the varistor voltage. | Select the varistor voltage as follows:<br>24 VDC system: Varistor V. 39V<br>100 VDC system: Varistor V. 200 V<br>100 VAC system: Varistor V. 270 V<br>200 VAC system: Varistor V. 470 V |
| Capacitor + resistor  | The capacitor plus resistor combination is used to absorb vibration in the surge at power shutoff. The reset time can be shortened by selecting the appropriate capacitance and resistance.                                                 | Okaya Electric Industries Co., Ltd.<br>XEB12002 0.2 $\mu$ F - 120 $\Omega$<br>XEB12003 0.3 $\mu$ F - 120 $\Omega$                                                                        |

- ♦ Thyristors and varistors are made by the following companies. Refer to manufacturers' documentation for details on these components.

Thyristors: Ishizuka Electronics Co.

Varistors: Ishizuka Electronics Co., Matsushita Electric Industrial Co.

## ■ Contactors

- ♦ Select contactors based on the circuit's inrush current and the maximum momentary phase current.
- ♦ The Servo Drive inrush current is covered in the preceding explanation of no-fuse breaker selection, and the maximum momentary phase current is approximately twice the rated current.
- ♦ The following table shows the recommended contactors.

| Manufacturer | Model        | Rated current | Coil voltage |
|--------------|--------------|---------------|--------------|
| OMRON        | J7L-09-22200 | 11 A          | 200 VAC      |
|              | J7L-12-22200 | 13 A          | 200 VAC      |
|              | J7L-18-22200 | 18 A          | 200 VAC      |
|              | J7L-32-22200 | 26 A          | 200 VAC      |
|              | J7L-40-22200 | 35 A          | 200 VAC      |
|              | J7L-50-22200 | 50 A          | 200 VAC      |
|              | J7L-65-22200 | 65 A          | 200 VAC      |
|              | J7L-75-22200 | 75 A          | 200 VAC      |

Improving Encoder Cable Noise Resistance

Take the following steps during wiring and installation to improve the encoder's noise resistance.


- ♦ Always use the specified Encoder Cables.
- ♦ If cables are joined midway, be sure to use connectors and do not remove more than 50 mm of the cable insulation. In addition, always use shielded cables.
- ♦ Do not coil cables. If cables are long and are coiled, mutual induction and inductance will increase and cause malfunctions. Always use cables fully extended.
- ♦ When installing noise filters for Encoder Cables, use clamp filters.
- ♦ The following table shows the recommended clamp filters.

| Manufacturer | Product name  | Model         | Specifications                 |
|--------------|---------------|---------------|--------------------------------|
| NEC TOKIN    | Clamp Filters | ESD-SR-250    | For cable diameter up to 13 mm |
| TDK          | Clamp Filters | ZCAT3035-1330 | For cable diameter up to 13 mm |

- ♦ Do not place the Encoder Cable with the following cables in the same duct:  
Control Cables for brakes, solenoids, clutches, and valves.


Dimensions

ESD-SR-250

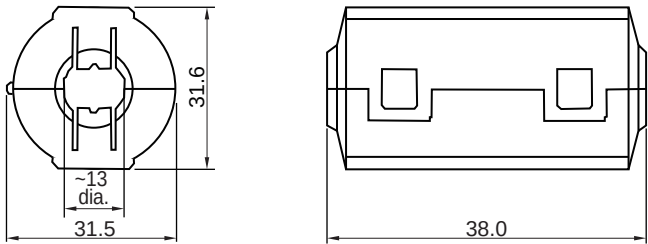

Impedance Characteristics

ESD-SR-250

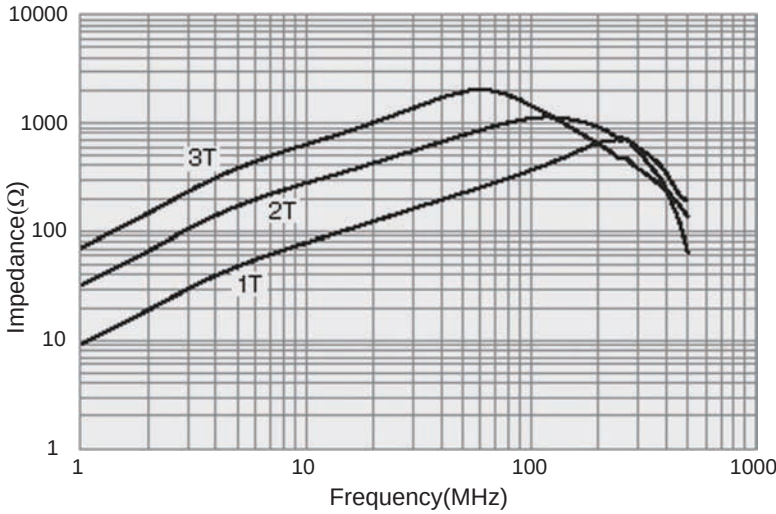



## ■ Improving Control I/O Signal Noise Resistance

Positioning can be affected and I/O signal errors can occur if control I/O is influenced by noise.

- ♦ Use completely separate power supplies for the control power supply (especially 24 VDC) and the external operation power supply. In particular, do not connect the two power supply ground wires.
- ♦ Install a noise filter on the primary side of the control power supply.
- ♦ If Servomotors with brakes are being used, do not use the same 24-VDC power supply for both the brakes and the control I/O. Additionally, do not connect the ground wires. Connecting the ground wires may cause I/O signal errors.
- ♦ Keep the power supply for pulse commands and deviation counter reset input lines separated from the control power supply as far as possible. In particular, do not connect the two power supply ground wires.
- ♦ We recommend using line drivers for the pulse command and deviation counter reset outputs.
- ♦ Always use twisted-pair shielded cable for the pulse command and deviation counter reset signal lines, and connect both ends of the shield to frame grounds.
- ♦ If the control power supply wiring is long, noise resistance can be improved by adding 1- $\mu$ F laminated ceramic capacitors between the control power supply and ground at the Servo Drive input section or the controller output section.
- ♦ For open-collector specifications, keep the length of wires to within two meters.

## ■ Reactors to Reduce Harmonic Current

### Harmonic Current Countermeasures

- ♦ The Reactor is used for suppressing harmonic currents. It suppresses sudden and quick changes in electric currents.
- ♦ "The Guidelines for Suppressing Harmonic Currents in Home Appliances and General Purpose Components" require that manufacturers take appropriate measures to suppress harmonic current emissions onto power supply lines.
- ♦ Select the proper Reactor model according to the Servo Drive to be used.

| Servo Drive model                                  | Reactor specifications |               |            |
|----------------------------------------------------|------------------------|---------------|------------|
|                                                    | Model                  | Rated current | Inductance |
| R88D-GNA5L-ML2<br>R88D-GN01H-ML2                   | 3G3AX-DL2002           | 1.6 A         | 21.4 mH    |
| R88D-GN01L-ML2<br>R88D-GN02H-ML2                   | 3G3AX-DL2004           | 3.2 A         | 10.7 mH    |
| R88D-GN02L-ML2<br>R88D-GN04H-ML2                   | 3G3AX-DL2007           | 6.1 A         | 6.75 mH    |
| R88D-GN04L-ML2<br>R88D-GN08H-ML2<br>R88D-GN10H-ML2 | 3G3AX-DL2015           | 9.3 A         | 3.51 mH    |
| R88D-GN15H-ML2                                     | 3G3AX-DL2022           | 13.8 A        | 2.51 mH    |
| R88D-GN08H-ML2<br>R88D-GN10H-ML2<br>R88D-GN15H-ML2 | 3G3AX-AL2025           | 10.0 A        | 2.8 mH     |
| R88D-GN20H-ML2<br>R88D-GN30H-ML2                   | 3G3AX-AL2055           | 20.0 A        | 0.88 mH    |
| R88D-GN50H-ML2                                     | 3G3AX-AL2110           | 34.0 A        | 0.35 mH    |
| R88D-GN75H-ML2                                     | 3G3AX-AL2220           | 67.0 A        | 0.18 mH    |

### ■ Selecting Other Parts for Noise Resistance

This section explains the criteria for selecting other connection components required to improve noise resistance.

Understand each component's characteristics, such as its capacity, performance, and applicable conditions when selecting the components.

For more details, contact the manufacturers directly.

#### Noise Filters for the Power Supply Input

- ♦ Use a noise filter to attenuate external noise and reduce noise emitted from the Servo Drive.
- ♦ Select a noise filter with a rated current that is at least two times greater than the effective load current (the rated current of the main circuit power supply input given in *Main Circuit and Servomotor Connector Specifications* on page 4-20).

| Manufacturer                        | Model           | Rated current | Applicable standards | Remarks      |
|-------------------------------------|-----------------|---------------|----------------------|--------------|
| NEC TOKIN                           | GT-2050         | 5 A           | UL, CSA, VDE, TÜV    | Single-phase |
|                                     | GT-2100         | 10 A          |                      |              |
|                                     | GT-2150         | 15 A          |                      |              |
|                                     | GT-2150         | 20 A          |                      |              |
|                                     | HFP-2153        | 15 A          | UL, CSA, TÜV         | Three-phase  |
|                                     | HFP-2303        | 30 A          |                      |              |
| Okaya Electric Industries Co., Ltd. | SUP-EK10-ER-6   | 10 A          | UL, cUL, TÜV         | Single-phase |
|                                     | SUP-EK15-ER-6   | 15 A          |                      |              |
|                                     | SUP-EK20-ER-6   | 20 A          |                      |              |
|                                     | SUP-EK30-ER-6   | 30 A          |                      |              |
|                                     | 3SUP-HL10-ER-6  | 10 A          | UL, TÜV              | Three-phase  |
|                                     | 3SUP-HL15-ER-6  | 15 A          |                      |              |
|                                     | 3SUP-HL30-ER-6  | 30 A          |                      |              |
|                                     | 3SUP-HL75-ER-6  | 75 A          |                      |              |
|                                     | 3SUP-HL100-ER-6 | 100 A         |                      |              |
| TDK                                 | ZRCS2006-00S    | 6 A           | UL, CSA, NEMKO       | Single-phase |
|                                     | ZRCS2010-00S    | 10 A          |                      |              |
|                                     | ZRCS2020-00S    | 20 A          |                      |              |
|                                     | ZRCS2030-00S    | 30 A          |                      |              |
|                                     | ZRCT5050-MF     | 50 A          | UL, CSA, NEMKO       | Three-phase  |
|                                     | ZRCT5080-MF     | 80 A          |                      |              |
|                                     | ZRCT5100-MF     | 100 A         |                      |              |

**Note 1.** To attenuate noise at low frequencies below 200 kHz, use an isolation transformer and a noise filter.

**Note 2.** To attenuate noise at high frequencies over 30 MHz, use a ferrite core and a high-frequency noise filter with a feed-through capacitor.

**Note 3.** If multiple Servo Drives are connected to a single noise filter, select a noise filter with a rated current at least two times the total rated current of all the Servo Drives.

### Noise Filters for Servomotor Output

- ♦ Use noise filters without built-in capacitors on the Servomotor output lines.
- ♦ Select a noise filter with a rated current at least two times the Servo Drive's continuous output current.
- ♦ The following table shows the noise filters that are recommended for Servomotor output.


| Manufacturer | Model       | Rated current | Remarks             |
|--------------|-------------|---------------|---------------------|
| OMRON        | 3G3AX-NF001 | 6 A           | For inverter output |
|              | 3G3AX-NF002 | 12 A          |                     |
|              | 3G3AX-NF003 | 25 A          |                     |
|              | 3G3AX-NF004 | 50 A          |                     |
|              | 3G3AX-NF005 | 75 A          |                     |
|              | 3G3AX-NF006 | 100 A         |                     |

**Note 1.** Servomotor output lines cannot use the same noise filters for power supplies.

**Note 2.** Typical general-purpose noise filters are made for power supply frequencies of 50/60 Hz. If these noise filters are connected to the PWM output of the Servo Drive, a very large (about 100 times larger) leakage current will flow through the noise filter's condenser and the Servo Drive could be damaged.

### Dimensions


#### 3G3AX-NF001/-NF002

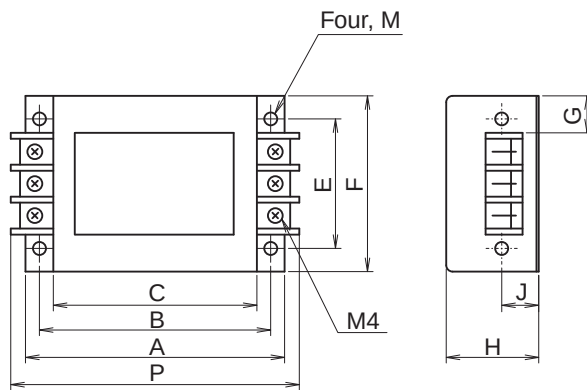

| Model       | Dimensions (mm) |     |     |    |     |    |    |    |          |     |
|-------------|-----------------|-----|-----|----|-----|----|----|----|----------|-----|
|             | A               | B   | C   | E  | F   | G  | H  | J  | M        | P   |
| 3G3AX-NF001 | 140             | 125 | 110 | 70 | 95  | 22 | 50 | 20 | 4.5 dia. | 156 |
| 3G3AX-NF002 | 160             | 145 | 130 | 80 | 110 | 30 | 70 | 25 | 5.5 dia. | 176 |

4-3 Wiring Conforming to EMC Directives

3G3AX-NF003/-NF004/-NF005/-NF006

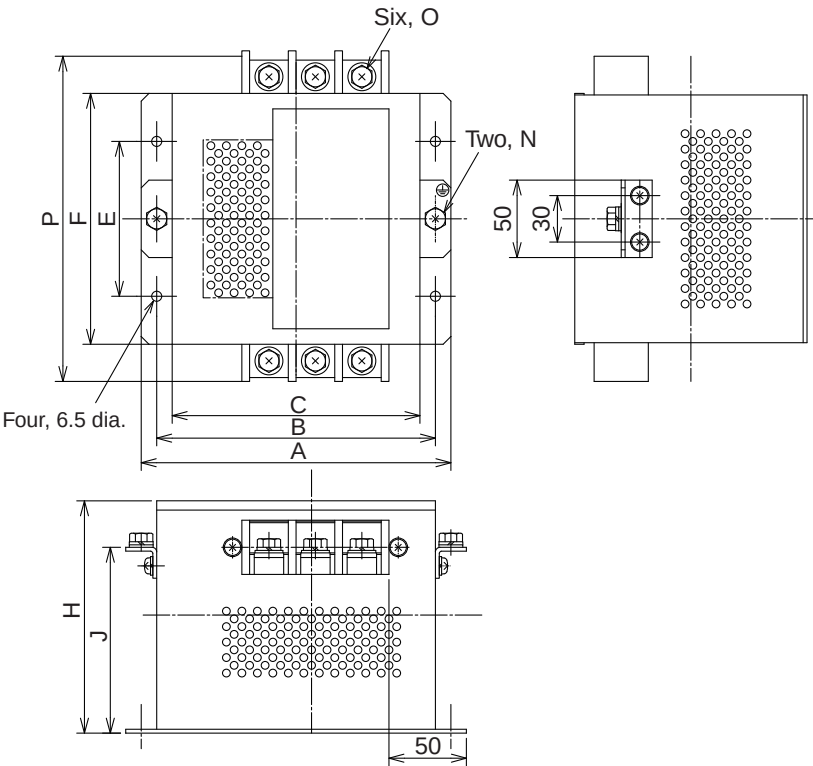


| Model       | Dimensions (mm) |     |     |     |     |     |     |     |    |     |
|-------------|-----------------|-----|-----|-----|-----|-----|-----|-----|----|-----|
|             | A               | B   | C   | E   | F   | H   | J   | N   | O  | P   |
| 3G3AX-NF003 | 160             | 145 | 130 | 80  | 112 | 120 | --- | --- | M4 | 154 |
| 3G3AX-NF004 | 200             | 180 | 160 | 100 | 162 | 150 | 120 | M5  | M5 | 210 |
| 3G3AX-NF005 | 220             | 200 | 180 | 100 | 182 | 170 | 140 | M6  | M6 | 230 |
| 3G3AX-NF006 | 220             | 200 | 180 | 100 | 182 | 170 | 140 | M8  | M8 | 237 |

## 4-4 Regenerative Energy Absorption

The Servo Drives have internal regenerative energy absorption circuitry, which absorbs the regenerative energy produced during Servomotor deceleration and prevents the DC voltage from increasing. An overvoltage error occurs, however, if the amount of regenerative energy from the Servomotor is too large. If this occurs, measures must be taken to reduce the regenerative energy by changing operating patterns, or to increase the regenerative energy absorption capacity by connecting an External Regeneration Resistor.

### Calculating the Regenerative Energy

#### ■ Horizontal Axis

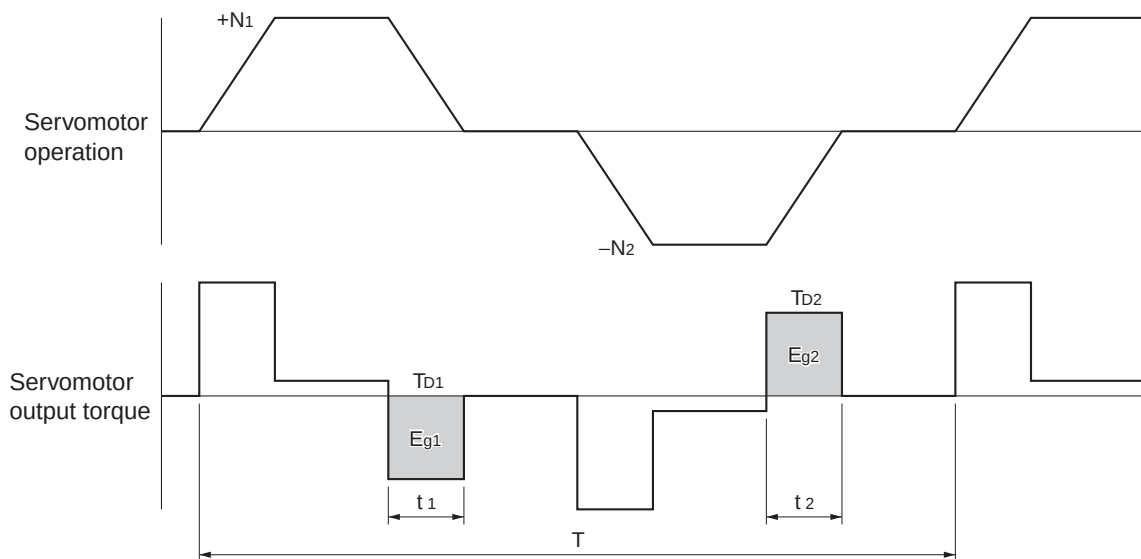

- In the output torque graph, acceleration in the positive direction is shown as positive, and acceleration in the negative direction is shown as negative.
- The regenerative energy values for each region can be derived from the following equations.

$$E_{g1} = \frac{1}{2} * \frac{2\pi}{60} * N_1 * T_{D1} * t_1 \text{ [J]}$$

$$E_{g2} = \frac{1}{2} * \frac{2\pi}{60} * N_2 * T_{D2} * t_2 \text{ [J]}$$

$N_1, N_2$ : Rotation speed at beginning of deceleration [r/min]

$T_{D1}, T_{D2}$ : Deceleration torque [N·m]

$t_1, t_2$ : Deceleration time [s]

**Note** Due to the loss of winding resistance and PWM, the actual regenerative energy will be approximately 90% of the values derived from these equations.


- ♦ For Servo Drive models with internal capacitors used for absorbing regenerative energy, the values for both  $E_{g1}$  or  $E_{g2}$  (unit: J) must be lower than the Servo Drive's regenerative energy absorption capacity. (The capacity depends on the model. For details, refer to *Servo Drive Regenerative Energy Absorption Capacity* on page 4-47.)
- ♦ For Servo Drive models with an internal regeneration resistor used for absorbing regenerative energy, the average amount of regeneration  $P_r$  (unit: W) must be calculated, and this value must be lower than the Servo Drive's regenerative energy absorption capacity. (The capacity depends on the model. For details, refer to *Servo Drive Regenerative Energy Absorption Capacity* on page 4-47.)

The average regeneration power ( $P_r$ ) is the regeneration power produced in one cycle of operation [W].

$$P_r = (E_{g1} + E_{g2}) / T \text{ [W]}$$

T: Operation cycle [s]

## ■ Vertical Axis

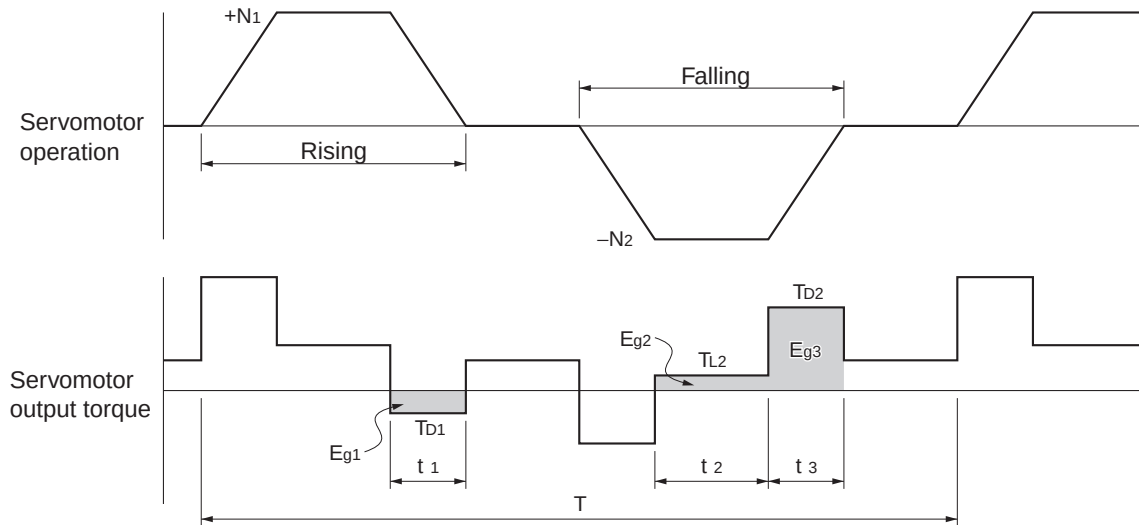

- In the output torque graph, acceleration in the positive direction (rising) is shown as positive, and acceleration in the negative direction (falling) is shown as negative.
- The regenerative energy values for each region can be derived from the following equations.

$$E_{g1} = \frac{1}{2} * \frac{2\pi}{60} * N_1 * T_{D1} * t_1 \quad [J]$$

$$E_{g2} = \frac{2\pi}{60} * N_2 * T_{L2} * t_2 \quad [J]$$

$$E_{g3} = \frac{1}{2} * \frac{2\pi}{60} * N_2 * T_{D2} * t_3 \quad [J]$$

$N_1, N_2$ : Rotation speed at beginning of deceleration [r/min]

$T_{D1}, T_{D2}$ : Deceleration torque [N·m]

$T_{L2}$ : Torque when falling [N·m]

$t_1, t_3$ : Deceleration time [s]

$t_2$ : Constant-velocity travel time when falling [s]

**Note** Due to the loss of winding resistance, the actual regenerative energy will be approximately 90% of the values derived from these equations.

- For Servo Drive models with internal capacitors used for absorbing regenerative energy, the values for both  $E_{g1}$  or  $E_{g2} + E_{g3}$  (unit: J) must be lower than the Servo Drive's regenerative energy absorption capacity. (The capacity depends on the model. For details, refer to *Servo Drive Regenerative Energy Absorption Capacity* on page 4-47.)
- For Servo Drive models with an internal regeneration resistor used for absorbing regenerative energy, the average amount of regeneration  $P_r$  (unit: W) must be calculated, and this value must be lower than the Servo Drive's regenerative energy absorption capacity. (The capacity depends on the model. For details, refer to *Servo Drive Regenerative Energy Absorption Capacity* on page 4-47.)

The average regeneration power ( $P_r$ ) is the regeneration power produced in one cycle of operation [W].

$$P_r = (E_{g1} + E_{g2} + E_{g3}) / T \quad [W]$$

$T$ : Operation cycle [s]

## Servo Drive Regenerative Energy Absorption Capacity

### ■ Amount of Internal Regeneration Absorption in Servo Drives

The OMNUC G-Series Servo Drives absorb regenerative energy internally with built-in capacitors. If the regenerative energy is too large to be processed internally, an overvoltage error occurs and operation cannot continue.

The following table shows the regenerative energy (and amount of regeneration) that each Servo Drive can absorb. If these values are exceeded, take the following measures.

- ♦ Connect an External Regeneration Resistor (to improve the regeneration processing capacity).
- ♦ Reduce the operating rotation speed. (The amount of regeneration is proportional to the square of the rotation speed.)
- ♦ Extend the deceleration time (to decrease the regenerative energy produced per time unit).
- ♦ Extend the operation cycle, i.e., the cycle time (to decrease the average regeneration power).

| Servo Drive model | Regenerative energy (J) that can be absorbed by internal capacitor | Internal regeneration resistance                        |                | Minimum value of regeneration resistance (Ω) |
|-------------------|--------------------------------------------------------------------|---------------------------------------------------------|----------------|----------------------------------------------|
|                   |                                                                    | Average amount of regeneration that can be absorbed (W) | Resistance (Ω) |                                              |
| R88D-GNA5L-ML2    | 12                                                                 | ---                                                     | ---            | 18                                           |
| R88D-GN01L-ML2    | 12                                                                 | ---                                                     | ---            | 18                                           |
| R88D-GN02L-ML2    | 18                                                                 | ---                                                     | ---            | 18                                           |
| R88D-GN04L-ML2    | 27                                                                 | 12                                                      | 50             | 13                                           |
| R88D-GN01H-ML2    | 16                                                                 | ---                                                     | ---            | 35                                           |
| R88D-GN02H-ML2    | 16                                                                 | ---                                                     | ---            | 35                                           |
| R88D-GN04H-ML2    | 25                                                                 | ---                                                     | ---            | 35                                           |
| R88D-GN08H-ML2    | 43                                                                 | 12                                                      | 100            | 27                                           |
| R88D-GN10H-ML2    | 70                                                                 | 20                                                      | 30             | 27                                           |
| R88D-GN15H-ML2    | 70                                                                 | 20                                                      | 30             | 18                                           |
| R88D-GN20H-ML2    | 70                                                                 | 40                                                      | 15             | 11                                           |
| R88D-GN30H-ML2    | 70                                                                 | 40                                                      | 15             | 11                                           |
| R88D-GN50H-ML2    | 105                                                                | 80                                                      | 10             | 7                                            |
| R88D-GN75H-ML2    | 250                                                                | ---                                                     | ---            | 4                                            |

**Note** These are the values at 100 VAC for 100-VAC models, and at 200 VAC for 200-VAC models.



## Absorbing Regenerative Energy with an External Regeneration Resistor

If the regenerative energy exceeds the absorption capacity of the Servo Drive, connect an External Regeneration Resistor.

Connect the External Regeneration Resistor between B1 and B2 terminals on the Servo Drive. Double-check the terminal names when connecting the resistor because the Servo Drive may be damaged by burning if connected to the wrong terminals.

The External Regeneration Resistor will heat up to approximately 120°C. Do not place it near equipment and wiring that is easily affected by heat. Attach radiator plates suitable for the heat radiation conditions.

### ■ External Regeneration Resistor


#### Performance Specifications

| Model          | Resistance   | Nominal capacity | Regeneration absorption at 120°C | Heat radiation condition            | Thermal switch output specifications                                                                            |
|----------------|--------------|------------------|----------------------------------|-------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| R88A-RR08050S  | 50 $\Omega$  | 80 W             | 20 W                             | Aluminum, 250 × 250, Thickness: 3.0 | Operating temperature: 150°C $\pm$ 5%<br>NC contact<br>Rated output: 30 VDC, 50 mA max.                         |
| R88A-RR080100S | 100 $\Omega$ | 80 W             | 20 W                             | Aluminum, 250 × 250, Thickness: 3.0 | Operating temperature: 150°C $\pm$ 5%<br>NC contact<br>Rated output: 30 VDC, 50 mA max.                         |
| R88A-RR22047S  | 47 $\Omega$  | 220 W            | 70 W                             | Aluminum, 350 × 350, Thickness: 3.0 | Operating temperature: 170°C $\pm$ 7°C<br>NC contact<br>Rated output: 250 VAC, 0.2 A max.                       |
| R88A-RR50020S  | 20 $\Omega$  | 500 W            | 180 W                            | Aluminum, 600 × 600, Thickness: 3.0 | Operating temperature: 200°C $\pm$ 7°C<br>NC contact<br>Rated output: 250 VAC, 0.2 A max.<br>24 VDC, 0.2 A max. |

### Connecting an External Regeneration Resistor

#### ■ R88D-GNA5L-ML2/-GN01L-ML2/-GN02L-ML2/-GN01H-ML2/-GN02H-ML2/-GN04H-ML2

If an External Regeneration Resistor is necessary, connect it between B1 and B2 as shown in the diagram below.

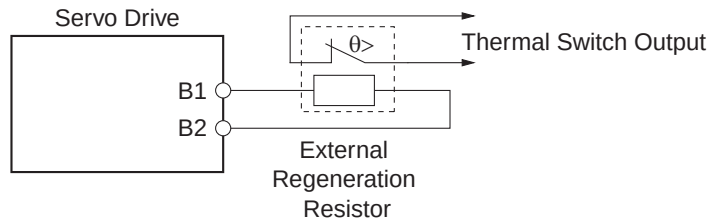


#### Precautions for Correct Use

- ♦ Connect the thermal switch output so that the main circuit power supply is shut OFF when the contacts open. The resistor may be damaged by burning, or cause fire if it is used without setting up a power supply shutoff sequence using the output from the thermal switch.

#### ■ R88D-GN04L-ML2/-GN08H-ML2/-GN10H-ML2/-GN15H-ML2/-GN20H-ML2/-GN30H-ML2/-GN50H-ML2

If an External Regeneration Resistor is necessary, remove the short-circuit bar between B2 and B3, and then connect the External Regeneration Resistor between B1 and B2 as shown in the diagram below.

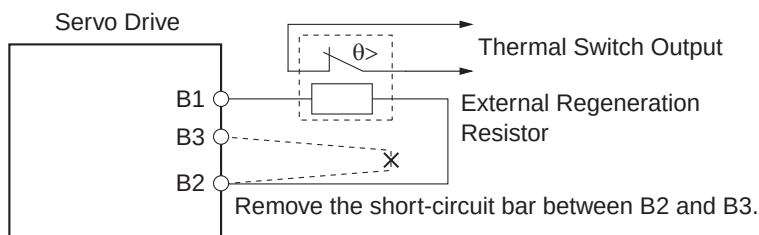


#### Precautions for Correct Use

- ♦ Connect the thermal switch output so that the main circuit power supply is shut OFF when the contacts open.
- When using multiple External Regeneration Resistors, connect each thermal switch in series.
- The resistor may be damaged by burning, or cause fire if it is used without setting up a power supply shutoff sequence using the output from the thermal switch.

■ R88D-GN75H-ML2


If an External Regeneration Resistor is necessary, connect it between B1 and B2 as shown in the diagram below.



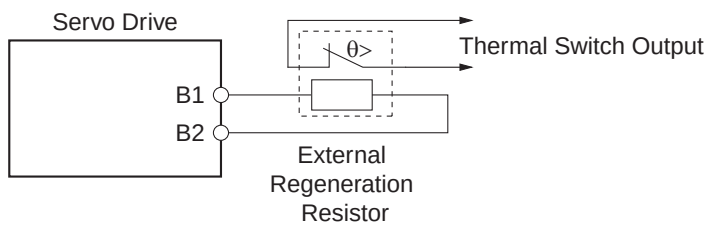




**Precautions  
for Correct Use**

- ♦ Connect the thermal switch output so that the main circuit power supply is shut OFF when the contacts open.  
When using multiple External Regeneration Resistors, connect each thermal switch in series.  
The resistor may be damaged by burning, or cause fire if it is used without setting up a power supply shutoff sequence using the output from the thermal switch.

### Combining External Regeneration Resistors
 
| Regeneration absorption capacity <sup>*1</sup> | 20 W                                                                              | 40 W                                                                              | 70 W                                                                               | 140 W                                                                               |
|------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Model                                          | R88A-RR08050S<br>R88A-RR080100S                                                   | R88A-RR08050S<br>R88A-RR080100S                                                   | R88A-RR22047S                                                                      | R88A-RR22047S                                                                       |
| Resistance <sup>*2</sup>                       | 50 Ω / 100 Ω                                                                      | 25 Ω / 50 Ω                                                                       | 47 Ω                                                                               | 94 Ω                                                                                |
| Connection method                              |  |  |  |  |
  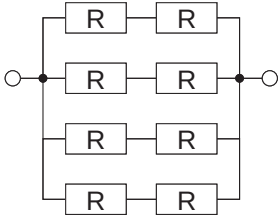
| Regeneration absorption capacity <sup>*1</sup> | 140 W                                                                              | 280 W                                                                               | 560 W                                                                                |
|------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Model                                          | R88A-RR22047S                                                                      | R88A-RR22047S                                                                       | R88A-RR22047S                                                                        |
| Resistance <sup>*2</sup>                       | 23.5 Ω                                                                             | 47 Ω                                                                                | 23.5 Ω                                                                               |
| Connection method                              |  |  |  |
 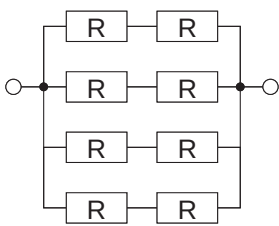
| Regeneration absorption capacity <sup>*1</sup> | 180 W                                                                               | 360 W                                                                               | 1440 W                                                                                |
|------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Model                                          | R88A-RR50020S                                                                       | R88A-RR50020S                                                                       | R88A-RR50020S                                                                         |
| Resistance <sup>*2</sup>                       | 20 Ω                                                                                | 10 Ω                                                                                | 10 Ω                                                                                  |
| Connection method                              |  |  |  |

\*1. Select a combination that has an absorption capacity greater than the average regeneration power (Pr).

\*2. Do not use a combination with resistance values lower than the minimum external regeneration resistance of each Servo Drive. For information on the minimum external regeneration resistance, refer to *Servo Drive Regenerative Energy Absorption Capacity* on page 4-47.

#### Precautions for Correct Use

- ◆ Surface temperatures on regeneration resistors can reach 200°C. Do not place objects that tend to catch fire near the resistors. To prevent people from touching them, install a type of cover that enables heat dissipation.

# Chapter 5

## Operating Functions


|      |                                               |      |
|------|-----------------------------------------------|------|
| 5-1  | Position Control .....                        | 5-1  |
| 5-2  | Speed Control .....                           | 5-4  |
| 5-3  | Torque Control .....                          | 5-7  |
| 5-4  | Forward and Reverse Drive Prohibit .....      | 5-10 |
| 5-5  | Brake Interlock .....                         | 5-11 |
| 5-6  | Torque Limit .....                            | 5-16 |
| 5-7  | Soft Start .....                              | 5-18 |
| 5-8  | Acceleration/Deceleration Time Settings ..... | 5-19 |
| 5-9  | Moving Average Time .....                     | 5-20 |
| 5-10 | Electronic Gear .....                         | 5-21 |
| 5-11 | Speed Limit .....                             | 5-22 |
| 5-12 | Sequence Input Signals .....                  | 5-23 |
| 5-13 | Sequence Output Signals .....                 | 5-25 |
| 5-14 | Backlash Compensation .....                   | 5-27 |
| 5-15 | Overrun Protection .....                      | 5-29 |
| 5-16 | Gain Switching .....                          | 5-31 |
| 5-17 | Speed Feed-forward .....                      | 5-38 |
| 5-18 | Torque Feed-forward .....                     | 5-39 |
| 5-19 | Speed Feedback Filter Selection .....         | 5-40 |
| 5-20 | P Control Switching .....                     | 5-41 |
| 5-21 | Torque Command Filter Time Constant .....     | 5-42 |
| 5-22 | Notch Filter .....                            | 5-43 |
| 5-23 | Adaptive Filter .....                         | 5-45 |
| 5-24 | Instantaneous Speed Observer .....            | 5-48 |
| 5-25 | Damping Control .....                         | 5-50 |
| 5-26 | User Parameters .....                         | 5-55 |
|      | Setting and Checking Parameters .....         | 5-55 |
|      | Parameter Tables .....                        | 5-61 |
| 5-27 | Details on Important Parameters .....         | 5-86 |

# 5-1 Position Control

## Function

Performs position control using commands from the Position Control Units for MECHATROLINK-II, CJ1W-NCF71/CS1W-NCF71.

The Servomotor rotates using the value of the position command (position command units) multiplied by the Electronic Gear Ratio (Pn205/Pn206).

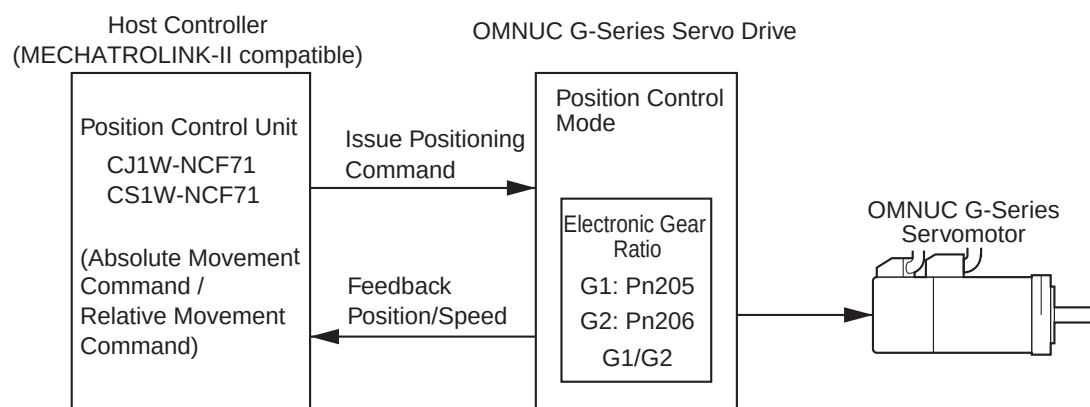

## Parameters Requiring Settings


| Parameter No.  | Parameter name                                                               | Explanation                                                                                                                                                        | Reference page |
|----------------|------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn205<br>Pn206 | Electronic Gear Ratio 1 (Numerator)<br>Electronic Gear Ratio 2 (Denominator) | Sets the electronic gear ratio (G1/G2).                                                                                                                            | 5-85<br>5-85   |
| Pn107          | Linear Acceleration Constant                                                 | Sets the angular acceleration (command units/s <sup>2</sup> ) for positioning operations.                                                                          | 5-82           |
| Pn10A          | Linear Deceleration Constant                                                 | Sets the angular deceleration (command units/s <sup>2</sup> ) for positioning operations.                                                                          | 5-82           |
| Pn10E          | Moving Average Time                                                          | Sets the moving average time for the position command. Reduces the angular acceleration when starting and stopping, and when approaching and leaving target speed. | 5-82           |
| Pn209          | Deviation Counter Overflow Level                                             | Sets the level to detect the deviation counter overflow in command units. Setting is based on the encoder to be used and the electronic gear ratio.                | 5-85           |
| Pn101          | Backlash Compensation                                                        | Sets the mechanical backlash in command units.                                                                                                                     | 5-81           |

Related Functions

♦ The main functions related to position control are as follows:

| Function              | Explanation                                                                                                                                                   | Reference page |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Speed Feed-forward    | This function issues direct speed commands without going through the deviation counter.<br>Sets the speed command ratio (%).                                  | 5-38           |
| Damping Control       | Sets the vibration frequencies 1, 2 and vibration filters 1,2 for damping control.                                                                            | 5-50           |
| Moving Average Time   | Sets the moving average time for the position command.<br>Reduces the acceleration when starting and stopping, and when approaching and leaving target speed. | 5-20           |
| Soft Limit            | Sets the maximum position command and position feed-back current value during position control.                                                               | 5-81           |
| Backlash Compensation | Sets the mechanical backlash in command units.                                                                                                                | 5-27           |

## Parameter Block Diagram for Position Control Mode

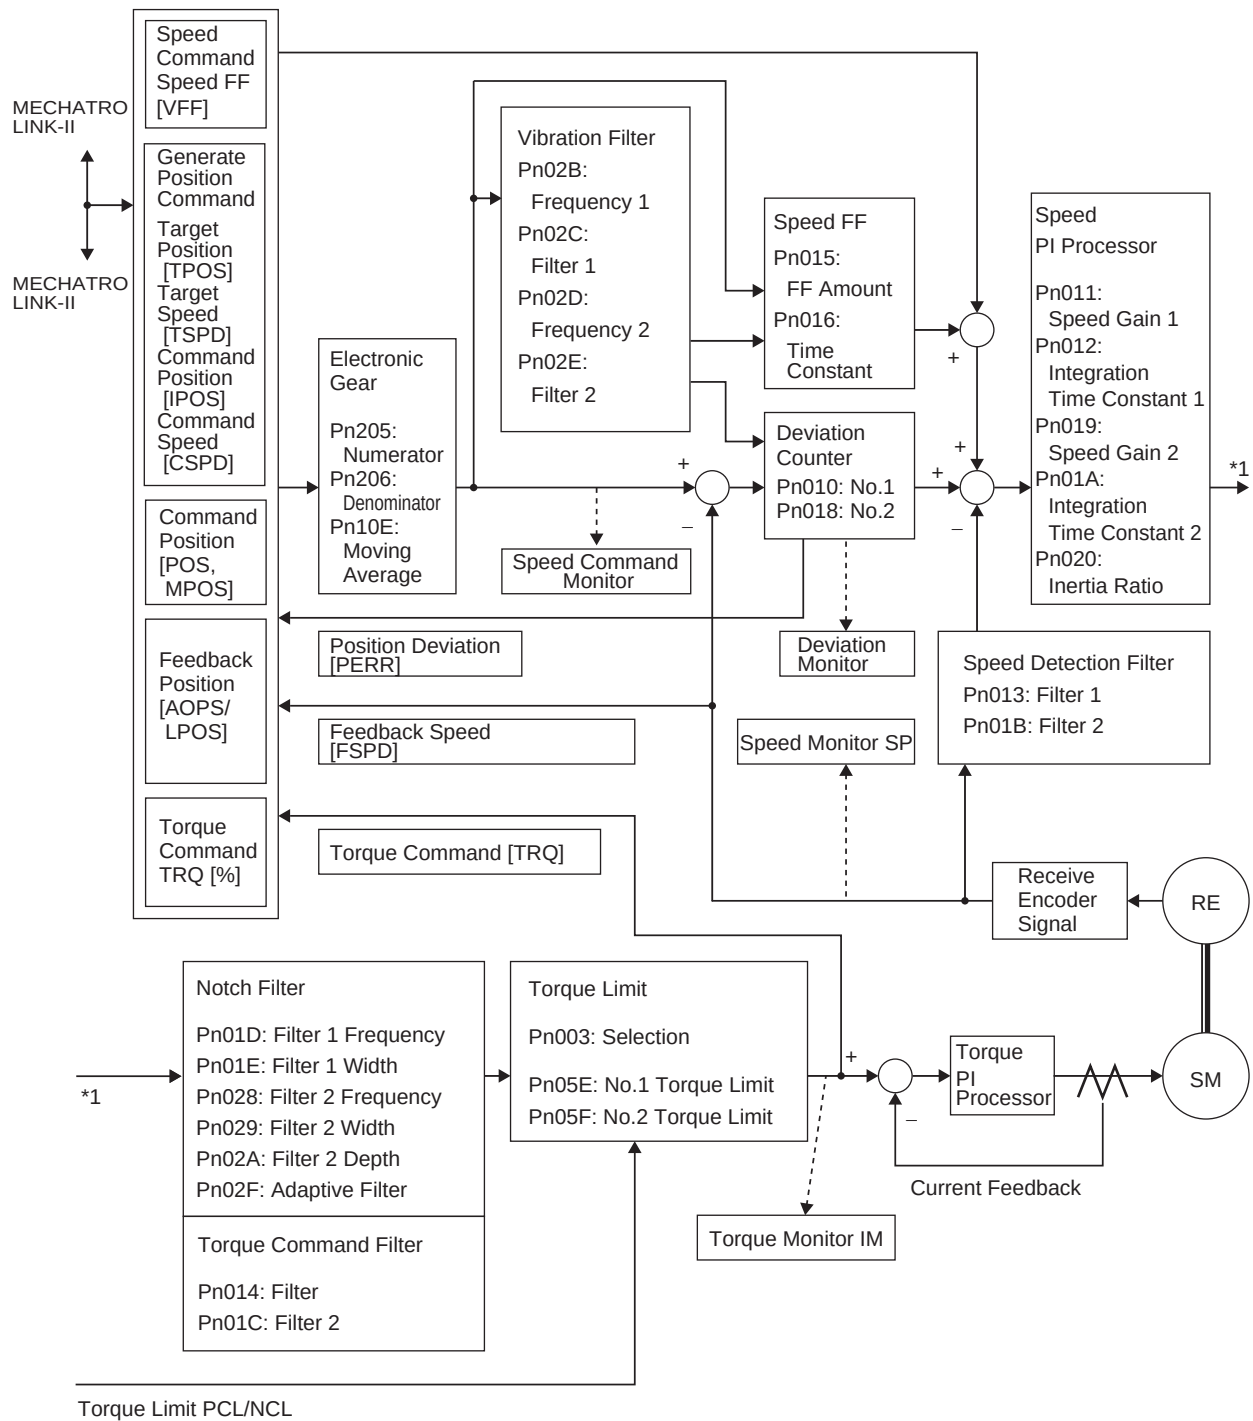




## 5-2 Speed Control

### Function

- Performs speed control using commands from the Position Control Units for MECHATROLINK-II, CJ1W-NCF71/CS1W-NCF71. The Servomotor rotates at the command speed.
- The current feedback value is divided by the Electronic Gear Ratio (Pn205/Pn206) and expressed in the commanded units.

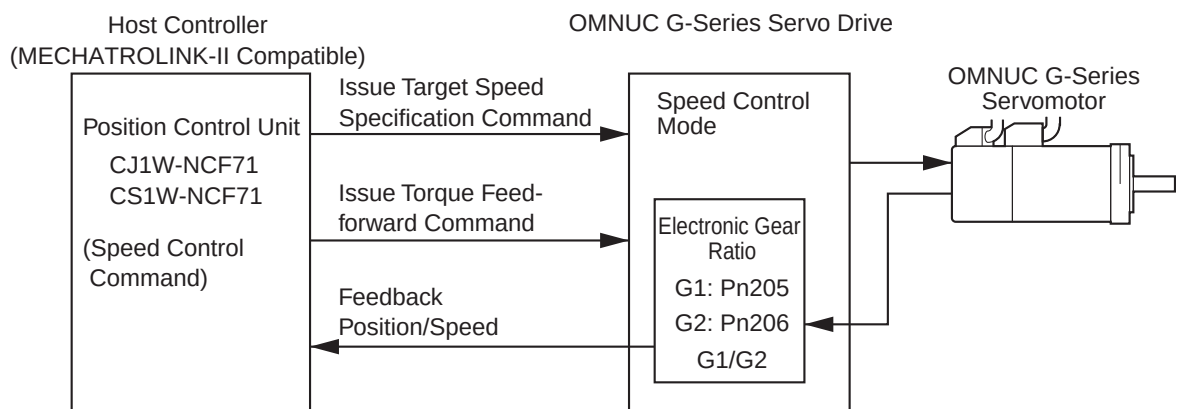

### Parameters Requiring Settings


| Parameter No.  | Parameter name                                                              | Explanation                                                                                          | Reference page |
|----------------|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|----------------|
| Pn205<br>Pn206 | Electronic Gear Ratio 1(Numerator)<br>Electronic Gear Ratio 2 (Denominator) | Sets the electronic gear ratio (G1/G2).                                                              | 5-85<br>5-85   |
| Pn058          | Soft Start Acceleration Time                                                | Sets the time for the Servomotor to accelerate from 0 to maximum speed [r/min].                      | 5-74           |
| Pn059          | Soft Start Deceleration Time                                                | Sets the time for the Servomotor to decelerate from maximum speed to 0 r/min.                        | 5-74           |
| Pn061          | Speed Conformity Signal Output Width                                        | Sets the detection width for the speed conformity output width (VCMP).                               | 5-75           |
| Pn062          | Rotation Speed for Motor Rotation Detection                                 | Sets the rotations for the motor rotation detection output (TGON) signal.                            | 5-75           |
| Pn011<br>Pn019 | Speed Loop Gain 1, 2                                                        | Adjusts the speed loop responsiveness.<br>The larger the value, the faster the response is.          | 5-67           |
| Pn012<br>Pn01A | Speed Loop Integration Time Constant 1, 2                                   | Sets the speed loop integration time constant.<br>Adjusts according to the inertia of the load.      | 5-67           |
| Pn020          | Inertia Ratio                                                               | Sets the load inertia. The speed loop responsiveness is the value multiplied by the speed loop gain. | 5-68           |
| Pn013<br>Pn01B | Speed Feedback Filter Time Constant 1, 2                                    | Sets the speed feedback time constant.<br>Normally, use a setting of 0.                              | 5-67           |

Related Functions

♦ The main functions related to speed control are as follows:

| Function                        | Explanation                                                                                                              | Reference page |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------|----------------|
| Torque Feed-forward             | This function issues direct torque commands without performing speed PI calculations. Sets the torque command ratio (%). | 5-39           |
| Soft Start                      | Sets the soft acceleration and deceleration for the speed command.                                                       | 5-18           |
| Torque Limit                    | Limits the output torque.                                                                                                | 5-16           |
| P Control Switching             | Switches from PI control to P control.                                                                                   | 5-41           |
| Speed Feedback Filter Selection | Changes the time constant of the detection filter for the feedback speed to reduce resonance of the load.                | 5-40           |


## Parameter Block Diagram for Speed Control Mode

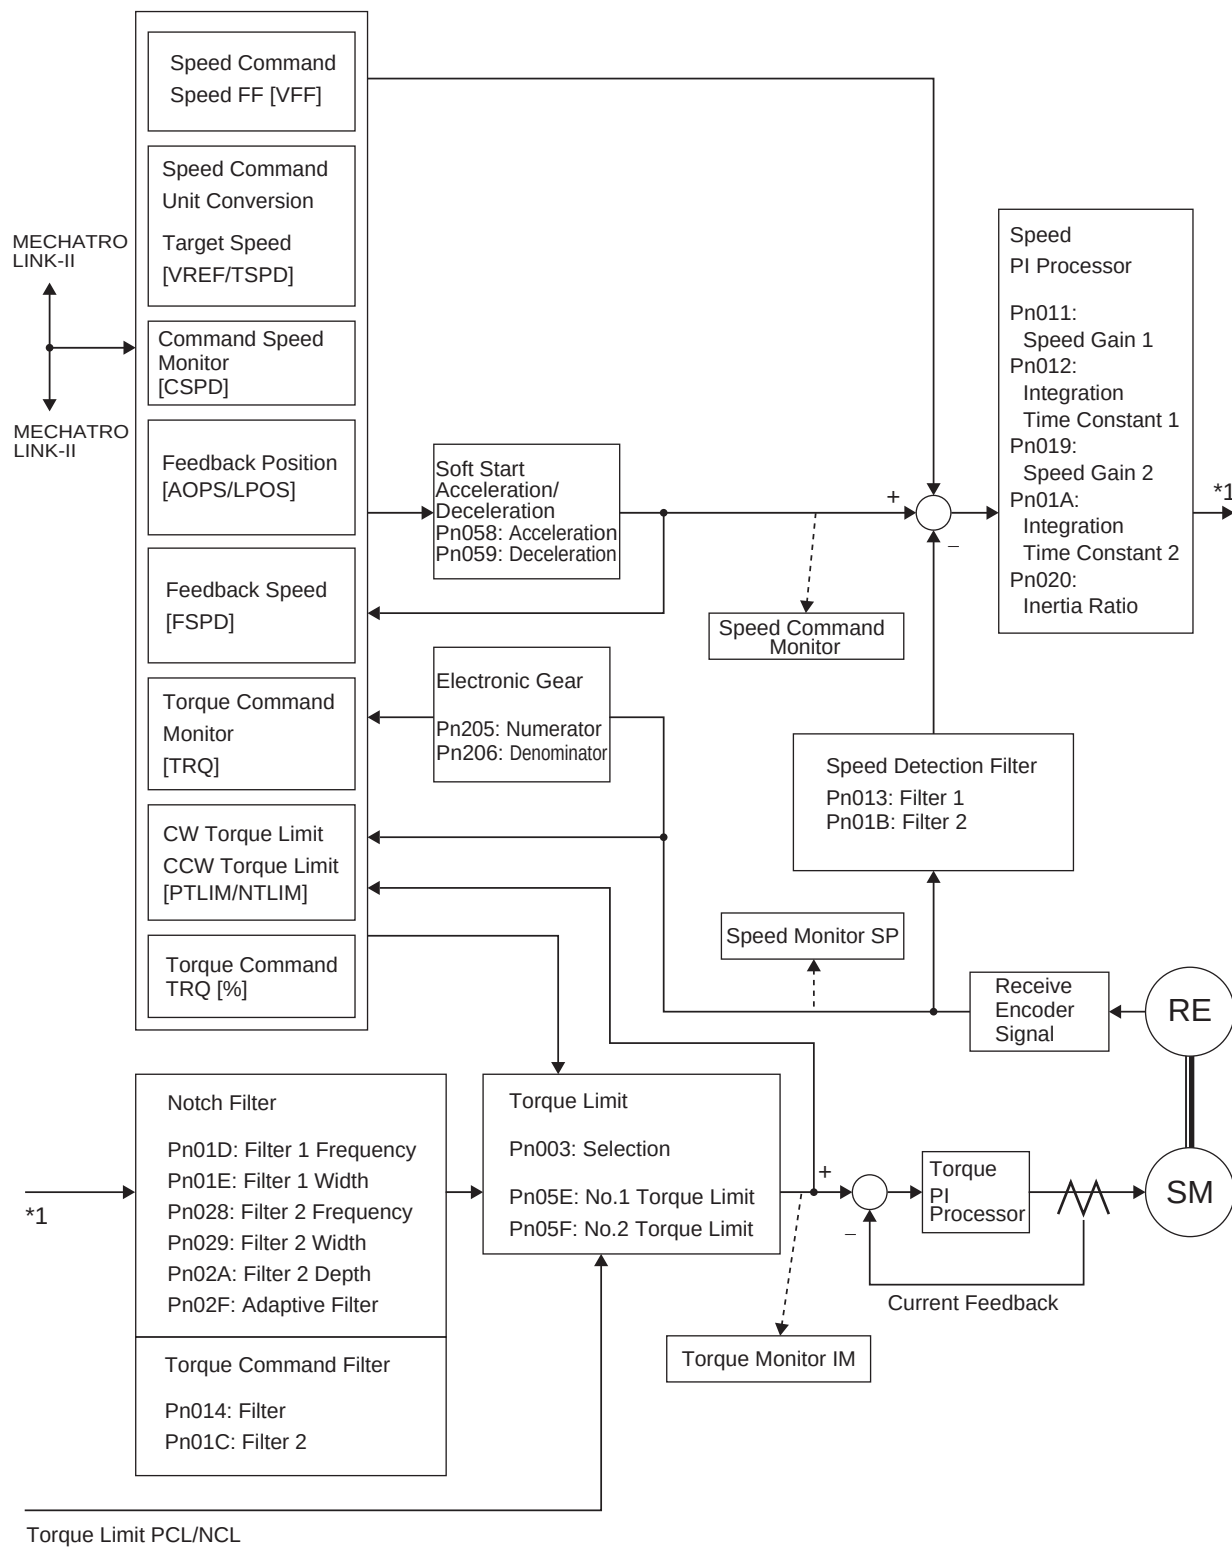

## 5-3 Torque Control

### Function

- Performs torque control using commands from the Position Control Units for MECHATROLINK-II, CJ1W-NCF71/CS1W-NCF71. The Servomotor operates with the commanded torque output. The current feedback value is divided by the Electronic Gear Ratio (Pn205/Pn206) and expressed in the commanded units.

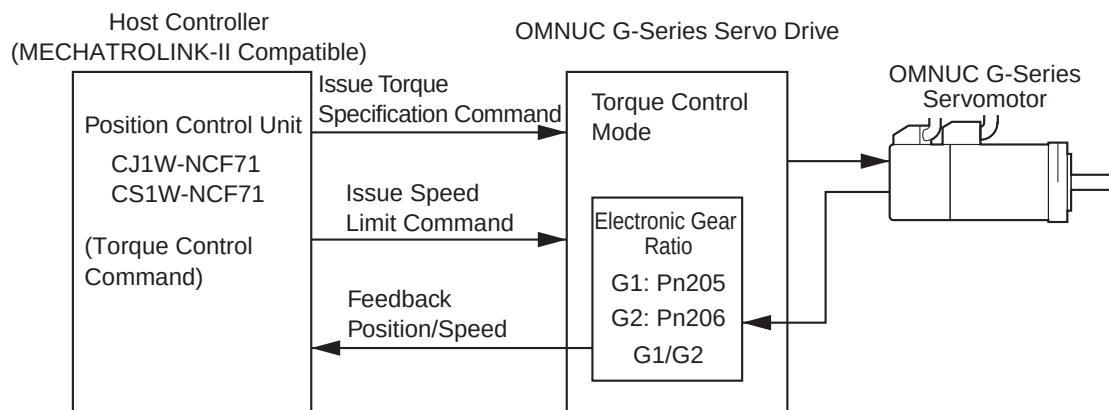

### Parameters Requiring Settings


| Parameter No.  | Parameter name                                                               | Explanation                                                                       | Reference page |
|----------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------|
| Pn205<br>Pn206 | Electronic Gear Ratio 1 (Numerator)<br>Electronic Gear Ratio 2 (Denominator) | Sets the electronic gear ratio (G1/G2).                                           | 5-85<br>5-85   |
| Pn053          | Speed Limit                                                                  | Limits the speed during torque control.                                           | 5-74           |
| Pn05B          | Speed Limit Selection                                                        | Selects speed limit control from the network or through internal parameter Pn053. | 5-74           |
| Pn003          | Torque Limit Selection                                                       | Selects torque limit from the network or through parameter settings.              | 5-87           |
| Pn05E          | No. 1 Torque Limit                                                           | Sets the No. 1 Servomotor output torque limit.                                    | 5-75           |
| Pn05F          | No. 2 Torque Limit                                                           | Sets the No. 2 Servomotor output torque limit.                                    | 5-75           |
| Pn01D          | Notch Filter 1 Frequency                                                     | Sets the notch filter 1 frequency for the torque command.                         | 5-68           |
| Pn028          | Notch Filter 2 Frequency                                                     | Sets the notch filter 2 frequency for the torque command.                         | 5-71           |

Related Functions

Functions related to torque control are as follows:

| Function                                  | Explanation                                             | Reference page |
|-------------------------------------------|---------------------------------------------------------|----------------|
| Torque Command<br>Filter Time<br>Constant | Increase to decrease machine resonance.                 | 5-42           |
| Notch Filter                              | Sets the machine specific resonance frequency.          | 5-43           |
| Speed Limit                               | Limits the Servomotor speed during torque control.      | 5-22           |
| Torque Limit                              | Limits the maximum output torque during torque control. | 5-16           |
| Speed Feedback<br>Filter Selection        | Selects the speed detection filter.                     | 5-40           |

## Parameter Block Diagram for Torque Control Mode

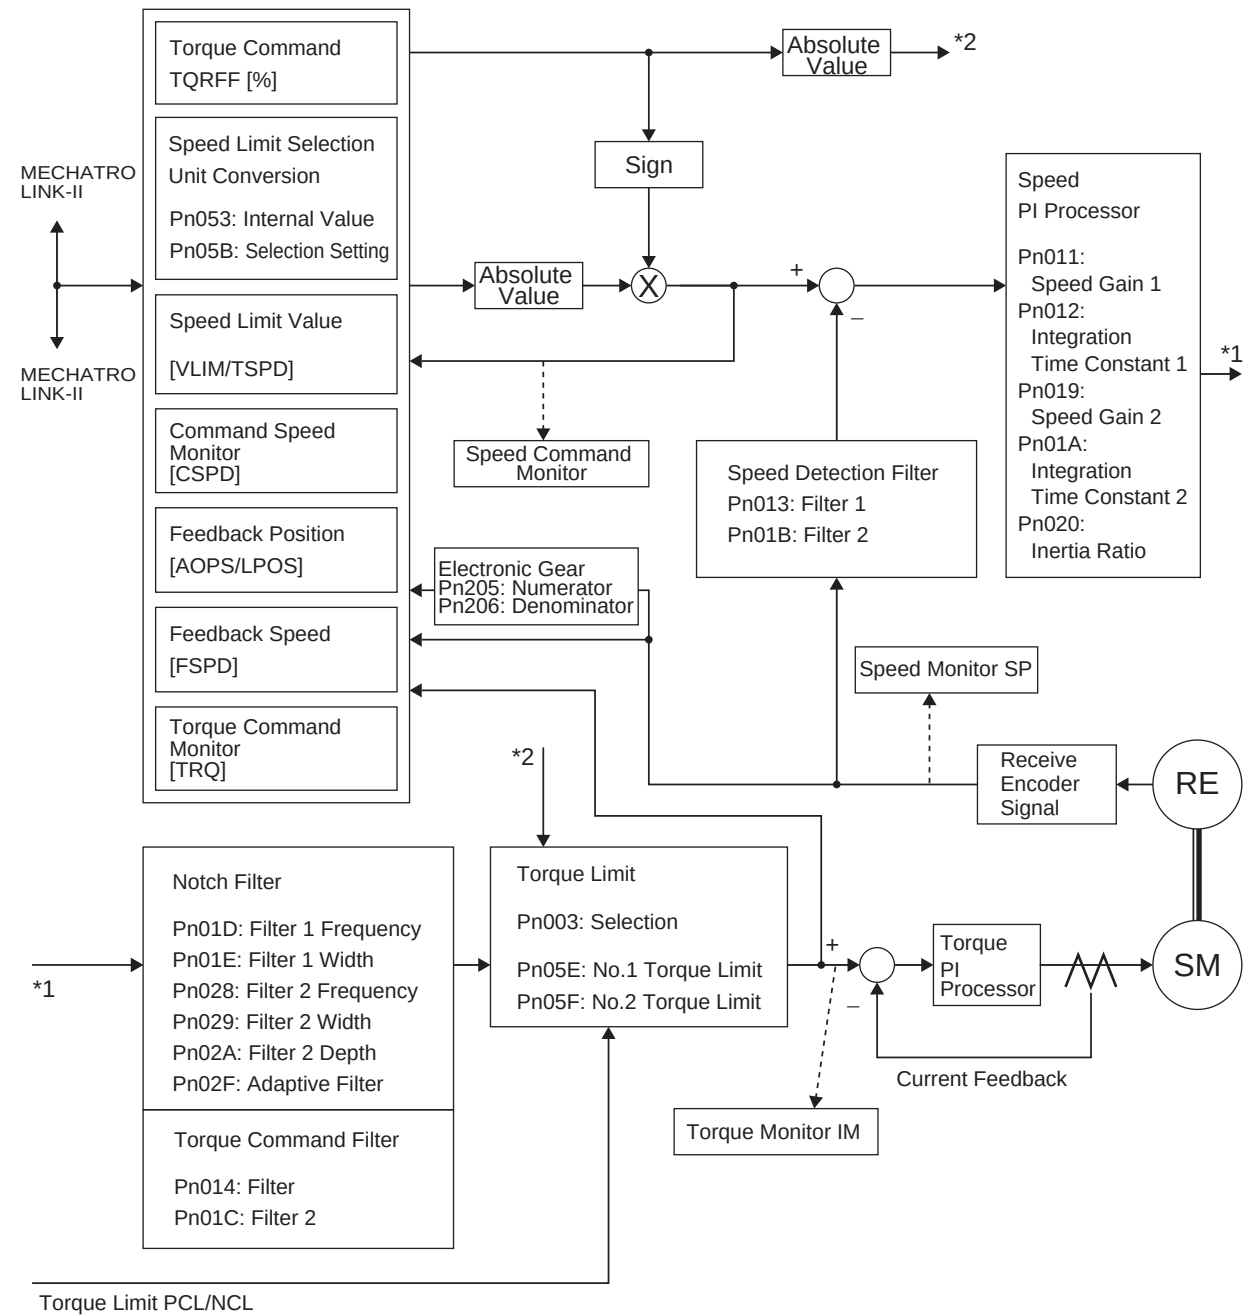

## 5-4 Forward and Reverse Drive Prohibit

### Function


- This function sets the Forward Drive Prohibit Input (POT) and Reverse Drive Prohibit Input (NOT) operation at the control I/O connector CN1 on the Servo Drive.
- You can stop the Servomotor from rotating beyond the machine's operating range with the drive prohibition inputs.

### Parameters Requiring Settings

| Parameter No. | Parameter name                             | Explanation                                                                                      | Reference page |
|---------------|--------------------------------------------|--------------------------------------------------------------------------------------------------|----------------|
| Pn004         | Drive Prohibit Input Selection             | Chooses whether to enable or disable this function when POT/NOT turns OFF.                       | 5-88           |
| Pn044         | Input Signal Selection                     | Sets the POT/NOT assignment. By default, CN1 pin 19 is set to POT, and CN1 pin 20 is set to NOT. | 5-74           |
| Pn066         | Stop Selection for Drive Prohibition Input | Sets the deceleration stopping method when POT/NOT turns OFF.                                    | 5-95           |

### Operation

[Stopping method when Pn004=0 and either POT or NOT turns OFF]

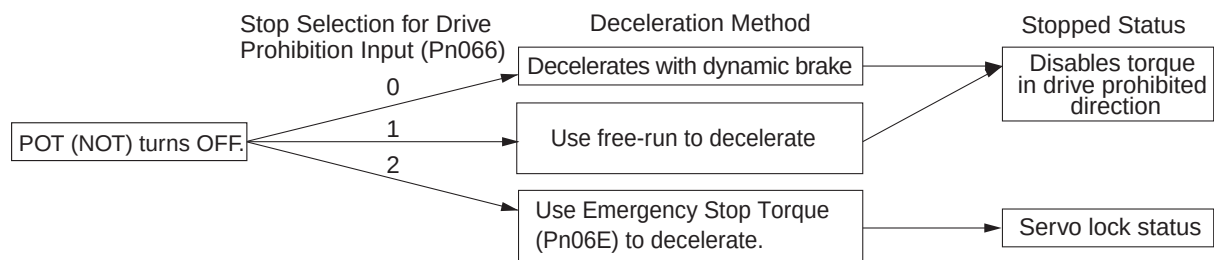

- Drive Prohibit Input Error (alarm code 38) occurs when Pn004=0 and both Forward Drive Prohibit and Reverse Drive Prohibit inputs turn OFF.
- When Pn004=1, the inputs for both Forward Drive Prohibit and Reverse Drive Prohibit are disabled.
- Drive Prohibit Input Error (alarm code 38) occurs when Pn004=2, and either Forward Drive Prohibit input or Reverse Drive Prohibit input turns OFF.
- After stopping, a command in the direction of the drive prohibit input will cause a command warning.

# 5-5 Brake Interlock

## Function

- ♦ This function sets the output timing of the Brake Interlock (BKIR) signal used to activate the holding brake during servo ON, alarms, and servo OFF.

## Parameters Requiring Settings


| Parameter No. | Parameter name                | Explanation                                                                                                                                                                                                         | Reference page |
|---------------|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn06A         | Brake Timing when Stopped     | Sets the delay time from the Servo OFF command to the Brake Interlock (BKIR) signal OFF and power stoppage during a servo lock stop.                                                                                | 5-78           |
| Pn06B         | Brake Timing during Operation | Sets the delay time from the Servo OFF command to the Brake Interlock (BKIR) signal OFF and power stoppage while the Servomotor is operating. BKIR turns OFF if the speed drops below 30 r/min before the set time. | 5-78           |

## Precautions on the holding brake

- ♦ The brake on a Servomotor with a brake is a nonexcitation brake designed for holding during stops.  
Set the time so that the brake is activated after the Servomotor is stopped.
- ♦ If the brake is applied while the Servomotor is rotating, the brake disk may be damaged or wear out, and cause damage to the Servomotor bearings and encoder.



■ Operation timing during Servo ON or OFF (when Servomotor is stopped)

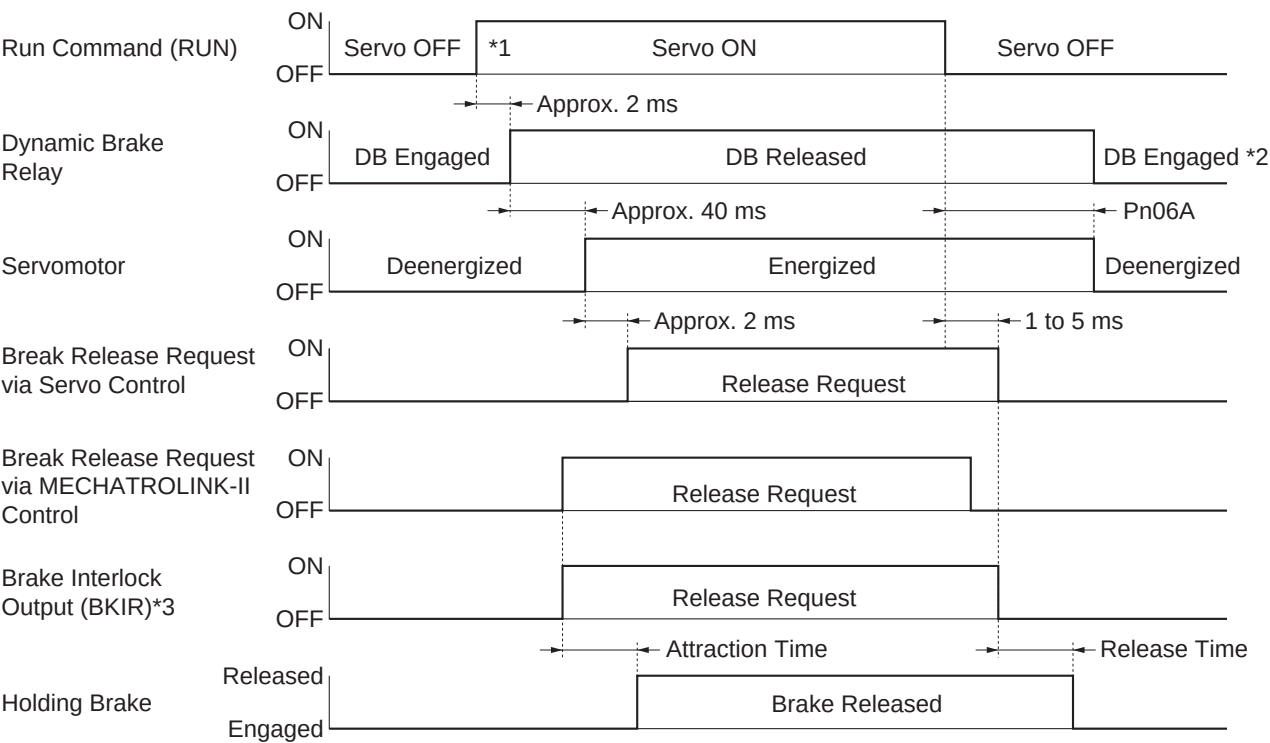


\*1. The Servo ON status will not occur until the Servomotor speed drops below approximately 30 r/min.  
\*2. The operation of the dynamic brake during Servo OFF depends on the Stop Selection with Servo OFF (Pn069).  
\*3. The Brake Interlock (BKIR) signal is output on the release request command that comes first, either from the Servo Controller or the MECHATROLINK-II. The BKIR signal is used by assigning it to the general purpose outputs on CN1.

**Note** The brake attraction and release time varies depending on the brake on the Servomotor. For details, refer to 3-2 *Servomotor Specifications* on page 3-17.

### ■ Operation timing during Servo ON or OFF (when Servomotor is rotating)

Regenerative energy occurs when the Servomotor is stopped on an alarm under this operation timing.

For this reason, the operation cannot be repeated. Wait at least 10 minutes before the Servomotor cools down.

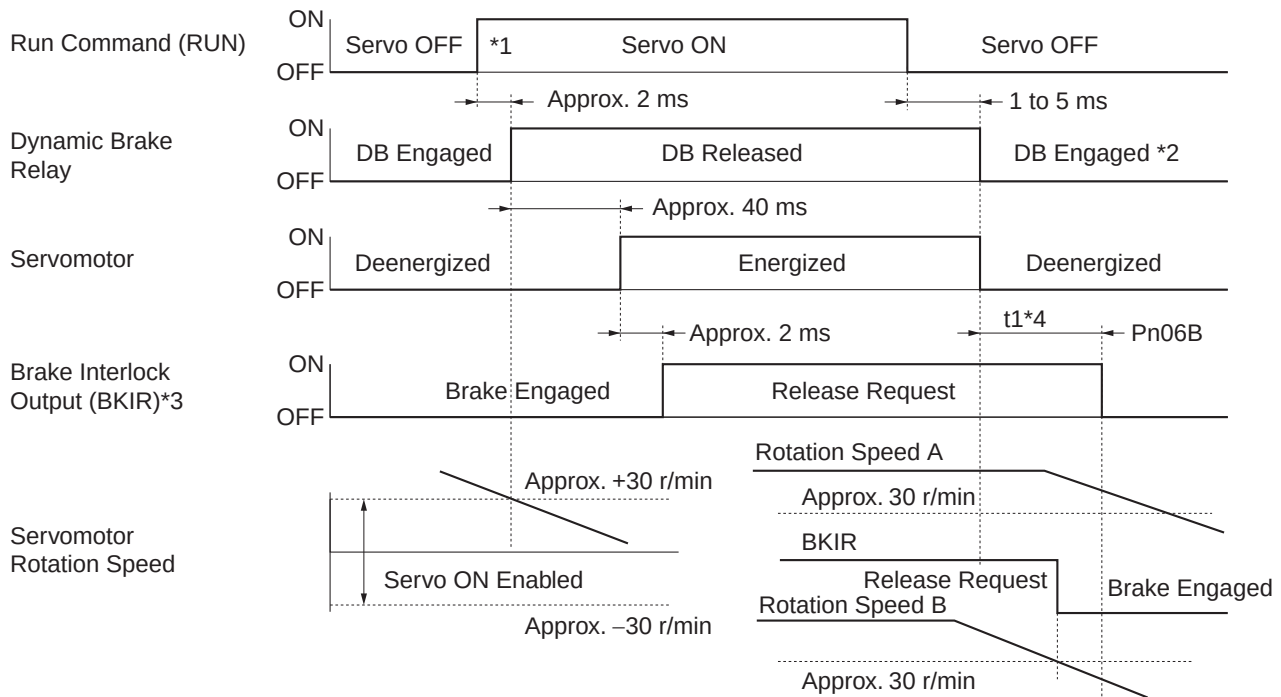

\*1. The Servo ON status will not occur until the Servomotor speed drops below approximately 30 r/min.

\*2. The operation of the dynamic brake during Servo OFF depends on the Stop Selection with Servo OFF (Pn069).


\*3. The Brake Interlock (BKIR) signal is output on the release request command that comes first, either from the Servo Controller or the MECHATROLINK-II. The BKIR signal is used by assigning it to the general purpose outputs on CN1.

In the example above, a release request was not issued from the network.

\*4.  $t1$  is either the Brake Timing during Operation (Pn06B) setting or the time for the Servomotor speed to drop below approximately 30 r/min, whichever occurs first.

**Note** The Servomotor will not change to Servo ON until it stops even if the Servo ON input is turned ON while it is decelerating.

■ Operation timing during alarms (during Servo ON)

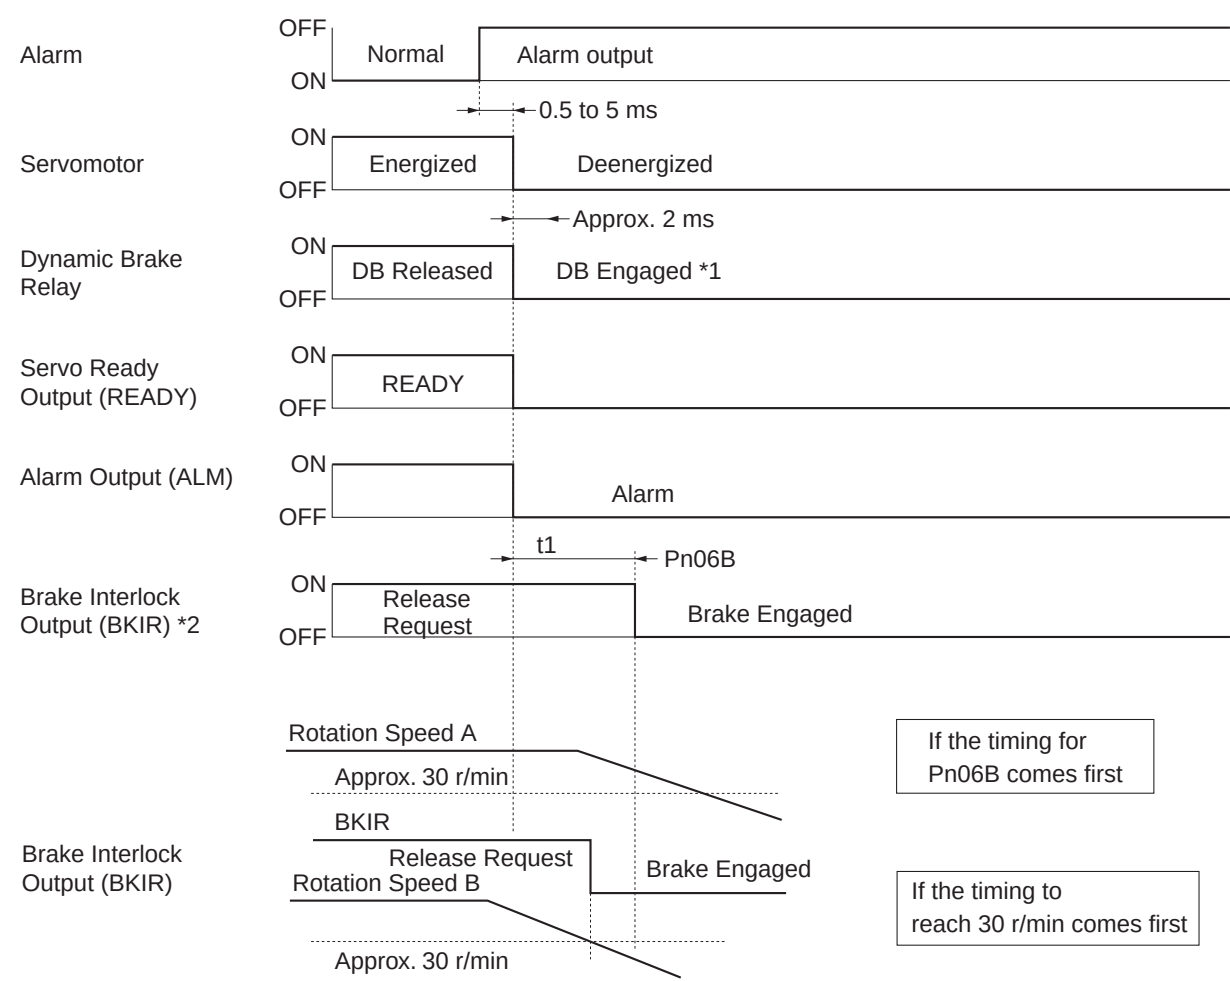


\*1. The operation of the dynamic brake during alarms depends on the Stop Selection with Servo OFF (Pn069).  
\*2.  $t_1$  is either the Brake Time during Operation (Pn06B) setting or the time for the Servomotor speed to drop below approximately 30 r/min, whichever occurs first.  $t_1$  becomes 0 when an alarm occurs while the motor is stopped.

**Note 1.** The Servomotor will not change to Servo ON until it stops even if the Servo ON input is turned ON while it is decelerating. The Brake Interlock (BKIR) signal is used by assigning it to the general purpose outputs on CN1.

**Note 2.** The above operation timing is applied because of the Missing Phase alarm and Main Circuit Low Voltage alarm when the power is turned OFF while the Servomotor is rotating.

■ Operation timing at alarm reset

Perform an alarm reset from CX-Drive, host controller via MECHATROLINK-II, or the Parameter Unit. (Alarms can also be reset by recycling the power.)

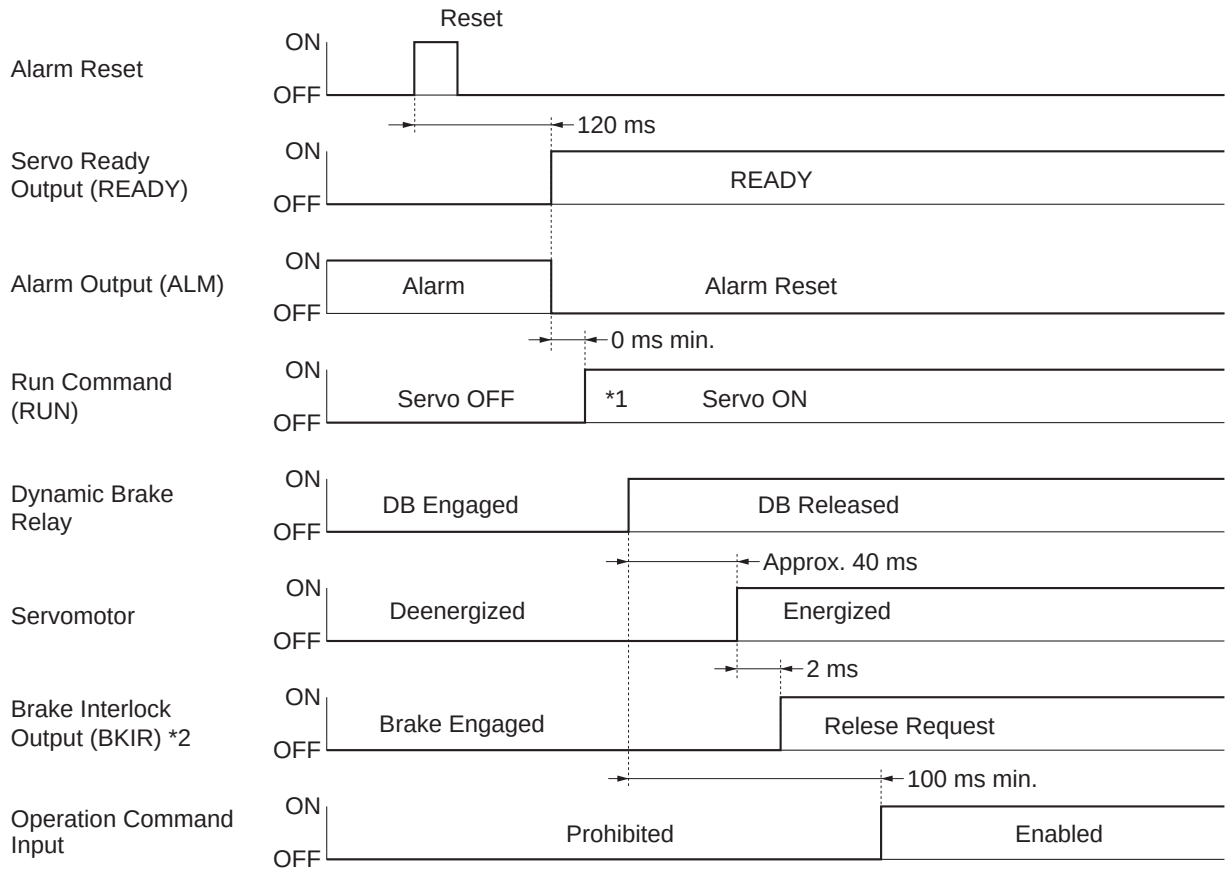

\*1. Servo ON status will not occur until the Servomotor speed drops below approximately 30 r/min.

\*2. The Brake Interlock (BKIR) signal is output on the release request command that comes first, either from the Servo Controller or the MECHATROLINK-II. The BKIR signal is used by assigning it to the general purpose outputs on CN1.

**Note** Servo OFF status occurs (Servomotor is de-energized) after the alarm reset. To go to Servo ON status, issue the Servo ON command again after the alarm reset according to the operation timing shown above.

## 5-6 Torque Limit

### Function

- ♦ This function limits the torque output by the Servomotor.
- ♦ The function can be used for:
  - pressing in press machine applications
  - protecting a mechanical system by suppressing torque at start-up and deceleration
- ♦ There are several methods to choose at the Torque Limit Selection (Pn003).

### Parameters Requiring Settings

| Parameter No. | Parameter name         | Explanation                                                          | Reference page |
|---------------|------------------------|----------------------------------------------------------------------|----------------|
| Pn003         | Torque Limit Selection | Selects the torque limit by various parameters and from the network. | 5-87           |
| Pn05E         | No. 1 Torque Limit     | Sets the No.1 Servomotor output torque limit.                        | 5-75           |
| Pn05F         | No. 2 Torque Limit     | Sets the No. 2 Servomotor output torque limit.                       | 5-75           |

### ■ Torque limit settings for each Servomotor

- ♦ The setting range for the torque limit is 0 to 300% and the standard default setting is 300% except for the following combinations of Servo Drives and Servomotors.

| Servo Drive    | Applicable Servomotor | Maximum torque limit [%] |
|----------------|-----------------------|--------------------------|
| R88D-GN15H-ML2 | R88M-G90010T          | 225                      |
| R88D-GN30H-ML2 | R88M-G2K010T          | 230                      |
| R88D-GN50H-ML2 | R88M-G3K010T          | 235                      |
|                | R88M-G4K510T          | 255                      |
| R88D-GN75H-ML2 | R88M-G6K010T          | 256                      |
|                | R88M-G7K515T          | 250                      |

## ■ Torque limit during position and speed control

| Pn003 Settings | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1              | Set the limit values for forward and reverse operations in Pn05E.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 2              | Forward: Use Pn05E.<br>Reverse: Use Pn05F.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 3              | Switch limits by torque limit values and input signals from the network.<br>Limit in forward direction:<br>PCL is OFF = Pn05E, PCL is ON = Pn05F<br>Limit in reverse direction:<br>NCL is OFF = Pn05E, NCL is ON = Pn05F                                                                                                                                                                                                                                                                         |
| 4              | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values from the network as below.<br>Limit in forward direction:<br>Use Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>Use Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller.                                                                                 |
| 5              | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values and input signals from the network as below.<br>Limit in forward direction:<br>PCL is OFF = Pn05E,<br>PCL is ON = Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>NCL is OFF = Pn05F,<br>NCL is ON = Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller. |

- ♦ Always select the No. 1 Torque Limit (Pn05E) as the torque limit when using torque control.
- ♦ For the torque limit when Torque Feed-forward is selected, settings of 1 to 3 are enabled only in speed control. These settings are disabled if not in speed control.  
Settings of 4 to 5 are always disabled.

**Note** PCL ON: When either Forward Torque Limit (CN1 PCL: pin 7) or MECHATROLINK-II Communications Option Field (P-CL) is ON.  
PCL OFF: When both Forward Torque Limit (CN1 PCL: pin 7) and MECHATROLINK-II Communications Option Field (P-CL) are OFF.

## 5-7 Soft Start


### Function

- ♦ Set the acceleration and deceleration time for speed command values from the host controller.
- ♦ Set the acceleration and deceleration time for the maximum rotation speed of each Servomotor.

### Parameters Requiring Settings

| Parameter No. | Parameter name               | Explanation                                                                                                                                             | Reference page |
|---------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn058         | Soft Start Acceleration Time | Sets the acceleration time for the speed command. Set the time it takes to accelerate from 0 r/min to the Servomotor's maximum speed multiplied by 500. | 5-74           |
| Pn059         | Soft Start Deceleration Time | Sets the deceleration time for the speed command. Set the time it takes to decelerate from the Servomotor's maximum speed to 0 r/min multiplied by 500. | 5-74           |

- ♦ If the soft start function is not used, set this parameter to 0 (default setting).

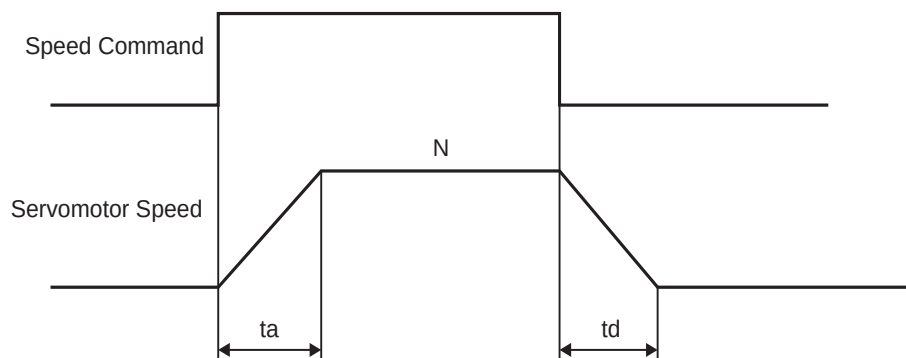

$$\text{Acceleration time } t_a [\text{s}] = \text{Pn058} \times 0.002 \times \frac{\text{Speed command rotation speed}}{\text{Max. rotation speed}}$$

$$\text{Deceleration time } t_d [\text{s}] = \text{Pn059} \times 0.002 \times \frac{\text{Speed command rotation speed}}{\text{Max. rotation speed}}$$

## 5-8 Acceleration/Deceleration Time Settings

### Function

- ♦ Set the angular acceleration to reach the target speed and angular deceleration to stop for position commands.
- ♦ Units of setting is  $\times 10,000$  [command units/s<sup>2</sup>].

### Parameters Requiring Settings

| Parameter No. | Parameter name               | Explanation                                                                                                    | Reference page |
|---------------|------------------------------|----------------------------------------------------------------------------------------------------------------|----------------|
| Pn107         | Linear Acceleration Constant | Sets the acceleration speed for positioning moves.<br>(Units: $\times 10,000$ [command units/s <sup>2</sup> ]) | 5-82           |
| Pn10A         | Linear Deceleration Constant | Sets the deceleration speed for positioning moves.<br>(Units: $\times 10,000$ [command units/s <sup>2</sup> ]) | 5-82           |

**Note 1.** The factory default setting for this parameter:

Linear Acceleration Constant = Linear Deceleration Constant =  $100 \times 10,000$  [command units/s<sup>2</sup>].

**Note 2.** The setting will be handled after conversion to an un-signed 16-bit data (0 to 65535).

Example:  $-32768 \rightarrow 8000h = 32768$

$-1 \rightarrow FFFFh = 65535$

#### Setting example (using a 2,500-p/r Incremental Encoder)

When the setting is  $100 \times 10,000$  [command units/s<sup>2</sup>], target speed is 2,400 r/min, and the electronic gear ratio of G1/G2 is 2/1, the acceleration and deceleration time is as follows:

$2,400/60 = 40$  r/s The position units for one turn is 5,000 [command units].

The rotation speed units for 2,400 r/min is  $40 \times 5,000 = 200,000$  [command units/s].

The linear acceleration and deceleration time to reach 2,400 r/min is  $200,000/1,000,000 = 0.2$  s.

Increasing the electronic gear ratio degrades the distribution accuracy of the linear acceleration and deceleration time.

The setting must be increased in order to reduce the acceleration time.

#### Setting example (using a 17-bit Absolute Encoder)

When the setting is  $100 \times 10,000$  [command units/s<sup>2</sup>], target speed is 2,400 r/min, and the electronic gear ratio of G1/G2 is 64/1, the acceleration and deceleration time is as follows:

$2,400/60 = 40$  r/s The position units for one turn is 8,192 [command units].

The rotation speed units for 2,400 r/min is  $40 \times 8,192 = 327,680$  [command units/s].

The linear acceleration and deceleration time to reach 2,400 r/min is  $327,680/1,000,000 = 0.32768$  s.

Increasing the electronic gear ratio degrades the distribution accuracy of the linear acceleration and deceleration time.

The setting must be decreased in order to reduce the acceleration time.

In this example, set 328 for an acceleration time of 0.1 s.




## 5-9 Moving Average Time

### Function

- ♦ This function applies the Moving Average Filter (FIR) to the linear acceleration and deceleration time for position commands.
- ♦ This function can reduce vibration and impact during acceleration and deceleration.
- ♦ Time setting range: 0 to 510 ms.

### Parameters Requiring Settings

| Parameter No. | Parameter name      | Explanation                                                                                                                                                                                                                                                                                                                                          | Reference page |
|---------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn10E         | Moving Average Time | Sets the moving average time for the position command.<br><b>Note</b> If the Moving Average Time is set, speed commands may not be executed seamlessly when switching the control modes, and when switching between interpolation feed motions and positioning motions (motions wherein the command waveforms are generated inside the Servo Drive). | 5-82           |

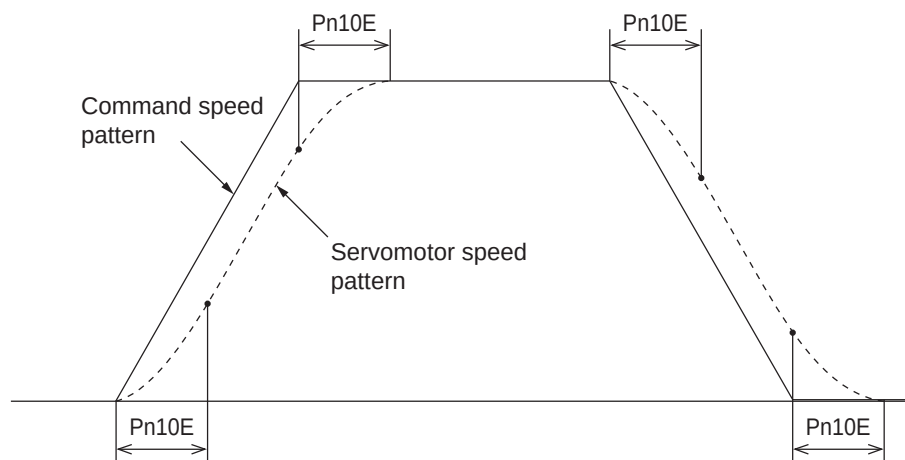

# 5-10 Electronic Gear

## Function

- ♦ The Servomotor rotates at the value (the number of pulses) of the position command multiplied by the electronic gear ratio.
- ♦ During speed and torque control, the pulses from the Servomotor encoder are divided by the electronic gear ratio and converted into command units before being fed back.

## Parameters Requiring Settings

| Parameter No. | Parameter name                        | Explanation                                                                                                                                                                                                                                                                                                                                                                                 | Reference page |
|---------------|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn205         | Electronic Gear Ratio 1 (Numerator)   | Sets the numerator for the electronic gear ratio. Setting this parameter to 0 automatically sets the encoder resolution as the numerator. (131,072 for a 17-bit absolute encoder, and 10,000 for a 2,500-p/r incremental encoder). The electronic gear ratio can be set to 1/100 to 100 times. A parameter setting alarm (alarm code 93) will occur if the ratio is set outside this range. | 5-85           |
| Pn206         | Electronic Gear Ratio 2 (Denominator) | Sets the denominator for the electronic gear ratio. A parameter setting alarm (alarm code 93) will occur if the ratio is set outside this range.                                                                                                                                                                                                                                            | 5-85           |

The factory default setting for this parameter is Electronic Gear ratio 1 = Electronic Gear ratio 2 = 1.

### Setting example (using a 2,500-p/r Incremental Encoder)

- ♦ To make one turn using a setting unit of 5,000

$$\frac{Pn205}{Pn206} = \frac{10000}{5000} = \frac{2}{1}$$

### Setting example (using a 17-bit Absolute Encoder)

- ♦ To make one turn using a setting unit of 10,000

$$\frac{Pn205}{Pn206} = \frac{131072}{10000} = \frac{8192}{625}$$

# 5-11 Speed Limit

## Function

- Set the Servomotor rotation speed limit when using torque control.
- The speed limit value can be set by the internal parameter (Pn053) or from a host controller.

## Parameters Requiring Settings

| Parameter No. | Parameter name        | Explanation                                                                                                                                                                                         | Reference page |
|---------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn053         | Speed Limit           | Sets the speed limit when torque control is used.<br>This value is the same for both forward and reverse directions.<br>The setting must be less than the maximum rotation speed of the Servomotor. | 5-74           |
| Pn05B         | Speed Limit Selection | Select to perform speed limit by the Speed Limit (Pn053), or the smaller value of either the speed limit from MECHA-TROLINK-II or the Speed Limit (Pn053).                                          | 5-74           |

# 5-12 Sequence Input Signals

## Function

- ♦ Input signals for controlling the Servo Drive operation. Enable or disable the connections and functions as necessary.


## Parameters Requiring Settings

| Parameter No. | Parameter name                             | Explanation                                                                                                              | Reference page |
|---------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn041         | Emergency Stop Input Setting               | Enables or disables the emergency stop input. The default setting is "enabled".                                          | 5-73           |
| Pn003         | Torque Limit Selection                     | Sets whether to select torque limit using the Forward Torque Limit (PCL) or Reverse Torque Limit (NCL).                  | 5-87           |
| Pn004         | Drive Prohibit Input Selection             | Sets whether to enable or disable the Forward Drive Prohibit Input (POT) or Reverse Drive Prohibit Input (NOT) function. | 5-88           |
| Pn066         | Stop Selection for Drive Prohibition Input | Selects the stopping method when the Forward Drive Prohibit Input (POT) or Reverse Drive Prohibit Input (NOT) is input.  | 5-95           |
| Pn042         | Origin Proximity Input Logic Setting       | Sets the input logic for the Origin Proximity Input (DEC).                                                               | 5-73           |

## ■ CN1 Control Input Signals

| Pin No.  | Symbol | Name                             | Function/Interface                                                                                                                                                                                                                                                   |
|----------|--------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1        | +24VIN | 12 to 24-VDC Power Supply Input  | Power supply input terminal (12 to 24 VDC) for sequence inputs.                                                                                                                                                                                                      |
| 2        | STOP   | Emergency Stop Input             | Input for emergency stop.<br>When this signal is enabled and pin 1 is not connected to pin 2, an Emergency Stop Input error (alarm code 87) occurs. Set this signal to be enabled or disabled in the Emergency Stop Input Setting (Pn041). (Factory default: Enable) |
| 3        | EXT3   | External Latch Signal 3          | This external signal input latches the current value feedback pulse counter.                                                                                                                                                                                         |
| 4        | EXT2   | External Latch Signal 2          | The position data is obtained the moment the input is turned ON.                                                                                                                                                                                                     |
| 5        | EXT1   | External Latch Signal 1          | Minimal signal width must be 1 ms or more.                                                                                                                                                                                                                           |
| 6        | IN1    | External General-purpose Input 1 | This input is used as external general-purpose input 1.                                                                                                                                                                                                              |
| 7        | PCL    | Forward Torque Limit Input       | When the Torque Limit Selection (Pn003) is set to 3 or 5, this signal input selects the torque limit. (For details, refer to the description of the 5-6 <i>Torque Limit</i> on page 5-16.)                                                                           |
| 8        | NCL    | Reverse Torque Limit Input       |                                                                                                                                                                                                                                                                      |
| 19 to 20 | POT    | Forward Drive Prohibit Input     | Forward, reverse drive rotation overtravel Input.<br>Pn004 chooses between enable and disable.<br>Pn044 sets the function assignment for pins 19 and 20.<br>Pn066 selects the operation.                                                                             |
|          | NOT    | Reverse Drive Prohibit Input     |                                                                                                                                                                                                                                                                      |
| 21       | DEC    | Origin Proximity Input           | Connect the origin proximity input signal in the origin search operation.<br>Pn042 changes the logic of the sensor.                                                                                                                                                  |
| 22       | IN0    | External General-purpose Input 0 | This input is used as external general-purpose input 0.                                                                                                                                                                                                              |
| 23       | IN2    | External General-purpose Input 2 | This input is used as external general-purpose input 2.                                                                                                                                                                                                              |

## ■ CN1 Control Input Signal Connection Diagram

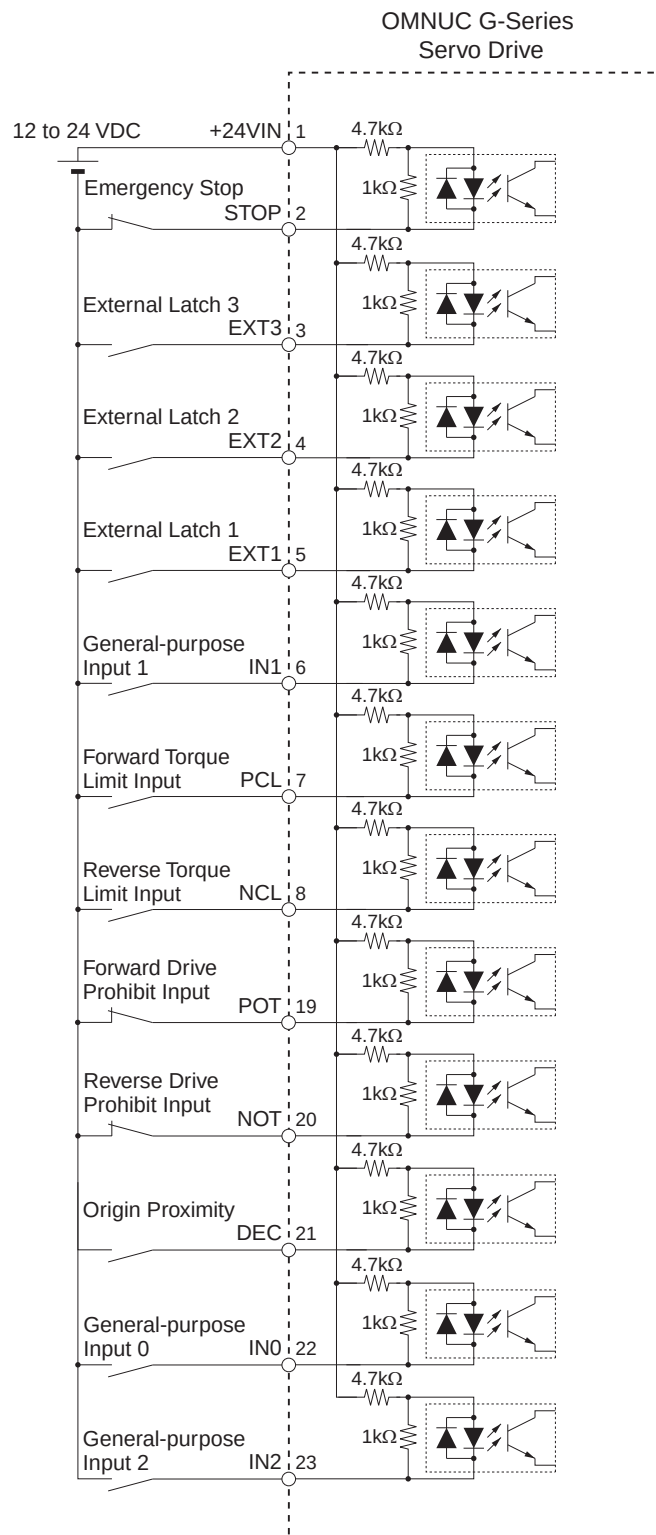

**Note** Inputs for pins 19 and 20 are determined by parameter settings.  
The diagram shows the default configuration.

# 5-13 Sequence Output Signals

## Function

- ♦ Sequence output signals that output the Servo Drive status.

## Parameters Requiring Settings

| Parameter No. | Parameter name                              | Explanation                                                | Reference page |
|---------------|---------------------------------------------|------------------------------------------------------------|----------------|
| Pn112         | General-purpose Output 1 Function Selection | Selects the function for general-purpose output 1 (OUTM1). | 5-83           |
| Pn113         | General-purpose Output 2 Function Selection | Selects the function for general-purpose output 2 (OUTM2). | 5-83           |
| Pn114         | General-purpose Output 3 Function Selection | Selects the function for general-purpose output 3 (OUTM3). | 5-83           |


## ■ CN1 Control Output Signals

| Pin No. | Symbol   | Name                             | Function/Interface                                                                                                                                                       |
|---------|----------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15      | /ALM     | Alarm Output                     | The output is OFF when an alarm is generated in the Servo Drive.                                                                                                         |
| 16      | ALMCOM   |                                  |                                                                                                                                                                          |
| 29      | OUTM2    | General-purpose Output 2 (READY) | This is a general-purpose output. The function for this output is selected by changing the parameter. Refer to <i>Output Signal Assignment Details</i> on the next page. |
| 30      | OUTM2COM |                                  |                                                                                                                                                                          |
| 31      | OUTM3    | General-purpose Output 3 (CLIM)  |                                                                                                                                                                          |
| 32      | OUTM3COM |                                  |                                                                                                                                                                          |
| 36      | OUTM1    | General-purpose Output 1 (BKIR)  |                                                                                                                                                                          |
| 35      | OUTM1COM |                                  |                                                                                                                                                                          |

## Output Signal Assignment Details

| Pn112 (General-purpose Output 1 Function Selection)<br>Pn113 (General-purpose Output 2 Function Selection)<br>Pn114 (General-purpose Output 3 Function Selection) | OUTM1 (General-purpose Output 1)<br>OUTM2 (General-purpose Output 2)<br>OUTM3 (General-purpose Output 3) |                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| 0                                                                                                                                                                 | Not assigned                                                                                             | No output. Always OFF.                                 |
| 1                                                                                                                                                                 | INP1                                                                                                     | Positioning Completed 1 output assignment.             |
| 2                                                                                                                                                                 | VCMP                                                                                                     | Speed Conformity Signal output assignment.             |
| 3                                                                                                                                                                 | TGON                                                                                                     | Servomotor Rotation Speed Detection output assignment. |
| 4                                                                                                                                                                 | READY                                                                                                    | Servo Ready output assignment.                         |
| 5                                                                                                                                                                 | CLIM                                                                                                     | Current Limit Detection output assignment.             |
| 6                                                                                                                                                                 | VLIM                                                                                                     | Speed Limit Detection output assignment.               |
| 7                                                                                                                                                                 | BKIR                                                                                                     | Brake Interlock output assignment.                     |
| 8                                                                                                                                                                 | WARN                                                                                                     | Warning Signal output assignment.                      |
| 9                                                                                                                                                                 | INP2                                                                                                     | Positioning Completed 2 output assignment.             |

## ■ CN1 Control Output Signal Connection Diagram

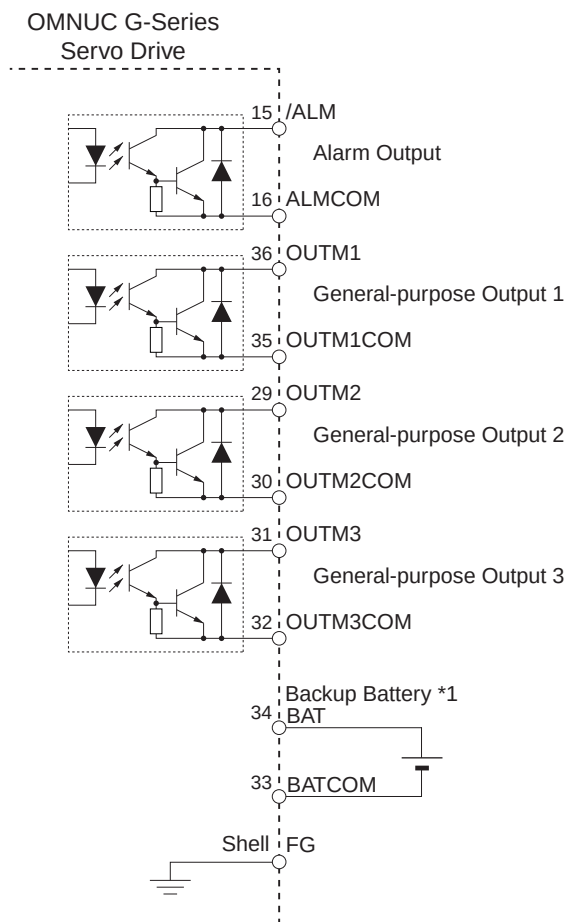

\*1. If a backup battery is connected, a cable with a battery is not required.

## 5-14 Backlash Compensation

### Function

- ♦ Compensates the position error caused by backlash in the machine.
- ♦ The specified amount of command units is compensated when the operation direction changes.

**Note 1.** The backlash compensation status will be retained when you switch from position control to speed control or torque control. Backlash compensation will resume with the status retained during the previous position control.

**Note 2.** To determine the actual position of the Servomotor, offset the backlash compensation amount from the Servomotor position data acquired via the network.

**Note 3.** Position data acquired via RS-232 is the value after the backlash compensation.

**Note 4.** After the Servo ON, compensation will be performed on the first position command for operation in the set direction. Compensation will not be performed for prior reverse operations.

Compensation will, however, be performed on the first reverse operation after the initial backlash compensation.

Once backlash compensation has been performed, it will not be performed again as long as operation continues in the same direction.


**Note 5.** When the Servo OFF status occurs while backlash compensation is performed, the backlash compensation amount will be cleared by presetting the position command data within the Servo Drive with Servomotor position data including the backlash compensation amount. When the Servo ON occurs again, backlash compensation will be performed as described above.

### Parameters Requiring Settings


| Parameter No. | Parameter name                      | Explanation                                                                                                                    | Reference page |
|---------------|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn100         | Backlash Compensation Selection     | Enables or disables backlash compensation and sets the direction for compensation.                                             | 5-81           |
| Pn101         | Backlash Compensation               | Sets the backlash compensation amount in command units.                                                                        | 5-81           |
| Pn102         | Backlash Compensation Time Constant | Sets the time to apply backlash compensation.<br>The value dividing the compensation amount by the time constant is the speed. | 5-81           |



■ Compensation in the forward direction

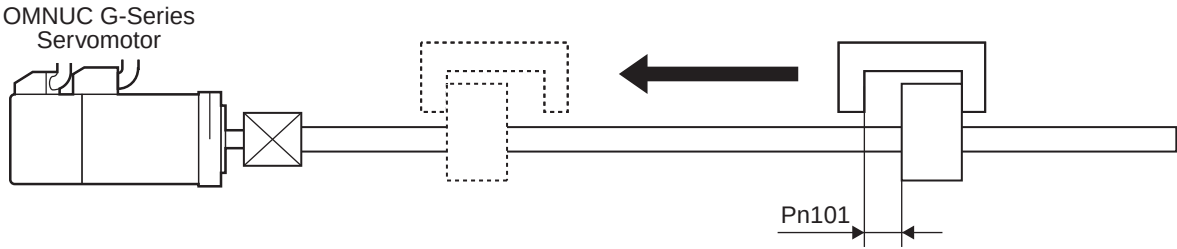

■ Compensation in the reverse direction

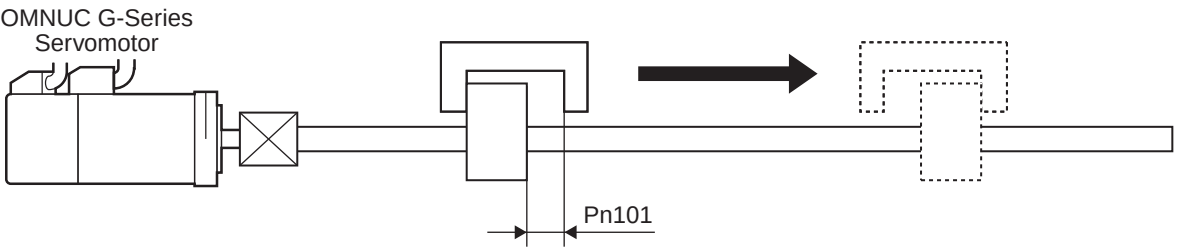

## 5-15 Overrun Protection

### Function

- ♦ The Servomotor can be stopped with an alarm for an overrun limit error (alarm code 34) if the Servomotor exceeds the allowable operating range set in the Overrun Limit Setting (Pn026) with respect to the position command input.
- ♦ This can be used to prevent impact on the edges of the machine because of Servomotor oscillation.

### Parameters Requiring Settings

| Parameter No. | Parameter name        | Explanation                                                                                                                                                                                                     | Reference page |
|---------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn026         | Overrun Limit Setting | Sets the Servomotor's allowable operating range for the position command input range.<br>(Setting range: 0 to 100 rotations)<br>An overrun limit error (alarm code 34) will occur if the set value is exceeded. | 5-70           |

### Operating Conditions

- ♦ The overrun limit will operate under the following conditions.

|                | Conditions under which the overrun limit will operate                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Operating mode | Position Control Mode is used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Others         | 1. The servo is ON.<br>2. The Overrun Limit Setting (Pn026) is not 0.<br>3. The allowable operating range for both forward and reverse is within 2,147,483,647 after the position command input range is cleared to zero.<br>If the condition 1 above is not met, the Overrun Limit Setting will be disabled until the conditions for clearing the position command input range are satisfied, as described below.<br>If the conditions 1 and 2 above are not met, the position command input range will be cleared to zero. |

#### Conditions for Clearing the Position Command Input Range

The position command input range will be cleared to zero under the following conditions.

- ♦ The power supply is turned ON.
- ♦ The position deviation is cleared. (The deviation counter clearing is enabled and drive prohibit input is enabled by setting the Stop Selection for Drive Prohibition Input (Pn066) to 2.)
- ♦ Normal mode autotuning starts or ends.
- ♦ The position data is initialized (such as during component setup request, origin return, coordinate system setup, or adjustment commands)


#### Precautions for Correct Use

- ♦ Note this function is not intended to protect against abnormal position commands.
- ♦ When the overrun limit error occurs, the Servomotor is decelerated and stopped according to the Stop Selection for Alarm Generation (Pn068). Set Pn026 to a range taking into account the deceleration operation. Otherwise, the loads may hit and cause damage to the machine ends during deceleration.

# Operating Examples


## ■ No Position Command Input (Servo ON)

No position command is input, and so the Servomotor's allowable operating range for both sides will be the range of the travel distance set in Pn026. An overrun limit error will occur if the load enters the range for generating alarm code 34 (range of slanted lines) due to oscillation.

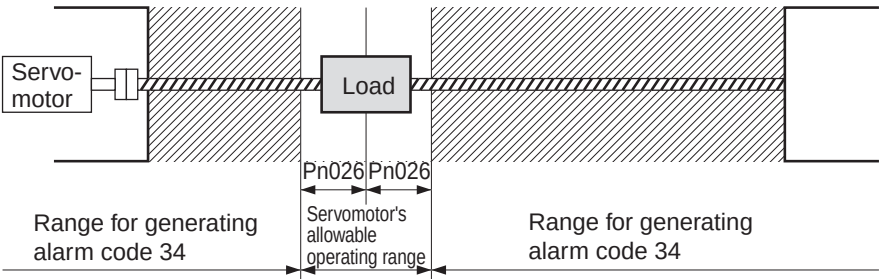


## ■ Right Side Operation (Servo ON)

When the position command to the right is input, the Servomotor's allowable operating range will increase by the input position command and the range of rotations set in Pn026 will be added to both sides of the position command input range.

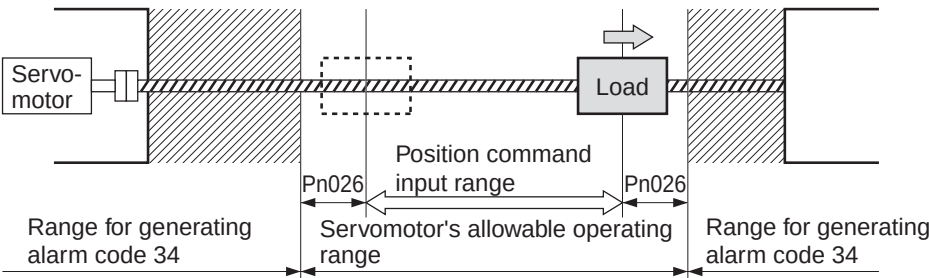

## ■ Left Side Operation (Servo ON)

When the position command to the left is input, the position command input range will further increase.

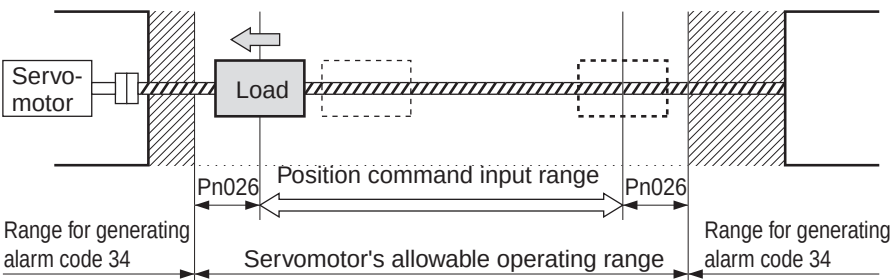

---

## 5-16 Gain Switching

---

### Function

- ♦ This function switches the position loop and speed loop gain.
- ♦ Select between enable or disable with the Gain Switching Operating Mode Selection (Pn030). Set the switching conditions with the Gain Switch Setting (Pn031).
- ♦ The control can be optimized by switching gain settings when the load inertia changes, or the responsiveness at stops and during operation needs to be changed.
- ♦ Gain switching is used when realtime autotuning does not work effectively in such cases as follows:
  - When the load inertia fluctuates in 200 ms or less.
  - When the Servomotor rotation speed does not exceed 500 r/min., or the load torque does not exceed 50% of the rated torque.
  - When external force is constantly applied, as with a vertical axis.

**Note** When gain 2 has been selected, realtime autotuning will not operate normally. If using the gain switching, set the Realtime Autotuning Mode Selection (Pn021) to 0 (disabled).

## Parameters Requiring Settings


| Parameter No. | Parameter name                          | Explanation                                                                                            | Reference page |
|---------------|-----------------------------------------|--------------------------------------------------------------------------------------------------------|----------------|
| Pn030         | Gain Switching Operating Mode Selection | Enable or disable gain switching.                                                                      | 5-72           |
| Pn031         | Gain Switch Setting                     | Sets the condition for switching between gain 1 and gain 2. The conditions depend on the control mode. | 5-72           |
| Pn010         | Position Loop Gain                      | Sets position loop responsiveness.                                                                     | 5-67           |
| Pn011         | Speed Loop Gain                         | Sets speed loop responsiveness.                                                                        | 5-67           |
| Pn012         | Speed Loop Integration Time Constant    | Adjusts the speed loop integration time constant.                                                      | 5-67           |
| Pn013         | Speed Feedback Filter Time Constant     | Selects the speed detection filter time constant.                                                      | 5-67           |
| Pn014         | Torque Command Filter Time Constant     | Sets the time constant for the torque command filter.                                                  | 5-68           |
| Pn018         | Position Loop Gain 2                    | Sets the 2nd position loop responsiveness.                                                             | 5-68           |
| Pn019         | Speed Loop Gain 2                       | Sets the 2nd speed loop responsiveness.                                                                | 5-68           |
| Pn01A         | Speed Loop Integration Time Constant 2  | Adjusts the speed loop integration time constant 2.                                                    | 5-68           |
| Pn01B         | Speed Feedback Filter Time Constant 2   | Selects the speed detection filter time constant.                                                      | 5-68           |
| Pn01C         | Torque Command Filter Time Constant 2   | Sets the time constant for the 2nd torque command filter.                                              | 5-68           |
| Pn032         | Gain Switch Time                        | Sets the time to return from gain 2 to gain 1. (Units: 166 $\mu$ s)                                    | 5-72           |
| Pn033         | Gain Switch Level Setting               | Sets the judgment level for switching between gain 1 and gain 2.                                       | 5-72           |
| Pn034         | Gain Switch Hysteresis Setting          | Sets the hysteresis width for the judgment level set in the Gain Switch Level setting (Pn033).         | 5-73           |
| Pn035         | Position Loop Gain Switching Time       | Sets the number of steps to switch from low gain to high gain. (Units: 166 $\mu$ s)                    | 5-73           |

■ Timings for Gain Switch Setting (Pn031)

Switching between gain 1 and gain 2 will be performed as illustrated below.  
Note that Position Loop Gain will be switched according to the setting for Pn035.


**Gain Switch Setting (Pn031) = 2: Switching from Network**

Gain switches instantly when commanded from the network.

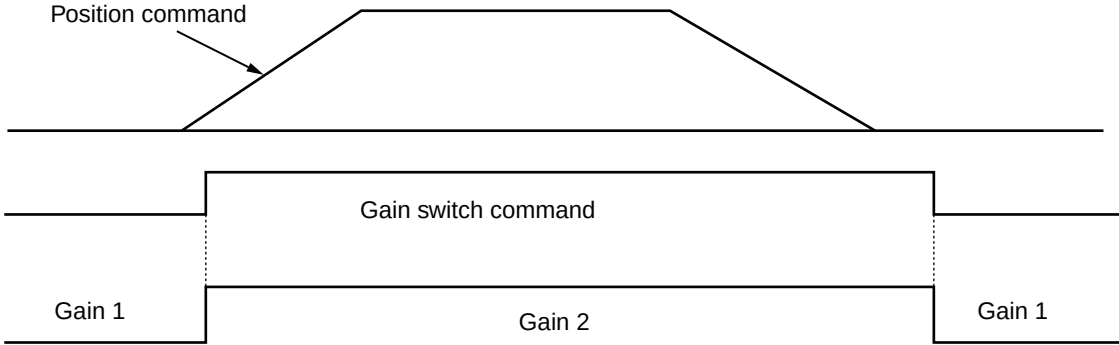


**Gain Switch Setting (Pn031) = 3: Switching by an amount of change in torque command**

The torque command change amount (angular acceleration and deceleration speed command) is set in units of 0.05%/166  $\mu$ s.  
Gain Switch is canceled if the change amount vibrates and fails to meet the switching time.  
The change amount is approximately 6 units when switching 4% in 2 ms. (0.33% change in 166  $\mu$ s)

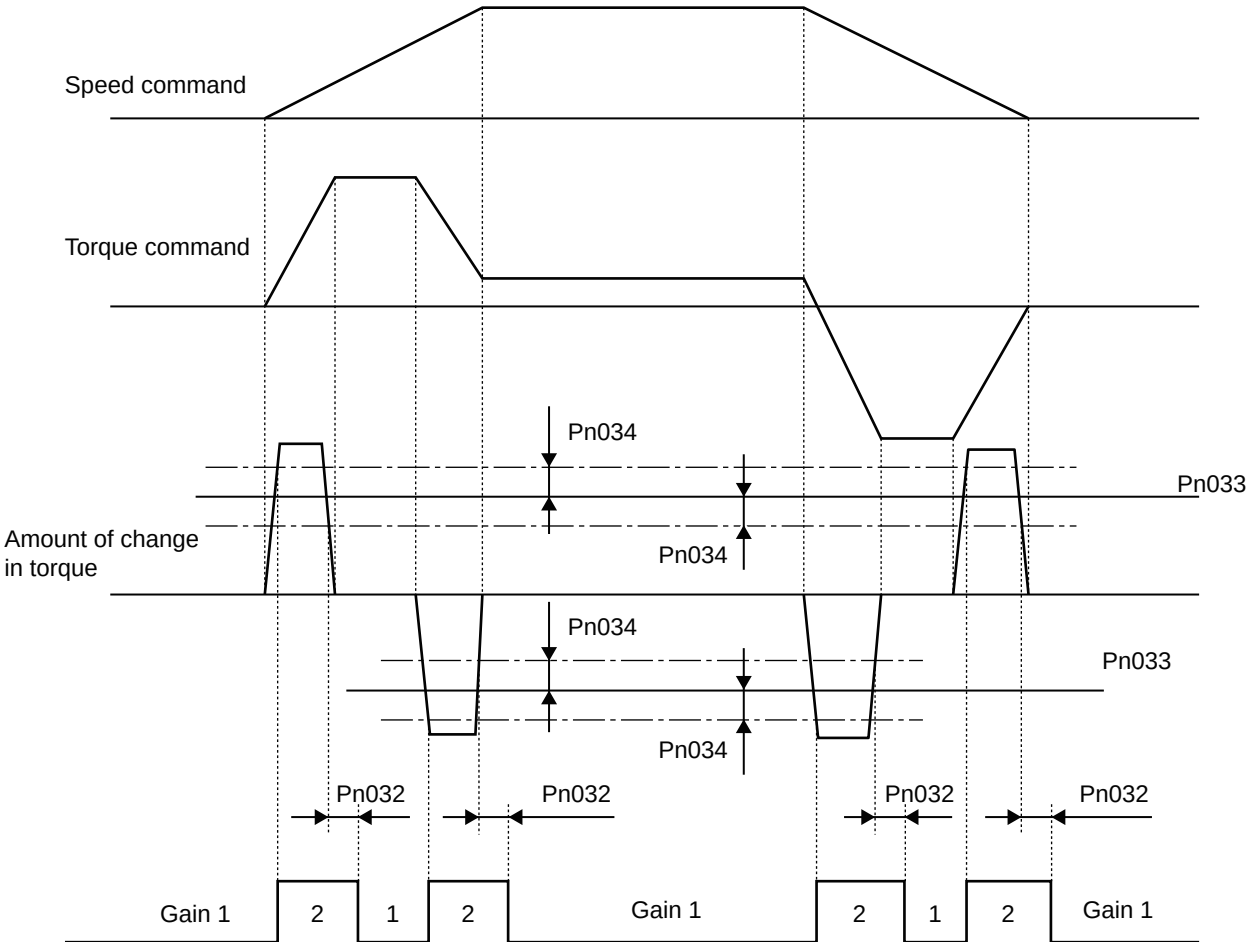


**Gain Switch Setting (Pn031) = 5, 9: Switching by the Speed Command or Actual Servomotor Speed**

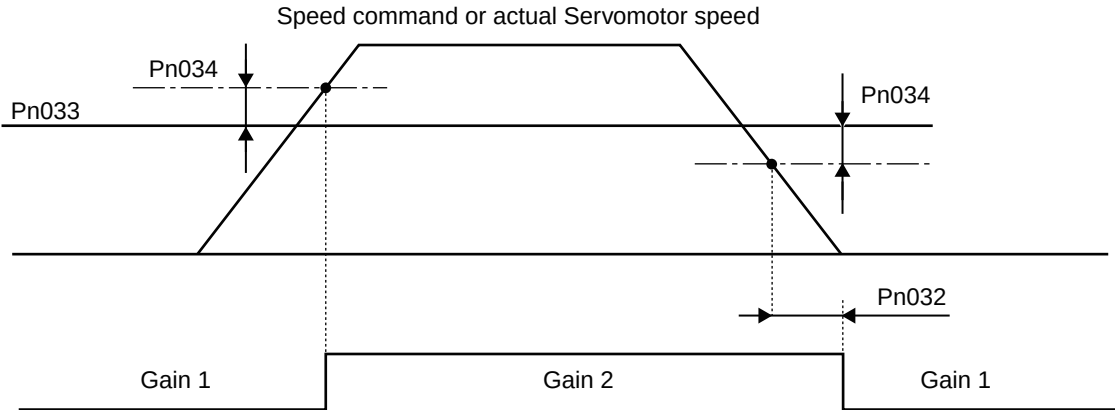


**Gain Switch Setting (Pn031) = 6: Switching by the Position Deviation**

Switches the gain based on the accumulated value in the deviation counter.

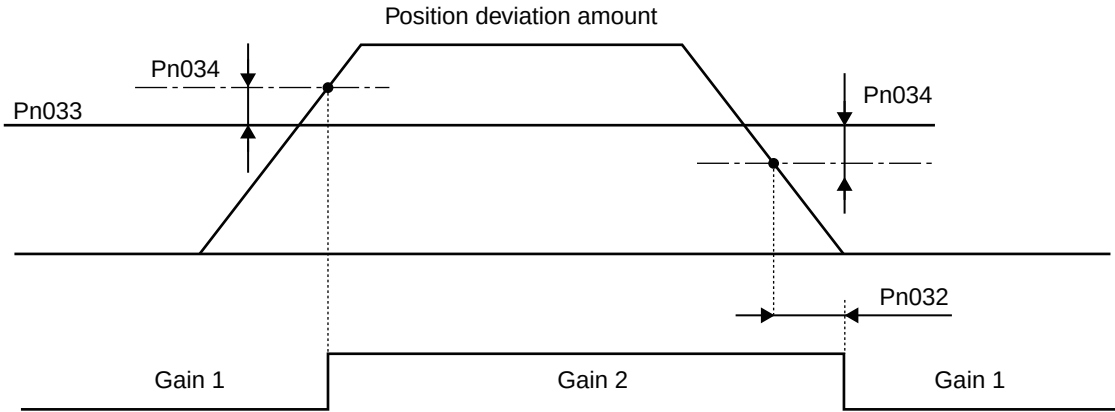


**Gain Switch Setting (Pn031) = 7: Switching based on position command pulses received**

Switches the gain when one or more position command pulse exists.

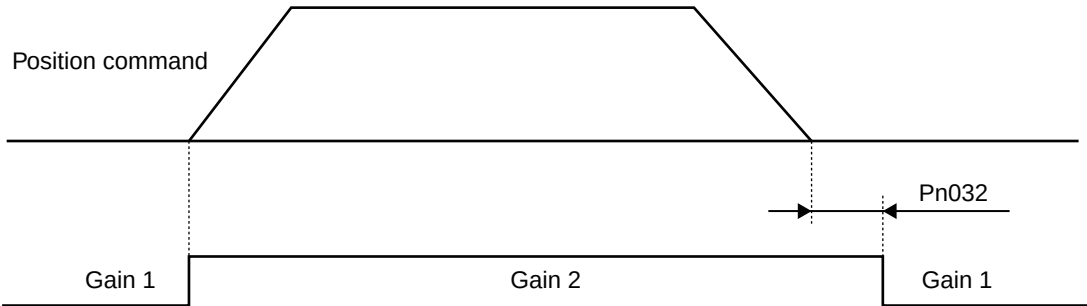

### Gain Switch Setting (Pn031) = 8: Switching when the positioning completed signal turns OFF


Switches to gain 2 when the accumulated pulses in the deviation counter exceed Positioning Completion Range 1 (Pn060).

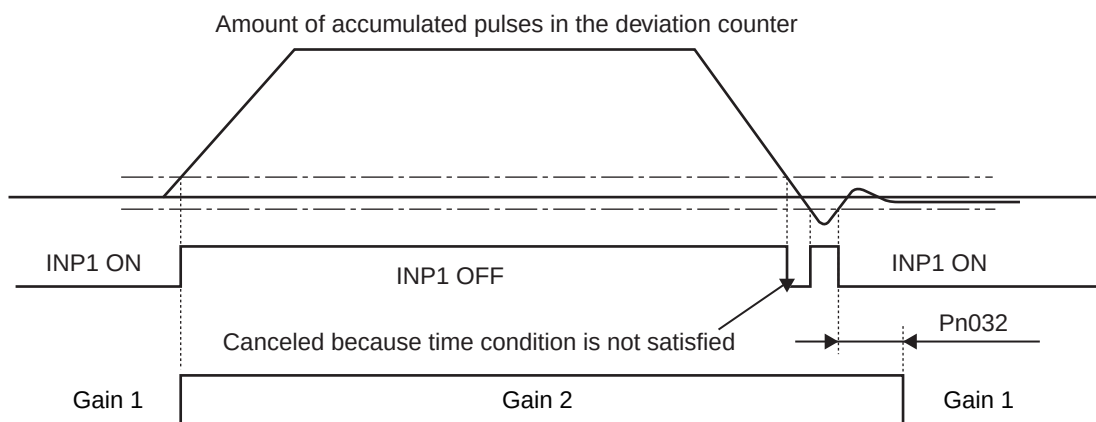

### Gain Switch Setting (Pn031) = 10: Switching by the combination of position command pulses received and speed

Switches to gain 2 when there are position command pulses received.


Switches to gain 1 when there are no position commands for the time specified in the Gain Switch Time (Pn032), and when the speed is equal to or less than the Gain Switch Level Setting (Pn033) – the Gain Switch Hysteresis Setting (Pn034) [r/min].

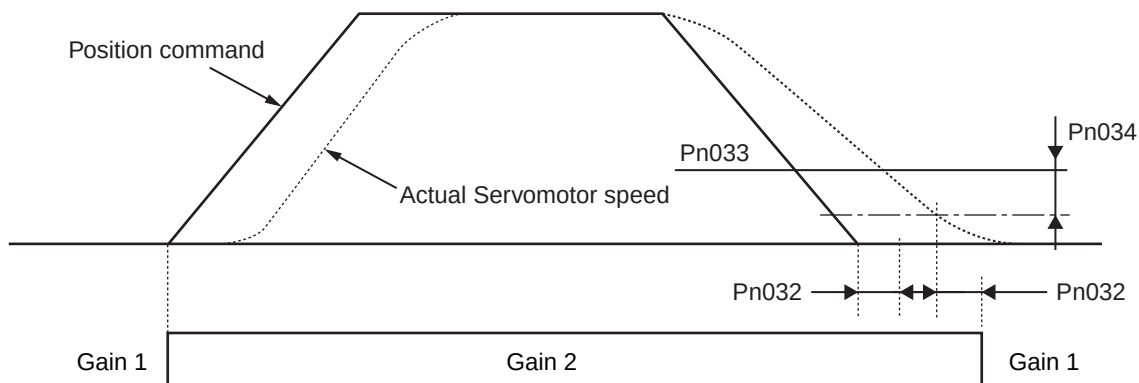

### ■ Timing for Position Loop Gain Switching Time (Pn035)

When switching the gain, the speed loop gain, speed loop integration time constant, torque command filter time constant, and speed detection filter will change at the same time, but switching is made by the time set to reduce vibration or resonance in the machine caused by changing gain from low to high.

The switching time is in units of 166  $\mu$ s of the internal cycle. If the position loop gain is increased from 30 [1/s] to 50 [1/s] and Pn035 is set to 20, the gain moves up a step every 166  $\mu$ s. (3.32 ms) Conversely, the gain goes down immediately when reducing the position loop gain from 50 [1/s] to 30 [1/s].

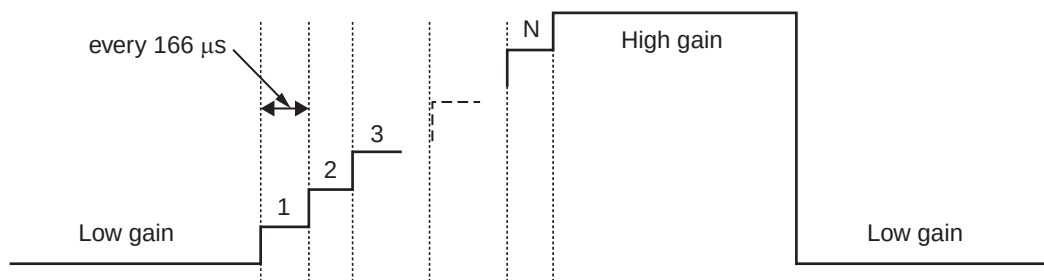



### ■ Gain switching in position control mode

In position control mode the Gain Switch Setting (Pn031) changes as follows.

(O: Supported, x: Not supported)

| Pn031 setting | Switching condition                                       | Gain Switch Time (Pn032) | Gain Switch Level Setting (Pn033) | Gain Switch Hysteresis Setting (Pn034) | Position Loop Gain Switching Time (Pn035) |
|---------------|-----------------------------------------------------------|--------------------------|-----------------------------------|----------------------------------------|-------------------------------------------|
| 0             | Always Gain 1                                             | x                        | x                                 | x                                      | x                                         |
| 1             | Always Gain 2                                             | x                        | x                                 | x                                      | x                                         |
| 2             | Switching from the network                                | x                        | x                                 | x                                      | O                                         |
| 3             | Amount of change in torque command                        | O                        | O<br>(× 0.05%)                    | O<br>(× 0.05%)                         | O                                         |
| 4             | Always Gain 1                                             | x                        | x                                 | x                                      | x                                         |
| 5             | Speed command                                             | O                        | O<br>(r/min)                      | O<br>(r/min)                           | O                                         |
| 6             | Amount of position deviation                              | O                        | O<br>(pulse)                      | O<br>(pulse)                           | O                                         |
| 7             | Position command pulses received                          | O                        | x                                 | x                                      | O                                         |
| 8             | Positioning Completed Signal (INP1) OFF                   | O                        | x                                 | x                                      | O                                         |
| 9             | Actual Servomotor speed                                   | O                        | O<br>(r/min)                      | O<br>(r/min)                           | O                                         |
| 10            | Combination of position command pulses received and speed | O                        | O                                 | O                                      | O                                         |

### ■ Gain switching in speed control mode

In speed control mode the Gain Switch Setting (Pn031) changes as follows.

(O: Supported, x: Not supported)

| Pn031 setting | Switching condition                | Gain Switch Time (Pn032) | Gain Switch Level Setting (Pn033) | Gain Switch Hysteresis Setting (Pn034) |
|---------------|------------------------------------|--------------------------|-----------------------------------|----------------------------------------|
| 0             | Always Gain 1                      | x                        | x                                 | x                                      |
| 1             | Always Gain 2                      | x                        | x                                 | x                                      |
| 2             | Switching from network             | x                        | x                                 | x                                      |
| 3             | Amount of change in torque command | O                        | O<br>(× 0.05%)                    | O<br>(× 0.05%)                         |
| 4             | Always Gain 1                      | x                        | x                                 | x                                      |
| 5             | Speed command                      | O                        | O<br>(r/min)                      | O<br>(r/min)                           |

■ Gain switching in torque control mode

In torque control mode the Gain Switch Setting (Pn031) changes as follows.  
(O: Supported, x: Not supported)

| Pn031 setting | Switching condition                | Gain Switch Time (Pn032) | Gain Switch Level Setting (Pn033) | Gain Switch Hysteresis Setting (Pn034) |
|---------------|------------------------------------|--------------------------|-----------------------------------|----------------------------------------|
| 0             | Always Gain 1                      | x                        | x                                 | x                                      |
| 1             | Always Gain 2                      | x                        | x                                 | x                                      |
| 2             | Switching from network             | x                        | x                                 | x                                      |
| 3             | Amount of change in torque command | O                        | O<br>(× 0.05%)                    | O<br>(× 0.05%)                         |


# 5-17 Speed Feed-forward

## Function


This function shortens positioning time by adding the amount of change in position command value directly to the speed loop without passing it through the deviation counter. Performing feed-forward compensation effectively increases the position loop gain and improves responsiveness. However, this function is not so effective in a system where the position loop gain is already sufficiently high.

## Parameters Requiring Settings

| Parameter No. | Parameter name                    | Explanation                                                                                           | Reference page |
|---------------|-----------------------------------|-------------------------------------------------------------------------------------------------------|----------------|
| Pn015         | Speed Feed-forward Amount         | Sets the speed feed-forward amount from the position command. (Setting range: 0 to 100%)              | 5-68           |
| Pn016         | Feed-forward Filter Time Constant | Sets the time constant for the speed feed-forward first-order lag filter. (Setting range: 0 to 64 ms) | 5-68           |

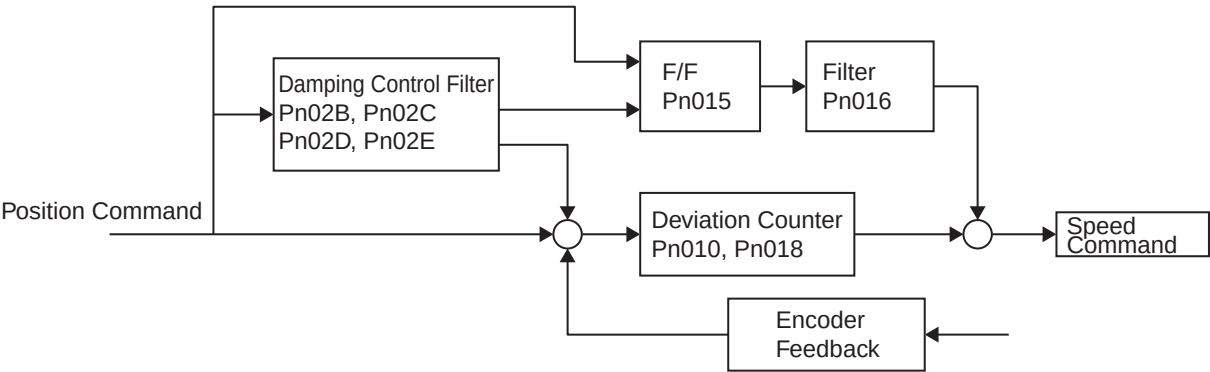

Adjust the feed-forward after completing the gain adjustment. The Servomotor will overshoot if the feed-forward amount is too large. Increase the feed-forward amount, but not so much that it causes overshooting. The feed-forward filter is the first-order lag filter. Set this filter according to the acceleration and deceleration time.

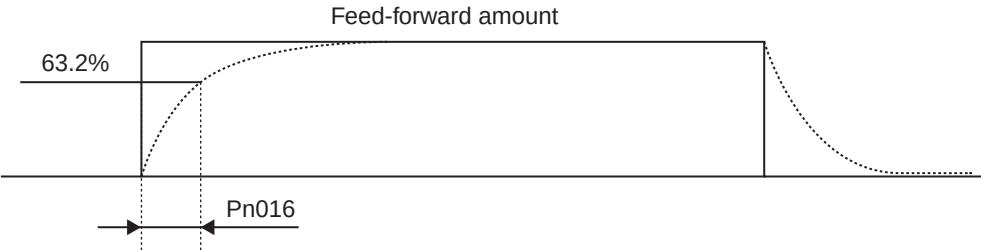

The figure above shows step response, but the positioning time will be delayed accordingly if acceleration or deceleration occurs.

## 5-18 Torque Feed-forward


### Function

In speed commanded control, using the torque feed-forward command reduces the delay caused by the speed loop integration time and thereby makes acceleration and deceleration faster. For a vertical axis, torque feed-forward can compensate heavy loads to eliminate the difference (up and down) in the torque command amount by the speed command calculation.

### Parameters Requiring Settings

There are no parameters to set. This is set by command from the network.

To control during acceleration and deceleration, differential operations will be required for the speed command via the host controller.

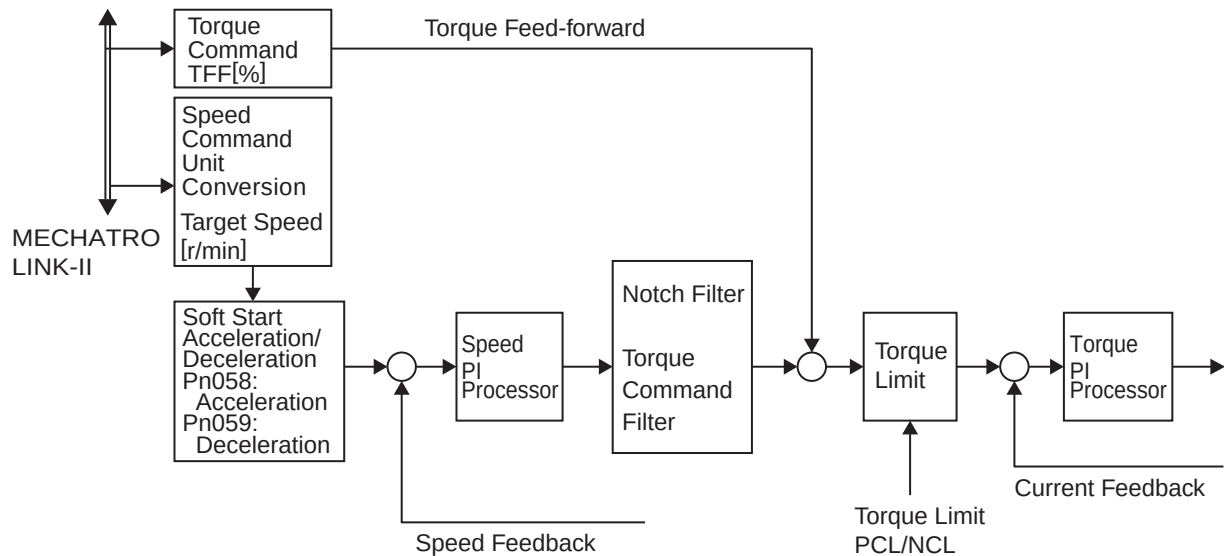

# 5-19 Speed Feedback Filter Selection

## Function

Selects the speed feedback filter. Normally, use a setting of 0.

This is used when the speed loop gain cannot be raised any more due to vibration in the machine. Increasing the value reduces the noise of the Servomotor but also reduces its responsiveness. (first-order lag filter)

When the Instantaneous Speed Observer Setting is enabled (Pn027 = 1), Pn013 and Pn01B are disabled and processed as 0.

## Parameters Requiring Settings

| Parameter No. | Parameter name                        | Explanation                                                                                                 | Reference page |
|---------------|---------------------------------------|-------------------------------------------------------------------------------------------------------------|----------------|
| Pn013         | Speed Feedback Filter Time Constant   | Selects the speed detection filter time constant. Normally, use a setting of 0. (Setting range: 0 to 5)     | 5-67           |
| Pn01B         | Speed Feedback Filter Time Constant 2 | Selects the 2nd speed detection filter time constant. Normally, use a setting of 0. (Setting range: 0 to 5) | 5-68           |

The settings and cut-off frequencies of Pn013 and Pn01B are as follows.

| Setting | Frequency (Hz) |
|---------|----------------|
| 0       | ---            |
| 1       | 1820           |
| 2       | 1120           |
| 3       | 740            |
| 4       | 680            |
| 5       | 330            |

---

# 5-20 P Control Switching

---

## Function

This function switches speed loop control from PI control to P control.  
Switching to P control reduces the servo rigidity and eliminates vibration.  
The absence of the integration time results in greater speed and position deviations due to external forces and load torques.

## Parameters Requiring Settings

There are no parameters to set. This is set by command from the network.

## 5-21 Torque Command Filter Time Constant

### Function

Set the primary filter applied to the torque command. The 1st and 2nd filter is switched by gain switching.


The torque command filter can suppress machine vibration that occurs when a servo loop is configured.

Adjusting the time constant of the torque command filter may be able to suppress vibration.

Responsiveness worsens by increasing the time constant. Overshoots may occur as the servo rigidity decreases. Depending on the machine, optimize the setting for this filter as well as the notch filter explained in the next section.

### Parameters Requiring Settings

| Parameter No. | Parameter name                        | Explanation                                                                                              | Reference page |
|---------------|---------------------------------------|----------------------------------------------------------------------------------------------------------|----------------|
| Pn014         | Torque Command Filter Time Constant   | Sets the time constant for the torque command filter.<br>(Setting range: 0 to 25 ms, units: 0.01 ms)     | 5-68           |
| Pn01C         | Torque Command Filter Time Constant 2 | Sets the 2nd time constant for the torque command filter.<br>(Setting range: 0 to 25 ms, units: 0.01 ms) | 5-68           |

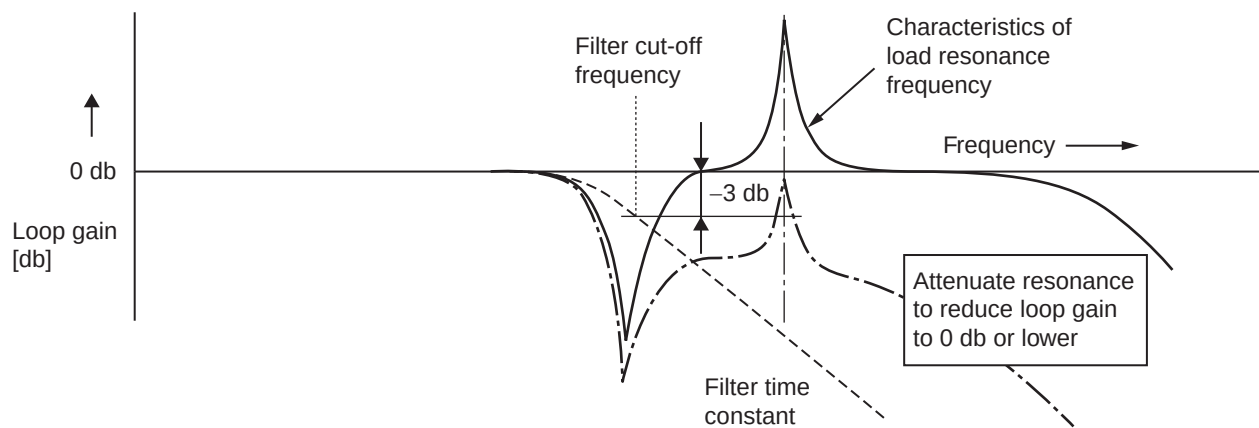

# 5-22 Notch Filter

## Function

Two notch filters can be set for torque commands.  
When resonance occurs at a ball screw or a specific location, set the resonance frequency to eliminate the resonance.

## Parameters Requiring Settings

| Parameter No. | Parameter name           | Explanation                                                                                                                                                                                   | Reference page |
|---------------|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Pn01D         | Notch Filter 1 Frequency | Sets the frequency of notch filter 1.<br>Enabled from 100 to 1499 Hz, disabled at 1500 Hz.                                                                                                    | 5-68           |
| Pn01E         | Notch Filter 1 Width     | Selects the width of the frequency of notch filter 1.<br>The notch width becomes wider by increasing this value.<br>(Setting range: 0 to 4, normally use a setting of 2.)                     | 5-68           |
| Pn028         | Notch Filter 2 Frequency | Sets the frequency of notch filter 2.<br>Enabled from 100 to 1499 Hz, disabled at 1500 Hz.                                                                                                    | 5-71           |
| Pn029         | Notch Filter 2 Width     | Selects the width of the frequency of notch filter 2.<br>The notch width becomes wider by increasing this value.<br>(Setting range: 0 to 4, normally use a setting of 2.)                     | 5-71           |
| Pn02A         | Notch Filter 2 Depth     | Selects the depth of the frequency of notch filter 2.<br>Increasing this value decreases the notch depth and reduces the phase lag.<br>(Setting range: 0 to 99, normally use a setting of 2.) | 5-71           |

Notch filter width settings and depths


| Setting | Depth = $F_c/f_w$ | Width at 500 Hz |
|---------|-------------------|-----------------|
| 0       | 0.41              | 408 to 613 Hz   |
| 1       | 0.56              | 380 to 659 Hz   |
| 2       | 0.71              | 354 to 707 Hz   |
| 3       | 0.86              | 330 to 758 Hz   |
| 4       | 1.01              | 308 to 811 Hz   |

Notch filter depths and attenuation


| Depth | Output/Input (%)   |
|-------|--------------------|
| 0     | 0 (cut-off)        |
| 30    | 15% (–16.5 db)     |
| 50    | 50% (–6 db)        |
| 99    | 99% (pass through) |



A notch filter is a filter that eliminates a designated component of a frequency.

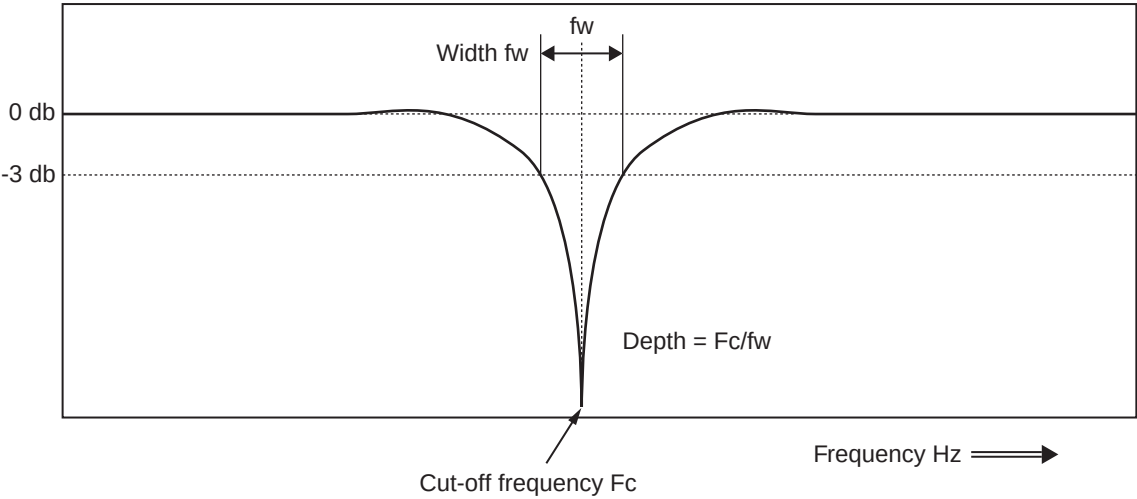

A notch filter is used to eliminate resonance occurring in a machine.

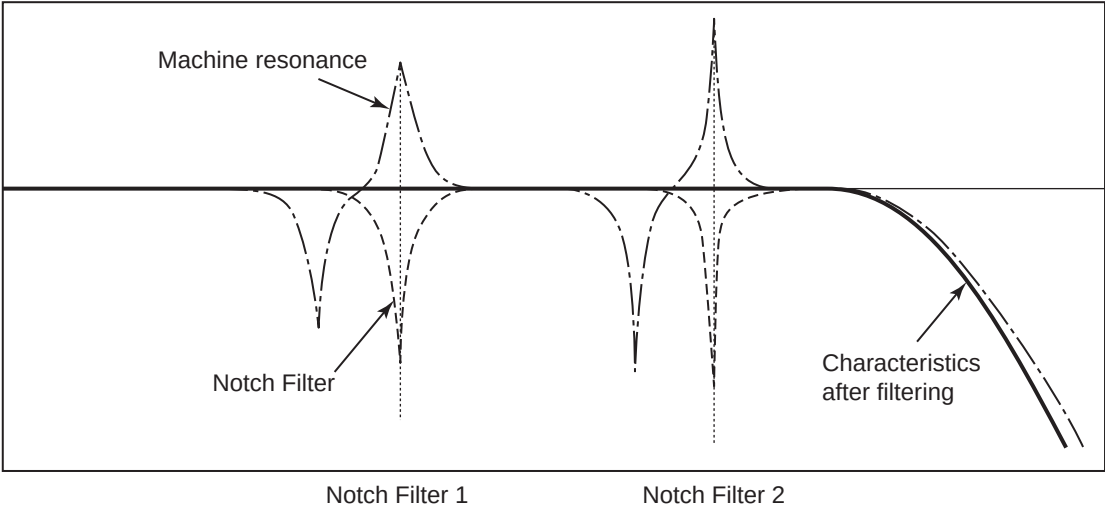


# 5-23 Adaptive Filter

## Function

The adaptive filter reduces resonance point vibration by estimating the resonance frequency from the vibration component that appears in the Servomotor speed during actual operation and automatically sets the frequency of the notch filter, which removes the resonance component from the torque command.

The automatically set notch filter frequency is set in the Adaptive Filter Table Number Display (Pn02F).

The resonance filter frequency can be obtained by specifying the Pn02F table No.

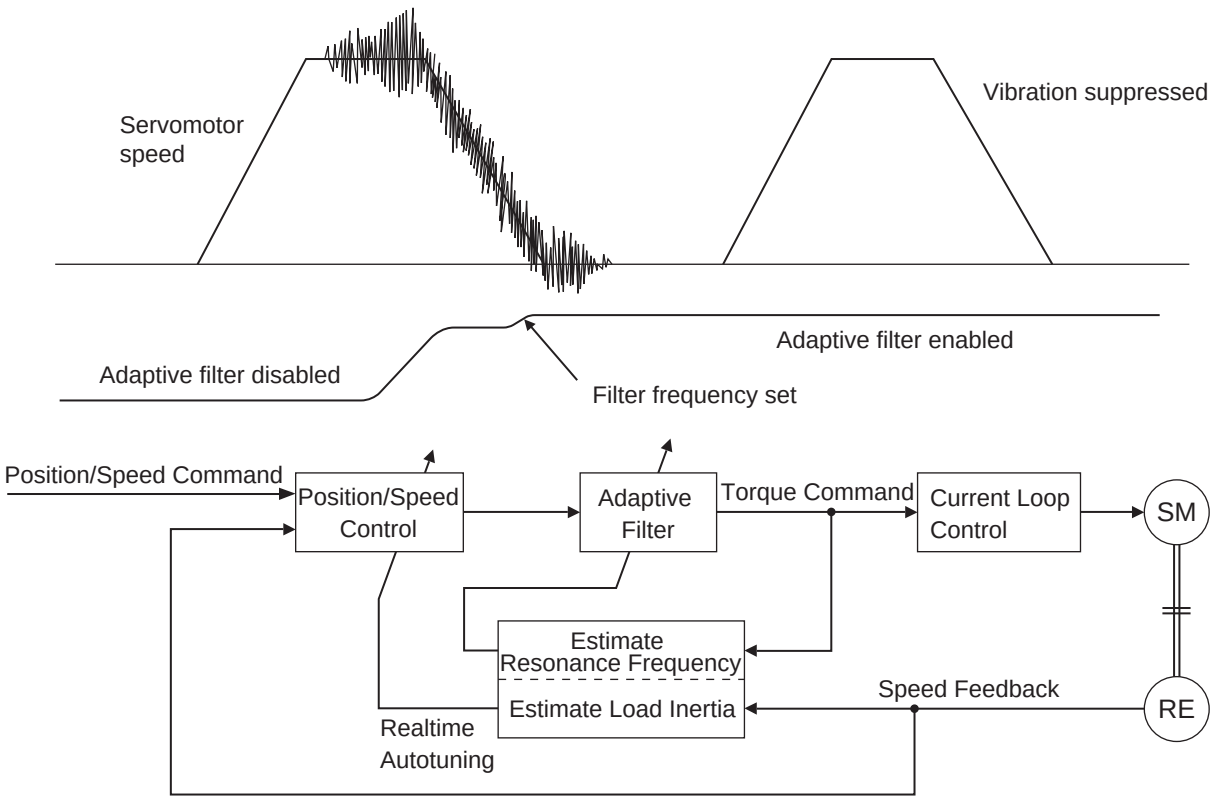

## Parameters Requiring Settings

| Parameter No. | Parameter name            | Setting | Explanation     |                    | Reference page |
|---------------|---------------------------|---------|-----------------|--------------------|----------------|
| Pn023         | Adaptive Filter Selection |         | Adaptive filter | Adaptive operation | 5-92           |
|               |                           | 0       | Disabled        | ---                |                |
|               |                           | 1       | Enabled         | Yes                |                |
|               |                           | 2       |                 | No (retained)      |                |

If the Adaptive Filter Table Number Display (Pn02F) has stopped changing (completed), a setting of 2 will be retained, assuming that the resonance point does not change.  
Write the data to the EEPROM if the results are to be saved.

**Precautions  
for Correct Use**

- ♦ The adaptive filter may not function properly under the following conditions.

|                        | Conditions under which the adaptive filter does not function properly                                                                                                                                                                                             |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control Mode           | ♦ In Torque Control Mode. (Operates in position and speed control modes)                                                                                                                                                                                          |
| Resonating load status | <ul style="list-style-type: none"> <li>♦ If the resonance frequency is 300 Hz or lower.</li> <li>♦ If there are multiple points of resonance.</li> <li>♦ If the resonance peak or control gain is low, and the Servomotor speed is not affected by it.</li> </ul> |
| Load status            | ♦ If the Servomotor speed with high-frequency components changes due to backlash or other non-linear elements (play).                                                                                                                                             |
| Command pattern        | ♦ If the acceleration/deceleration suddenly changes, i.e. 3,000 r/min or more in 0.1 s.                                                                                                                                                                           |

**Precautions  
for Correct Use**

- ♦ Unusual noise or vibration may occur until the adaptive filter stabilizes after startup, immediately after the first servo ON, or when the Realtime Autotuning Machine Rigidity Selection (Pn022) is increased, but this is not a problem if it disappears right away. If the unusual noise or vibration, however, continues for three or more reciprocating operations, take the following measures in any order you can.
  - ♦ Write the parameters used during normal operation to the EEPROM.
  - ♦ Lower the Realtime Autotuning Machine Rigidity Selection (Pn022).
  - ♦ Disable the adaptive filter by setting the Adaptive Filter Selection (Pn023) to 0. (Reset the inertia estimate and adaptive operation)
  - ♦ Set the notch filter manually.
- ♦ Once unusual noise or vibration occurs, the Inertia Ratio (Pn020) may have changed to an extreme value. In this case, also take the measures described above.
- ♦ The Adaptive Filter Table Number Display (Pn02F) is written to the EEPROM every 30 minutes, and when the power supply is turned OFF and turned ON again, this data is used as the initial values for the adaptive operation.

## Disabling the Adaptive Filter

The adaptive filter function, which performs automatic tracking in response to the load resonance, can be disabled by setting the Adaptive Filter Selection (Pn023) to 0. If the adaptive filter is disabled when it is operating correctly, the resonance that has been suppressed will reappear, and noise or vibration may occur.

Therefore, before disabling the adaptive filter, perform copying function to the Notch Filter 1 Frequency (Pn01D) of the Adaptive Filter Table Number Display (Pn02F) or manually set the Notch Filter 1 Frequency (Pn01D) based on the Adaptive Filter Table Number Display (Pn02F) in the following tables.

| Pn02F | Notch Filter 1 Frequency | Pn02F | Notch Filter 1 Frequency | Pn02F | Notch Filter 1 Frequency      |
|-------|--------------------------|-------|--------------------------|-------|-------------------------------|
| 0     | (Disabled)               | 22    | 766                      | 44    | 326                           |
| 1     | (Disabled)               | 23    | 737                      | 45    | 314                           |
| 2     | (Disabled)               | 24    | 709                      | 46    | 302                           |
| 3     | (Disabled)               | 25    | 682                      | 47    | 290                           |
| 4     | (Disabled)               | 26    | 656                      | 48    | 279                           |
| 5     | 1482                     | 27    | 631                      | 49    | 269 (Disabled when Pn022 ≥ F) |
| 6     | 1426                     | 28    | 607                      | 50    | 258 (Disabled when Pn022 ≥ F) |
| 7     | 1372                     | 29    | 584                      | 51    | 248 (Disabled when Pn022 ≥ F) |
| 8     | 1319                     | 30    | 562                      | 52    | 239 (Disabled when Pn022 ≥ F) |
| 9     | 1269                     | 31    | 540                      | 53    | 230 (Disabled when Pn022 ≥ F) |
| 10    | 1221                     | 32    | 520                      | 54    | 221 (Disabled when Pn022 ≥ E) |
| 11    | 1174                     | 33    | 500                      | 55    | 213 (Disabled when Pn022 ≥ E) |
| 12    | 1130                     | 34    | 481                      | 56    | 205 (Disabled when Pn022 ≥ E) |
| 13    | 1087                     | 35    | 462                      | 57    | 197 (Disabled when Pn022 ≥ E) |
| 14    | 1045                     | 36    | 445                      | 58    | 189 (Disabled when Pn022 ≥ E) |
| 15    | 1005                     | 37    | 428                      | 59    | 182 (Disabled when Pn022 ≥ D) |
| 16    | 967                      | 38    | 412                      | 60    | (Disabled)                    |
| 17    | 930                      | 39    | 396                      | 61    | (Disabled)                    |
| 18    | 895                      | 40    | 381                      | 62    | (Disabled)                    |
| 19    | 861                      | 41    | 366                      | 63    | (Disabled)                    |
| 20    | 828                      | 42    | 352                      | 64    | (Disabled)                    |
| 21    | 796                      | 43    | 339                      |       |                               |

Set the Notch Filter 1 Frequency (Pn01D) to 1,500 when disabling the adaptive filter using the above table.

# 5-24 Instantaneous Speed Observer


## Function

The instantaneous speed observer improves speed detection accuracy, increases responsiveness, and reduces vibration at stopping by estimating the speed of the Servomotor using a load model (load inertia).

This function does not work for machines with resonance or insufficient rigidity.

This function can be used in the position and speed control modes.

This function is available for Servomotors with only a high speed resolution absolute encoder.

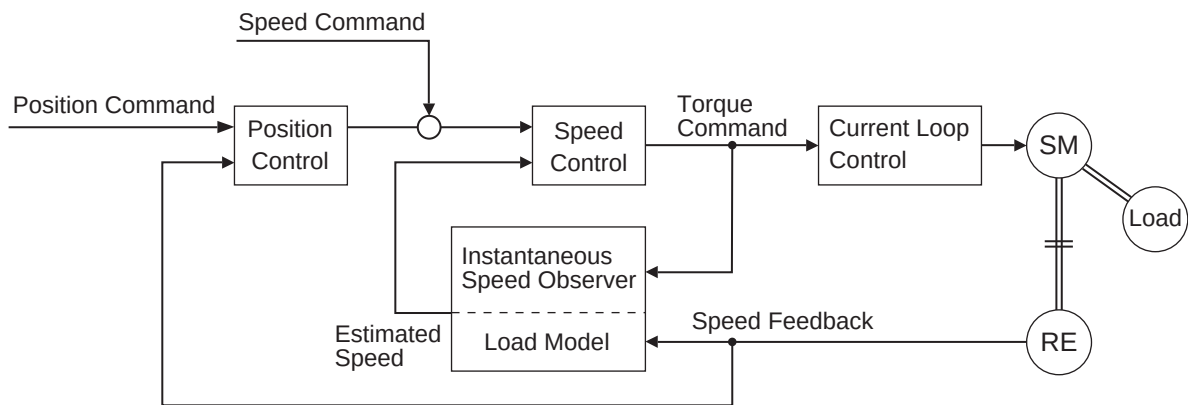

## Parameters Requiring Settings

| Parameter No. | Parameter name                       | Setting | Explanation                                            | Reference page |
|---------------|--------------------------------------|---------|--------------------------------------------------------|----------------|
| Pn020         | Inertia Ratio                        |         | Sets the load inertia ratio as accurately as possible. | 5-68           |
| Pn027         | Instantaneous Speed Observer Setting | 0       | Instantaneous Speed Observer disabled                  | 5-71           |
|               |                                      | 1       | Instantaneous Speed Observer enabled                   |                |
| Pn060         | Positioning Completion Range 1       |         | Set this parameter when using an absolute encoder.     | 5-75           |

### Precautions for Correct Use

- ♦ The instantaneous speed observer may not function properly or may not be effective under the following conditions.

|                        | Conditions under which the instantaneous speed observer does not function properly                                                                                                                                                                                                                  |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control Mode           | ♦ In Torque Control Mode. (Operates in position and speed control modes)                                                                                                                                                                                                                            |
| Resonating load status | <ul style="list-style-type: none"> <li>♦ If there's a large resonance point at the frequency of 300 Hz or lower.</li> <li>♦ If there are multiple resonance frequencies.</li> <li>♦ If the resonance peak or control gain is low, and the Servomotor speed is not affected by it.</li> </ul>        |
| Load status            | <ul style="list-style-type: none"> <li>♦ If the Servomotor speed with high-frequency components changes due to backlash or other non-linear elements (play).</li> <li>♦ If a large disturbance torque with high-frequency components is applied.</li> <li>♦ If the load inertia changes.</li> </ul> |
| Encoder                | ♦ If a 2,500-p/r incremental encoder is used.                                                                                                                                                                                                                                                       |

## Operating Procedure

### 1. Set the Inertia Ratio (Pn020).

- Set the inertia ratio as accurately as possible.
- Input the calculated inertia ratio if it has already been calculated when selecting a Servomotor.
- If the inertia ratio is not known, perform normal mode autotuning and set the inertia ratio.
- Use the Pn020 setting if the Inertia Ratio (Pn020) is obtained using realtime autotuning that can be used in normal position control.

### 2. Adjust the gain for the position loop and speed loop.

Adjust the Position Loop Gain (Pn010), Speed Loop Gain (Pn011), Speed Loop Integration Time Constant (Pn012), and Torque Command Filter Time Constant (Pn014).

Use normal mode autotuning and realtime autotuning if there are no problems in doing so.


### 3. Set the Instantaneous Speed Observer Setting (Pn027).

- Set the Instantaneous Speed Observer Setting (Pn027) to 1. The speed detection method will switch to the Instantaneous Speed Observer.
- If the machine operating noise or vibration becomes louder, or the torque monitor waveform fluctuates significantly, return the setting to 0 and make sure the inertia ratio and adjustment parameters are correct.
- If improvements are seen, such as a quieter operation, less vibration, or less fluctuation in the torque monitor waveform, make fine adjustments in the Inertia Ratio (Pn020) to find the setting that makes the least fluctuation while monitoring the position deviation waveform and the actual speed waveform.  
If changes are made to the Position Loop Gain (Pn010), Speed Loop Gain (Pn011), or Speed Loop Integration Time Constant (Pn012), the optimum value for the Inertia Ratio (Pn020) may have changed. Readjust the value in the Inertia Ratio (Pn020) so that the fluctuation will be minimal.


# 5-25 Damping Control

## Function

Damping control is used to reduce vibration when the end of the machine exhibits vibration. This function is effective on vibration in machines with low rigidity. The normal type is suitable for frequencies from 10 to 200 Hz, the low-pass type is for 1 to 200 Hz. The adaptive filter (300 Hz or more) can be used for the normal type, but not for the low-pass type. Damping control works with position commands and thus cannot be used for speed and torque control.

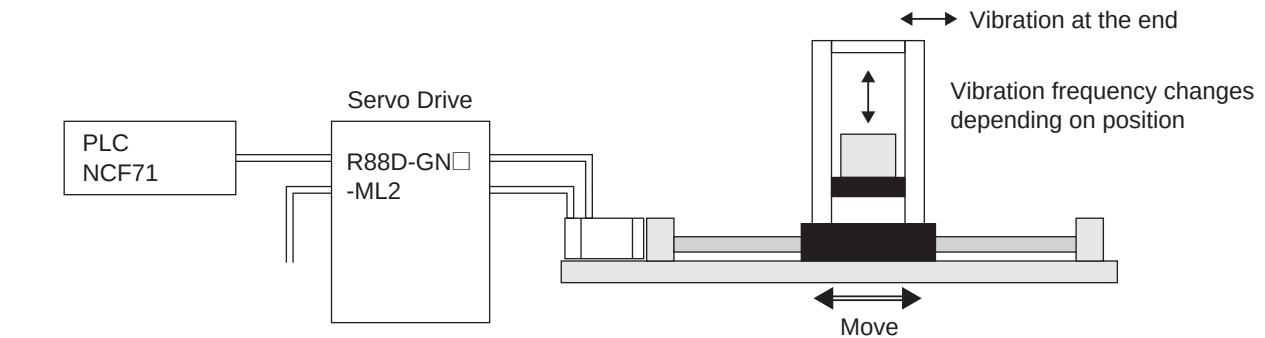

The control block diagram for Damping Control is shown below.

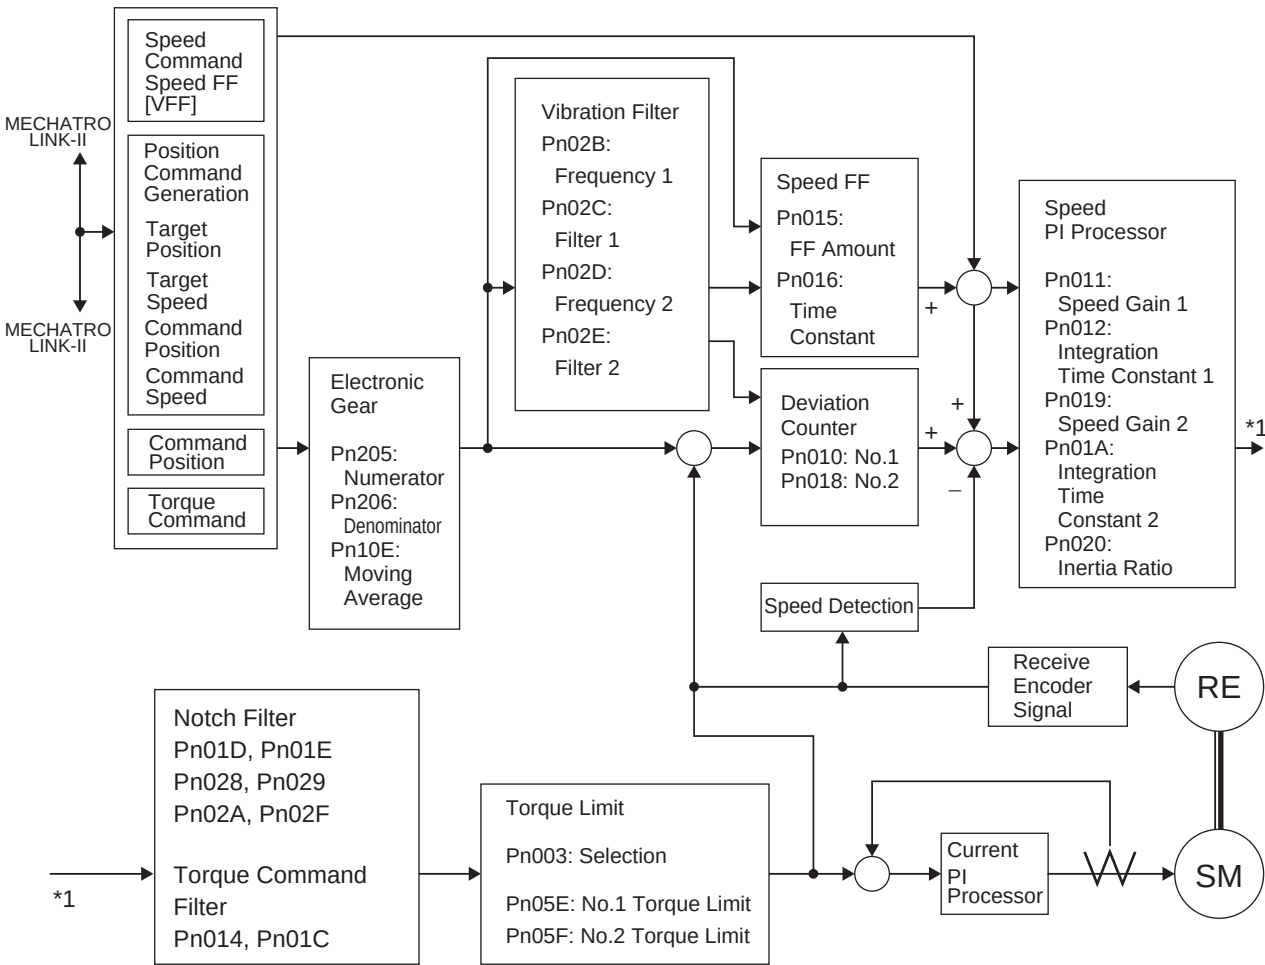

## Parameters Requiring Settings

| Parameter No. | Parameter name             | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Explanation   | Reference page |                                            |
|---------------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------------|--------------------------------------------|
| Pn024         | Vibration Filter Selection | Selects the vibration filter type and switching mode based on the status of the equipment. (See Note 1)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               | 5-92           |                                            |
|               |                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Filter type   |                | Switching mode                             |
|               |                            | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Normal type   |                | No switching<br>(Both 1 and 2 are enabled) |
|               |                            | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                | Switching with command direction           |
|               |                            | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                |                                            |
|               |                            | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Low-pass type |                | No switching<br>(Both 1 and 2 are enabled) |
|               |                            | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                | Switching with command direction           |
|               |                            | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |               |                |                                            |
| Pn02B         | Vibration Frequency 1      | Sets the Vibration Frequency 1 for damping control to suppress vibration at the end of the load. The setting frequency range and adaptive filter operation depend on the filter type selected with the Vibration Filter Selection (Pn024). Set to 0 if the damping control is not used. (See Note 1)                                                                                                                                                                                                                                                                                                                                                                                        |               | 5-71           |                                            |
| Pn02C         | Vibration Filter 1 Setting | Decrease this setting if torque saturation occurs when setting the Vibration Frequency 1 (Pn02B). Increase it to make the operation faster. Normally, use a setting of 0. The setting range depends on the filter type selected with the Vibration Filter Selection (Pn024), as shown below if Vibration Filter 1 is enabled.<br><b>Note</b> This parameter is disabled when Vibration Filter 1 is disabled.<br>♦ Normal type (Setting range: –200 to 2000)<br>Setting range: $100 \leq \text{Pn02B} + \text{Pn02C} \leq \text{Pn02B} \times 2$ or 2000<br>♦ Low-pass type (Setting range: –200 to 2000)<br>Setting range: $10 \leq \text{Pn02B} + \text{Pn02C} \leq \text{Pn02B} \times 6$ |               | 5-71           |                                            |
| Pn02D         | Vibration Frequency 2      | Same function as Pn02B.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               | 5-71           |                                            |
| Pn02E         | Vibration Filter 2 Setting | Same function as Pn02C.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               | 5-72           |                                            |



**Note** Details on the vibration filter settings are as follows.

| Vibration Filter Selection | Mode Selection                   | Description of setting                                                                                                                          |
|----------------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Filter type selection      | Normal type                      | Vibration frequency setting range 10.0 to 200.0 Hz<br>(Disabled when set to 0 to 99)<br>Adaptive filter can be used                             |
|                            | Low-pass type                    | Vibration frequency setting range 1.0 to 200.0 Hz<br>(Disabled when set to 0 to 9)<br>Adaptive filter cannot be used (forcibly set to disabled) |
| Switching mode selection   | No switching                     | Both Vibration Frequency 1 and 2 are enabled.                                                                                                   |
|                            | Switching with command direction | Selects Vibration Frequency 1 in forward direction (Pn02B, Pn02C)<br>Selects Vibration Frequency 2 in reverse direction (Pn02D, Pn02E)          |

#### Precautions for Correct Use

- ♦ The damping control may not function properly or may not be effective under the following conditions.

|              | Conditions under which damping control does not function properly                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control Mode | ♦ In speed and torque control modes.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Load status  | ♦ If forces other than position commands, such as external forces, cause vibration.<br>♦ If the vibration frequency is outside the range of 1 to 200 Hz.<br>♦ If the ratio of the resonance frequency to anti-resonance frequency is large.<br>♦ If the vibration frequency is greater than the response frequency in position control (the value of position loop gain [1/s] divided by $2\pi$ (6.28)).<br>(10 Hz when the position loop gain is 63 [1/s].) |

## Operating Procedure

### 1. Adjust the gain for the position loop and speed loop.

Adjust the Position Loop Gain (Pn010), Speed Loop Gain (Pn011), Speed Loop Integration Time Constant (Pn012), and Torque Command Filter Time Constant (Pn014).

Use normal mode autotuning and realtime autotuning if there are no problems in doing so.


### 2. Measure the vibration frequency at the end of the machine system.

Vibration frequency is measured using a laser displacement meter, servo acceleration meter, or acceleration pick-up.

Set the measured vibration frequency to the Vibration Frequency 1 (Pn02B) and Vibration Frequency 2 (Pn02D) according to the motion.

Set the filter type and switching mode with the Vibration Filter Setting (Pn024).

If no measurement device is available, use the CX-Drive data tracing function, and read the residual vibration frequency (Hz) from the position deviation waveform as shown in the following figure.

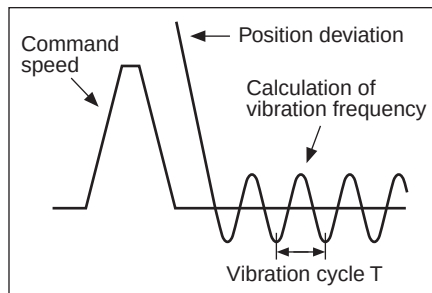

- The following gives the vibration frequency in the figure.

$$f \text{ (Hz)} = \frac{1}{T \text{ (s)}}$$

Since the unit for the parameter is 0.1Hz:

$$(Pn02B, Pn02D) = 10 \times f$$

- Example:

When the vibration cycle is 100 ms and 20 ms, the vibration frequency is 10 Hz and 40 Hz, therefore set Pn02B = 100, Pn02D = 400.


If the vibration does not disappear with the frequency setting, raise or lower the resonance frequency to find the frequency that can reduce vibration.

### 3. Set the Vibration Filter.

Set Vibration Filter 1 (Pn02C) and Vibration Filter 2 (Pn02E).

First, set to 0.

The stabilization time can be reduced by setting a large value; however, torque ripple will increase at the command change point as shown in the following figure. Set a range that will not cause torque saturation under actual operation conditions. The effects of vibration suppression will be lost if torque saturation occurs.

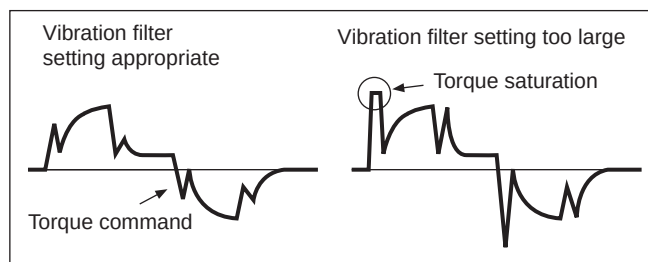

Decrease this setting if torque saturation occurs when setting the Vibration Frequency 1 (Pn02B).

Increase it to make the movement faster. Normally, use a setting of 0.

The setting range depends on the filter type selected with the Vibration Filter Selection (Pn024), as shown below if Vibration Filter 1 is enabled.

- Normal type (Setting range: -200 to 2000)  
Setting range:  $100 \leq Pn02B + Pn02C \leq Pn02B \times 2$  or 2000
- Low-pass type (Setting range: -200 to 2000)  
Setting range:  $10 \leq Pn02B + Pn02C \leq Pn02B \times 6$

**Note** This parameter is disabled when Vibration Filter 1 is disabled.

**4. Set the Vibration Filter Selection (Pn024).**

Select the vibration filter type and vibration filter switching mode depending on the status of the machine.

| Setting | Filter type   | Switching mode                                           |
|---------|---------------|----------------------------------------------------------|
| 0       | Normal type   | No switching<br>(Both filter 1 and filter 2 are enabled) |
| 1       |               |                                                          |
| 2       |               | Switching with command direction                         |
| 3       | Low-pass type | No switching<br>(Both filter 1 and filter 2 are enabled) |
| 4       |               |                                                          |
| 5       |               | Switching with command direction                         |

The Vibration Filter Selection (Pn024) parameter is enabled at power-ON. Turn OFF the control power and turn it ON again after setting this parameter.

If the low-pass type filter is selected, the Adaptive Filter Selection (Pn023) is forcibly set to 0 and cannot be used.

If the low-pass type filter is selected when the adaptive filter is operating correctly, the resonance that has been suppressed will reappear, and noise or vibration may occur.

# 5-26 User Parameters

Set and check the user parameters in Parameter Setting Mode.  
Fully understand what the parameters mean and the setting procedures, and set the parameters according to the system.  
Some parameters are enabled by turning the power OFF and then ON again. After changing these parameters, turn OFF the power, confirm that the power indicator has gone OFF, and then turn ON the power again.

 
 
## Setting and Checking Parameters

### Overview


- Use the following procedure to set or check parameters.
- Go to Parameter Setting Mode. Press the  key, and then press the  key once.
  - Select the Parameter Type --- , 
  - Switch to the Parameter Setting Display --- 
  - Set the parameter number (Pn□□) --- , 
  - Display the parameter setting --- 
  - Change the parameter setting --- , , 
  - Save the changed setting to memory and return to Parameter Setting Mode --- 

### Operating Procedures for 16-bit Positioning Parameters


#### 1. Displaying Parameter Setting Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                          |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                     |  | The default display is displayed.                                                                                                    |
|  |  | Press the  key to display Monitor Mode.           |
|                                                                                     |  | Press the  key to display Parameter Setting Mode. |


#### 2. Selecting the Parameter Type
 
| Key operation | Display example                                                                     | Explanation                                |
|---------------|-------------------------------------------------------------------------------------|--------------------------------------------|
|               |  | Confirm that 16-bit Parameter is selected. |


### 3. Switching to the Parameter Setting Display
 
| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |

### 4. Setting the Parameter Number


 
| Key operation                                                                                                                                                                                                                                            | Display example                                                                   | Explanation                                           |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------|
|  <br> |  | Set the number of the parameter to be set or checked. |

### 5. Displaying the Parameter Setting
 
| Key operation                                                                      | Display example                                                                    | Explanation                                                                                                                                                                          |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to display the setting.<br>The selected parameter number appears in the sub window. |


### 6. Changing the Parameter Setting

  ♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                                                                                                                                                                                                  | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <br> |  | Use the    keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|                                                                                                                                                                             |  | Press the  key to save the new setting.                                                                                                                                                                                                                                     |

### 7. Returning to Parameter Setting Mode

 ♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Parameter Setting Mode. |

■ Operating Procedures for 32-bit Positioning Parameters

1. Displaying Parameter Setting Mode

| Key operation | Display example | Explanation                                       |
|---------------|-----------------|---------------------------------------------------|
|               |                 | The default display is displayed.                 |
|               |                 | Press the  key to display Monitor Mode.           |
|               |                 | Press the  key to display Parameter Setting Mode. |

2. Selecting the Parameter Type

| Key operation | Display example | Explanation                                  |
|---------------|-----------------|----------------------------------------------|
|               |                 | Press the  keys to select 32-bit parameters. |

3. Switching to the Parameter Setting Display

| Key operation | Display example | Explanation                                                                                                                 |
|---------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |

4. Setting the Parameter Number


| Key operation | Display example | Explanation                                           |
|---------------|-----------------|-------------------------------------------------------|
|               |                 | Set the number of the parameter to be set or checked. |

5. Displaying the Parameter Setting

| Key operation | Display example | Explanation                                                                                                                                                                   |
|---------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to display the setting.<br>The selected parameter number appears in the sub window.                                                                            |
|               |                 | 32-bit parameters have many digits and thus displayed on two displays.<br>Press the  key to change the display.<br>Negative values of the parameter are indicated with a dot. |


6. Changing the Parameter Setting

 ♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                                                                                                                                                                                         | Display example                                                                                                                                                                                                                                                                                                                                  | Explanation                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <br><br><br> | Use the    keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|                                                                                                                                                                      | <br><br><br> | Press the  key to save the new setting.                                                                                                                                                                                                                                 |

7. Returning to Parameter Setting Mode

 ♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                       | Display example                                                                                                                                                            | Explanation                                                                                                                            |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  | <br> | Press the  key to return to Parameter Setting Mode. |

■ Operating Procedures for Servo Parameters

1. Displaying Parameter Setting Mode

| Key operation | Display example | Explanation                                       |
|---------------|-----------------|---------------------------------------------------|
|               |                 | The default display is displayed.                 |
|               |                 | Press the  key to display Monitor Mode.           |
|               |                 | Press the  key to display Parameter Setting Mode. |

2. Selecting the Parameter Type

| Key operation | Display example | Explanation                                     |
|---------------|-----------------|-------------------------------------------------|
|               |                 | Press the   keys to select the servo parameter. |

3. Switching to the Parameter Setting Display

| Key operation | Display example | Explanation                                                                                                                 |
|---------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |

4. Setting the Parameter Number

| Key operation | Display example | Explanation                                           |
|---------------|-----------------|-------------------------------------------------------|
|               |                 | Set the number of the parameter to be set or checked. |

5. Displaying the Parameter Setting

| Key operation | Display example | Explanation                                                                                        |
|---------------|-----------------|----------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to display the setting.<br>The selected parameter number appears in the sub window. |



## 6. Changing the Parameter Setting

♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                                                                                                                                                                                         | Display example                                                                                                                                                        | Explanation                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <br> | Use the    keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|                                                                                                                                                                      | <br> | Press the  key to save the new setting.                                                                                                                                                                                                                                 |

## 7. Returning to Parameter Setting Mode

♦ The following operation is not required if you are only checking a parameter setting.

| Key operation                                                                     | Display example                                                                                                                                                        | Explanation                                                                                                                          |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|  | <br> | Press the  key to return to Parameter Setting Mode. |

Parameter Tables

The Servo Drive has various parameters for setting the characteristics and functions of the Servomotor.  
The function and purpose of each parameter is explained here.  
Understand the parameters to optimize the Servomotor to your operating conditions.

Servo Drive parameters are categorized by function as follows.

1. Servo Parameters

These parameters are mainly for Servomotor control such as function selection, operation settings, and gain adjustments.

2. Positioning Parameters

These parameters are for acceleration and deceleration settings and function selection related to positioning commands started by MECHATROLINK-II communications.  
The parameters are categorized for 16-bit positioning and 32-bit positioning depending on the setting range.

3. Reserved Parameters

Parameters listed as [Reserved] or unlisted parameter numbers cannot be used.  
Do not change the default settings of these parameters.

4. Attributes

The attribute indicates when the changed setting for the parameter will be enabled.

|   |                                                                                                                                                                              |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A | Always enabled after change                                                                                                                                                  |
| B | Change prohibited during Servomotor operation and command issuance.<br>(It is not known when changes made during Servomotor operation and command issuance will be enabled.) |
| C | Enabled when the control power is reset, or when a CONFIG command is executed via the network (MECHATROLINK-II communications).                                              |
| R | Read-only and cannot be changed.                                                                                                                                             |

**Note 1.** Parameters marked with "(RT)" are automatically set during realtime autotuning. To set these parameters manually, disable realtime autotuning by setting the Realtime Autotuning Mode Selection (Pn021) to 0 before changing the parameter.

**Note 2.** Parameter No. is the number for MECHATROLINK-II communications and CX-Drive.  
The Parameter Unit shows only the last two digits.  
Parameter numbers in the 100s specify 16-bit parameters, and numbers in the 200s specify 32-bit parameters.

| MECHATROLINK-II Communications Parameter No. | Category                      |
|----------------------------------------------|-------------------------------|
| 0□□h                                         | Servo parameter numbers       |
| 1□□h                                         | 16-bit positioning parameters |
| 2□□h                                         | 32-bit positioning parameters |

**Note 3.** A command refers to data sent from the host controller to the Servo Drive via the network (MECHATROLINK-II communications).  
A response refers to data sent from the Servo Drive to the host controller via the network (MECHATROLINK-II communications).

User parameters are set and checked on CX-Drive or the Parameter Unit (R88A-PR02G).

## ■ Parameter Tables

| Pn No. | Parameter name  | Setting                                                                           | Explanation                                                                                                                                                                                                                                                                                                                                                    | Default setting | Unit | Setting range | Attribute |
|--------|-----------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 000    | Reserved        | Do not change.                                                                    |                                                                                                                                                                                                                                                                                                                                                                | 1               | ---  | ---           | ---       |
| 001    | Default Display | Selects the data to be displayed on the 7-segment LED display on the front panel. |                                                                                                                                                                                                                                                                                                                                                                | 0               | ---  | 0 to 4        | A         |
|        |                 | 0                                                                                 | Normal status ("--" Servo OFF, "00" Servo ON)                                                                                                                                                                                                                                                                                                                  |                 |      |               |           |
|        |                 | 1                                                                                 | Indicates the machine angle from 0 to FF hex. 0 is the zero position of the encoder. The angle increases when the Servomotor turns forward. The count continues from "0" after exceeding "FF".<br>When using an incremental encoder, the display shows "nF" (not Fixed) until detecting the zero position on the encoder after the control power is turned ON. |                 |      |               |           |
|        |                 | 2                                                                                 | Indicates the electrical angle from 0 to FF hex. 0 is the position where the inductive voltage on the U phase reaches the position peak. The angle increases when the Servomotor turns forward. The count continues from "0" after exceeding "FF".                                                                                                             |                 |      |               |           |
|        |                 | 3                                                                                 | Indicates the number (total) of MECHATROLINK-II communications errors from 0 to FF hex. The communications error count (total) saturates at the maximum of FFFFh. "h" appears only for the lowest byte. The count continues from "00" after exceeding "FF".<br><b>Note</b> The communications error count (total) is cleared by turning OFF the control power. |                 |      |               |           |
|        |                 | 4                                                                                 | Indicates the setting on the rotary switch (node address value) loaded at startup, in decimal. This value does not change even if the rotary switch is turned after startup.                                                                                                                                                                                   |                 |      |               |           |
|        |                 | 5 to 32767                                                                        | Reserved (Do not set.)                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
| 002    | Reserved        | Do not change.                                                                    |                                                                                                                                                                                                                                                                                                                                                                | 0               | ---  | ---           | ---       |

| Pn No. | Parameter name         | Setting                                                                                                                                                                                                                                                            | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Default setting | Unit | Setting range | Attribute |
|--------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 003    | Torque Limit Selection | Selects the torque limit function, or the torque feed-forward function during speed control.                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 1               | ---  | 1 to 5        | B         |
|        |                        | ■ Torque Limit Selection<br>For torque control, always select Pn05E.<br>For position control and speed control, select the torque limit as follows.                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |
|        |                        | 1                                                                                                                                                                                                                                                                  | Use Pn05E as the limit value for forward and reverse operations.                                                                                                                                                                                                                                                                                                                                                                                                                                   |                 |      |               |           |
|        |                        | 2                                                                                                                                                                                                                                                                  | Forward: Use Pn05E.<br>Reverse: Use Pn05F.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
|        |                        | 3                                                                                                                                                                                                                                                                  | Switch limits by torque limit values and input signals from the network.<br>Limit in forward direction:<br>PCL is OFF = Pn05E, PCL is ON = Pn05F<br>Limit in reverse direction:<br>NCL is OFF = Pn05E, NCL is ON = Pn05F                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                        | 4                                                                                                                                                                                                                                                                  | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values from the network as follows:<br>Limit in forward direction:<br>Use Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>Use Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller.                                                                                 |                 |      |               |           |
|        |                        | 5                                                                                                                                                                                                                                                                  | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values and input signals from the network as follows:<br>Limit in forward direction:<br>PCL is OFF = Pn05E,<br>PCL is ON = Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>NCL is OFF = Pn05F,<br>NCL is ON = Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller. |                 |      |               |           |
|        |                        | <b>Note</b> PCL ON: When either Forward Torque Limit (CN1 PCL: pin 7) or MECHATROLINK-II Communications Option Field (P-CL) is ON.<br><br>PCL OFF: When both Forward Torque Limit (CN1 PCL: pin 7) and MECHATROLINK-II Communications Option Field (P-CL) are OFF. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |
|        |                        | ■ Torque Feed-forward Function Selection                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |
|        |                        | 1 to 3                                                                                                                                                                                                                                                             | Enabled only during speed control. Disabled if not using speed control.                                                                                                                                                                                                                                                                                                                                                                                                                            |                 |      |               |           |
|        |                        | 4 to 5                                                                                                                                                                                                                                                             | Always disabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |

| Pn No. | Parameter name                 | Setting | Explanation                                                                                                                                                                                                                                                  | Default setting | Unit | Setting range | Attribute |
|--------|--------------------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 004    | Drive Prohibit Input Selection |         | Sets the function for the Forward and Reverse Drive Prohibit Inputs (CN1 POT: pin 19, NOT: pin 20)                                                                                                                                                           | 0               | ---  | 0 to 2        | C         |
|        |                                | 0       | Decelerates and stops according to the sequence set in the Stop Selection for Drive Prohibition Input (Pn066) when both POT and NOT inputs are enabled.<br>When both POT and NOT inputs are OPEN, the Drive Prohibit Input Error (alarm code 38) will occur. |                 |      |               |           |
|        |                                | 1       | Both POT and NOT inputs disabled.                                                                                                                                                                                                                            |                 |      |               |           |
|        |                                | 2       | When either POT or NOT input becomes OPEN, the Drive Prohibit Input Error (alarm code 38) will occur.                                                                                                                                                        |                 |      |               |           |

| Pn No. | Parameter name                            | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Explanation        |           |  |               | Default setting | Unit | Setting range | Attribute |   |             |  |
|--------|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------|--|---------------|-----------------|------|---------------|-----------|---|-------------|--|
| 005    | Communications Control                    | Controls errors and warnings for MECHATROLINK-II communications.<br><b>Note</b> Use with this parameter set to 0. Program to stop immediately if using a value other than 0.<br>Set the Consecutive Communications Error Detection Count in COM_ERR (bit 8 to 11). The communications error (alarm code 83) will occur when a communications error, which is assessed at every MECHATROLINK-II communications cycle, occurs consecutively for the number of the Consecutive Communications Error Detection Count. The error and warning can be masked for debug purposes.                                                                                                                                                                          |                    |           |  |               |                 | 0    | ---           | 0 to 3955 | C |             |  |
|        |                                           | bits 15-12                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                    | bits 11-8 |  | bits 7-4      |                 |      |               |           |   | bits 3-0    |  |
|        |                                           | ---                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                    | COM_ERR   |  | MSK COM WARNG |                 |      |               |           |   | MSK COM ALM |  |
|        |                                           | ♦ [bits 8-11] COM_ERR (Consecutive Communications Error Detection Count)<br>Setting range: 0 to 15.<br>Consecutive Communications Error Detection Count = COM_ERR + 2<br><br><b>Note</b> These bits are debug functions. Set to enable (0) when not debugging.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                    |           |  |               |                 |      |               |           |   |             |  |
|        |                                           | ♦ [bits 0-3] MECHATROLINK-II Communications Alarms Mask (MSK COM ALM)<br>[bit0] 0: Communications error (alarm code 83) enabled<br>1: Communications error (alarm code 83) disabled<br>[bit1] 0: Watchdog data error (alarm code 86) enabled<br>1: Watchdog data error (alarm code 86) disabled<br><br>♦ [bits 4-7] MECHATROLINK-II Communications Warnings Mask (MSK COM WARNG)<br>[bit4] 0: Data setting warning (warning code 94h) enabled<br>1: Data setting warning (warning code 94h) disabled<br>[bit5] 0: Command warning (warning code 95h) enabled<br>1: Command warning (warning code 95h) disabled<br>[bit6] 0: ML-II communications warning (warning code 96h) enabled<br>1: ML-II communications warning (warning code 96h) disabled |                    |           |  |               |                 |      |               |           |   |             |  |
| 006    | Power ON Address Display Duration Setting | Sets the duration to display the node address when the control power is turned ON.<br><b>Note</b> The node address display has priority even if there are alarms or warnings at power ON.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                    |           |  |               |                 | 30   | ms            | 0 to 1000 | C |             |  |
|        |                                           | 0 to 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 600 ms             |           |  |               |                 |      |               |           |   |             |  |
|        |                                           | 7 to 1000                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | set value × 100 ms |           |  |               |                 |      |               |           |   |             |  |

| Pn No. | Parameter name                | Setting        | Explanation                                                                                                                                                                                                                                                                                                        | Default setting | Unit | Setting range | Attribute |
|--------|-------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 007    | Speed monitor (SP) Selection  |                | Selects the output to the Analog Speed Monitor (SP on the front panel).<br><b>Note</b> This monitor output has a delay due to filtering. The Operating Direction Setting (Pn043) does not affect this monitor output. Thus, forward rotation is always positive (+), and reverse rotation is always negative (-).  | 3               | ---  | 0 to 11       | A         |
|        |                               | 0              | Actual Servomotor speed: 47 r/min/6 V                                                                                                                                                                                                                                                                              |                 |      |               |           |
|        |                               | 1              | Actual Servomotor speed: 188 r/min/6 V                                                                                                                                                                                                                                                                             |                 |      |               |           |
|        |                               | 2              | Actual Servomotor speed: 750 r/min/6 V                                                                                                                                                                                                                                                                             |                 |      |               |           |
|        |                               | 3              | Actual Servomotor speed: 3000 r/min/6 V                                                                                                                                                                                                                                                                            |                 |      |               |           |
|        |                               | 4              | Actual Servomotor speed: 12000 r/min/6 V                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                               | 5              | Command speed: 47 r/min/6 V                                                                                                                                                                                                                                                                                        |                 |      |               |           |
|        |                               | 6              | Command speed: 188 r/min/6 V                                                                                                                                                                                                                                                                                       |                 |      |               |           |
|        |                               | 7              | Command speed: 750 r/min/6 V                                                                                                                                                                                                                                                                                       |                 |      |               |           |
|        |                               | 8              | Command speed: 3000 r/min/6 V                                                                                                                                                                                                                                                                                      |                 |      |               |           |
|        |                               | 9              | Command speed: 12000 r/min/6 V                                                                                                                                                                                                                                                                                     |                 |      |               |           |
|        |                               | 10             | Outputs the Issuance Completion Status (DEN).<br>0V: Issuing<br>5V: Issuance complete                                                                                                                                                                                                                              |                 |      |               |           |
|        |                               | 11             | Outputs the Gain Selection Status.<br>0V: Gain 2<br>5V: Gain 1                                                                                                                                                                                                                                                     |                 |      |               |           |
| 008    | Torque Monitor (IM) Selection |                | Selects the output to the Analog Torque Monitor (IM on the front panel).<br><b>Note</b> This monitor output has a delay due to filtering. The Operating Direction Setting (Pn043) does not affect this monitor output. Thus, forward rotation is always positive (+), and reverse rotation is always negative (-). | 0               | ---  | 0 to 14       | A         |
|        |                               | 0              | Torque command: 100%/3 V                                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                               | 1              | Position deviation: 31 pulses/3 V                                                                                                                                                                                                                                                                                  |                 |      |               |           |
|        |                               | 2              | Position deviation: 125 pulses/3 V                                                                                                                                                                                                                                                                                 |                 |      |               |           |
|        |                               | 3              | Position deviation: 500 pulses/3 V                                                                                                                                                                                                                                                                                 |                 |      |               |           |
|        |                               | 4              | Position deviation: 2000 pulses/3 V                                                                                                                                                                                                                                                                                |                 |      |               |           |
|        |                               | 5              | Position deviation: 8000 pulses/3 V                                                                                                                                                                                                                                                                                |                 |      |               |           |
|        |                               | 6 to 10        | Reserved                                                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                               | 11             | Torque command: 200%/3 V                                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                               | 12             | Torque command: 400%/3 V                                                                                                                                                                                                                                                                                           |                 |      |               |           |
|        |                               | 13             | Outputs the Issuance Completion Status (DEN).<br>0V: Issuing<br>5V: Issuance complete                                                                                                                                                                                                                              |                 |      |               |           |
|        |                               | 14             | Outputs the Gain Selection Status.<br>0V: Gain 2<br>5V: Gain 1                                                                                                                                                                                                                                                     |                 |      |               |           |
| 009    | Reserved                      | Do not change. |                                                                                                                                                                                                                                                                                                                    | 0               | ---  | ---           | ---       |

| Pn No. | Parameter name                               | Setting                                                                                                                                                                                                                                                                                                                                          | Explanation                                                                                                                                                                             | Default setting | Unit       | Setting range | Attribute |
|--------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------------|---------------|-----------|
| 00A    | Prohibit Parameter Changes via Network       |                                                                                                                                                                                                                                                                                                                                                  | Allows/prohibits parameter changes via the network.                                                                                                                                     | 0               | ---        | 0 to 1        | A         |
|        |                                              | 0                                                                                                                                                                                                                                                                                                                                                | Allows parameter changes from the host controller via the network.                                                                                                                      |                 |            |               |           |
|        |                                              | 1                                                                                                                                                                                                                                                                                                                                                | Prohibits parameter changes from the host controller via the network. Attempting to change a parameter via the network when prohibited triggers the Command Warning (warning code 95h). |                 |            |               |           |
| 00B    | Operation Switch When Using Absolute Encoder |                                                                                                                                                                                                                                                                                                                                                  | Selects how the an absolute encoder is used. This parameter is disabled when using an incremental encoder.                                                                              | 0               | ---        | 0 to 2        | C         |
|        |                                              | 0                                                                                                                                                                                                                                                                                                                                                | Use as an absolute encoder.                                                                                                                                                             |                 |            |               |           |
|        |                                              | 1                                                                                                                                                                                                                                                                                                                                                | Use an absolute encoder as an incremental encoder.                                                                                                                                      |                 |            |               |           |
|        |                                              | 2                                                                                                                                                                                                                                                                                                                                                | Use as an absolute encoder but ignore absolute multi-turn counter overflow alarm (alarm code 41).                                                                                       |                 |            |               |           |
| 00C    | RS-232 Baud Rate Setting                     |                                                                                                                                                                                                                                                                                                                                                  | Sets the baud rate for RS-232 communications.                                                                                                                                           | 2               | ---        | 0 to 5        | C         |
|        |                                              | 0                                                                                                                                                                                                                                                                                                                                                | 2,400 bps                                                                                                                                                                               |                 |            |               |           |
|        |                                              | 1                                                                                                                                                                                                                                                                                                                                                | 4,800 bps                                                                                                                                                                               |                 |            |               |           |
|        |                                              | 2                                                                                                                                                                                                                                                                                                                                                | 9,600 bps                                                                                                                                                                               |                 |            |               |           |
|        |                                              | 3                                                                                                                                                                                                                                                                                                                                                | 19,200 bps                                                                                                                                                                              |                 |            |               |           |
|        |                                              | 4                                                                                                                                                                                                                                                                                                                                                | 38,400 bps                                                                                                                                                                              |                 |            |               |           |
|        |                                              | 5                                                                                                                                                                                                                                                                                                                                                | 57,600 bps                                                                                                                                                                              |                 |            |               |           |
| 00D    | Reserved                                     | Do not change.                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                         | 0               | ---        | ---           | ---       |
| 00E    | Reserved                                     | Do not change.                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                         | 0               | ---        | ---           | ---       |
| 00F    | Reserved                                     | Do not change.                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                         | 0               | ---        | ---           | ---       |
| 010    | Position Loop Gain (RT)                      | Sets the position loop responsiveness. Increasing the gain increases position control responsiveness and shortens stabilization time. Oscillation or overshoot will occur if set too high. Adjust for optimum responsiveness.                                                                                                                    |                                                                                                                                                                                         | 400             | ×0.1 [1/s] | 0 to 30000    | B         |
| 011    | Speed Loop Gain (RT)                         | Sets the speed loop responsiveness. If the Inertia Ratio (Pn020) is set correctly, this parameter is set to the Servomotor response frequency. Increasing the gain increases the speed control responsiveness, but too much gain may cause oscillating. Small gain may cause overshoot in the speed response. Adjust for optimum responsiveness. |                                                                                                                                                                                         | 500             | ×0.1 Hz    | 1 to 30000    | B         |
| 012    | Speed Loop Integration Time Constant (RT)    | Adjusts the speed loop integration time constant. Set a large value for large load inertia. Decrease the setting for fast response with small inertia. Set 9999 to stop integration operation while retaining the integration value. A setting of 10000 disables integration.                                                                    |                                                                                                                                                                                         | 200             | ×0.1 ms    | 1 to 10000    | B         |
| 013    | Speed Feedback Filter Time Constant (RT)     | Sets the type of speed detection filter time constant. Normally, use a setting of 0. Increasing the value reduces the noise of the Servomotor but also reduces its responsiveness. This parameter is disabled if the Instantaneous Speed Observer Setting (Pn027) is enabled.                                                                    |                                                                                                                                                                                         | 0               | ---        | 0 to 5        | B         |



| Pn No. | Parameter name                              | Setting                                                                                                                                                                                                                          | Explanation     | Default setting | Unit       | Setting range | Attribute |
|--------|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------|------------|---------------|-----------|
| 014    | Torque Command Filter Time Constant (RT)    | Adjusts the first-order lag filter time constant for the torque command section.<br>The torque filter setting may reduce machine vibration.                                                                                      |                 | 80              | ×0.01 ms   | 0 to 2500     | B         |
| 015    | Speed Feed-forward Amount (RT)              | Sets the speed feed-forward amount.<br>This parameter is particularly useful when fast response is required.                                                                                                                     |                 | 300             | ×0.1 %     | 0 to 1000     | B         |
| 016    | Feed-forward Filter Time Constant (RT)      | Sets the time constant for the speed feed-forward first-order lag filter.                                                                                                                                                        |                 | 100             | ×0.01 ms   | 0 to 6400     | B         |
| 017    | Reserved                                    | Do not change.                                                                                                                                                                                                                   |                 | 0               | ---        | ---           | ---       |
| 018    | Position Loop Gain 2 (RT)                   | Sets the position loop gain when using gain 2 switching.<br>Same function as Pn010.                                                                                                                                              |                 | 200             | ×0.1 [1/s] | 0 to 30000    | B         |
| 019    | Speed Loop Gain 2 (RT)                      | Sets the speed loop gain when using gain 2 switching.<br>Same function as Pn011.                                                                                                                                                 |                 | 800             | ×0.1 Hz    | 1 to 30000    | B         |
| 01A    | Speed Loop Integration Time Constant 2 (RT) | Sets the speed loop integration time constant when using gain 2 switching.<br>Same function as Pn012.<br>Set 9999 to stop integration operation while retaining the integration value. Setting 10000 disables integration.       |                 | 500             | ×0.1 ms    | 1 to 10000    | B         |
| 01B    | Speed Feedback Filter Time Constant 2 (RT)  | Sets the speed detection filter when using gain 2 switching.<br>Same function as Pn013. Normally, use a setting of 0.<br>When Instantaneous Speed Observer Setting (Pn027) is enabled, this parameter will be disabled.          |                 | 0               | ---        | 0 to 5        | B         |
| 01C    | Torque Command Filter Time Constant 2 (RT)  | Sets the first-order lag filter time constant for the torque command section when using gain 2 switching.<br>Same function as Pn014.                                                                                             |                 | 100             | ×0.01 ms   | 0 to 2500     | B         |
| 01D    | Notch Filter 1 Frequency                    | Sets the notch frequency of notch filter 1 for resonance suppression.<br>This filter must be matched with the resonance frequency of the load.                                                                                   |                 | 1500            | Hz         | 100 to 1500   | B         |
|        |                                             | 100 to 1499                                                                                                                                                                                                                      | Filter enabled  |                 |            |               |           |
|        |                                             | 1500                                                                                                                                                                                                                             | Filter disabled |                 |            |               |           |
| 01E    | Notch Filter 1 Width                        | Selects the notch width of notch filter 1 for resonance suppression.<br>Normally, use a setting of 2.                                                                                                                            |                 | 2               | ---        | 0 to 4        | B         |
| 01F    | Reserved                                    | Do not change.                                                                                                                                                                                                                   |                 | 0               | ---        | ---           | ---       |
| 020    | Inertia Ratio (RT)                          | Sets the load inertia as a percentage of the Servomotor rotor inertia.<br>Setting [%] = (Load inertia / Rotor inertia) × 100<br>The inertia ratio estimated during realtime autotuning is stored in the EEPROM every 30 minutes. |                 | 300             | %          | 0 to 10000    | B         |

| Pn No. | Parameter name                                 | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                            | Explanation                                                                         |                                  | Default setting | Unit | Setting range | Attribute |
|--------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------|-----------------|------|---------------|-----------|
| 021    | Realtime Autotuning Mode Selection             | Sets the operating mode for realtime autotuning. A setting of 3 or 6 will provide faster response to changes in inertia during operation. Operation, however, may be unstable depending on the operating pattern. Normally, use a setting of 1 or 4. Set to 4 to 6 when the Servomotor is used as a vertical axis. Gain switching is enabled at set values 1 to 6. Use a setting of 7 if operation changes caused by gain switching are a problem. |                                                                                     |                                  | 0               | ---  | 0 to 7        | B         |
|        |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Realtime Autotuning                                                                 | Degree of change in load inertia |                 |      |               |           |
|        |                                                | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Disabled                                                                            | ---                              |                 |      |               |           |
|        |                                                | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Horizontal axis mode                                                                | Almost no change                 |                 |      |               |           |
|        |                                                | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                     | Gradual changes                  |                 |      |               |           |
|        |                                                | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                     | Sudden changes                   |                 |      |               |           |
|        |                                                | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Vertical axis mode                                                                  | Almost no change                 |                 |      |               |           |
|        |                                                | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                     | Gradual changes                  |                 |      |               |           |
|        |                                                | 6                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                     | Sudden changes                   |                 |      |               |           |
|        |                                                | 7                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Gain switching disable mode                                                         | Almost no change                 |                 |      |               |           |
| 022    | Realtime Autotuning Machine Rigidity Selection | Sets the machine rigidity for realtime autotuning. Increasing this value increases the responsiveness. If the value is changed suddenly by a large amount, the gain will change rapidly, subjecting the machine to shock. Always start by making small changes in the value, and gradually increase the value while monitoring machine operation. Cannot be set to 0 when using the Parameter Unit.                                                |                                                                                     |                                  | 2               | ---  | 0 to F        | B         |
|        |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                     |                                  |                 |      |               |           |
| 023    | Adaptive Filter Selection                      | Enables or disables the adaptive filter. The Adaptive Filter Table Number Display (Pn02F) will be reset to 0 when disabled.<br><b>Note</b> When the Vibration Filter Selection (Pn024) is set to a low-pass filter type (Pn024 = 3 to 5), the adaptive filter is forcibly set to disabled (Pn023 = 0).                                                                                                                                             |                                                                                     |                                  | 0               | ---  | 0 to 2        | B         |
|        |                                                | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Adaptive filter disabled.                                                           |                                  |                 |      |               |           |
|        |                                                | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Adaptive filter enabled. Adaptive operation performed.                              |                                  |                 |      |               |           |
|        |                                                | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Adaptive filter enabled. Adaptive operation will not be performed (i.e., retained). |                                  |                 |      |               |           |

| Pn No. | Parameter name                   | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Explanation                              |                                                        | Default setting | Unit          | Setting range | Attribute |
|--------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|--------------------------------------------------------|-----------------|---------------|---------------|-----------|
| 024    | Vibration Filter Selection       | Selects the vibration filter type and switching mode.<br>■ Filter type selection<br>♦ Normal type:<br>Vibration frequency setting range 10.0 to 200.0 Hz<br>♦ Low-pass type:<br>Vibration frequency setting range 1.0 to 200.0 Hz<br>■ Switching mode selection<br>♦ No switching: Both 1 and 2 are enabled<br>♦ Switching with command direction:<br>Selects Vibration Frequency 1 in forward direction (Pn02B, Pn02C)<br>Selects Vibration Frequency 2 in reverse direction (Pn02D, Pn02E) |                                          |                                                        | 0               | ---           | 0 to 5        | C         |
|        |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Filter type                              | Switching mode                                         |                 |               |               |           |
|        |                                  | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Normal type                              | No switching                                           |                 |               |               |           |
|        |                                  | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                          | Switching with command direction                       |                 |               |               |           |
|        |                                  | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                          |                                                        |                 |               |               |           |
|        |                                  | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Low-pass type                            | No switching                                           |                 |               |               |           |
|        |                                  | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                          | Switching with command direction                       |                 |               |               |           |
|        |                                  | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                          |                                                        |                 |               |               |           |
|        |                                  | 025                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Normal Mode Autotuning Operation Setting | Sets the operating pattern for normal mode autotuning. |                 |               |               |           |
|        | Number of rotations              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Rotation direction                                     |                 |               |               |           |
| 0      | Repeat cycles of 2 rotations     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Forward and Reverse (Alternating)                      |                 |               |               |           |
| 1      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Reverse and Forward (Alternating)                      |                 |               |               |           |
| 2      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Forward only                                           |                 |               |               |           |
| 3      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Reverse only                                           |                 |               |               |           |
| 4      | Repeat cycles of single rotation |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Forward and Reverse (Alternating)                      |                 |               |               |           |
| 5      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Reverse and Forward (Alternating)                      |                 |               |               |           |
| 6      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Forward only                                           |                 |               |               |           |
| 7      |                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                          | Reverse only                                           |                 |               |               |           |
| 026    | Overrun Limit Setting            | Sets the Servomotor's allowable operating range for the position command input range.<br>Set to 0 to disable the overrun protective function.<br>For details, refer to 5-15 <i>Overrun Protection</i> on page 5-29.                                                                                                                                                                                                                                                                          |                                          |                                                        | 10              | ×0.1 rotation | 0 to 1000     | A         |

| Pn No. | Parameter name                            | Setting     | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Default setting | Unit    | Setting range | Attribute |
|--------|-------------------------------------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------|---------------|-----------|
| 027    | Instantaneous Speed Observer Setting (RT) |             | The Instantaneous Speed Observer improves speed detection accuracy, thereby improving responsiveness and reducing vibration when stopping.<br>When the instantaneous speed observer is enabled, both Speed Feedback Filter Time Constant (Pn013) and Speed Feedback Filter Time Constant 2 (Pn01B) are disabled. This feature cannot be used with realtime autotuning. For details, refer to 5-24 <i>Instantaneous Speed Observer</i> on page 5-48.                                                                                                                                                                                              | 0               | ---     | 0 to 1        | B         |
|        |                                           | 0           | Disabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |         |               |           |
|        |                                           | 1           | Enabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                 |         |               |           |
| 028    | Notch Filter 2 Frequency                  |             | Sets the notch frequency of notch filter 2 for resonance suppression.<br>This parameter must be matched with the resonance frequency of the load.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 1500            | Hz      | 100 to 1500   | B         |
|        |                                           | 100 to 1499 | Filter enabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                 |         |               |           |
|        |                                           | 1500        | Filter disabled                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                 |         |               |           |
| 029    | Notch Filter 2 Width                      |             | Selects the notch width of notch filter 2 for resonance suppression.<br>Increasing the value increases the notch width.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 2               | ---     | 0 to 4        | B         |
| 02A    | Notch Filter 2 Depth                      |             | Selects the notch depth of notch filter 2 for resonance suppression.<br>Increasing this value decreases the notch depth, thereby reducing the phase lag.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0               | ---     | 0 to 99       | B         |
| 02B    | Vibration Frequency 1                     |             | Sets the vibration frequency 1 for damping control to suppress vibration at the end of the load.<br>Measure and set the frequency of the vibration.<br>The frequency setting range depends on the filter type selected in the Vibration Filter Selection (Pn024).<br>♦ Normal type<br>Setting frequency range: 10.0 to 200.0 Hz (Disabled when set to 0 to 99)<br>♦ Low-pass type<br>Setting frequency range: 1.0 to 200.0 Hz (Disabled when set to 0 to 9)<br>For details, refer to 5-25 <i>Damping Control</i> on page 5-50.                                                                                                                   | 0               | ×0.1 Hz | 0 to 2000     | B         |
| 02C    | Vibration Filter 1 Setting                |             | When setting Vibration Frequency 1 (Pn02B), reduce this setting if torque saturation occurs, or increase it to make the movement faster.<br>Normally, use a setting of 0.<br>The setting range depends on the filter type selected in the Vibration Filter Selection (Pn024), and if Vibration Filter 1 is enabled, the ranges are as follows:<br><b>Note</b> This parameter is disabled when Vibration Filter 1 is disabled.<br>♦ Normal type<br>Setting range: $100 \leq \text{Pn02B} + \text{Pn02C} \leq \text{Pn02B} \times 2$ or 2000<br>♦ Low-pass type<br>Setting range: $10 \leq \text{Pn02B} + \text{Pn02C} \leq \text{Pn02B} \times 6$ | 0               | ×0.1 Hz | -200 to 2000  | B         |
| 02D    | Vibration Frequency 2                     |             | Same function as Pn02B.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 0               | ×0.1 Hz | 0 to 2000     | B         |

| Pn No. | Parameter name                               | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Explanation                                                                                                                                      | Default setting | Unit    | Setting range | Attribute |
|--------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------|---------------|-----------|
| 02E    | Vibration Filter 2 Setting                   | Same function as Pn02C.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                  | 0               | ×0.1 Hz | –200 to 2000  | B         |
| 02F    | Adaptive Filter Table Number Display         | Displays the table entry number corresponding to the frequency of the adaptive filter.<br>This parameter is set automatically when the adaptive filter is enabled (i.e., when the Adaptive Filter Selection (Pn023) is set to a value other than 0), and cannot be changed.<br>When the adaptive filter is enabled, this parameter will be saved in EEPROM approximately every 30 min. If the adaptive filter is enabled the next time the power supply is turned ON, adaptive operation will start with the data saved in EEPROM as the default value.<br>To clear this parameter and reset the adaptive operation, disable the adaptive filter by setting the Adaptive Filter Selection (Pn023) to 0, and then enable it again. |                                                                                                                                                  | 0               | ---     | 0 to 64       | R         |
|        |                                              | 0 to 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Filter disabled                                                                                                                                  |                 |         |               |           |
|        |                                              | 5 to 48                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Filter enabled                                                                                                                                   |                 |         |               |           |
|        |                                              | 49 to 64                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Enable or disable the filter with Pn022                                                                                                          |                 |         |               |           |
| 030    | Gain Switching Operating Mode Selection (RT) | Enables or disables gain switching.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                  | 1               | ---     | 0 to 1        | B         |
|        |                                              | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Disabled. Uses Gain 1 (Pn010 to Pn014). PI/P operation is switched from MECHATROLINK-II.                                                         |                 |         |               |           |
|        |                                              | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | The gain is switched between Gain 1 (Pn010 to Pn014) and Gain 2 (Pn018 to Pn01C). For details, refer to 5-16 <i>Gain Switching</i> on page 5-31. |                 |         |               |           |
| 031    | Gain Switch Setting (RT)                     | Sets the trigger for gain switching.<br>The details depend on the control mode.<br>For details, refer to 5-16 <i>Gain Switching</i> on page 5-31.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                  | 2               | ---     | 0 to 10       | B         |
|        |                                              | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Always Gain 1                                                                                                                                    |                 |         |               |           |
|        |                                              | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Always Gain 2                                                                                                                                    |                 |         |               |           |
|        |                                              | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Switching from the network                                                                                                                       |                 |         |               |           |
|        |                                              | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Amount of change in torque command                                                                                                               |                 |         |               |           |
|        |                                              | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Always Gain 1                                                                                                                                    |                 |         |               |           |
|        |                                              | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Speed command                                                                                                                                    |                 |         |               |           |
|        |                                              | 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Amount of position deviation                                                                                                                     |                 |         |               |           |
|        |                                              | 7                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Position command pulses received                                                                                                                 |                 |         |               |           |
|        |                                              | 8                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Positioning Completed Signal (INP) OFF                                                                                                           |                 |         |               |           |
|        |                                              | 9                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Actual Servomotor speed                                                                                                                          |                 |         |               |           |
|        |                                              | 10                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Combination of position command pulses received and speed                                                                                        |                 |         |               |           |
| 032    | Gain Switch Time (RT)                        | Enabled when the Gain Switch Setting (Pn031) is set to 3, 5, 6, 9, or 10. Sets the lag time from the trigger detection to actual gain switching when switching from gain 2 to gain 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                  | 30              | ×166 μs | 0 to 10000    | B         |
| 033    | Gain Switch Level Setting (RT)               | Sets the judgment level to switch between Gain 1 and Gain 2 when the Gain Switch Setting (Pn031) is set to 3, 5, 6, 9, or 10. The unit for the setting depends on the condition set in the Gain Switch Setting (Pn031).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                  | 600             | ---     | 0 to 20000    | B         |

| Pn No. | Parameter name                         | Setting                                                                                                                                                                                                                                                                                                         | Explanation                                               | Default setting | Unit    | Setting range | Attribute |
|--------|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|-----------------|---------|---------------|-----------|
| 034    | Gain Switch Hysteresis Setting (RT)    | Sets the hysteresis of the judgment level for the Gain Switch Level Setting (Pn033) when the Gain Switch Setting (Pn031) is set to 3, 5, 6, 9, or 10. The unit for the setting depends on the condition set in the Gain Switch Setting (Pn031).                                                                 |                                                           | 50              | ---     | 0 to 20000    | B         |
| 035    | Position Loop Gain Switching Time (RT) | This parameter can prevent the position loop gain from increasing suddenly when the position loop gain and position loop gain 2 differ by a large amount. When the position loop gain increases, it takes the duration of (set value + 1) × 166 μs.                                                             |                                                           | 20              | ×166 μs | 0 to 10000    | B         |
| 036    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 037    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 038    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 039    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 03A    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 03B    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 03C    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 03D    | Jog Speed                              | Sets the jog operation speed with the Parameter Unit or CX-Drive.<br><b>Note</b> Jog operation is only available when the network is not established. Do not try to establish the network while using jog operation. Otherwise, command alarm (alarm code 27) will occur.                                       |                                                           | 200             | r/min   | 0 to 500      | B         |
| 03E    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 03F    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 040    | Reserved                               | Do not change.                                                                                                                                                                                                                                                                                                  |                                                           | 0               | ---     | ---           | ---       |
| 041    | Emergency Stop Input Setting           | Enables the Emergency Stop Input (STOP).<br><b>Note</b> If this function is disabled, the response status will always be 0 (disabled).                                                                                                                                                                          |                                                           | 1               | ---     | 0 to 1        | C         |
|        |                                        | 0                                                                                                                                                                                                                                                                                                               | Disabled.                                                 |                 |         |               |           |
|        |                                        | 1                                                                                                                                                                                                                                                                                                               | Enabled (alarm code 87 issued on OPEN)                    |                 |         |               |           |
| 042    | Origin Proximity Input Logic Setting   | Sets the logic for the Origin Proximity Input (DEC).                                                                                                                                                                                                                                                            |                                                           | 1               | ---     | 0 to 1        | C         |
|        |                                        | 0                                                                                                                                                                                                                                                                                                               | N.C contact (origin proximity detected on OPEN)           |                 |         |               |           |
|        |                                        | 1                                                                                                                                                                                                                                                                                                               | N.O contact (origin proximity detected on CLOSE)          |                 |         |               |           |
| 043    | Operating Direction Setting            | Sets the relationship between polarity of operation data sent over the network and the direction of Servomotor rotation.<br><b>Note</b> In RS-232C communications and on the analog monitor (SP, IM) on the front panel, forward direction is always positive (+), and reverse rotation is always negative (–). |                                                           | 1               | ---     | 0 to 1        | C         |
|        |                                        | 0                                                                                                                                                                                                                                                                                                               | Sets the reverse direction as the positive direction (+). |                 |         |               |           |
|        |                                        | 1                                                                                                                                                                                                                                                                                                               | Sets the forward direction as the positive direction (+). |                 |         |               |           |

| Pn No. | Parameter name               | Setting                                                                                                                                                       | Explanation                                                                                     | Default setting | Unit  | Setting range   | Attribute |
|--------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------|-------|-----------------|-----------|
| 044    | Input Signal Selection       | Sets the terminal assignment for Drive Prohibit Input.                                                                                                        |                                                                                                 | 0               | ---   | 0 to 1          | C         |
|        |                              | 0                                                                                                                                                             | Sets CN1 pin 19 to POT, CN1 pin 20 to NOT.                                                      |                 |       |                 |           |
|        |                              | 1                                                                                                                                                             | Sets CN1 pin 19 to NOT, CN1 pin 20 to POT.                                                      |                 |       |                 |           |
| 045    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 046    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 047    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 048    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 049    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04A    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04B    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04C    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04D    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04E    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 04F    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 050    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 051    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 052    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 053    | Speed Limit                  | Sets the speed limit for torque control mode. (The value is an absolute value)<br>This parameter is limited by the Overspeed Detection Level Setting (Pn073). |                                                                                                 | 50              | r/min | −20000 to 20000 | B         |
| 054    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 055    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 056    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 057    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 058    | Soft Start Acceleration Time | Sets the acceleration time for speed control mode.<br>Acceleration time [s] from 0 r/min to maximum speed [r/min] = Set value × 2 ms                          |                                                                                                 | 0               | ×2 ms | 0 to 5000       | B         |
| 059    | Soft Start Deceleration Time | Sets the deceleration time for speed control mode.<br>Deceleration time [s] from maximum speed [r/min] to 0 r/min = Set value × 2 ms                          |                                                                                                 | 0               | ×2 ms | 0 to 5000       | B         |
| 05A    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 05B    | Speed Limit Selection        | Selects the speed limit for torque control mode.                                                                                                              |                                                                                                 | 0               | ---   | 0 to 1          | B         |
|        |                              | 0                                                                                                                                                             | Use the Speed Limit (Pn053)                                                                     |                 |       |                 |           |
|        |                              | 1                                                                                                                                                             | Use the speed limit value via MECHATROLINK-II or the Speed Limit (Pn053), whichever is smaller. |                 |       |                 |           |
| 05C    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |
| 05D    | Reserved                     | Do not change.                                                                                                                                                |                                                                                                 | 0               | ---   | ---             | ---       |

| Pn No. | Parameter name                                   | Setting | Explanation                                                                                                                                                                                                                                                                                                                                                                                        | Default setting | Unit          | Setting range | Attribute |
|--------|--------------------------------------------------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------------|---------------|-----------|
| 05E    | No. 1 Torque Limit                               |         | Sets the No. 1 Torque Limit for the Servomotor output torque.<br>Refer to information on the Torque Limit Selection (Pn003) to select the torque limit.<br>The maximum value of the setting range depends on the applicable Servomotor.                                                                                                                                                            | 300             | %             | 0 to 500      | B         |
| 05F    | No. 2 Torque Limit                               |         | Sets the No. 2 torque limit for the Servomotor output torque.<br>Refer to information on the Torque Limit Selection (Pn003) to select the torque limit.<br>The maximum value of the setting range depends on the applicable Servomotor.                                                                                                                                                            | 100             | %             | 0 to 500      | B         |
| 060    | Positioning Completion Range 1                   |         | Sets the positioning completion range when Positioning Completion 1 (INP1) Output is selected.<br>Positioning is complete when all positioning command pulses are exhausted, and the absolute value of the position deviation converted into command units is less than this setting.                                                                                                              | 25              | Command units | 0 to 10000    | A         |
| 061    | Speed Conformity Signal Output Width             |         | Sets the detection width for the speed conformity detection (VCMP) signal.<br>Speed conformity is achieved when the absolute value of the difference between the internal speed command (before acceleration and deceleration limits are applied) and the Servomotor speed is less than the set speed.<br><b>Note</b> This setting has a hysteresis of 10 r/min.                                   | 20              | r/min         | 10 to 20000   | A         |
| 062    | Rotation Speed for Motor Rotation Detection      |         | Sets the threshold level for the speed reached (TGON) signal.<br>Speed reached is determined when the absolute value of the Servomotor speed is greater than the setting speed.<br><b>Note</b> Speed reached detection has a hysteresis of 10 r/min.                                                                                                                                               | 50              | r/min         | 10 to 20000   | A         |
| 063    | Positioning Completion Range 2                   |         | Sets the positioning completion range when Positioning Completion 2 (INP2) is selected.<br>Positioning is complete when the absolute value of the position deviation converted into command units is less than this setting, regardless of whether position command pulses are still being processed.                                                                                              | 100             | Command units | 0 to 10000    | A         |
| 064    | Motor Phase Current Offset Re-adjustment Setting |         | Enables or disables the offset component readjustment function of the Motor Phase Current Detector (CT) for Servo ON command inputs. The readjustment is made when control power is turned ON.<br><b>Note</b> This adjustment is inaccurate if the offset is measured while the Servomotor is rotating. To enable this function, do not rotate the Servomotor when inputting the Servo ON command. | 0               | ---           | 0 to 1        | A         |
|        |                                                  | 0       | Disabled (only when turning ON control power)                                                                                                                                                                                                                                                                                                                                                      |                 |               |               |           |
|        |                                                  | 1       | Enabled (when turning ON control power, or at Servo ON)                                                                                                                                                                                                                                                                                                                                            |                 |               |               |           |



| Pn No. | Parameter name               | Setting | Explanation                                                                                                                                                                                                                                                                                                                                                                              | Default setting | Unit | Setting range | Attribute |
|--------|------------------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 065    | Undervoltage Alarm Selection |         | Selects whether to activate the main power supply undervoltage function (alarm code 13) when the main power supply is interrupted for the duration of the Momentary Hold Time (Pn06D) during Servo ON.                                                                                                                                                                                   | 1               | ---  | 0 to 1        | B         |
|        |                              | 0       | Turns the Servo OFF according to the setting for the Stop Selection with Main Power OFF (Pn067), interrupting the positioning command generation process (positioning operation) within the Servo Drive. When the main power supply is turned back ON, Servo ON will resume. Restart the positioning operation after performing the positioning operation and recovering from Servo OFF. |                 |      |               |           |
|        |                              | 1       | Causes an error due to main power supply undervoltage (alarm code 13).<br>This parameter is disabled if Pn06D = 1,000.<br>If Pn06D is set too long and the voltage between P and N in the main power supply converter drops below the specified value before a main power supply interruption is detected, a main power supply undervoltage (alarm code 13) will occur.                  |                 |      |               |           |

| Pn No.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Parameter name                             | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Explanation                   |                                                       | Default setting                                                                                    | Unit | Setting range | Attribute |   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------|----------------------------------------------------------------------------------------------------|------|---------------|-----------|---|
| 066                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Stop Selection for Drive Prohibition Input | Sets the deceleration stop operation to be performed after the Forward Drive Prohibit Input (POT) or Reverse Drive Prohibit Input (NOT) is enabled.                                                                                                                                                                                                                                                                                                                                                                      |                               |                                                       |                                                                                                    | 0    | ---           | 0 to 2    | C |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | During deceleration           | After stopping (30 r/min or less)                     | Deviation counter                                                                                  |      |               |           |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Dynamic brake                 | Disables torque command in drive prohibited direction | Cleared while decelerating with dynamic brake. Retained after stopping.                            |      |               |           |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Disables torque               | Disables torque command in drive prohibited direction | Cleared while decelerating. Retained after stopping.                                               |      |               |           |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Emergency Stop Torque (Pn06E) | Servo locked                                          | Retained while decelerating, cleared upon completion of deceleration, and retained after stopping. |      |               |           |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            | <b>Note 1.</b> The positioning command generation process (positioning operation) within the Servo Drive will be forcibly stopped once it enters the deceleration mode. Also, when the deceleration mode is activated during speed control or torque control, it will switch to position control. If a positioning operation command is received during deceleration, the internal positioning command generation process will be retained, and after deceleration is complete, positioning operation will be activated. |                               |                                                       |                                                                                                    |      |               |           |   |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                            | <b>Note 2.</b> When the Servomotor rotation speed is 30 r/min or less (stopped), the deceleration mode will not be activated even if the drive prohibit input is enabled.                                                                                                                                                                                                                                                                                                                                                |                               |                                                       |                                                                                                    |      |               |           |   |
| <b>Note 3.</b> When the parameter is set to 2 and an operation command in the drive prohibited direction is received after stopping, a command warning (warning code 95h) will be issued. When the parameter is set to 0 or 1, the operation command in the prohibited direction after stopping will be accepted, but the Servomotor will not operate and the position deviation will accumulate because the torque command is 0. Take measures such as issuing a command in the reverse direction from the host controller. |                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                               |                                                       |                                                                                                    |      |               |           |   |
| <b>Note 4.</b> When the parameter is set to 2, MECHATROLINK-II communications are interrupted, and either Forward or Reverse Drive Prohibit Input (POT or NOT) is turned ON, receiving an operation command (jog operation or normal mode autotuning) via RS232 will cause a Drive Prohibit Input Error (alarm code 38). A Drive Prohibit Input Error (alarm code 38) will also occur if either POT or NOT is turned ON while operating on an operation command received via RS232.                                          |                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                               |                                                       |                                                                                                    |      |               |           |   |

| Pn No. | Parameter name                      | Setting | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Default setting | Unit | Setting range | Attribute |
|--------|-------------------------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 067    | Stop Selection with Main Power OFF  |         | Sets the operation to be performed during deceleration and after stopping after the main power supply is turned OFF with the Undervoltage Alarm Selection (Pn065) set to 0. The deviation counter will be reset when the power OFF is detected.                                                                                                                                                                                                                                                                                                                                           | 0               | ---  | 0 to 7        | B         |
|        |                                     | 0 and 4 | Use dynamic brake to decelerate and remain stopped with dynamic brake.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |
|        |                                     | 1 and 5 | Use free-run to decelerate and remain stopped with dynamic brake.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
|        |                                     | 2 and 6 | Use dynamic brake to decelerate, but free the motor when stopped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
|        |                                     | 3 and 7 | Use free-run to decelerate, and free the motor when stopped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                 |      |               |           |
| 068    | Stop Selection for Alarm Generation |         | Sets the deceleration process and stop status after an alarm is issued by the protective function. The deviation counter will be reset when an alarm is issued.                                                                                                                                                                                                                                                                                                                                                                                                                           | 0               | ---  | 0 to 3        | B         |
|        |                                     | 0       | Use dynamic brake to decelerate and remain stopped with dynamic brake.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |      |               |           |
|        |                                     | 1       | Use free-run to decelerate and remain stopped with dynamic brake.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
|        |                                     | 2       | Use dynamic brake to decelerate, but free the motor when stopped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                 |      |               |           |
|        |                                     | 3       | Use free-run to decelerate, and free the motor when stopped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                 |      |               |           |
| 069    | Stop Selection with Servo OFF       |         | Sets the operational conditions to apply during deceleration and after stopping when the Servo is turned OFF. The relationship between set values, operation, and deviation counter processing for this parameter is the same as for the Stop Selection with Main Power OFF (Pn067).                                                                                                                                                                                                                                                                                                      | 0               | ---  | 0 to 7        | B         |
| 06A    | Brake Timing When Stopped           |         | Sets the duration from when the Brake Interlock (BKIR) signal turns OFF to when the Servomotor is de-energized when the RUN command is turned OFF with the Servomotor stopped.<br><b>Note</b> The brake interlock signal is the logical OR of the brake release request from the network and the release request from the Servo controller. Note, the brake release request from the network is OFF (operation request is ON) at power ON.                                                                                                                                                | 10              | 2 ms | 0 to 1000     | B         |
| 06B    | Brake Timing during Operation       |         | When the run command (RUN) is turned OFF during the Servomotor rotation, the Servomotor will decelerate reducing the rotation speed and the Brake Interlock Signal (BKIR) will turn OFF after the time set by this parameter has elapsed.<br>BKIR turns OFF if the Servomotor speed drops below 30 r/min before the set time.<br><b>Note</b> The brake interlock signal is the logical OR of the brake release request from the network and the release request from the Servo controller. Note, the brake release request from the network is OFF (operation request is ON) at power ON. | 50              | 2 ms | 0 to 1000     | B         |

| Pn No. | Parameter name                    | Setting | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                   | Default setting | Unit  | Setting range | Attribute |
|--------|-----------------------------------|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-------|---------------|-----------|
| 06C    | Regeneration Resistor Selection   |         | Sets the regeneration resistor operation and the regeneration overload (alarm code 18) operation.<br>Set this parameter to 0 if using the built-in regeneration resistor.<br>If using an external regeneration resistor, be sure to turn OFF the main power when the built-in thermal switch is activated.                                                                                                                    | 0               | ---   | 0 to 3        | C         |
|        |                                   | 0       | Sets the regeneration overload to match the built-in regeneration resistor. (regeneration load ratio below 1%)                                                                                                                                                                                                                                                                                                                |                 |       |               |           |
|        |                                   | 1       | The regeneration overload (alarm code 18) occurs when the load ratio of the external regeneration resistor exceeds 10%.                                                                                                                                                                                                                                                                                                       |                 |       |               |           |
|        |                                   | 2       | The regeneration processing circuit by the external regeneration resistor is activated, but the regeneration overload (alarm code 18) does not occur.                                                                                                                                                                                                                                                                         |                 |       |               |           |
|        |                                   | 3       | The regeneration processing circuit is not activated. All regenerative energy is absorbed by the built-in capacitor.                                                                                                                                                                                                                                                                                                          |                 |       |               |           |
| 06D    | Momentary Hold Time               |         | Sets the amount of time required to detect shutoff when the main power supply continues to shut off.<br>The main power OFF detection will be disabled if this parameter is set to 1000.                                                                                                                                                                                                                                       | 35              | 2 ms  | 35 to 1000    | C         |
| 06E    | Emergency Stop Torque             |         | Sets the torque limit during deceleration because of the Drive Prohibition Input when the Stop Selection for Drive Prohibition Input (Pn066) is set to 2.<br>When this parameter is set to 0, the normal torque limit will be set.<br>The maximum value of the setting range depends on the Servomotor.                                                                                                                       | 0               | %     | 0 to 300      | B         |
| 06F    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 070    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 071    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 072    | Overload Detection Level Setting  |         | Sets the overload detection level.<br>The overload detection level will be set at 115% if this parameter is set to 0.<br>Normally, use a setting of 0, and set the level only when reducing the overload detection level.                                                                                                                                                                                                     | 0               | %     | 0 to 500      | A         |
| 073    | Overspeed Detection Level Setting |         | Sets the overspeed detection level.<br>The overspeed detection level is 1.2 times the maximum Servomotor rotation speed when the parameter is set to 0.<br>Normally, use a setting of 0, and set the level only when reducing the overspeed detection level.<br><b>Note</b> The detection margin of error for the setting is $\pm 3$ r/min for a 7-core absolute encoder and $\pm 36$ r/min for a 5-core incremental encoder. | 0               | r/min | 0 to 20000    | A         |
| 074    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 075    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 076    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |
| 077    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                                | 0               | ---   | ---           | ---       |

| Pn No. | Parameter name | Setting        | Explanation | Default setting | Unit | Setting range | Attribute |
|--------|----------------|----------------|-------------|-----------------|------|---------------|-----------|
| 078    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 079    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07A    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07B    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07C    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07D    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07E    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |
| 07F    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |

# ■ 16-bit Positioning Parameters: Parameter No. 100 to 13F

| Pn No. | Parameter name                      | Set-ting                                                                                                                                                                                                                                                                                                                                                                     | Explanation                                                                           |                                                                         |    | Default setting | Unit            | Setting range | Attribute |
|--------|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------|----|-----------------|-----------------|---------------|-----------|
| 100    | Backlash Compensation Selection     | Enables or disables the backlash compensation for position control, and sets the compensation direction.                                                                                                                                                                                                                                                                     |                                                                                       |                                                                         | 0  | ---             | 0 to 2          | C             |           |
|        |                                     | 0                                                                                                                                                                                                                                                                                                                                                                            | Disabled                                                                              |                                                                         |    |                 |                 |               |           |
|        |                                     | 1                                                                                                                                                                                                                                                                                                                                                                            | Compensates in the initial positive direction after the Servo ON.                     |                                                                         |    |                 |                 |               |           |
|        |                                     | 2                                                                                                                                                                                                                                                                                                                                                                            | Compensates in the initial negative direction after the Servo ON.                     |                                                                         |    |                 |                 |               |           |
| 101    | Backlash Compensation               | Sets the backlash compensation amount for position control.                                                                                                                                                                                                                                                                                                                  |                                                                                       |                                                                         | 0  | Com-mand units  | −32768 to 32767 | B             |           |
| 102    | Backlash Compensation Time Constant | Sets the backlash compensation time constant for posi-tion control.                                                                                                                                                                                                                                                                                                          |                                                                                       |                                                                         | 0  | 0.01 ms         | 0 to 6400       | B             |           |
|        |                                     | Value of Pn100                                                                                                                                                                                                                                                                                                                                                               | Pn101 = Positive number                                                               | Pn101 = Negative number                                                 |    |                 |                 |               |           |
|        |                                     | 1                                                                                                                                                                                                                                                                                                                                                                            | Compensates in positive direction during rotation in positive direction               | Compensates in negative direction during rotation in positive direction |    |                 |                 |               |           |
|        |                                     | 2                                                                                                                                                                                                                                                                                                                                                                            | Compensates in positive direction during rotation in negative direction               | Compensates in negative direction during rotation in negative direction |    |                 |                 |               |           |
| 103    | Reserved                            | Do not change.                                                                                                                                                                                                                                                                                                                                                               |                                                                                       |                                                                         | 0  | ---             | ---             | ---           |           |
| 104    | Soft Limit                          | Enables or disables the soft limit.<br>When enabled, the soft limit values are set in Forward Software Limit (Pn201) and Reverse Software Limit (Pn202).<br><b>Note</b> The response value for limit signals disabled by this setting will be set to 0.<br>The response value for limit signals is also set to 0 when the Servomotor does not complete its return to origin. |                                                                                       |                                                                         | 0  | ---             | 0 to 3          | A             |           |
|        |                                     | 0                                                                                                                                                                                                                                                                                                                                                                            | Enable both the Forward / Reverse Software Limits (Pn201 and Pn202)                   |                                                                         |    |                 |                 |               |           |
|        |                                     | 1                                                                                                                                                                                                                                                                                                                                                                            | Disable the Forward Software Limit (Pn201), enable the Reverse Software Limit (Pn202) |                                                                         |    |                 |                 |               |           |
|        |                                     | 2                                                                                                                                                                                                                                                                                                                                                                            | Enable the Forward Software Limit (Pn201), disable the Reverse Software Limit (Pn202) |                                                                         |    |                 |                 |               |           |
|        |                                     | 3                                                                                                                                                                                                                                                                                                                                                                            | Disable both the Forward / Reverse Software Limits (Pn201 and Pn202)                  |                                                                         |    |                 |                 |               |           |
| 105    | Origin Range                        | Sets the threshold for detecting the origin (ZPOINT) in absolute values.<br>ZPOINT = 1 when the return to origin completes (coordi-nate system setup is complete) and the feedback position is within the setting range of this parameter.                                                                                                                                   |                                                                                       |                                                                         | 10 | Com-mand units  | 0 to 250        | A             |           |
| 106    | Reserved                            | Do not change.                                                                                                                                                                                                                                                                                                                                                               |                                                                                       |                                                                         | 0  | ---             | ---             | ---           |           |

| Pn No. | Parameter name                 | Setting | Explanation                                                                                                                                                                                                                                                                                                                                | Default setting | Unit                                          | Setting range   | Attribute |
|--------|--------------------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------------|-----------------|-----------|
| 107    | Linear Acceleration Constant   |         | Sets the acceleration for positioning operations.<br>A setting of "0" is regarded as "1".<br>The setting will be handled after conversion to an unsigned 16-bit data (0 to 65535).<br>Example: -32768 → 8000h = 32768<br>-1 → FFFFh = 65535                                                                                                | 100             | ×<br>10000<br>[command units/s <sup>2</sup> ] | -32768 to 32767 | B         |
| 108    | Reserved                       |         | Do not change.                                                                                                                                                                                                                                                                                                                             | 0               | ---                                           | ---             | ---       |
| 109    | Reserved                       |         | Do not change.                                                                                                                                                                                                                                                                                                                             | 0               | ---                                           | ---             | ---       |
| 10A    | Linear Deceleration Constant   |         | Sets the deceleration for positioning operations.<br>A setting of "0" is regarded as "1".<br>The setting will be handled after conversion to an unsigned 16-bit data (0 to 65535).<br>Example: -32768 → 8000h = 32768<br>-1 → FFFFh = 65535                                                                                                | 100             | ×<br>10000<br>[command units/s <sup>2</sup> ] | -32768 to 32767 | B         |
| 10B    | Reserved                       |         | Do not change.                                                                                                                                                                                                                                                                                                                             | 0               | ---                                           | ---             | ---       |
| 10C    | Reserved                       |         | Do not change.                                                                                                                                                                                                                                                                                                                             | 0               | ---                                           | ---             | ---       |
| 10D    | Reserved                       |         | Do not change.                                                                                                                                                                                                                                                                                                                             | 0               | ---                                           | ---             | ---       |
| 10E    | Moving Average Time            |         | Sets the moving average time for position commands.<br><b>Note</b> If the Moving Average Time is set, commands may not be executed seamlessly when switching the control mode, and when switching between interpolation feed motions and positioning motions (motions wherein the command waveforms are generated inside the Servo Drive). | 0               | ×0.1 ms                                       | 0 to 5100       | B         |
| 10F    | Origin Return Mode Settings    |         | Sets the direction for origin return.                                                                                                                                                                                                                                                                                                      | 0               | ---                                           | 0 to 1          | B         |
|        |                                | 0       | Positive direction                                                                                                                                                                                                                                                                                                                         |                 |                                               |                 |           |
|        |                                | 1       | Negative direction                                                                                                                                                                                                                                                                                                                         |                 |                                               |                 |           |
| 110    | Origin Return Approach Speed 1 |         | Sets the operating speed for origin return from when the origin proximity signal is turned ON, to when it is turned OFF and the latch signal is detected.<br>This parameter can be set to a maximum value of 32767, but internally the speed is limited to the Servomotor's maximum speed.                                                 | 50              | 100<br>[command units/s]                      | 1 to 32767      | B         |
| 111    | Origin Return Approach Speed 2 |         | Sets the operating speed for origin return, from when the point after the latch signal is detected to when the Origin Return Final Distance (Pn204) is reached.<br>This parameter can be set to a maximum value of 32767, but internally the speed is limited to the Servomotor's maximum speed.                                           | 5               | 100<br>[command units/s]                      | 1 to 32767      | B         |

| Pn No.     | Parameter name                              | Setting | Explanation                                                                                                                                                                              | Default setting | Unit | Setting range | Attribute |
|------------|---------------------------------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|
| 112        | General-purpose Output 1 Function Selection |         | Selects the function for general-purpose output 1 (OUTM1).                                                                                                                               | 7               | ---  | 0 to 9        | C         |
|            |                                             | 0       | Always OFF                                                                                                                                                                               |                 |      |               |           |
|            |                                             | 1       | INP1 output.<br>Turn ON when position deviation is equal to or less than Pn060 for position control. Undefined when not using position control.                                          |                 |      |               |           |
|            |                                             | 2       | VCMP output.<br>Turn ON when the deviation between the Servomotor speed and commanded speed is within the range set by Pn061 for speed control. Undefined when not using speed control.  |                 |      |               |           |
|            |                                             | 3       | TGON output.<br>Turn ON when the absolute value of the Servomotor speed exceeds Pn062 setting in all control modes.                                                                      |                 |      |               |           |
|            |                                             | 4       | READY output.<br>Turn ON when the main power is supplied, there is no alarm, and Servo SYNC with a host controller is established in all control modes.                                  |                 |      |               |           |
|            |                                             | 5       | CLIM output.<br>Turn ON when torque limit is activated in all control modes.                                                                                                             |                 |      |               |           |
|            |                                             | 6       | VLIM output.<br>Turn ON when the Servomotor speed reaches the speed limit for torque control. Undefined when not using torque control.                                                   |                 |      |               |           |
|            |                                             | 7       | BKIR output.<br>Turn ON with the release timing of the brake release signal in all control modes.                                                                                        |                 |      |               |           |
|            |                                             | 8       | WARN output.<br>Turn ON when a warning is issued in all control modes.                                                                                                                   |                 |      |               |           |
|            |                                             | 9       | INP2 output.<br>Turn ON when the position deviation is equal to or less than the Positioning Completion Range 2 (Pn063) for position control. Undefined when not using position control. |                 |      |               |           |
| 113        | General-purpose Output 2 Function Selection |         | Selects the function for general-purpose output 2 (OUTM2).<br>The set values and the functions are the same as for general-purpose output 1 (OUTM1).                                     | 0               | ---  | 0 to 9        | C         |
| 114        | General-purpose Output 3 Function Selection |         | Selects the function for general-purpose output 3 (OUTM3).<br>The set values and the functions are the same as for general-purpose output 1 (OUTM1).                                     | 0               | ---  | 0 to 9        | C         |
| 115 to 13F | Reserved                                    |         | Do not change.                                                                                                                                                                           | 0               | ---  | ---           | ---       |



### ■ 32-bit Positioning Parameters: Parameter No. 200 to 21F

| Pn No.                               | Parameter name                                                                                | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Explanation                                                                                                                                                                                                                                                                                                                 | Default setting                      | Unit          | Setting range             | Attribute |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
|--------------------------------------|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|---------------|---------------------------|-----------|----------|--------------------|---------------------------------------------------------|--------------------|---------------------------------------------------------------------------------|--------------------|-----------------------------------------------------------------------------------------------|-----|---------------|---------------------------|---|
| 200                                  | Absolute Origin Offset                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Sets the offset amount for the encoder position and the mechanical coordinate system position when using an absolute encoder.                                                                                                                                                                                               | 0                                    | Command units | −1073741823 to 1073741823 | C         |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
| 201                                  | Forward Software Limit                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Sets the soft limit in the forward direction.<br>If the Servomotor exceeds the limit, the network response status (PSOT) will turn ON (=1).<br><b>Note 1.</b> Be sure to set the limits so that Forward Software Limit > Reverse Software Limit.<br><b>Note 2.</b> PSOT is not turned ON when origin return is incomplete.  | 500000                               | Command units | −1073741823 to 1073741823 | A         |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
| 202                                  | Reverse Software Limit                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Sets the soft limit for the reverse direction.<br>If the Servomotor exceeds the limit, the network response status (NSOT) will turn ON (=1).<br><b>Note 1.</b> Be sure to set the limits so that Forward Software Limit > Reverse Software Limit.<br><b>Note 2.</b> NSOT is not turned ON when origin return is incomplete. | −500000                              | Command units | −1073741823 to 1073741823 | A         |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
| 203                                  | Final Distance for External Input Positioning                                                 | <table><tr><td rowspan="3">External input positioning direction</td><td colspan="2">Sign</td></tr><tr><td>Positive</td><td>Negative</td></tr><tr><td>Positive direction</td><td>Moves in the positive direction and stops*<sup>1</sup></td></tr><tr><td>Negative direction</td><td>Decelerates to a stop, reverses, then moves in the positive direction and stops</td></tr><tr><td>Negative direction</td><td>Decelerates to a stop, reverses, then moves in the negative direction and stops*<sup>1</sup></td></tr></table> <p>*1. Reverses after decelerating to a stop if the final distance for external input positioning is short in comparison to the deceleration distance.</p> |                                                                                                                                                                                                                                                                                                                             | External input positioning direction | Sign          |                           | Positive  | Negative | Positive direction | Moves in the positive direction and stops* <sup>1</sup> | Negative direction | Decelerates to a stop, reverses, then moves in the positive direction and stops | Negative direction | Decelerates to a stop, reverses, then moves in the negative direction and stops* <sup>1</sup> | 100 | Command units | −1073741823 to 1073741823 | B |
| External input positioning direction | Sign                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                             |                                      |               |                           |           |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
|                                      | Positive                                                                                      | Negative                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                             |                                      |               |                           |           |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
|                                      | Positive direction                                                                            | Moves in the positive direction and stops* <sup>1</sup>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                             |                                      |               |                           |           |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
| Negative direction                   | Decelerates to a stop, reverses, then moves in the positive direction and stops               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                             |                                      |               |                           |           |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |
| Negative direction                   | Decelerates to a stop, reverses, then moves in the negative direction and stops* <sup>1</sup> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                             |                                      |               |                           |           |          |                    |                                                         |                    |                                                                                 |                    |                                                                                               |     |               |                           |   |

| Pn No.     | Parameter name                        | Setting                                                                                                                                                                                                                                                                                                                                                                                                                 | Explanation                                             |       | Default setting | Unit                      | Setting range | Attribute                                                                       |
|------------|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|-------|-----------------|---------------------------|---------------|---------------------------------------------------------------------------------|
| 204        | Origin Return Final Distance          | Sets the distance from the latch signal input position to the origin when performing origin return.<br>The operation after detecting the latch signal input position will be determined by the origin return direction and this parameter as follows.                                                                                                                                                                   |                                                         | 100   | Command units   | -1073741823 to 1073741823 | B             |                                                                                 |
|            |                                       | Origin return direction                                                                                                                                                                                                                                                                                                                                                                                                 | Sign                                                    |       |                 |                           |               |                                                                                 |
|            |                                       |                                                                                                                                                                                                                                                                                                                                                                                                                         | Positive                                                |       |                 |                           |               | Negative                                                                        |
|            |                                       | Positive direction                                                                                                                                                                                                                                                                                                                                                                                                      | Moves in the positive direction and stops <sup>*1</sup> |       |                 |                           |               | Decelerates to a stop, reverses, then moves in the negative direction and stops |
|            |                                       | Negative direction                                                                                                                                                                                                                                                                                                                                                                                                      | Moves in the negative direction and stops <sup>*1</sup> |       |                 |                           |               | Decelerates to a stop, reverses, then moves in the positive direction and stops |
|            |                                       | *1. Reverses after decelerating to a stop if the final travel distance for origin return is short in comparison to the deceleration distance.                                                                                                                                                                                                                                                                           |                                                         |       |                 |                           |               |                                                                                 |
| 205        | Electronic Gear Ratio 1 (Numerator)   | Sets the numerator for the electronic gear ratio.<br>Setting this parameter to 0 automatically sets the encoder resolution as the numerator. (131072 for a 17-bit absolute encoder, or 10000 for a 2,500-p/r incremental encoder).<br><b>Note</b> Set the electronic gear ratio within the range of 1/100 to 100 times. A parameter setting alarm (alarm code 93) will occur if the ratio is set outside of this range. |                                                         | 1     | ---             | 0 to 131072               | C             |                                                                                 |
| 206        | Electronic Gear Ratio 2 (Denominator) | Sets the denominator for the electronic gear ratio.<br><b>Note</b> Set the electronic gear ratio within the range of 1/100 to 100 times. A parameter setting alarm (Alarm code 93) will occur if the ratio is set outside of this range.                                                                                                                                                                                |                                                         | 1     | ---             | 1 to 65535                | C             |                                                                                 |
| 207        | Reserved                              | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          |                                                         | 0     | ---             | ---                       | ---           |                                                                                 |
| 208        | Reserved                              | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          |                                                         | 0     | ---             | ---                       | ---           |                                                                                 |
| 209        | Deviation Counter Overflow Level      | Sets the deviation counter overflow level.<br>The value will become saturated at 134217728 (= 2 <sup>27</sup> ) pulses after multiplying with the electronic gear ratio.<br>Setting this parameter to 0 will disable deviation counter overflow.                                                                                                                                                                        |                                                         | 20000 | Command units   | 0 to 2147483647           | A             |                                                                                 |
| 20A to 21F | Reserved                              | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          |                                                         | 0     | ---             | ---                       | ---           |                                                                                 |

---

## 5-27 Details on Important Parameters

---

- ♦ This section provides an explanation for the particularly important parameters.  
Be sure to fully understand the meanings of these parameters before making changes to the parameter settings.
- ♦ Do not set or change the default values for user parameters listed as "Reserved".
- ♦ The attribute indicates when the changed setting for the parameter will be enabled.

| Attribute | Timing when changes will be enabled                                                                                                                                          |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A         | Always enabled after change                                                                                                                                                  |
| B         | Change prohibited during Servomotor operation and command issuance.<br>(It is not known when changes made during Servomotor operation and command issuance will be enabled.) |
| C         | Enabled when the control power is reset, or when CONFIG command is executed via the network (MECHATROLINK-II communications).                                                |
| R         | Read-only and cannot be changed.                                                                                                                                             |

## 5-27 Details on Important Parameters

| Pn No. | Parameter name         | Setting range | Unit | Default setting | Attribute |
|--------|------------------------|---------------|------|-----------------|-----------|
| Pn003  | Torque Limit Selection | 1 to 5        | ---  | 1               | B         |

♦ Selects torque limit function, or torque feed-forward function during speed control.

### Torque Limit Selection

Select the torque limit for position control or speed control as follows.

| Setting | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Use Pn05E as the limit value for forward and reverse operations.                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 2       | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 3       | Switch limits by torque limit values and input signals from the network.<br>Limit in forward direction: PCL is OFF = Pn05E, PCL is ON = Pn05F<br>Limit in reverse direction: NCL is OFF = Pn05E, NCL is ON = Pn05F                                                                                                                                                                                                                                                                                 |
| 4       | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values from the network as follows:<br>Limit in forward direction: Use Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction: Use Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller.                                                                                       |
| 5       | Forward: Use Pn05E as limit.<br>Reverse: Use Pn05F as limit.<br>Only in speed control, torque limits can be switched by torque limit values and input signals from the network as follows:<br>Limit in forward direction:<br>PCL is OFF = Pn05E,<br>PCL is ON = Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>NCL is OFF = Pn05F,<br>NCL is ON = Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller. |

**Note 1.** PCL ON: When either Forward Torque Limit (CN1 PCL: pin 7) or MECHATROLINK-II Communications Option Field (P-CL) is ON.

PCL OFF: When both Forward Torque Limit (CN1 PCL: pin 7) and MECHATROLINK-II Communications Option Field (P-CL) are OFF.

**Note 2.** For torque control, always select Pn05E.

### Torque Feed-forward Function Selection

| Setting | Explanation                                                             |
|---------|-------------------------------------------------------------------------|
| 1 to 3  | Enabled only during speed control. Disabled if not using speed control. |
| 4 to 5  | Always disabled.                                                        |

| Pn No. | Parameter name                 | Setting range | Unit | Default setting | Attribute |
|--------|--------------------------------|---------------|------|-----------------|-----------|
| Pn004  | Drive Prohibit Input Selection | 0 to 2        | ---  | 0               | C         |

Sets the function for the Forward and Reverse Drive Prohibit Inputs (CN1 POT: pin 19, NOT: pin 20).

| Setting | Explanation                                                                                                                                                                                                                                                  |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0       | Decelerates and stops according to the sequence set in the Stop Selection for Drive Prohibition Input (Pn066) when both POT and NOT inputs are enabled.<br>When both POT and NOT inputs are OPEN, the Drive Prohibit Input Error (alarm code 38) will occur. |
| 1       | Both POT and NOT inputs disabled.                                                                                                                                                                                                                            |
| 2       | When either POT or NOT input becomes OPEN, the Drive Prohibit Input Error (alarm code 38) will occur.                                                                                                                                                        |

| Pn No. | Parameter name         | Setting range | Unit | Default setting | Attribute |
|--------|------------------------|---------------|------|-----------------|-----------|
| Pn005  | Communications Control | 0 to 3955     | ---  | 0               | C         |

Controls errors and warnings for MECHATROLINK-II communications.

**Note** Use with this parameter set to 0.  
Program to stop immediately if using a value other than 0.

Set the Consecutive Communications Error Detection Count in COM\_ERR (bit 8 to 11).  
The communications error (alarm code 83) will occur when a communications error, which is assessed at every MECHATROLINK-II communications cycle, occurs consecutively for the number of the Consecutive Communications Error Detection Count. The error and warning can be masked for debug purposes.

| bit     | 15  | 14 | 13 | 12 | 11      | 10 | 9 | 8 | 7             | 6 | 5 | 4 | 3           | 2 | 1 | 0 |
|---------|-----|----|----|----|---------|----|---|---|---------------|---|---|---|-------------|---|---|---|
| Setting | 0   | 0  | 0  | 0  | X       | X  | X | X | 0             | X | X | X | 0           | 0 | X | X |
| Content | --- |    |    |    | COM_ERR |    |   |   | MSK COM WARNG |   |   |   | MSK COM ALM |   |   |   |

[bits 8-11] COM\_ERR (Consecutive Communications Error Detection Count)  
Setting range: 0 to 15  
Consecutive Communications Error Detection Count = COM\_ERR + 2

**Note** These bits are debug functions. Set to enable (0) when not debugging.

[bits 0-3] MECHATROLINK-II Communications Alarms Mask (MSK COM ALM)  
[bit 0] 0: Communications error (alarm code 83) enabled  
1: Communications error (alarm code 83) disabled  
[bit1] 0: Watchdog data error (alarm code 86) enabled  
1: Watchdog data error (alarm code 86) disabled

[bits 4-7] MECHATROLINK-II Communications Warnings Mask (MSK COM WARNG)  
[bit4] 0: Data setting warning (warning code 94h) enabled  
1: Data setting warning (warning code 94h) disabled  
[bit5] 0: Command warning (warning code 95h) enabled  
1: Command warning (warning code 95h) disabled  
[bit6] 0: ML-II communications warning (warning code 96h) enabled  
1: ML-II communications warning (warning code 96h) disabled

## 5-27 Details on Important Parameters

| Pn No. | Parameter name                     | Setting range | Unit | Default setting | Attribute |
|--------|------------------------------------|---------------|------|-----------------|-----------|
| Pn021  | Realtime Autotuning Mode Selection | 0 to 7        | ---  | 0               | B         |

Sets the operating mode for realtime autotuning.

A setting of 3 or 6 will provide faster response to changes in inertia during operation. Operation, however, may be unstable depending on the operating pattern.

Normally, set the parameter to 1 or 4.

Set to 4 to 6 when the Servomotor is used as a vertical axis.

Gain switching is enabled at set values 1 to 6.

Use a setting of 7 if operation changes caused by gain switching are a problem.

| Setting | Realtime Autotuning         | Degree of change in load inertia |
|---------|-----------------------------|----------------------------------|
| 0       | Disabled                    | ---                              |
| 1       | Horizontal axis mode        | Almost no change                 |
| 2       |                             | Gradual changes                  |
| 3       |                             | Sudden changes                   |
| 4       | Vertical axis mode          | Almost no change                 |
| 5       |                             | Gradual changes                  |
| 6       |                             | Sudden changes                   |
| 7       | Gain switching disable mode | Almost no change                 |

### Precautions for Correct Use

- ◆ In realtime autotuning, responses to inertia changes are derived from the changes in approximately 10 s. Realtime autotuning may not be able to follow sharp changes in inertia. In this case, the vibrations may occur in the operation. Disable realtime autotuning by setting 0 when the operation has become normal.

| Pn No. | Parameter name                                 | Setting range | Unit | Default setting | Attribute |
|--------|------------------------------------------------|---------------|------|-----------------|-----------|
| Pn022  | Realtime Autotuning Machine Rigidity Selection | 0 to F        | ---  | 2               | B         |

Sets the machine rigidity for realtime autotuning.

When realtime autotuning is enabled, each parameter in the table is automatically set to the machine rigidity values in "Realtime Autotuning (RTAT) Parameter Tables" on the next page. Autotuning adjusts the response by estimating the load inertia based on these values.

Thus, if the value is too large and not suitable for the load, vibration or resonance may occur. If this occurs, lower the setting.

Realtime Autotuning (RTAT) Parameter Tables

| Parameter No. | Parameter name                                      | AT Mode Selection (Pn021) | AT Machine Rigidity Selection (Pn022) |       |       |       |       |       |       |       |
|---------------|-----------------------------------------------------|---------------------------|---------------------------------------|-------|-------|-------|-------|-------|-------|-------|
|               |                                                     |                           | 0                                     | 1     | 2     | 3     | 4     | 5     | 6     | 7     |
| Pn010         | Position Loop Gain                                  | ---                       | 120                                   | 320   | 390   | 480   | 630   | 720   | 900   | 1080  |
| Pn011         | Speed Loop Gain                                     | ---                       | 90                                    | 180   | 220   | 270   | 350   | 400   | 500   | 600   |
| Pn012         | Speed Loop Integration Time Constant                | ---                       | 620                                   | 310   | 250   | 210   | 160   | 140   | 120   | 110   |
| Pn013         | Speed Feedback Filter Time Constant                 | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn014         | Torque Command Filter Time Constant <sup>*1</sup>   | ---                       | 253                                   | 126   | 103   | 84    | 65    | 57    | 45    | 38    |
| Pn015         | Speed Feed-forward Amount                           | ---                       | 300                                   | 300   | 300   | 300   | 300   | 300   | 300   | 300   |
| Pn016         | Feed-forward Filter Time Constant                   | ---                       | 50                                    | 50    | 50    | 50    | 50    | 50    | 50    | 50    |
| Pn017         | Reserved                                            | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn018         | Position Loop Gain 2                                | ---                       | 190                                   | 380   | 460   | 570   | 730   | 840   | 1050  | 1260  |
| Pn019         | Speed Loop Gain 2                                   | ---                       | 90                                    | 180   | 220   | 270   | 350   | 400   | 500   | 600   |
| Pn01A         | Speed Loop Integration Time Constant 2              | 1, 2, 3, 7                | 10000                                 | 10000 | 10000 | 10000 | 10000 | 10000 | 10000 | 10000 |
|               |                                                     | 4, 5, 6                   | 9999                                  | 9999  | 9999  | 9999  | 9999  | 9999  | 9999  | 9999  |
| Pn01B         | Speed Feedback Filter Time Constant 2               | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn01C         | Torque Command Filter Time Constant 2 <sup>*1</sup> | ---                       | 253                                   | 126   | 103   | 84    | 65    | 57    | 45    | 38    |
| Pn020         | Inertia Ratio                                       | ---                       | Estimated load inertia ratio          |       |       |       |       |       |       |       |
| Pn027         | Instantaneous Speed Observer Setting                | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn030         | Gain Switching Operating Mode Selection             | ---                       | 1                                     | 1     | 1     | 1     | 1     | 1     | 1     | 1     |
| Pn031         | Gain Switch Setting <sup>*3</sup>                   | 1 to 6                    | 10                                    | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
|               |                                                     | 7                         | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn032         | Gain Switch Time                                    | ---                       | 30                                    | 30    | 30    | 30    | 30    | 30    | 30    | 30    |
| Pn033         | Gain Switch Level Setting                           | ---                       | 50                                    | 50    | 50    | 50    | 50    | 50    | 50    | 50    |
| Pn034         | Gain Switch Hysteresis Setting                      | ---                       | 33                                    | 33    | 33    | 33    | 33    | 33    | 33    | 33    |
| Pn035         | Position Loop Gain Switching Time                   | ---                       | 20                                    | 20    | 20    | 20    | 20    | 20    | 20    | 20    |

## 5-27 Details on Important Parameters

| Parameter No. | Parameter name                                      | AT Mode Selection (Pn021) | AT Machine Rigidity Selection (Pn022) |       |                  |                  |                  |                  |                  |                  |
|---------------|-----------------------------------------------------|---------------------------|---------------------------------------|-------|------------------|------------------|------------------|------------------|------------------|------------------|
|               |                                                     |                           | 8                                     | 9     | A                | B                | C                | D                | E                | F                |
| Pn010         | Position Loop Gain                                  | ---                       | 1350                                  | 1620  | 2060             | 2510             | 3050             | 3770             | 4490             | 5570             |
| Pn011         | Speed Loop Gain                                     | ---                       | 750                                   | 900   | 1150             | 1400             | 1700             | 2100             | 2500             | 3100             |
| Pn012         | Speed Loop Integration Time Constant                | ---                       | 90                                    | 80    | 70               | 60               | 50               | 40               | 40               | 30               |
| Pn013         | Speed Feedback Filter Time Constant                 | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn014         | Torque Command Filter Time Constant* <sup>1</sup>   | ---                       | 30                                    | 25    | 20* <sup>2</sup> | 16* <sup>2</sup> | 13* <sup>2</sup> | 11* <sup>2</sup> | 10* <sup>2</sup> | 10* <sup>2</sup> |
| Pn015         | Speed Feed-forward Amount                           | ---                       | 300                                   | 300   | 300              | 300              | 300              | 300              | 300              | 300              |
| Pn016         | Feed-forward Filter Time Constant                   | ---                       | 50                                    | 50    | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn017         | Reserved                                            | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn018         | Position Loop Gain 2                                | ---                       | 1570                                  | 1820  | 2410             | 2930             | 3560             | 4400             | 5240             | 6490             |
| Pn019         | Speed Loop Gain 2                                   | ---                       | 750                                   | 900   | 1150             | 1400             | 1700             | 2100             | 2100             | 3100             |
| Pn01A         | Speed Loop Integration Time Constant 2              | 1, 2, 3, 7                | 10000                                 | 10000 | 10000            | 10000            | 10000            | 10000            | 10000            | 10000            |
|               |                                                     | 4, 5, 6                   | 9999                                  | 9999  | 9999             | 9999             | 9999             | 9999             | 9999             | 9999             |
| Pn01B         | Speed Feedback Filter Time Constant 2               | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn01C         | Torque Command Filter Time Constant 2* <sup>1</sup> | ---                       | 30                                    | 25    | 20* <sup>2</sup> | 16* <sup>2</sup> | 13* <sup>2</sup> | 11* <sup>2</sup> | 10* <sup>2</sup> | 10* <sup>2</sup> |
| Pn020         | Inertia Ratio                                       | ---                       | Estimated load inertia ratio          |       |                  |                  |                  |                  |                  |                  |
| Pn027         | Instantaneous Speed Observer Setting                | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn030         | Gain Switching Operating Mode Selection             | ---                       | 1                                     | 1     | 1                | 1                | 1                | 1                | 1                | 1                |
| Pn031         | Gain Switch Setting* <sup>3</sup>                   | 1 to 6                    | 10                                    | 10    | 10               | 10               | 10               | 10               | 10               | 10               |
|               |                                                     | 7                         | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn032         | Gain Switch Time                                    | ---                       | 30                                    | 30    | 30               | 30               | 30               | 30               | 30               | 30               |
| Pn033         | Gain Switch Level Setting                           | ---                       | 50                                    | 50    | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn034         | Gain Switch Hysteresis Setting                      | ---                       | 33                                    | 33    | 33               | 33               | 33               | 33               | 33               | 33               |
| Pn035         | Position Loop Gain Switching Time                   | ---                       | 20                                    | 20    | 20               | 20               | 20               | 20               | 20               | 20               |

♦ Parameters Pn015, 016, 01A, 030, and 032 to 035 are set to fixed values. The Servo Drive is set to rigidity No.2 as the default value.

\*1. The lower limit is set to 10 when using a 17-bit encoder and 25 when using a 2,500-p/r encoder.

\*2. The value for a 17-bit absolute encoder. The value for a 2,500-p/r incremental encoder is 25.

\*3. The default setting for the Servo Drive is 2 (switching from the network).



| Pn No. | Parameter name            | Setting range | Unit | Default setting | Attribute |
|--------|---------------------------|---------------|------|-----------------|-----------|
| Pn023  | Adaptive Filter Selection | 0 to 2        | ---  | 0               | B         |

Enables or disables the adaptive filter.

The adaptive filter is enabled during realtime autotuning and manual tuning.

The adaptive filter reduces resonance point vibration in the Servomotor response by estimating the resonance frequency from the vibration component that appears in the Servomotor speed, and automatically sets the frequency of the notch filter which removes the resonance component from the torque command.

The adaptive filter can only be used with position and speed control modes. It is not available for torque control mode.

The adaptive filter may not operate properly under the following conditions.

|                  | Conditions under which the adaptive filter does not function properly                                                                                                                                                                                             |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Resonance points | <ul style="list-style-type: none"> <li>♦ If the resonance frequency is 300 Hz or lower.</li> <li>♦ If there are multiple points of resonance.</li> <li>♦ If the resonance peak or control gain is low, and the Servomotor speed is not affected by it.</li> </ul> |
| Load             | <ul style="list-style-type: none"> <li>♦ If the Servomotor speed with high-frequency components changes due to backlash or other non-linear elements.</li> </ul>                                                                                                  |
| Command pattern  | <ul style="list-style-type: none"> <li>♦ If the acceleration/deceleration suddenly changes, i.e. 3,000 r/min or more in 0.1 s.</li> </ul>                                                                                                                         |

If the adaptive filter does not function properly, correct by setting the Notch Filter 1 Frequency (Pn01D) and Notch Filter 1 Width (Pn01E).

Setting the Vibration Filter Selection (Pn024) to low-pass type 3 to 5 disables (= 0) the adaptive filter.

| Setting | Explanation                                                                    |
|---------|--------------------------------------------------------------------------------|
| 0       | Adaptive filter disabled                                                       |
| 1       | Adaptive filter enabled, adaptive operation ON                                 |
| 2       | Adaptive filter retained (retains the adaptive filter frequency when set to 2) |

| Pn No. | Parameter name             | Setting range | Unit | Default setting | Attribute |
|--------|----------------------------|---------------|------|-----------------|-----------|
| Pn024  | Vibration Filter Selection | 0 to 5        | ---  | 0               | C         |

Selects the vibration filter type and switching mode.

### Filter type

- ♦ Normal type: Vibration frequency setting range 10.0 to 200.0 Hz  
Adaptive filter can be used.
- ♦ Low-pass type: Vibration frequency setting range 1.0 to 200.0 Hz  
Adaptive filter cannot be used (forcibly set to disabled).

### Switching mode selection

- ♦ No switching: Both 1 and 2 are enabled
- ♦ Switch with command direction:  
 Selects Vibration Frequency 1 in forward direction (Pn02B, Pn02C)  
 Selects Vibration Frequency 2 in reverse direction (Pn02D, Pn02E)

| Setting | Filter type   | Switching mode                                            |
|---------|---------------|-----------------------------------------------------------|
| 0       | Normal type   | No switching<br>(Both filter 1 and filter 2 are enabled.) |
| 1       |               |                                                           |
| 2       |               | Switching with command direction                          |
| 3       | Low-pass type | No switching<br>(Both filter 1 and filter 2 are enabled.) |
| 4       |               |                                                           |
| 5       |               | Switching with command direction                          |

| Pn No. | Parameter name                              | Setting range | Unit | Default setting | Attribute |
|--------|---------------------------------------------|---------------|------|-----------------|-----------|
| Pn025  | Normal Mode<br>Autotuning Operation Setting | 0 to 7        | ---  | 0               | B         |

Normal mode autotuning operates on condition that the network is not established.

If the network is established while normal mode autotuning is in operation, the command error (alarm code 27) will occur.

Normal mode autotuning will not operate properly unless the Torque Limit Selection (Pn003) is set to 1, (Pn05E is the torque limit value), and the Drive Prohibit Input Selection (Pn004) is set to 1 (disabled).

| Setting | Number of rotations              | Rotation Direction                |
|---------|----------------------------------|-----------------------------------|
| 0       | Repeat cycles of 2 rotations     | Forward and Reverse (Alternating) |
| 1       |                                  | Reverse and Forward (Alternating) |
| 2       |                                  | Forward only                      |
| 3       |                                  | Reverse only                      |
| 4       | Repeat cycles of single rotation | Forward and Reverse (Alternating) |
| 5       |                                  | Reverse and Forward (Alternating) |
| 6       |                                  | Forward only                      |
| 7       |                                  | Reverse only                      |

| Pn No. | Parameter name                       | Setting range | Unit | Default setting | Attribute |
|--------|--------------------------------------|---------------|------|-----------------|-----------|
| Pn02F  | Adaptive Filter Table Number Display | 0 to 64       | ---  | 0               | R         |

The number corresponding to the resonance frequency detected by the adaptive filter is entered. If the adaptive filter is not used, set the Adaptive Filter Selection (Pn023) to 0 and set the number in this parameter to the notch filter. Or set the Adaptive Filter Selection (Pn023) to 2 to retain the Adaptive Filter Table Number.

The Adaptive Filter Table is shown on the next page.

Adaptive Filter Table

| Pn02F | Notch Filter 1 Frequency | Pn02F | Notch Filter 1 Frequency | Pn02F | Notch Filter 1 Frequency      |
|-------|--------------------------|-------|--------------------------|-------|-------------------------------|
| 0     | (Disabled)               | 22    | 766                      | 44    | 326                           |
| 1     | (Disabled)               | 23    | 737                      | 45    | 314                           |
| 2     | (Disabled)               | 24    | 709                      | 46    | 302                           |
| 3     | (Disabled)               | 25    | 682                      | 47    | 290                           |
| 4     | (Disabled)               | 26    | 656                      | 48    | 279                           |
| 5     | 1482                     | 27    | 631                      | 49    | 269 (Disabled when Pn022 ≥ F) |
| 6     | 1426                     | 28    | 607                      | 50    | 258 (Disabled when Pn022 ≥ F) |
| 7     | 1372                     | 29    | 584                      | 51    | 248 (Disabled when Pn022 ≥ F) |
| 8     | 1319                     | 30    | 562                      | 52    | 239 (Disabled when Pn022 ≥ F) |
| 9     | 1269                     | 31    | 540                      | 53    | 230 (Disabled when Pn022 ≥ F) |
| 10    | 1221                     | 32    | 520                      | 54    | 221 (Disabled when Pn022 ≥ E) |
| 11    | 1174                     | 33    | 500                      | 55    | 213 (Disabled when Pn022 ≥ E) |
| 12    | 1130                     | 34    | 481                      | 56    | 205 (Disabled when Pn022 ≥ E) |
| 13    | 1087                     | 35    | 462                      | 57    | 197 (Disabled when Pn022 ≥ E) |
| 14    | 1045                     | 36    | 445                      | 58    | 189 (Disabled when Pn022 ≥ E) |
| 15    | 1005                     | 37    | 428                      | 59    | 182 (Disabled when Pn022 ≥ D) |
| 16    | 967                      | 38    | 412                      | 60    | (Disabled)                    |
| 17    | 930                      | 39    | 396                      | 61    | (Disabled)                    |
| 18    | 895                      | 40    | 381                      | 62    | (Disabled)                    |
| 19    | 861                      | 41    | 366                      | 63    | (Disabled)                    |
| 20    | 828                      | 42    | 352                      | 64    | (Disabled)                    |
| 21    | 796                      | 43    | 339                      |       |                               |

- ♦ The table number corresponding to the frequency for the adaptive filter is displayed.
- ♦ This parameter is set automatically and cannot be changed when the adaptive filter is enabled (when the Adaptive Filter Selection (Pn023) is 1 or 2).
- ♦ When the adaptive filter is enabled, data will be saved in EEPROM every 30 min. If the adaptive filter is enabled the next time the power supply is turned ON, adaptive operation will start with the data saved in EEPROM as the default value.
- ♦ To clear this parameter and reset the adaptive operation, disable the adaptive filter by setting the Adaptive Filter Selection (Pn023) to 0, and then enable it again.

## 5-27 Details on Important Parameters

| Pn No. | Parameter name                             | Setting range | Unit | Default setting | Attribute |
|--------|--------------------------------------------|---------------|------|-----------------|-----------|
| Pn066  | Stop Selection for Drive Prohibition Input | 0 to 2        | ---  | 0               | C         |

Sets the deceleration stop operation to be performed after the Forward Drive Prohibit Input (POT) or Reverse Drive Prohibit Input (NOT) is enabled.

| Setting | During deceleration           | After stopping<br>(30 r/min or less)                  | Deviation counter                                                                                  |
|---------|-------------------------------|-------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| 0       | Dynamic brake                 | Disables torque command in drive prohibited direction | Cleared while decelerating with dynamic brake. Retained after stopping.                            |
| 1       | Disables torque               | Disables torque command in drive prohibited direction | Cleared while decelerating. Retained after stopping.                                               |
| 2       | Emergency Stop Torque (Pn06E) | Servo locked                                          | Retained while decelerating, cleared upon completion of deceleration, and retained after stopping. |

**Note 1.** The positioning command generation process (positioning operation) within the Servo Drive will be forcibly stopped once it enters the deceleration mode. Also, when the deceleration mode is activated during speed control or torque control, it will switch to position control. If a positioning operation command is received during deceleration, the internal positioning command generation process will be retained, and after deceleration is complete, positioning operation will be activated.

**Note 2.** When the Servomotor rotation speed is 30 r/min or less (stopped), the deceleration mode will not be activated even if the drive prohibit input is enabled.

**Note 3.** When the parameter is set to 2 and an operation command in the drive prohibited direction is received after stopping, a command warning (warning code 95h) will be issued. When the parameter is set to 0 or 1, the operation command in the prohibited direction after stopping will be accepted, but the Servomotor will not operate and the position deviation will accumulate because the torque command is 0. Take measures such as issuing a command in the reverse direction from the host controller.

**Note 4.** When the parameter is set to 2, MECHATROLINK-II communications are interrupted, and either Forward or Reverse Drive Prohibit Input (POT or NOT) is turned ON, receiving an operation command (jog operation or normal mode autotuning) via RS232 will cause a Drive Prohibit Input Error (alarm code 38). A Drive Prohibit Input Error (alarm code 38) will also occur if either POT or NOT is turned ON while operating on an operation command received via RS232.

| Pn No. | Parameter name                     | Setting range | Unit | Default setting | Attribute |
|--------|------------------------------------|---------------|------|-----------------|-----------|
| Pn067  | Stop Selection with Main Power OFF | 0 to 7        | ---  | 0               | B         |

Sets the operational conditions during deceleration and after stopping after the main power supply is turned OFF with the Undervoltage Alarm Selection (Pn065) set to 0.  
The deviation counter will be reset when the power OFF is detected.

| Setting | Explanation                                                            |
|---------|------------------------------------------------------------------------|
| 0 and 4 | Use dynamic brake to decelerate and remain stopped with dynamic brake. |
| 1 and 5 | Use free-run to decelerate and remain stopped with dynamic brake.      |
| 2 and 6 | Use dynamic brake to decelerate, but free the motor when stopped.      |
| 3 and 7 | Use free-run to decelerate, and free the motor when stopped.           |

| Pn No. | Parameter name                      | Setting range | Unit | Default setting | Attribute |
|--------|-------------------------------------|---------------|------|-----------------|-----------|
| Pn068  | Stop Selection for Alarm Generation | 0 to 3        | ---  | 0               | B         |

Sets the deceleration process and stop status after an alarm is issued by the protective function. The deviation counter will be reset when an alarm is issued.

| Setting | Explanation                                                            |
|---------|------------------------------------------------------------------------|
| 0       | Use dynamic brake to decelerate and remain stopped with dynamic brake. |
| 1       | Use free-run to decelerate and remain stopped with dynamic brake.      |
| 2       | Use dynamic brake to decelerate, but free the motor when stopped.      |
| 3       | Use free-run to decelerate, and free the motor when stopped.           |

| Pn No. | Parameter name                | Setting range | Unit | Default setting | Attribute |
|--------|-------------------------------|---------------|------|-----------------|-----------|
| Pn069  | Stop Selection with Servo OFF | 0 to 7        | ---  | 0               | B         |

Sets the operational conditions to apply during deceleration and after stopping when the Servo is turned OFF.

| Setting | Explanation                                                            |
|---------|------------------------------------------------------------------------|
| 0 and 4 | Use dynamic brake to decelerate and remain stopped with dynamic brake. |
| 1 and 5 | Use free-run to decelerate and remain stopped with dynamic brake.      |
| 2 and 6 | Use dynamic brake to decelerate, but free the motor when stopped.      |
| 3 and 7 | Use free-run to decelerate, and free the motor when stopped.           |

| Pn No. | Parameter name                  | Setting range | Unit | Default setting | Attribute |
|--------|---------------------------------|---------------|------|-----------------|-----------|
| Pn06C  | Regeneration Resistor Selection | 0 to 3        | ---  | 0               | C         |

Sets the regeneration resistor operation and the regeneration overload (alarm code 18) operation. Set this parameter to 0 if using the built-in regeneration resistor.

If using an external regeneration resistor, be sure to turn OFF the main power when the built-in thermal switch is activated.

| Setting | Explanation                                                                                                                           |
|---------|---------------------------------------------------------------------------------------------------------------------------------------|
| 0       | Sets the regeneration overload to match the built-in regeneration resistor. (regeneration load ratio below 1%)                        |
| 1       | The regeneration overload (alarm code 18) occurs when the load ratio of the external regeneration resistor exceeds 10%.               |
| 2       | The regeneration processing circuit by the external regeneration resistor is activated, but the regeneration overload does not occur. |
| 3       | The regeneration processing circuit is not activated. All regenerative energy is absorbed by the built-in capacitor.                  |



# Chapter 6

## Operation

|     |                                                 |      |
|-----|-------------------------------------------------|------|
| 6-1 | Operational Procedure .....                     | 6-1  |
| 6-2 | Preparing for Operation.....                    | 6-2  |
|     | Items to Check Before Turning ON the Power..... | 6-2  |
|     | Turning ON Power .....                          | 6-4  |
|     | Checking the Displays .....                     | 6-5  |
|     | Absolute Encoder Setup .....                    | 6-6  |
| 6-3 | Using the Parameter Unit.....                   | 6-8  |
|     | Names of Parts and Functions.....               | 6-8  |
| 6-4 | Setting the Mode .....                          | 6-9  |
|     | Changing the Mode.....                          | 6-9  |
|     | Monitor Mode .....                              | 6-10 |
|     | Parameter Setting Mode .....                    | 6-17 |
|     | Parameter Write Mode .....                      | 6-23 |
|     | Normal Mode Autotuning .....                    | 6-24 |
|     | Auxiliary Function Mode.....                    | 6-25 |
|     | Copy Mode.....                                  | 6-28 |
| 6-5 | Trial Operation .....                           | 6-31 |
|     | Preparation for Trial Operation .....           | 6-31 |
|     | Trial Operation with CX-Drive .....             | 6-31 |

# 6-1 Operational Procedure

After mounting and wiring, connect a power supply, and check the operation of the Servomotor and Servo Drive individually.

Then make the function settings as required according to the use of the Servomotor and Servo Drive. If the parameters are set incorrectly, there is a risk of an unpredictable Servomotor operation. Set the parameters according to the instructions in this manual.

| Item                      | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Reference                             |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| Mounting and installation | Install the Servomotor and Servo Drive according to the installation conditions. (Do not connect the Servomotor to the mechanical system before checking the no-load operation.)                                                                                                                                                                                                                                                                                                                                            | 4-1 <i>Installation Conditions</i>    |
| Wiring and connections    | Connect the Servomotor and Servo Drive to the power supply and peripheral devices.<br>· Specified installation and wiring requirements must be satisfied, particularly if conforming to the EC Directives.                                                                                                                                                                                                                                                                                                                  | 4-2 <i>Wiring</i>                     |
| Preparation for operation | Check the necessary items and then turn ON the power supply. Check the display to see whether there are any internal errors in the Servo Drive.<br>If using a Servomotor with an absolute encoder, first set up the absolute encoder.                                                                                                                                                                                                                                                                                       | 6-2 <i>Preparing for Operation</i>    |
| Setting functions         | By means of the user parameters, set the functions according to the operating conditions.                                                                                                                                                                                                                                                                                                                                                                                                                                   | 5-26 <i>User Parameters</i>           |
| Trial operation           | First, test operation without a load connected to the motor. Then turn the power OFF and connect the mechanical system to the motor. If using a Servomotor with an absolute encoder, set up the absolute encoder and set the Motion Control Unit's initial parameters. Turn ON the power, and check to see whether protective functions, such as the emergency stop and operational limits, work properly. Check operation at both low speed and high speed using the system without a workpiece, or with dummy workpieces. | 6-5 <i>Trial Operation</i>            |
| Adjustments               | Manually adjust the gain if necessary. Further adjust the various functions to improve the control performance.                                                                                                                                                                                                                                                                                                                                                                                                             | Chapter 7 <i>Adjustment Functions</i> |
| Operation                 | Operation can now be started. If any problems should occur, refer to Chapter 8 <i>Troubleshooting</i> .                                                                                                                                                                                                                                                                                                                                                                                                                     | Chapter 8 <i>Troubleshooting</i>      |



## 6-2 Preparing for Operation

This section explains the procedure for preparing the mechanical system for operation following installation and wiring of the Servomotor and Servo Drive. It explains what you need to check both before and after turning ON the power.

It also explains the setup procedure required for using a Servomotor with an absolute encoder.

### Items to Check Before Turning ON the Power

#### ■ Checking Power Supply Voltage

- ♦ Check to be sure that the power supply voltage is within the ranges shown below.  
R88D-GT□L-ML2 (single-phase 100 VAC input)  
Main circuit power supply: Single-phase, 100 to 115 VAC (85 to 127 V), 50/60 Hz  
Control circuit power supply: Single-phase, 100 to 115 VAC (85 to 127 V), 50/60 Hz

R88D-GN01H-ML2/02H-ML2/04H-ML2/08H-ML2/10H-ML2/15H-ML2  
(Single-phase or single/three-phase 200 VAC input)  
Main circuit power supply: Single-phase or single/three-phase, 200 to 240 VAC  
(170 to 264 V), 50/60 Hz  
Control circuit power supply: Single-phase or single/three-phase, 200 to 240 VAC  
(170 to 264 V), 50/60 Hz

R88D-GN20H-ML2/30H-ML2/50H-ML2/75H-ML2 (three-phase 200VAC input)  
Main circuit power supply: Three-phase, 200 to 230 VAC (170 to 253 V), 50/60 Hz  
Control circuit power supply: Single-phase, 200 to 230 VAC (170 to 253 V), 50/60 Hz

#### ■ Checking Terminal Block Wiring

- ♦ The main circuit power supply inputs (L1/L3 or L1/L2/L3) must be properly connected to the terminal block.
- ♦ The control circuit power supply inputs (L1C/L2C) must be properly connected to the terminal block.
- ♦ The Servomotor's red (U), white (V), and blue (W) power lines and the green/yellow ground wire (⊕) must be properly connected to the terminal block.

#### ■ Checking the Servomotor

- ♦ There should be no load on the Servomotor. (Do not connect the mechanical system.)
- ♦ The Servomotor's power lines and the power cables must be connected securely.

#### ■ Checking the Encoder Connectors

- ♦ The Encoder Cable must be connected securely to the Encoder Connector (CN2) at the Servo Drive.
- ♦ The Encoder Cable must be connected securely to the Encoder Connector at the Servomotor.

#### ■ Checking the Control I/O Connectors


- ♦ The Control Cable must be connected securely to the Control I/O Connector (CN1).
- ♦ The RUN command (RUN) must be OFF.

#### ■ Checking Parameter Unit Connections

- ♦ When using the Parameter Unit (R88A-PR02G), the enclosed cable must be connected securely to the CN3 connector.

■ Servo Drive Display and Settings

The display for the Servo Driver R88D-GN□ is illustrated below.  
The display shows the node address setting for MECHATROLINK-II, alarm display for the Servo Drive, and the communications status.

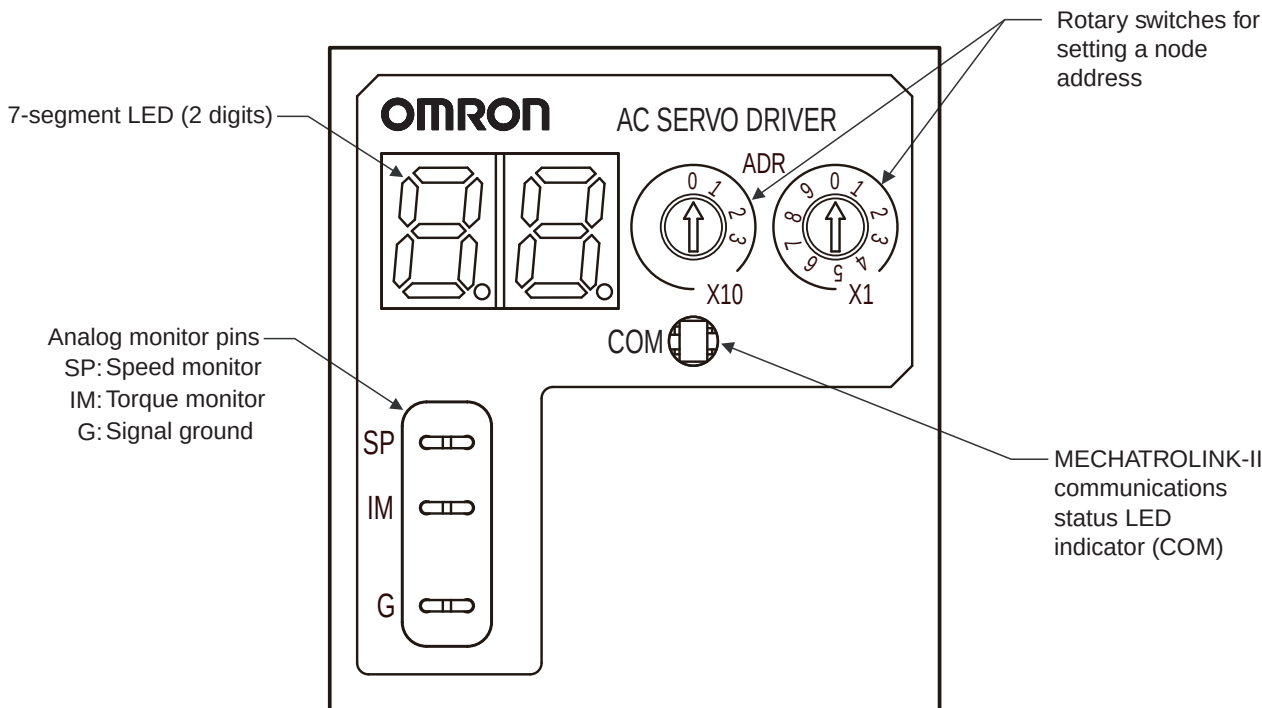

- Note 1.** The node address is only loaded once when the control power supply is turned ON. Changes made after turning the power ON will not be applied until the power is turned ON next time.  
Do not change the rotary switch setting after turning the power ON.
- Note 2.** The setting range for the node address setting rotary switch is 1 to 31.  
The actual node address used on the network will be the sum of the rotary switch setting and the offset value of 40h.  
If the rotary switch setting is not between 1 and 31, a node address setting error (alarm code 82) will occur.

| Rotary Switch Set Value | Description                                                  |
|-------------------------|--------------------------------------------------------------|
| 1 to 31                 | Node address = Set value + 40h<br>(41h ≤ Node address ≤ 5Fh) |
| Others                  | Alarm code 82 occurs.                                        |

■ MECHATROLINK-II Status LED Indicator

The display status of the MECHATROLINK-II status LED indicator (COM) is described below.

| LED Display    | Description                                                                                                                                                                                                                                                                                                                                      |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF            | No communications                                                                                                                                                                                                                                                                                                                                |
| Flashing green | Asynchronous communications established                                                                                                                                                                                                                                                                                                          |
| Lit green      | Synchronous communications established                                                                                                                                                                                                                                                                                                           |
| Flashing red   | Recoverable MECHATROLINK-II communications alarm <ul style="list-style-type: none"><li>• Communications error (alarm code 83)</li><li>• Transmission cycle error (alarm code 84)</li><li>• Watchdog data error (alarm code 86)</li><li>• Transmission cycle setting error (alarm code 90)</li><li>• SYNC command error (alarm code 91)</li></ul> |
| Lit red        | Irrecoverable MECHATROLINK-II communications alarm <ul style="list-style-type: none"><li>• Node address setting error (alarm code 82)</li></ul>                                                                                                                                                                                                  |

**Note** If a communications error occurs at the same time as a non-communications error, the MECHATROLINK-II status LED indicator (COM) will still follow the above rule.


Turning ON Power

- First carry out the preliminary checks, and then turn ON the control-circuit power supply. It makes no difference whether or not the main-circuit power supply is turned ON.
- The alarm (/ALM) output will take approximately 2 seconds to turn ON after the power has been turned ON. Do not attempt to detect an alarm using the Host Controller during this time (if power is turned ON while the Host Controller is connected).

Checking the Displays

■ 7-segment LED

The display of the 7-segment LED on the front panel is shown below.  
When the power is turned ON, the node address set with the rotary switch is displayed, followed by the display content set by the Default Display (Pn001) parameter.  
When an alarm occurs, the alarm code will be displayed. When a warning occurs, the warning code will be displayed.

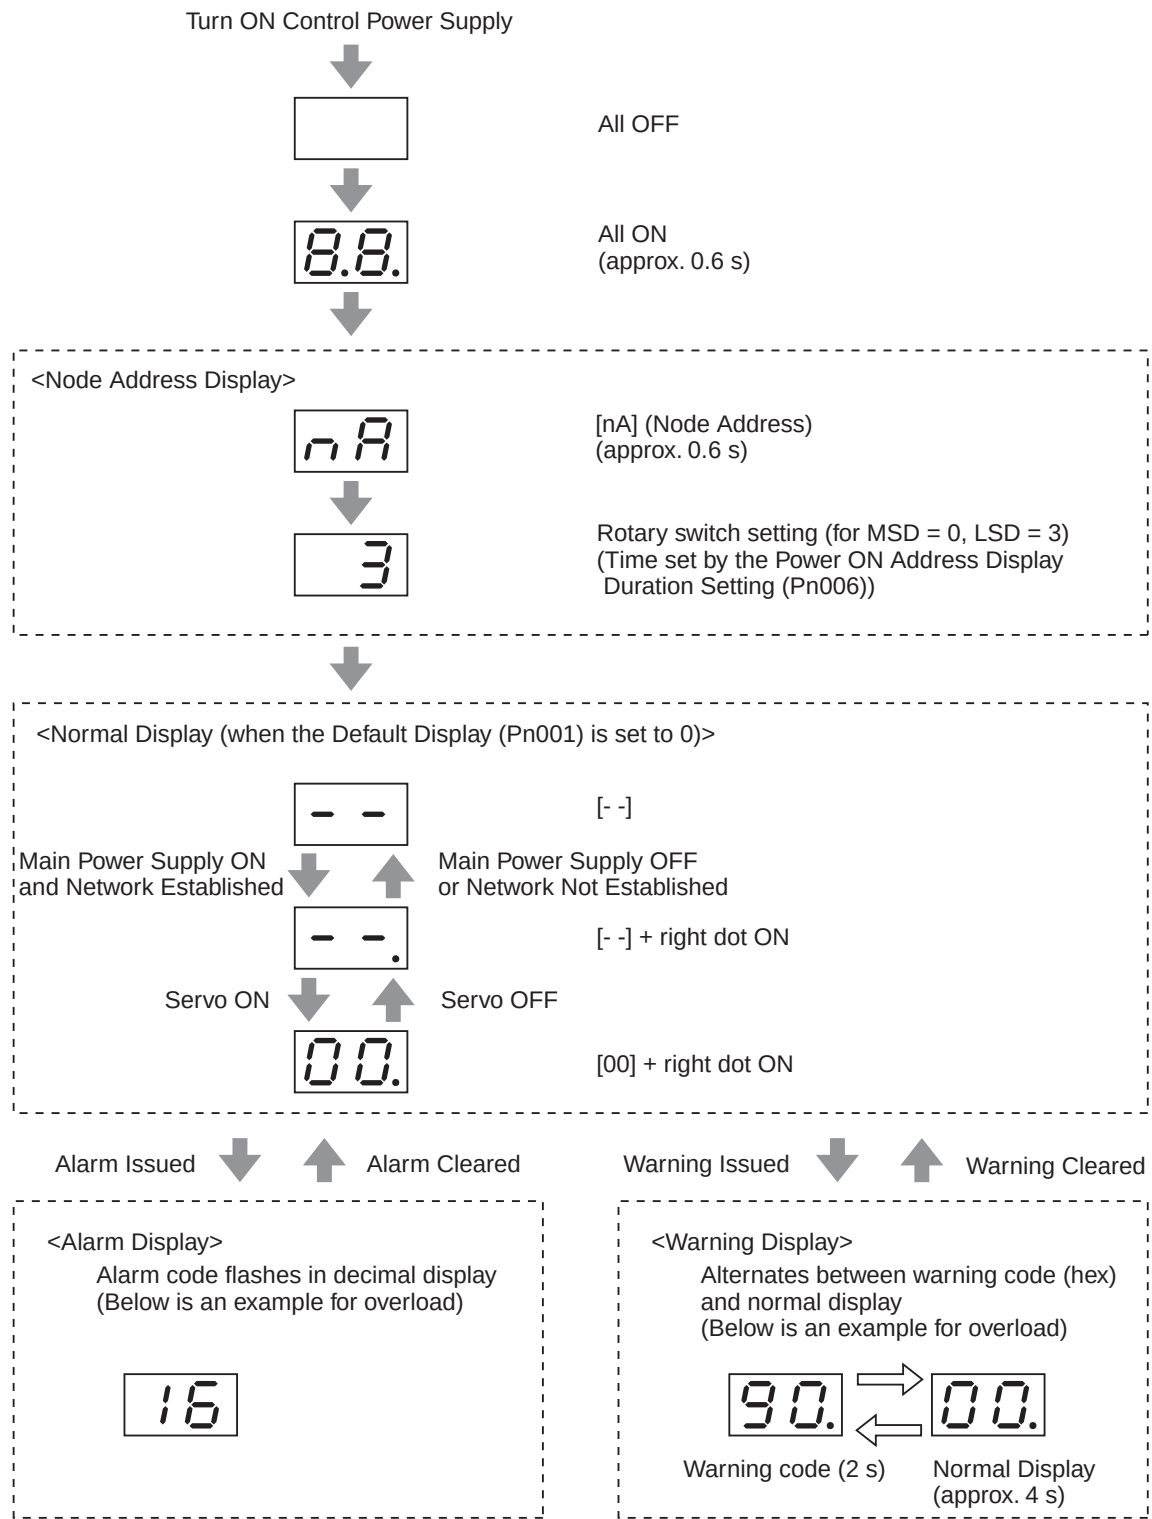


Absolute Encoder Setup **ABS**

When the power is turned OFF, multi-turn data for the absolute value data will be retained using the battery for the absolute encoder. Hence, when turning ON the machine for the first time after loading the battery, you will need to clear the encoder at the origin and set the multi-turn data to 0. To clear the encoder, use the Parameter Unit, CX-Drive or via MECHATROLINK-II.

**Note** Be sure to turn OFF and turn ON the control power supply again after clearing the absolute value data. A command error (alarm code 27) will occur when the absolute encoder is cleared from the Parameter Unit or CX-Drive. This is for safety purposes, not an indication of failure. Note that the one-turn data cannot be cleared.

■ Absolute Encoder Setup Procedure (for the Parameter Unit)

- 1. Turn ON the power supply and align to the origin.  
Turn ON the power supply, perform the origin alignment operation, and move the machine to the origin position.
- 2. Go to Auxiliary Function Mode.  
Press **DATA** and **↵** on the Parameter Unit to display Auxiliary Function Mode.
- 3. Go to Absolute Encoder Clear Mode.  
Press **DATA** again. Absolute Encoder Clear Mode will be displayed.

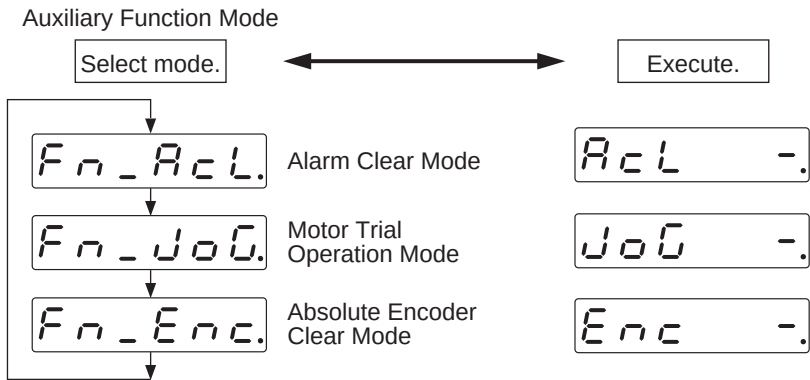

### 4. Start clearing the absolute encoder.

Hold down . Clearing the absolute encoder will be started.

Hold down the Increment key for approx. 3 seconds. The number of dashes on the display will increase.

Enc -.

Enc --.

-----.

Clearing the absolute encoder will be started.

StArT

Clearing will be finished almost immediately.

Fin,Sh.

Error.



**Note:** If you attempt to clear an incremental encoder, "Error" will be displayed.

### 5. Restart the Servo Drive.

Turn OFF the control power supply to the Servo Drive, and then turn it back ON.


## 6-3 Using the Parameter Unit

### Names of Parts and Functions

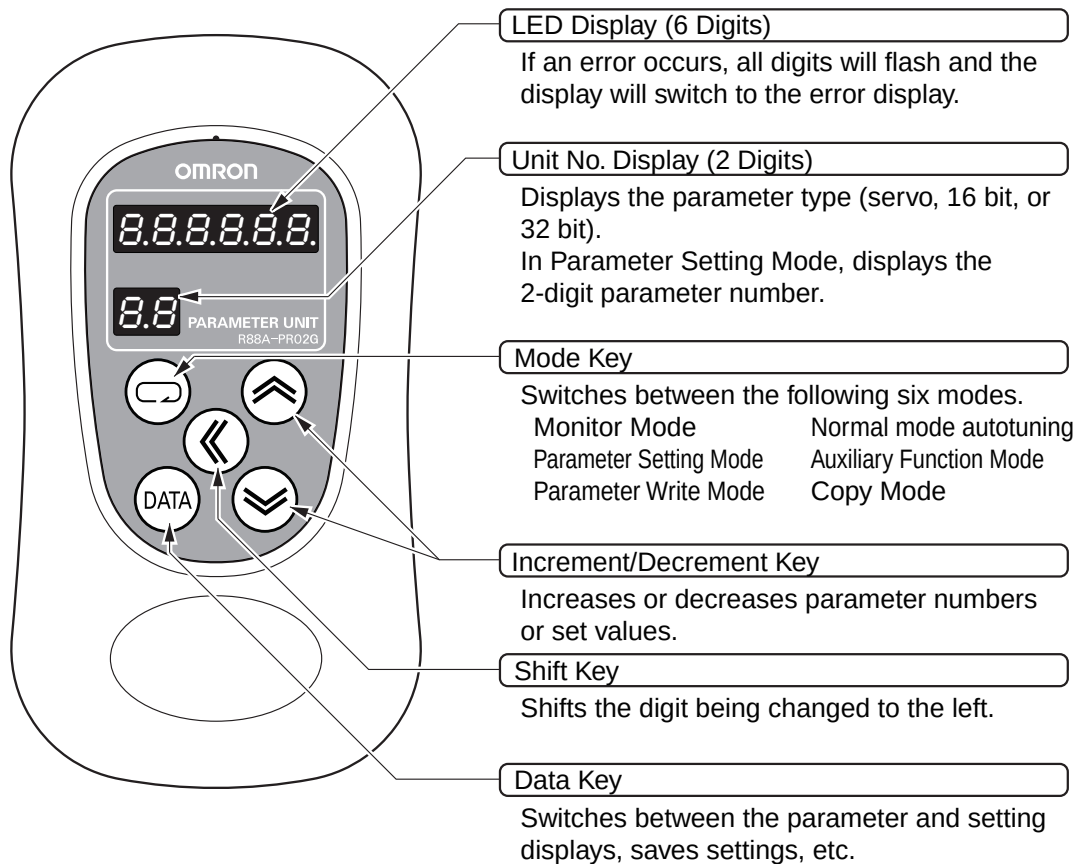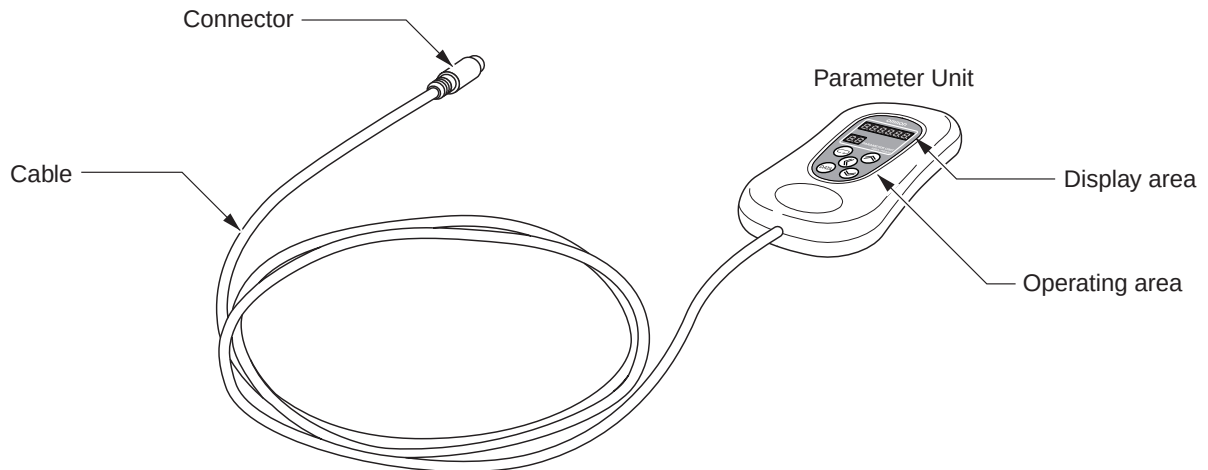


# 6-4 Setting the Mode

## Changing the Mode

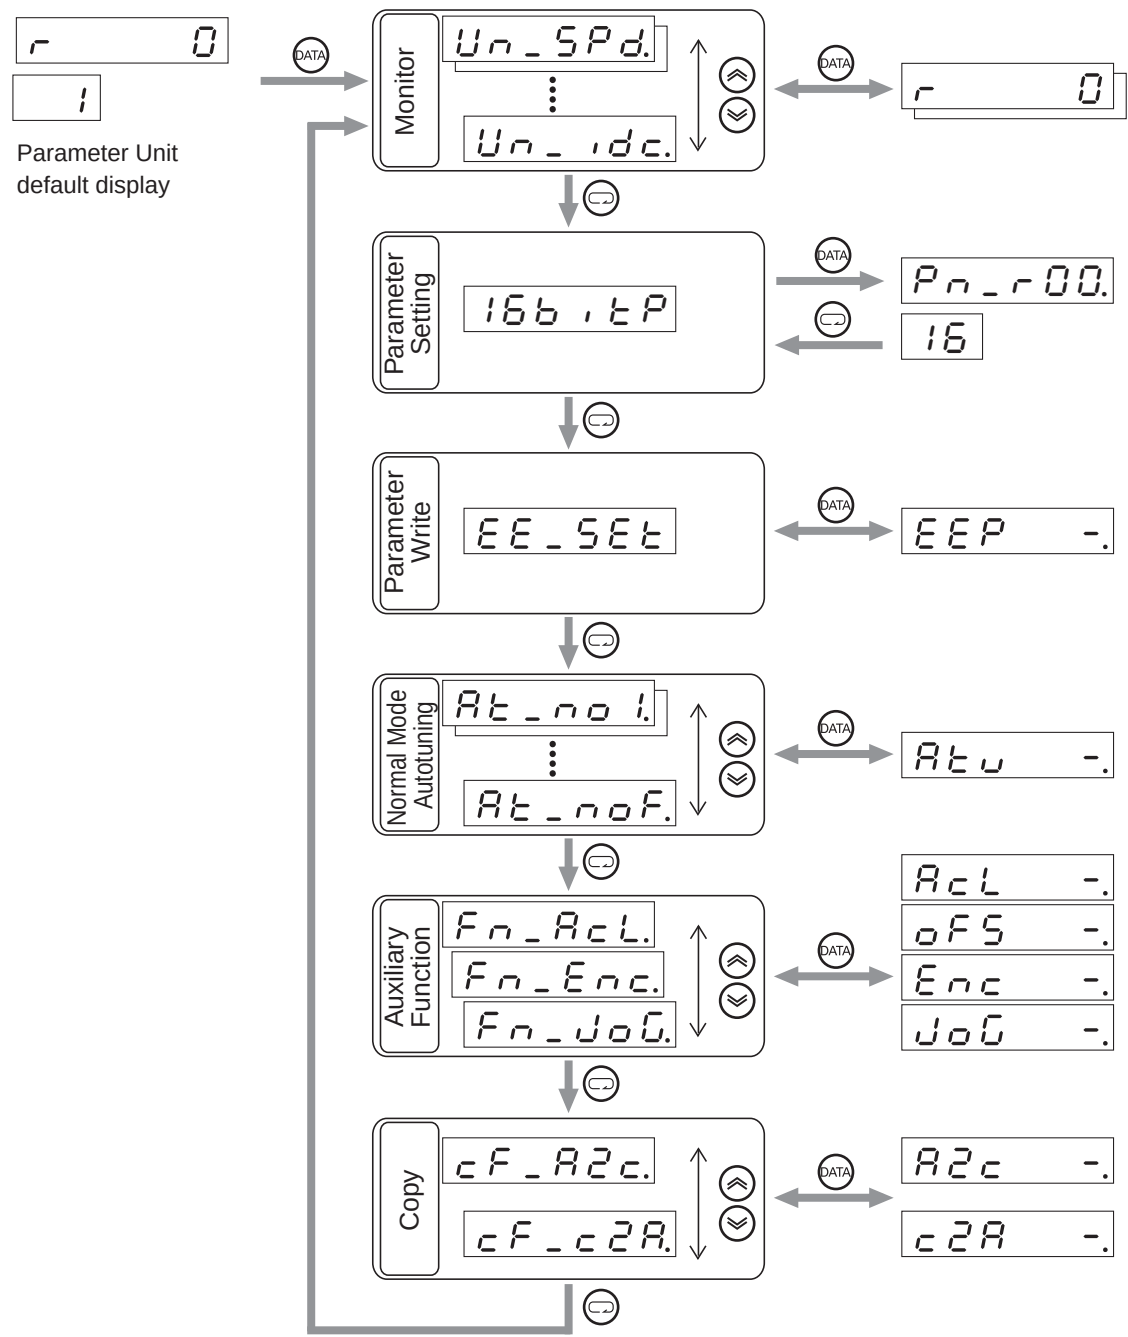



## Monitor Mode

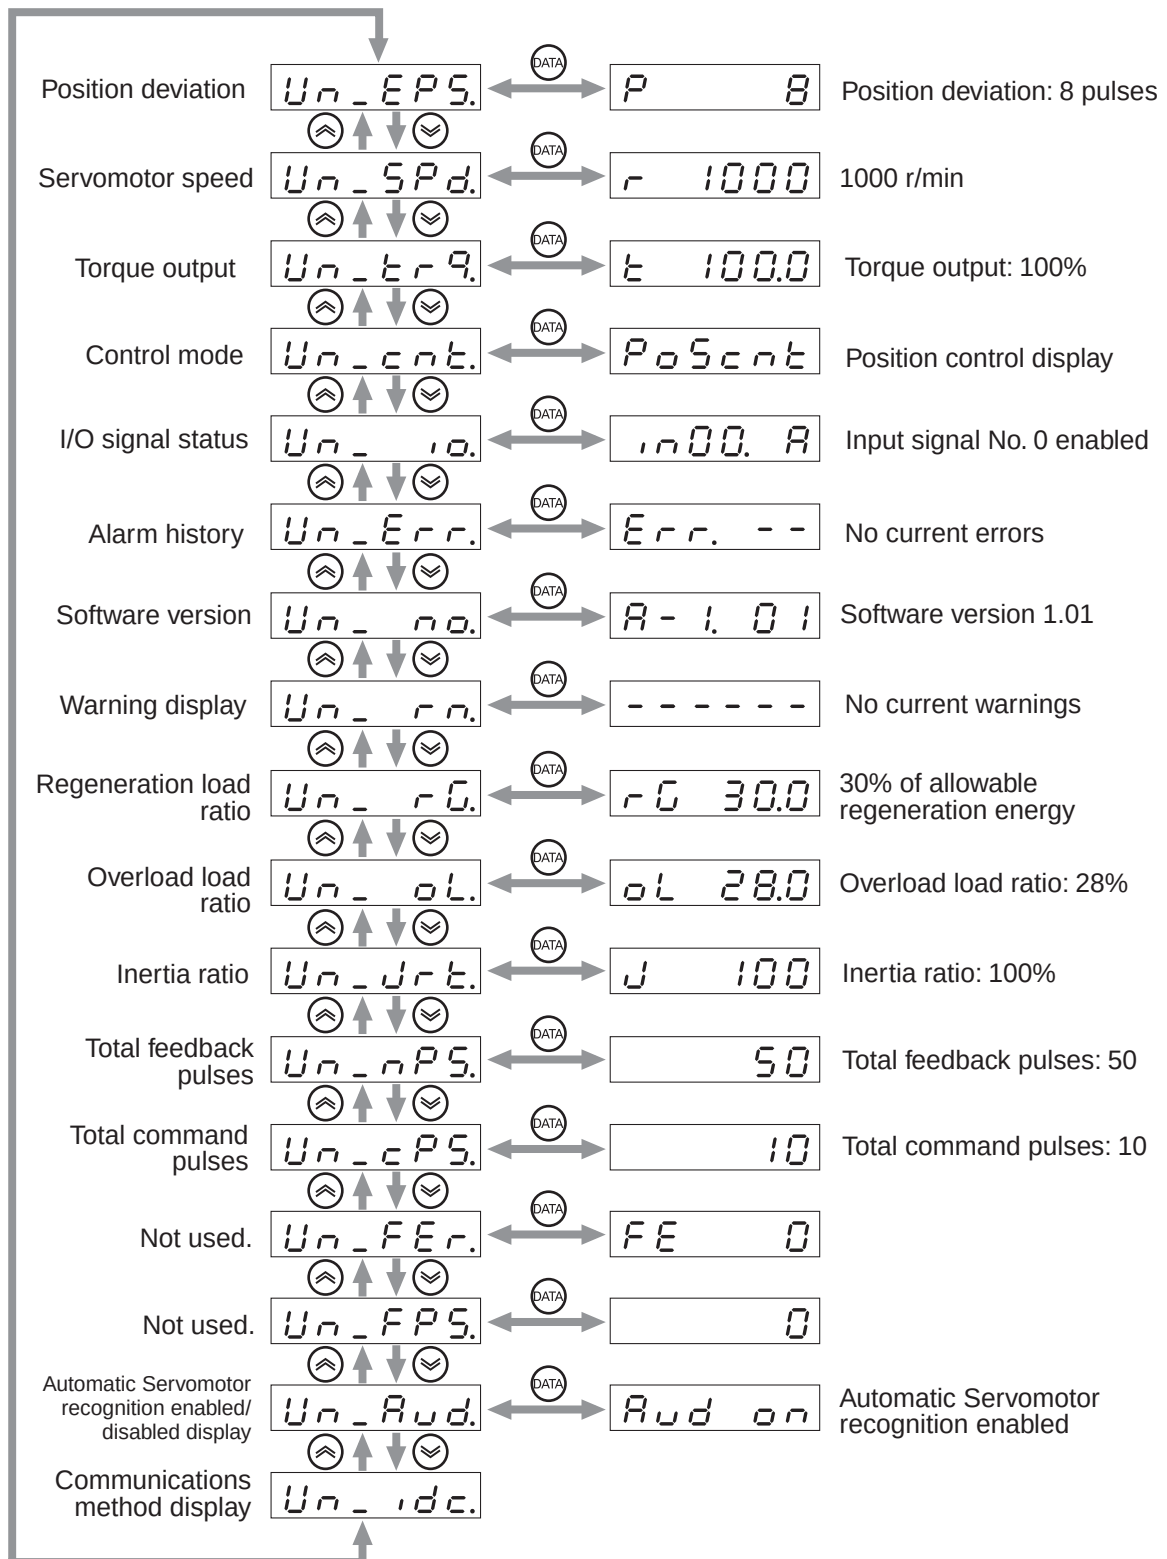

- ♦ The Servomotor speed will be displayed the first time the power is turned ON after purchase. To change the initial display when the power is turned ON, change the setting for the Default Display (Pn001). For details, refer to *Default Display* on page 5-62.

### ■ Position Deviation

P 8

- ♦ Displays the number of accumulated pulses in the deviation counter (unit: pulse).
- ♦ Accumulated pulses in reverse rotation are displayed with “-”.

### ■ Servomotor Speed

r 1000

- ♦ Displays the Servomotor speed (unit: r/min).
- ♦ Speeds in reverse rotation are displayed with “-”.

### ■ Torque Output

t 100.0

- ♦ Displays the percentage of Servomotor torque output.
- ♦ When the rated torque output for the Servomotor is used, “100%” is displayed.
- ♦ Torque outputs in reverse rotation are displayed with “-”.

### ■ Control Mode


Poscnt Position Control Mode

SPdcnt Speed Control Mode

tr9cnt Torque Control Mode

- ♦ Displays which of position control, speed control, and torque control is being used.

## ■ I/O Signal Status

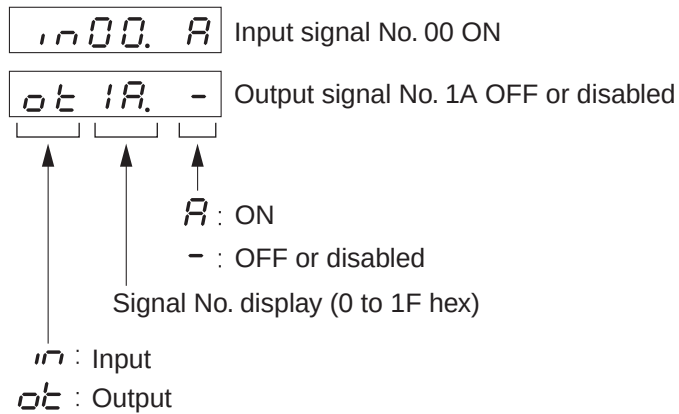

- Displays the status of the control input and output signals connected to CN1.


## Input Signals

| CN1        |              |                                  |         |
|------------|--------------|----------------------------------|---------|
| Signal No. | Abbreviation | Name                             | Pin No. |
| 00         | POT          | Forward Drive Prohibit Input     | 19      |
| 01         | NOT          | Reverse Drive Prohibit Input     | 20      |
| 02         | DEC          | Origin Proximity Input           | 21      |
| 06         | EXT1         | External Latch Signal 1          | 5       |
| 07         | EXT2         | External Latch Signal 2          | 4       |
| 08         | EXT3         | External Latch Signal 3          | 3       |
| 0A         | STOP         | Emergency Stop input             | 2       |
| 0B         | IN2          | External General-purpose Input 2 | 23      |
| 0C         | PCL          | Forward Torque Limit Input       | 7       |
| 0D         | NCL          | Reverse Torque Limit Input       | 8       |
| 0E         | IN0          | External General-purpose Input 0 | 22      |
| 0F         | IN1          | External General-purpose Input 1 | 6       |

Output Signals


| CN1        |              |                                     |         |
|------------|--------------|-------------------------------------|---------|
| Signal No. | Abbreviation | Name                                | Pin No. |
| 00         | READY        | Servo Ready                         | ---     |
| 01         | /ALM         | Alarm Output                        | 15      |
| 02         | INP1         | Positioning Completed 1 Output      | ---     |
| 03         | BKIR         | Brake Interlock                     | ---     |
| 04         | ZSPD         | Zero Speed Detection                | ---     |
| 05         | TLIM         | Torque Limiting                     | ---     |
| 06         | VCMP         | Speed Conformity                    | ---     |
| 09         | TGON         | Servomotor Rotation Speed Detection | ---     |
| 0F         | INP2         | Positioning Completed 2 Output      | ---     |

Switching between Input and Output Signals

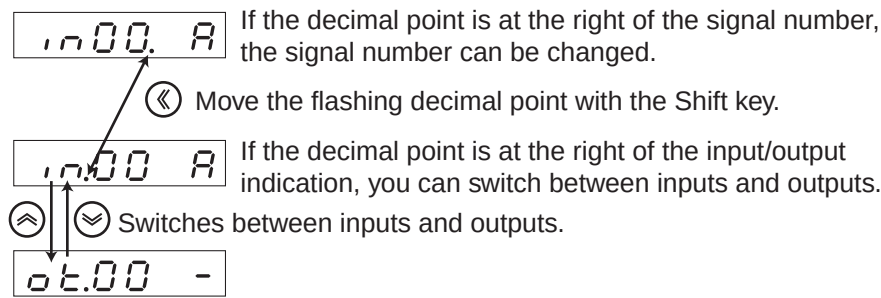


The following procedure can also be used to switch between inputs and outputs.

Press the Increment or Decrement key to select the signal number to be monitored.

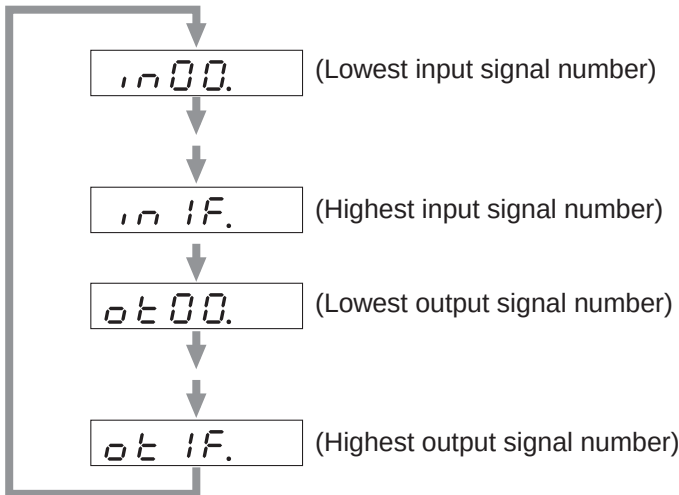

## ■ Alarm History

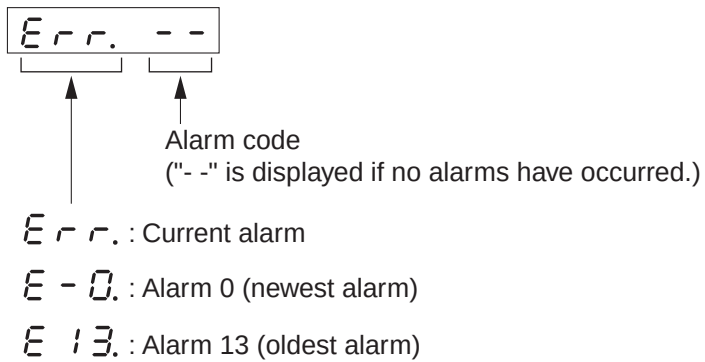

- ♦ Up to the most recent 14 alarms, including the current one, can be viewed in the alarm history.
- ♦ The display will flash when an alarm occurs.
- ♦ If an alarm that is recorded in the history occurs, the alarm code for the current alarm and for alarm 0 will be the same.

## Alarm Codes and Meanings

| Alarm Codes | Meaning                             | Alarm Codes | Meaning                                              |
|-------------|-------------------------------------|-------------|------------------------------------------------------|
| 11          | Control power supply undervoltage   | 40          | Absolute encoder system down error <b>ABS</b>        |
| 12          | Overvoltage                         | 41          | Absolute encoder counter overflow error <b>ABS</b>   |
| 13          | Main power supply undervoltage      | 42          | Absolute encoder overspeed error <b>ABS</b>          |
| 14          | Overcurrent                         | 44          | Absolute encoder one-turn counter error <b>ABS</b>   |
| 15          | Servo Drive overheat                | 45          | Absolute encoder multi-turn counter error <b>ABS</b> |
| 16          | Overload                            | 47          | Absolute encoder status error <b>ABS</b>             |
| 18          | Regeneration overload               | 48          | Encoder phase Z error                                |
| 21          | Encoder communications error        | 49          | Encoder PS signal error                              |
| 23          | Encoder communications data error   | 82          | Node address setting error                           |
| 24          | Deviation counter overflow          | 83          | Communications error                                 |
| 26          | Overspeed                           | 84          | Transmission cycle error                             |
| 27          | Command error                       | 86          | Watchdog data error                                  |
| 29          | Internal deviation counter overflow | 87          | Emergency stop input error                           |
| 34          | Overrun limit error                 | 90          | Transmission cycle setting error                     |
| 36          | Parameter error                     | 91          | SYNC command error                                   |
| 37          | Parameter corruption                | 93          | Parameter setting error                              |
| 38          | Drive prohibit input error          | 95          | Servomotor non-conformity                            |
|             |                                     | Others      | Other errors                                         |

**Note** The following alarms are not recorded in the history.


11: Control power supply undervoltage  
 13: Main power supply undervoltage  
 36: Parameter error  
 37: Parameter corruption  
 38: Drive prohibit input error  
 87: Emergency stop input error  
 95: Servomotor non-conformity

## ■ Software Version

A - 1. 0 1

♦ Displays the software version of the Servo Drive.

Warning Display

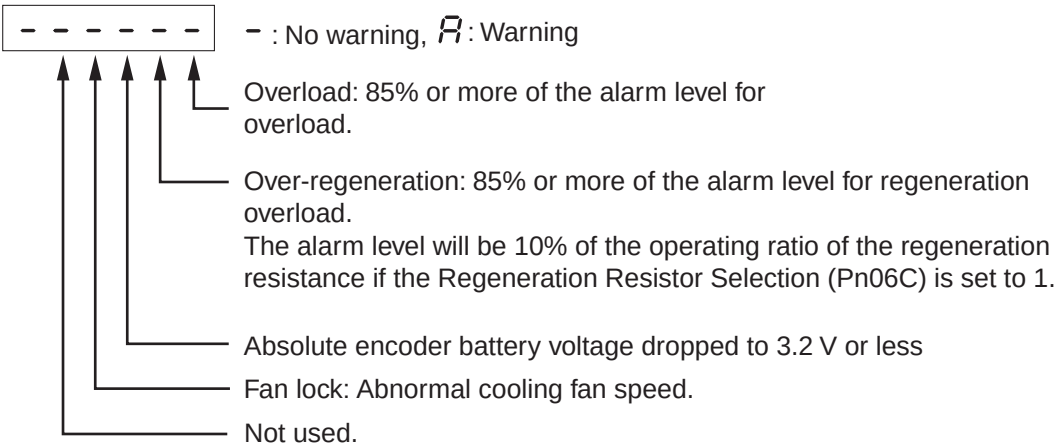

Regeneration Load Ratio

- Displays the regeneration resistance load ratio as a percentage of the detection level for the regeneration load.

Overload Load Ratio

- Displays the load ratio as a percentage of the rated load.

Inertia Ratio

Displays the inertia ratio as a percentage.

Total Feedback Pulses and Total Command Pulses

- Displays the total number of pulses after the power supply is turned ON.
- The display will overflow as shown in the following figure.

2,147,483,647 pulses

0

-2,147,483,647 pulses

Reverse ← Power ON → Forward

- Use the key to switch the display between the upper and lower digits of the total number of pulses.

Upper digits

Lower digits

Hold down the key for 5 s or longer to reset the total pulses to 0.

 
 
Automatic Servomotor Recognition

Automatic recognition enabled (Always this indication is displayed.)


Parameter Setting Mode

■ 16-bit Positioning Parameters


1. Displaying Parameter Setting Mode

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                        |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   |  | The item set for the Default Display (Pn001) is displayed.                                                                         |
|  |  | Press the  key to display Monitor Mode.           |
|  |  | Press the  key to display Parameter Setting Mode. |

 
2. Selecting the Parameter Type

| Key operation | Display example                                                                     | Explanation                                |
|---------------|-------------------------------------------------------------------------------------|--------------------------------------------|
|               |  | Confirm that 16-bit Parameter is selected. |

 3. Switching to the Parameter Setting Display


| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |

 4. Setting the Parameter Number



| Key operation                                                                                                                                                                                                                                                     | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><br> |  | Use the  ,  , and  keys to set the parameter number.<br>If the parameter number is large, the setting can be made more quickly by using the  key to change the digit that is being set. The decimal point will flash for the digit that can be set. |



 
5. Displaying the Parameter Setting

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                                         |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to display the setting.<br>The selected parameter number appears in the sub window. |

  6. Changing the Parameter Setting

| Key operation                                                                                                                                                                                                                                               | Display example                                                                   | Explanation                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><br> |  | Use the  ,  , and  keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|                                                                                                                                                                            |  | Press the  key to save the new setting.                                                                                                                                                                                                                                         |

 7. Returning to Parameter Setting Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Parameter Setting Mode. |

Precautions  
for Correct Use

- ♦ Some parameters will be displayed with an "r" before the number when the display returns to Parameter Setting Mode. To enable the settings that have been changed for these parameters, you must turn the power supply OFF and ON after saving the parameters to the EEPROM.
- ♦ When the setting for a parameter is saved, the new setting will be used for control. Make gradual rather than large changes when changing values for parameters that affect the motor operation significantly. This is particularly true for the speed loop gain and position loop gain.
- ♦ For details on parameters, refer to *Parameter Tables* on page 5-61.

■ 32-bit Positioning Parameters

1. Displaying Parameter Setting Mode

| Key operation | Display example | Explanation                                                |
|---------------|-----------------|------------------------------------------------------------|
|               |                 | The item set for the Default Display (Pn001) is displayed. |
|               |                 | Press the  key to display Monitor Mode.                    |
|               |                 | Press the  key to display Parameter Setting Mode.          |

2. Selecting the Parameter Type

| Key operation | Display example | Explanation                                       |
|---------------|-----------------|---------------------------------------------------|
|               |                 | Press the  and  keys to select 32-bit parameters. |



3. Switching to the Parameter Setting Display

| Key operation | Display example | Explanation                                                                                                                 |
|---------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------|
|               | <br>            | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |



4. Setting the Parameter Number

| Key operation | Display example | Explanation                                                                                                                                                                                                                                       |
|---------------|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|               | <br>            | Use the , , and  keys to set the parameter number.<br>If the parameter number is large, the setting can be made more quickly by using the  key to change the digit that is being set. The decimal point will flash for the digit that can be set. |

  
5. Displaying the Parameter Setting

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to display the setting.<br>The selected parameter number appears in the sub window.                                                                            |
|  |  | 32-bit parameters have many digits and thus displayed on two displays.<br>Press the  key to change the display.<br>Negative values of the parameter are indicated with a dot. |

6. Changing the Parameter Setting
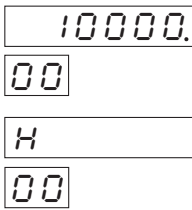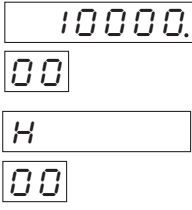
| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   |   | Use the  ,  , and  keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|  |  | Press the  key to save the new setting.                                                                                                                                                                                                                                       |

 7. Returning to Parameter Setting Mode


| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Parameter Setting Mode. |

Precautions  
for Correct Use


- ♦ Some parameters will be displayed with an “r” before the number when the display returns to Parameter Setting Mode. To enable the settings that have been changed for these parameters, you must turn the power supply OFF and ON after saving the parameters to the EEPROM.
- ♦ When the setting for a parameter is saved, the new setting will be used for control. Make gradual rather than large changes when changing values for parameters that affect the motor operation significantly. This is particularly true for the speed loop gain and position loop gain.
- ♦ For details on parameters, refer to *Parameter Tables* on page 5-61.

■ Servo Parameters

 1. Displaying Parameter Setting Mode

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                        |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   |  | The item set for the Default Display (Pn001) is displayed.                                                                         |
|  |  | Press the  key to display Monitor Mode.           |
|  |  | Press the  key to display Parameter Setting Mode. |

 2. Selecting the Parameter Type

| Key operation                                                                                                                                                       | Display example                                                                   | Explanation                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   |  | Press the  and  keys to select the servo parameter. |


3. Switching to the Parameter Setting Display

| Key operation                                                                       | Display example                                                                                                                                                            | Explanation                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <br> | Press the  key to go to the Parameter Setting Display.<br>Press the  key to return to the Parameter Type Selection Display. |


4. Setting the Parameter Number

| Key operation                                                                                                                                                                                                                                                                                                                                      | Display example                                                                                                                                                            | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <br>  | <br> | Use the  ,  , and  keys to set the parameter number.<br>If the parameter number is large, the setting can be made more quickly by using the  key to change the digit that is being set. The decimal point will flash for the digit that can be set. |

 
5. Displaying the Parameter Setting

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                                         |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to display the setting.<br>The selected parameter number appears in the sub window. |

 6. Changing the Parameter Setting

| Key operation                                                                                                                                                                                                                                               | Display example                                                                   | Explanation                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><br> |  | Use the  ,  , and  keys to change the setting.<br>The decimal point will flash for the digit that can be set. |
|                                                                                                                                                                            |  | Press the  key to save the new setting.                                                                                                                                                                                                                                         |

 7. Returning to Parameter Setting Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Parameter Setting Mode. |

 
 
 
 
 
 
Precautions  
for Correct Use

- ♦ Some parameters will be displayed with an “r” before the number when the display returns to Parameter Setting Mode. To enable the settings that have been changed for these parameters, you must turn the power supply OFF and ON after saving the parameters to the EEPROM.
- ♦ When the setting for a parameter is saved, the new setting will be used for control. Make gradual rather than large changes when changing values for parameters that affect the motor operation significantly. This is particularly true for the speed loop gain and position loop gain.
- ♦ For details on parameters, refer to *Parameter Tables* on page 5-61.


Parameter Write Mode

Settings changed in the Parameter Setting Mode must be saved to the EEPROM. To do so, the following procedure must be performed.

1. Saving Changed Settings

| Key operation                                                                     | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |    | Press the  key to display Parameter Write Mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|  |    | Press the  key to switch to Parameter Write Mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|  |    | Press the  key for 5 s or longer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                                                                   |    | The bar indicator will increase.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                                                   |    | Writing will start. (This display will appear only momentarily.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                                                   |  | This display indicates a normal completion. In addition to the  , either  or  may be displayed. If  is displayed, writing has been completed normally, but some of the changed parameters will be enabled only after the power has been turned OFF and ON again. Turn OFF the Servo Drive power supply and then turn it ON again.  is displayed if there is a writing error. Write the data again. |

 2. Returning to Parameter Write Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                      |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to the Parameter Write Mode Display. |

Precautions  
for Correct Use

- ♦ If a write error occurs, write the data again. If write errors continue to occur, there may be a fault in the Servo Drive.
- ♦ Do not turn OFF the power supply while writing to EEPROM. Incorrect data may be written if the power supply is turned OFF. If the power supply is turned OFF, perform the settings again for all parameters, and write the data again.
- ♦ Do not disconnect the Parameter Unit from the Servo Drive during the time from writing start (  ) to writing completion (  or  ). If the Parameter Unit is disconnected, repeat the procedure from the beginning.

## Normal Mode Autotuning

For details on normal mode autotuning, refer to 7-3 *Normal Mode Autotuning* on page 7-9. This section describes the operating procedure only.

### 1. Displaying Normal Mode Autotuning

| Key operation | Display example | Explanation                                                   |
|---------------|-----------------|---------------------------------------------------------------|
|               |                 | The item set for the Default Display (Pn001) is displayed.    |
|               |                 | Press the  key to display Monitor Mode.                       |
|               |                 | Press the  key three times to display Normal Mode Autotuning. |

### 2. Executing Normal Mode Autotuning

| Key operation | Display example | Explanation                                                                                                                |
|---------------|-----------------|----------------------------------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to switch to Normal Mode Autotuning.                                                                        |
|               |                 | Press and hold the  key until  is displayed.<br>The bar indicator will increase when the key is pressed for 5 s or longer. |
|               |                 | The bar indicator will increase.                                                                                           |
|               |                 | The Servomotor will start, and normal mode autotuning will begin.                                                          |
|               |                 | This display indicates a normal completion.<br>will be displayed if a tuning error has occurred.                           |

### 3. Returning to Normal Mode Autotuning

| Key operation | Display example | Explanation                                         |
|---------------|-----------------|-----------------------------------------------------|
|               |                 | Press the  key to return to Normal Mode Autotuning. |

 
 
#### Precautions for Correct Use

- For details on normal mode autotuning, refer to 7-3 *Normal Mode Autotuning* on page 7-9. This section describes the operating procedure only.
- Always save each gain value changed with normal mode autotuning in the EEPROM so that the data is not lost when the power is turned OFF or for some other reason.
- If a normal mode autotuning error occurs, the values for each gain will return to the value before executing normal mode autotuning.

## Auxiliary Function Mode





Auxiliary Function Mode includes alarm reset, absolute encoder reset, and jog operation.

### Displaying Auxiliary Function Mode


| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                    |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   |  | The item set for the Default Display (Pn001) is displayed.                                                                                     |
|  |  | Press the  key to display Monitor Mode.                       |
|  |  | Press the  key four times to display Auxiliary Function Mode. |

### ■ Alarm Reset
    
#### 1. Executing Alarm Reset

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to switch to Alarm Reset Mode.                                                                                                                                                                 |
|  |  | Press and hold the  key until  is displayed.<br>The bar indicator will increase when the key is pressed for 5 s or longer. |
|                                                                                     |  | The bar indicator will increase.                                                                                                                                                                                                                                                                 |
|                                                                                     |  | Alarm reset will start.                                                                                                                                                                                                                                                                          |
|                                                                                     |  | This display indicates a normal completion.<br> will be displayed if the alarm could not be reset. Reset the power supply to clear the error.                                                                 |


#### 2. Returning to Auxiliary Function Mode
 
| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                             |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Auxiliary Function Mode. |




■ Absolute Encoder Reset **ABS**

 1. Executing Absolute Encoder Reset

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to switch to Absolute Encoder Reset Mode.                                                                                                                                                         |
|  |  | Press and hold the  key until  is displayed.<br>The bar indicator will increase when the key is pressed for 5 s or longer.      |
|                                                                                   |  | The bar indicator will increase.                                                                                                                                                                                                                                                                  |
|                                                                                   |  | Absolute encoder reset will start.                                                                                                                                                                                                                                                                |
|                                                                                   |  | This display indicates a normal completion.<br> will be displayed if the absolute encoder reset could not be performed. Check whether an unsupported encoder is connected, and then perform the procedure again. |

 2. Returning to Auxiliary Function Mode








| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                             |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Auxiliary Function Mode. |

**Precautions  
for Correct Use**


- ♦ The absolute encoder can be reset only for systems that use an absolute encoder.
- ♦ Do not disconnect the Parameter Unit from the Servo Drive until resetting the absolute encoder has completed. If the Parameter Unit is disconnected, reconnect it and make the settings from the beginning.

■ Jog Operation

       1. Executing Jog Operation

| Key operation                                                                                                                                                           | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                        |    | Press the  key to display Jog Operation Mode from the alarm reset display in Auxiliary Function Mode.                                                                                                                                                                                                                                             |
|                                                                                        |    | Press the  key to switch to Jog Operation Mode.                                                                                                                                                                                                                                                                                                   |
|                                                                                        |    | Press and hold the  key until "Ready" is displayed.<br>The bar indicator will increase when the key is pressed for 5 s or longer.                                                                                                                                                                                                                 |
|                                                                                                                                                                         |    | The bar indicator will increase.                                                                                                                                                                                                                                                                                                                                                                                                   |
|                                                                                                                                                                         |    | This completes preparations for jog operation.                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                                        |    | Press and hold the  key until "Sev_on" is displayed.<br>The decimal point will move to the left when the key is pressed for 3 s or longer.                                                                                                                                                                                                        |
|                                                                                                                                                                         |   |                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                                                                                                                                                                         |  | The Servo will turn ON.                                                                                                                                                                                                                                                                                                                                                                                                            |
|   |  | Forward operation will be performed while the  key is pressed,<br>and reverse operation will be performed while the  key is pressed.<br>The Servomotor will stop when the key is released. The speed set for the Jog Speed (Pn03D) will be used for jogging. |

 2. Returning to Auxiliary Function Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                 |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Auxiliary Function Mode.<br>The Servo lock will be released. |

## Copy Mode

In Copy Mode, user parameters set in the Servo Drive can be copied to the Parameter Unit, and user parameters stored in the Parameter Unit can be copied to the Servo Drive. This function can be used to easily set the same user parameters for more than one Servo Drive. All parameters (Servo, 16-bit, and 32-bit) will be copied collectively.

### ■ Copying from the Servo Drive to the Parameter Unit

 
#### 1. Displaying Copy Mode

| Key operation | Display example | Explanation                                                |
|---------------|-----------------|------------------------------------------------------------|
|               |                 | The item set for the Default Display (Pn001) is displayed. |
|               |                 | Press the  key to display Monitor Mode.                    |
|               |                 | Press the  key five times to display Copy Mode.            |

#### 2. Executing Copying

| Key operation | Display example | Explanation                                                                                                                     |
|---------------|-----------------|---------------------------------------------------------------------------------------------------------------------------------|
|               |                 | Press the  key to switch to Copy Mode.                                                                                          |
|               |                 | Press and hold the  key until "EEPCLR" is displayed. The bar indicator will increase when the key is pressed for 3 s or longer. |
|               |                 | The indicator bar will increase.                                                                                                |
|               |                 | Initialization of the EEPROM in the Parameter Unit will start.                                                                  |
|               |                 | The positioning parameters are copied.                                                                                          |
|               |                 | The Servo parameters and the model code are copied.                                                                             |
|               |                 | This display indicates a normal completion.                                                                                     |

3. Returning to Copy Mode




| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Copy Mode. |

Precautions  
for Correct Use



- ♦ If  is displayed before completion, repeat the procedure from the beginning. Press the  key to clear the error.
- ♦ Do not disconnect the Parameter Unit from the Servo Drive while copying is being performed. If the Parameter Unit is disconnected, connect it and then repeat the procedure from the beginning.
- ♦ If errors are repeatedly displayed, the following may be the cause: cable disconnection, connector contact failure, incorrect operation due to noise, or EEPROM fault in the Parameter Unit.

■ Copying from the Parameter Unit to the Servo Drive

 
 
 
1. Displaying Copy Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                     |  | The item set for the Default Display (Pn001) is displayed.                                                                                                                              |
|  |  | Press the  key to display Monitor Mode.                                                              |
|  |  | Press the  key five times to display Copy Mode.                                                      |
|  |  | Press the  key to switch to the copy display for copying from the Parameter Unit to the Servo Drive. |



 
 
2. Checking the Servo Drive Model Code

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to switch to Copy Mode.                                                                                                                                                                                              |
|  |  | Press and hold the  key until "EEP_CH" is displayed.<br>If the model codes do not match, "DIFFER" will be displayed.<br>The bar indicator will increase when the key is pressed for 3 s or longer.                                  |
|                                                                                     |  | The bar indicator will increase.<br>The Servo Drive model code is being checked. If a different model code has been entered, refer to 3. <i>Different Model Codes</i> on the next page to perform the procedure.<br>If the model codes match, the display will proceed to the display in 4. <i>Executing Copying</i> . |

   3. Different Model Codes

| Key operation                                                                     | Display example                                                                   | Explanation                                                                                                                                                          |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | The decimal point will move to the left when the  key is pressed for 3 s or longer. |
|                                                                                   |  | The model codes are being matched.                                                                                                                                   |
|                                                                                   |  | Press the  key to cancel copying before completion.                                 |

    
4. Executing Copying

| Key operation | Display example                                                                                                                                                            | Explanation                                                          |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
|               | <br>     | Writing user parameters to the EEPROM of the Servo Drive will start. |
|               | <br>   | The positioning parameters are copied.                               |
|               | <br> | The Servo parameters are copied.                                     |
|               |                                                                                         | This display indicates a normal completion.                          |

5. Returning to Copy Mode

| Key operation                                                                       | Display example                                                                     | Explanation                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
|  |  | Press the  key to return to Copy Mode. |

 Precautions  
for Correct Use

- ♦ If  is displayed before completion, repeat the procedure from the beginning.
- ♦ Press the  key to clear the error.
- ♦ If errors are repeatedly displayed, the following may be the cause: cable disconnection, connector contact failure, incorrect operation due to noise, or EEPROM fault in the Parameter Unit.
- ♦ Do not disconnect the Parameter Unit from the Servo Drive while copying is being performed. If the Parameter Unit is disconnected, incorrect data may be written and the data may be corrupted. Copy the user parameters again from the source Servo Drive to the Parameter Unit, and then copy the user parameters from the Parameter Unit to the other Servo Drive.

## 6-5 Trial Operation

When you have finished installation, wiring, and switch settings and have confirmed that status is normal after turning ON the power supply, perform trial operation. The main purpose of trial operation is to confirm that the servo system is electrically correct.

If an error occurs during the trial operation, refer to *Chapter 8 Troubleshooting* to eliminate the cause. Then check for safety, and then retry the trial operation.

### Preparation for Trial Operation

#### ■ Checks before Trial Operation

Check the following items before starting trial operation.

##### Wiring

- ♦ Make sure that all wiring is correct, especially the power supply input and motor output.
- ♦ Make sure that there are no short-circuits. Check the ground for short-circuits as well.
- ♦ Make sure that there are no loose connections.

##### Power Supply Voltage

- ♦ Make sure that the voltage corresponds to the rated voltage.

##### Motor Installation

- ♦ Make sure that the Servomotor has been securely installed.

##### Disconnection from Mechanical System

- ♦ If necessary, make sure that the Servomotor has been disconnected from the mechanical system.

##### Brake

- ♦ Make sure that the brake has been released.

### Trial Operation with CX-Drive

1. Connect connector CN1.
2. Input power (12 to 24 VDC) for the control signals (+24VIN, COM).
3. Turn ON the power supply to the Servo Drive.
4. Confirm that the parameters are set to the standard settings.
5. Connect the Computer Communications Cable to CN3, and write parameters from CX-Drive.
6. Write the parameters to EEPROM and then turn OFF the power supply and turn it ON again.
7. Turn the status to Servo ON with jog operation via CX-Drive, and Servo lock the motor.
8. Perform low speed jog operation via CX-Drive.
9. Check the Servomotor rotation speed.

# Chapter 7

## Adjustment Functions

|     |                                          |      |
|-----|------------------------------------------|------|
| 7-1 | Gain Adjustment.....                     | 7-1  |
|     | Purpose of the Gain Adjustment .....     | 7-1  |
|     | Gain Adjustment Methods.....             | 7-1  |
|     | Gain Adjustment Procedure .....          | 7-2  |
| 7-2 | Realtime Autotuning .....                | 7-3  |
|     | Realtime Autotuning Setting Method ..... | 7-4  |
|     | Machine Rigidity Setting Method .....    | 7-4  |
| 7-3 | Normal Mode Autotuning .....             | 7-9  |
|     | Setting the Parameters .....             | 7-9  |
| 7-4 | Manual Tuning .....                      | 7-14 |
|     | Basic Settings .....                     | 7-14 |


# 7-1 Gain Adjustment

OMNUC G-Series Servo Drives provide realtime autotuning and normal mode autotuning functions. With these functions, gain adjustments can be made easily even by those who use a servo system for the first time. Use manual tuning if autotuning does not provide the desired response.

## Purpose of the Gain Adjustment

The Servomotor must operate in response to commands from the host system with minimal time delay and maximum reliability. The gain is adjusted to bring the actual operation of the Servomotor as close as possible to the operations specified by the commands, and to maximize the performance of the machine.

Example: Ball screw

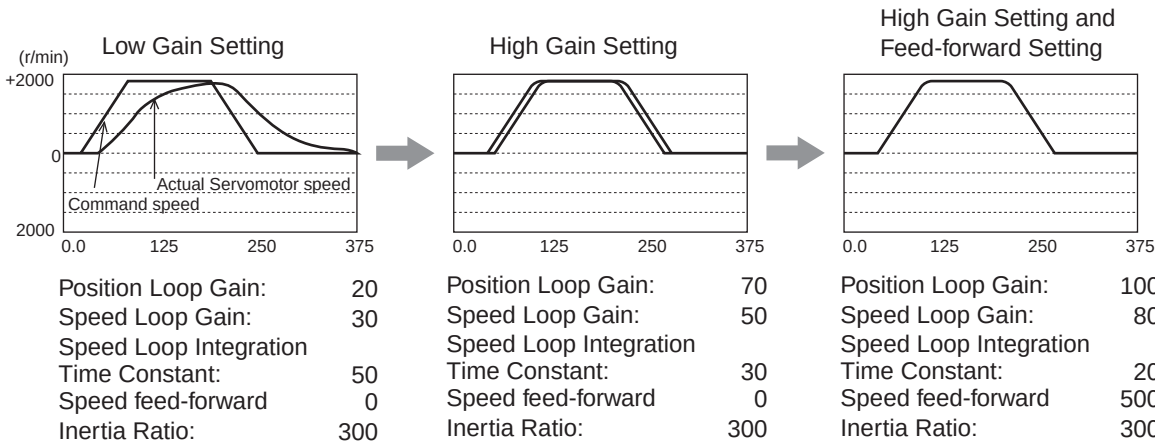


## Gain Adjustment Methods

| Function                |                        | Explanation                                                                                                                                                                                                                           | Refer-<br>ence<br>page |
|-------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Automatic<br>adjustment | Realtime autotuning    | Realtime autotuning estimates the load inertia of the mechanical system in realtime and automatically sets the optimal gain according to the estimated load inertia.                                                                  | 7-3                    |
|                         | Normal mode autotuning | Normal mode autotuning automatically sets the appropriate gain by operating the Servomotor with the command pattern generated automatically by the Servo Drive and estimating the load inertia from the torque required at that time. | 7-9                    |
| Manual<br>adjustment    | Manual tuning          |                                                                                                                                                                                                                                       | 7-14                   |
|                         | Basic procedure        | Position control mode adjustment                                                                                                                                                                                                      | 7-15                   |
|                         |                        | Speed control mode adjustment                                                                                                                                                                                                         | 7-16                   |
|                         |                        | Torque control mode adjustment                                                                                                                                                                                                        | 7-21                   |

- Note 1. Take sufficient care for safety.
- Note 2. If there is oscillation (e.g., abnormal sound or vibration), immediately turn OFF the power supply or let the servo OFF status occur.



## Gain Adjustment Procedure

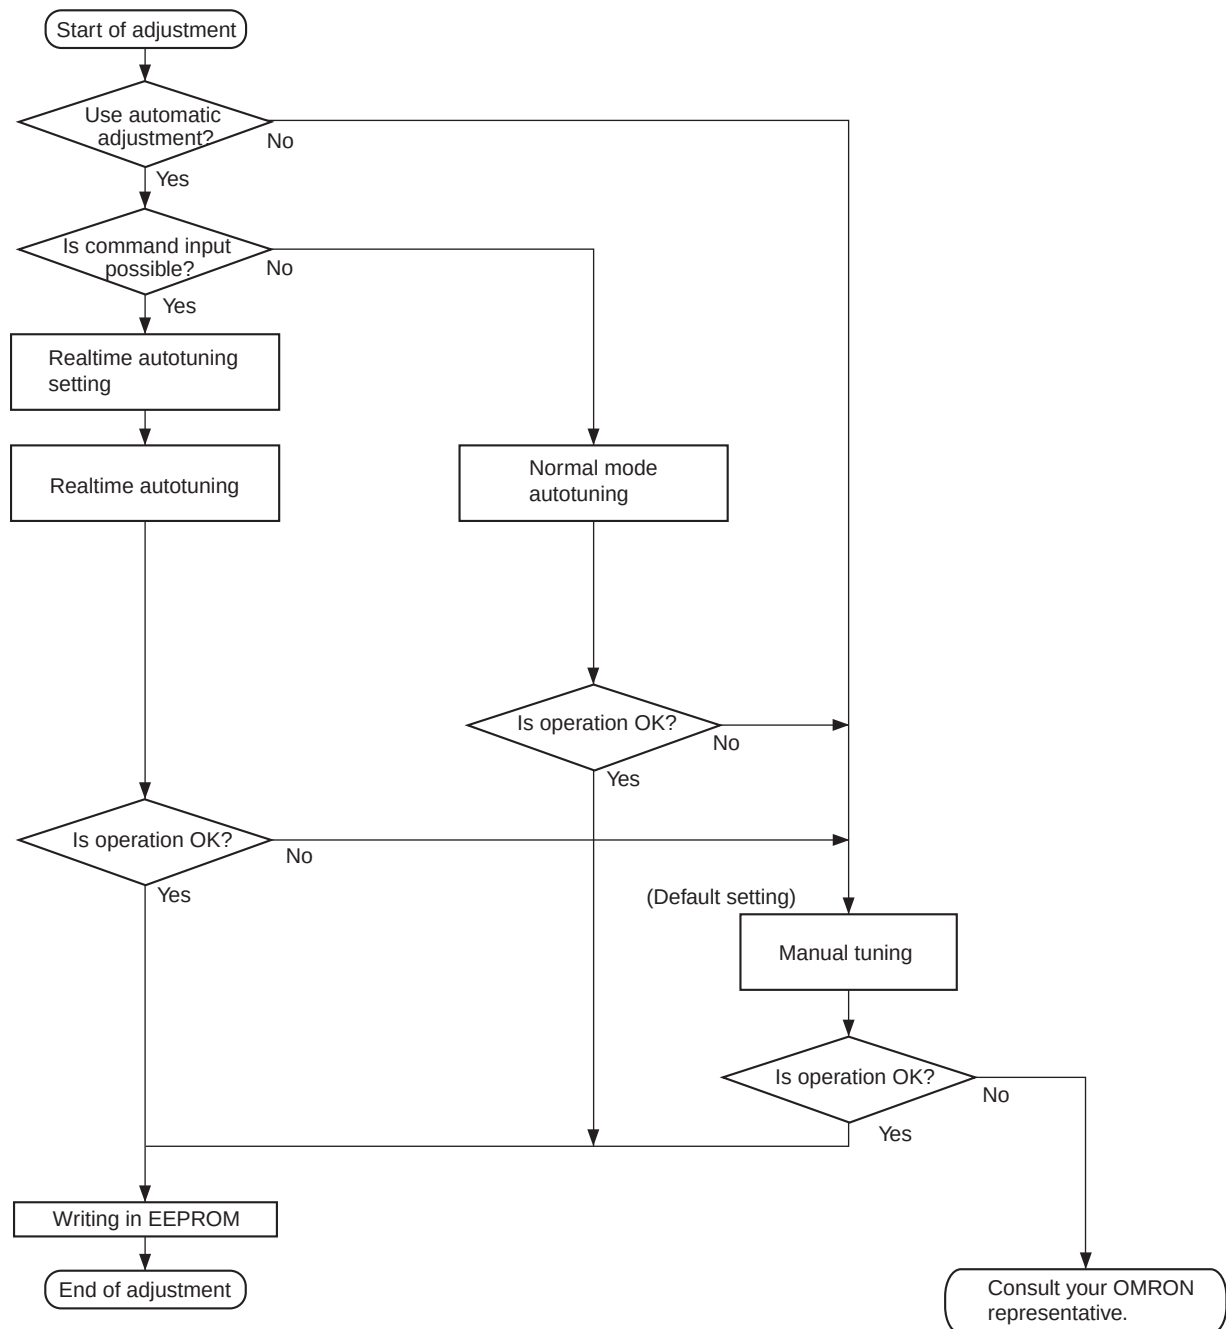

### ■ Gain Adjustment and Machine Rigidity


Do the following to increase the machine rigidity:

- ◆ Install the machine on a secure base so that it does not wobble.
- ◆ Use couplings that have a high rigidity, and that are designed for servo systems.
- ◆ Use a wide timing belt, and use a tension within the allowable axial load for the Servomotor or decelerator's output.
- ◆ Use gears with small backlash.

The specific vibration (resonance frequency) of the mechanical system has a large impact on gain adjustment. The responsiveness of the servo system cannot be set high for machines with a low resonance frequency (low machine rigidity).

# 7-2 Realtime Autotuning

Realtime autotuning estimates the load inertia of the mechanical system in realtime and operates the system by automatically setting the gain according to the estimated load inertia. By executing autotuning with the adaptive filter enabled, you can also reduce vibration and resonance. Realtime autotuning adjusts the PI control for the speed loop, and is thus effective for all controls.

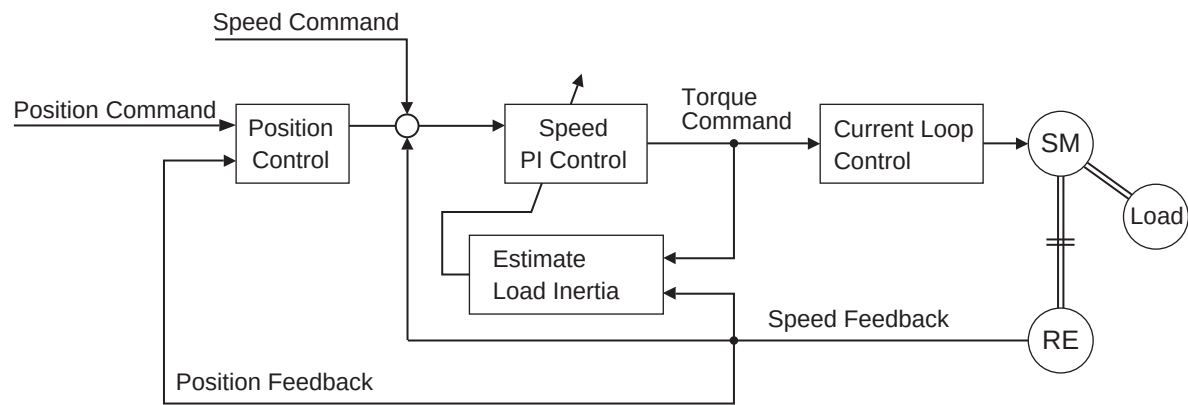

| Precautions for Correct Use                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ♦ Realtime autotuning may not function properly under the conditions described in the following table. If realtime autotuning does not function properly, use normal mode autotuning or manual tuning. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                                                                                                                                                                                                        | Conditions under which realtime autotuning does not function properly                                                                                                                                                                                                                                                                                                                                                                                                       |
| Load inertia                                                                                                                                                                                           | <ul style="list-style-type: none"><li>♦ If the load inertia is too small or too large compared with the rotor inertia (i.e., less than 3 times, more than 20 times, or more than the applicable load inertia ratio).</li><li>♦ If the load inertia changes quickly, i.e., in less than 10 seconds.</li></ul>                                                                                                                                                                |
| Load                                                                                                                                                                                                   | <ul style="list-style-type: none"><li>♦ If the machine rigidity is extremely low.</li><li>♦ If there is backlash or play in the system.</li></ul>                                                                                                                                                                                                                                                                                                                           |
| Operating pattern                                                                                                                                                                                      | <ul style="list-style-type: none"><li>♦ If the speed is continuously run at a low speed below 100 r/min.</li><li>♦ If the acceleration/deceleration gradually changes at less than 2,000 r/min in 1 s.</li><li>♦ If the acceleration/deceleration torque is too small compared with the unbalanced load and the viscous friction torque.</li><li>♦ If a speed of 100 r/min or an acceleration/deceleration of 2,000 r/min/s does not continue for at least 50 ms.</li></ul> |

♦ With realtime autotuning, the parameters are fixed to the values in the machine rigidity table when the machine rigidity is set. The operating coefficients for the speed loop gain and the integration time constant are changed by estimating the load inertia based on the operating pattern. Set the estimated values gradually because setting different values for the patterns may cause vibration.

## Realtime Autotuning Setting Method

### 1. Turn the servo OFF before setting realtime autotuning.

### 2. Set the Realtime Autotuning Mode Selection (Pn021) according to the load.

Setting the parameter to 3 or 6 will allow the system to respond faster to inertia changes during operation. However, it may also cause operation to become unstable depending on the operating pattern. Normally use a setting of 1 or 4.

Use a setting of 4 to 6 when the vertical axis is used.

Gain switching is enabled for a setting of 1 to 6.

If change in operation due to gain switching becomes an issue, use a setting of 7.

| Setting | Realtime autotuning         | Degree of change in load inertia |
|---------|-----------------------------|----------------------------------|
| 0       | Disabled (default)          | ---                              |
| 1       | Horizontal axis mode        | Almost no change                 |
| 2       |                             | Gradual changes                  |
| 3       |                             | Sudden changes                   |
| 4       | Vertical axis mode          | Almost no change                 |
| 5       |                             | Gradual changes                  |
| 6       |                             | Sudden changes                   |
| 7       | Gain switching disable mode | Almost no change                 |

## Machine Rigidity Setting Method

### 1. Set the Realtime Autotuning Machine Rigidity Selection (Pn022) as shown below.

Machine rigidity 0 cannot be selected for the Parameter Unit and CX-Drive.

Set the machine rigidity starting with a low value and check the operation.

| Mechanical Configuration / Drive System | Realtime Autotuning Machine Rigidity Selection (Pn022) |
|-----------------------------------------|--------------------------------------------------------|
| Ball screw direct coupling              | 6 to C                                                 |
| Ball screw and timing belt              | 4 to A                                                 |
| Timing belt                             | 2 to 8                                                 |
| Gears, rack and pinion drives           | 2 to 8                                                 |
| Machines with low rigidity, etc         | 1 to 4                                                 |
| Stacker crane                           | Tune manually.                                         |

### 2. Turn the servo ON, and operate the machine with the normal pattern.

To improve the response, increase the machine rigidity number, and then check the response again. If vibration occurs, enable the adaptive filter. If the filter is already enabled, lower the machine rigidity number and make adjustments.

### 3. If there is no problem with the operation, turn the servo OFF, and disable the Realtime Autotuning Mode Selection (Pn021) by setting it to 0.

The adaptive filter can be left enabled. To disable the adaptive filter, read the frequency on the Adaptive Filter Table Number display, and set the Notch Filter 1 Frequency to the same value.

### Precautions for Correct Use

- ♦ Unusual noise or vibration may occur until the load inertia is estimated or the adaptive filter stabilizes after startup, immediately after the first servo ON, or when the Realtime Autotuning Machine Rigidity Selection (Pn022) is increased. This is not a problem if it disappears right away. If the unusual noise or vibration, however, continues for three or more reciprocating operations, take the following measures in any order you can.
    - ♦ Write the parameters used during normal operation to the EEPROM.
    - ♦ Lower the Realtime Autotuning Machine Rigidity Selection (Pn022).
    - ♦ Manually set the notch filter.
  - ♦ Once unusual noise or vibration occurs, the Inertia Ratio (Pn020) may have changed to an extreme value. In this case, also take the measures described above.
  - ♦ Out of the results of realtime autotuning, the Inertia Ratio (Pn020) is automatically saved to the EEPROM every 30 minutes. Realtime autotuning will use this saved data as the default value when the power is turned OFF and turned ON again.
  - ♦ The Instantaneous Speed Observer Setting (Pn027) will automatically be disabled (0) if realtime autotuning is enabled.
-

Operating Procedure

Insert the Parameter Unit connector into CN3 of the Servo Drive and turn ON the Servo Drive power supply.

r 0

Setting Parameter Pn021

Press the  key.

Un-SPd.

Press the  key.

16b .tP

Press the  key.

SERVoP

Press the  key.

Pn- 00.

SU

Select the number of the parameter to be set by using the  and  keys.  
(Pn021 is selected in this example.)

Pn- 21.

SU

Press the  key.

0.

Change the value by using the  and  keys.

21

Press the  key.

Pn- 21.

SU

Setting Parameter Pn022

Select Pn022 by using the  key.

Pn- 22.

SU

Press the  key.

2.

Increase the value by using the  key.

22

(Default setting)

Decrease the value by using the  key.

Press the  key.

Writing to EEPROM

Press the  key.

EE-Set.

Press the  key.

EEP -.

The bars as shown in the figure on the right will increase when the  key is pressed down for approx. 5 s.

EEP --.

---.

Writing will start (momentary display).

Start

End

Finish.

Writing completed.

reset.

Writing error occurred.

Error.

Realtime Autotuning (RTAT) Parameter Tables

| Parameter No. | Parameter name                                      | AT Mode Selection (Pn021) | AT Machine Rigidity Selection (Pn022) |       |       |       |       |       |       |       |
|---------------|-----------------------------------------------------|---------------------------|---------------------------------------|-------|-------|-------|-------|-------|-------|-------|
|               |                                                     |                           | 0                                     | 1     | 2     | 3     | 4     | 5     | 6     | 7     |
| Pn010         | Position Loop Gain                                  | ---                       | 120                                   | 320   | 390   | 480   | 630   | 720   | 900   | 1080  |
| Pn011         | Speed Loop Gain                                     | ---                       | 90                                    | 180   | 220   | 270   | 350   | 400   | 500   | 600   |
| Pn012         | Speed Loop Integration Time Constant                | ---                       | 620                                   | 310   | 250   | 210   | 160   | 140   | 120   | 110   |
| Pn013         | Speed Feedback Filter Time Constant                 | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn014         | Torque Command Filter Time Constant* <sup>1</sup>   | ---                       | 253                                   | 126   | 103   | 84    | 65    | 57    | 45    | 38    |
| Pn015         | Speed Feed-forward Amount                           | ---                       | 300                                   | 300   | 300   | 300   | 300   | 300   | 300   | 300   |
| Pn016         | Feed-forward Filter Time Constant                   | ---                       | 50                                    | 50    | 50    | 50    | 50    | 50    | 50    | 50    |
| Pn017         | Reserved                                            | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn018         | Position Loop Gain 2                                | ---                       | 190                                   | 380   | 460   | 570   | 730   | 840   | 1050  | 1260  |
| Pn019         | Speed Loop Gain 2                                   | ---                       | 90                                    | 180   | 220   | 270   | 350   | 400   | 500   | 600   |
| Pn01A         | Speed Loop Integration Time Constant 2              | 1, 2, 3, 7                | 10000                                 | 10000 | 10000 | 10000 | 10000 | 10000 | 10000 | 10000 |
|               |                                                     | 4, 5, 6                   | 9999                                  | 9999  | 9999  | 9999  | 9999  | 9999  | 9999  | 9999  |
| Pn01B         | Speed Feedback Filter Time Constant 2               | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn01C         | Torque Command Filter Time Constant 2* <sup>1</sup> | ---                       | 253                                   | 126   | 103   | 84    | 65    | 57    | 45    | 38    |
| Pn020         | Inertia Ratio                                       | ---                       | Estimated load inertia ratio          |       |       |       |       |       |       |       |
| Pn027         | Instantaneous Speed Observer Setting                | ---                       | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn030         | Gain Switching Operating Mode Selection             | ---                       | 1                                     | 1     | 1     | 1     | 1     | 1     | 1     | 1     |
| Pn031         | Gain Switch Setting* <sup>3</sup>                   | 1 to 6                    | 10                                    | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
|               |                                                     | 7                         | 0                                     | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| Pn032         | Gain Switch Time                                    | ---                       | 30                                    | 30    | 30    | 30    | 30    | 30    | 30    | 30    |
| Pn033         | Gain Switch Level Setting                           | ---                       | 50                                    | 50    | 50    | 50    | 50    | 50    | 50    | 50    |
| Pn034         | Gain Switch Hysteresis Setting                      | ---                       | 33                                    | 33    | 33    | 33    | 33    | 33    | 33    | 33    |
| Pn035         | Position Loop Gain Switching Time                   | ---                       | 20                                    | 20    | 20    | 20    | 20    | 20    | 20    | 20    |

| Parameter No. | Parameter name                                      | AT Mode Selection (Pn021) | AT Machine Rigidity Selection (Pn022) |       |                  |                  |                  |                  |                  |                  |
|---------------|-----------------------------------------------------|---------------------------|---------------------------------------|-------|------------------|------------------|------------------|------------------|------------------|------------------|
|               |                                                     |                           | 8                                     | 9     | A                | B                | C                | D                | E                | F                |
| Pn010         | Position Loop Gain                                  | ---                       | 1350                                  | 1620  | 2060             | 2510             | 3050             | 3770             | 4490             | 5570             |
| Pn011         | Speed Loop Gain                                     | ---                       | 750                                   | 900   | 1150             | 1400             | 1700             | 2100             | 2500             | 3100             |
| Pn012         | Speed Loop Integration Time Constant                | ---                       | 90                                    | 80    | 70               | 60               | 50               | 40               | 40               | 30               |
| Pn013         | Speed Feedback Filter Time Constant                 | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn014         | Torque Command Filter Time Constant <sup>*1</sup>   | ---                       | 30                                    | 25    | 20 <sup>*2</sup> | 16 <sup>*2</sup> | 13 <sup>*2</sup> | 11 <sup>*2</sup> | 10 <sup>*2</sup> | 10 <sup>*2</sup> |
| Pn015         | Speed Feed-forward Amount                           | ---                       | 300                                   | 300   | 300              | 300              | 300              | 300              | 300              | 300              |
| Pn016         | Feed-forward Filter Time Constant                   | ---                       | 50                                    | 50    | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn017         | Reserved                                            | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn018         | Position Loop Gain 2                                | ---                       | 1570                                  | 1820  | 2410             | 2930             | 3560             | 4400             | 5240             | 6490             |
| Pn019         | Speed Loop Gain 2                                   | ---                       | 750                                   | 900   | 1150             | 1400             | 1700             | 2100             | 2100             | 3100             |
| Pn01A         | Speed Loop Integration Time Constant 2              | 1, 2, 3, 7                | 10000                                 | 10000 | 10000            | 10000            | 10000            | 10000            | 10000            | 10000            |
|               |                                                     | 4, 5, 6                   | 9999                                  | 9999  | 9999             | 9999             | 9999             | 9999             | 9999             | 9999             |
| Pn01B         | Speed Feedback Filter Time Constant 2               | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn01C         | Torque Command Filter Time Constant 2 <sup>*2</sup> | ---                       | 30                                    | 25    | 20 <sup>*2</sup> | 16 <sup>*2</sup> | 13 <sup>*2</sup> | 11 <sup>*2</sup> | 10 <sup>*2</sup> | 10 <sup>*2</sup> |
| Pn020         | Inertia Ratio                                       | ---                       | Estimated load inertia ratio          |       |                  |                  |                  |                  |                  |                  |
| Pn027         | Instantaneous Speed Observer Setting                | ---                       | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn030         | Gain Switching Operating Mode Selection             | ---                       | 1                                     | 1     | 1                | 1                | 1                | 1                | 1                | 1                |
| Pn031         | Gain Switch Setting <sup>*3</sup>                   | 1 to 6                    | 10                                    | 10    | 10               | 10               | 10               | 10               | 10               | 10               |
|               |                                                     | 7                         | 0                                     | 0     | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn032         | Gain Switch Time                                    | ---                       | 30                                    | 30    | 30               | 30               | 30               | 30               | 30               | 30               |
| Pn033         | Gain Switch Level Setting                           | ---                       | 50                                    | 50    | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn034         | Gain Switch Hysteresis Setting                      | ---                       | 33                                    | 33    | 33               | 33               | 33               | 33               | 33               | 33               |
| Pn035         | Position Loop Gain Switching Time                   | ---                       | 20                                    | 20    | 20               | 20               | 20               | 20               | 20               | 20               |

♦ Parameters Pn015, 016, 01A, 030, and 032 to 035 are set to fixed values. The Servo Drive is set to rigidity No.2 as the default value.


\*1. The lower limit is set to 10 when using a 17-bit encoder and 25 when using a 2,500-p/r encoder.

\*2. The value for a 17-bit absolute encoder. The value for a 2500-p/r incremental encoder is 25.

\*3. The default setting for the Servo Drive is 2 (switching from the network).

# 7-3 Normal Mode Autotuning

Normal mode autotuning is used to estimate the load inertia of the machine. Position data generated within the Servo Drive is used to operate the machine for the estimation, thereby achieving greater accuracy in estimating the load inertia. Normal mode autotuning can be used from the Parameter Unit or CX-Drive.

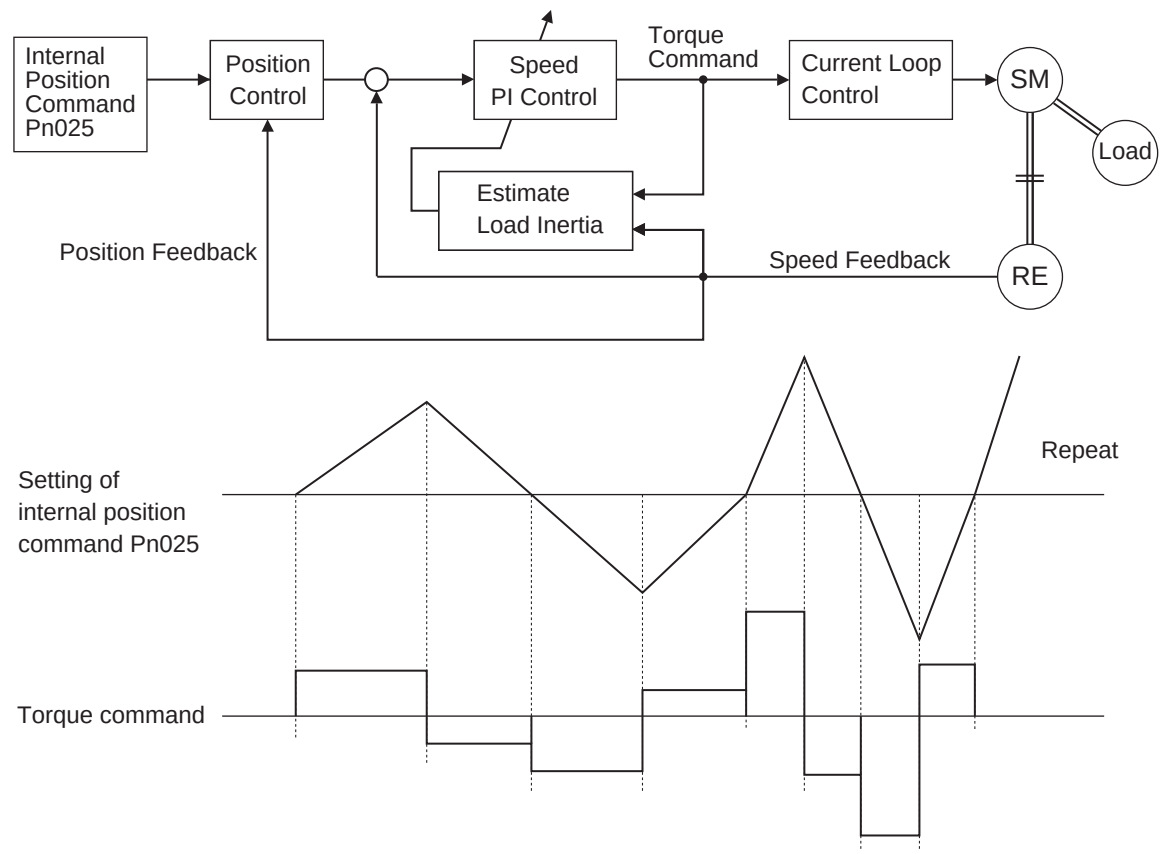

7  
Adjustment Functions


## Setting the Parameters

1. Set the operating pattern.  
Set the operating pattern using the Normal Mode Autotuning Operation Setting (Pn025).

| Setting | Number of rotations                       | Direction of rotation             |
|---------|-------------------------------------------|-----------------------------------|
| 0       | Two rotations<br>Repeat<br>Multiple Times | Forward and Reverse (Alternating) |
| 1       |                                           | Reverse and Forward (Alternating) |
| 2       |                                           | Forward only                      |
| 3       |                                           | Reverse only                      |
| 4       | One rotation<br>Repeat<br>Multiple Times  | Forward and Reverse (Alternating) |
| 5       |                                           | Reverse and Forward (Alternating) |
| 6       |                                           | Forward only                      |
| 7       |                                           | Reverse only                      |



The following graph shows the speed operating pattern when the set value is 0.

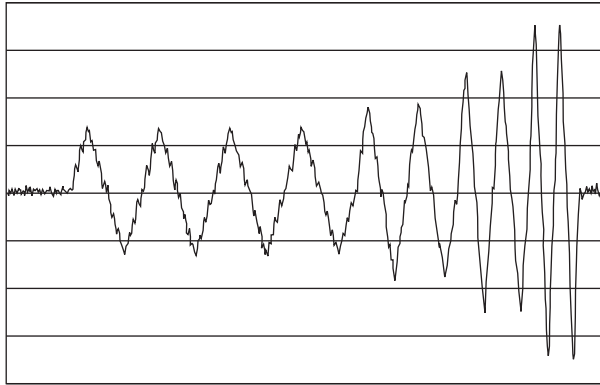

The operating pattern starts with 3 or 4 reciprocating operations, followed by up to 3 cycles of 2 reciprocations, with each cycle accelerated twice as much as the previous cycle. The acceleration will stop changing, as it is limited by the No. 1 Torque Limit (Pn05E). This is not an indication of failure.

## 2. Select the machine rigidity.

Set the machine rigidity number according to the rigidity of the machine. Refer to the following table for the machine rigidity values.

Machine rigidity 0 cannot be selected for the Parameter Unit and CX-Drive.

Set the machine rigidity starting with a low value and check the operation.

| Mechanical Configuration / Drive System | Machine Rigidity |
|-----------------------------------------|------------------|
| Ball screw direct coupling              | 6 to C           |
| Ball screw and timing belt              | 4 to A           |
| Timing belt                             | 2 to 8           |
| Gears, rack and pinion drives           | 2 to 8           |
| Machines with low rigidity, etc.        | 1 to 4           |
| Stacker crane                           | Tune manually.   |

To improve the response, increase the machine rigidity number, and then check the response again. If vibration occurs, lower the machine rigidity number and make adjustments. The setting parameters are the same as in *Realtime Autotuning (RTAT) Parameter Tables* on page 7-7.

## 3. Execute normal mode autotuning.

Move the load to a position where it will not interfere with the operation performed according to the operation pattern. For reciprocating movement,  $\pm 1$  or  $\pm 2$  rotations will be made. For one-way movement, about 20 rotations will be made.

## ■ Operating with the Parameter Unit

### 1. Switch to the Normal Mode Autotuning display.

Servo lock is performed automatically.

For details on switching to the Normal Mode Autotuning display, refer to *Normal Mode Autotuning* on page 6-24.


At\_no !.

Normal mode autotuning display

Machine rigidity No.

**2. Select the machine rigidity.**

Press   to select machine rigidity No.

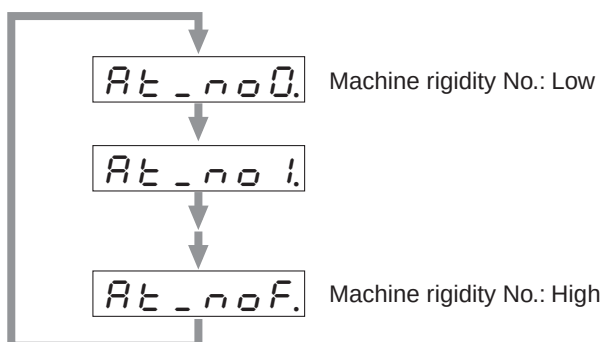**3. Switch to Normal Mode Autotuning.**

After selecting the machine rigidity number, press the  key to switch to Normal Mode Autotuning. (For details on the operation, refer to *Normal Mode Autotuning* on page 6-24.)

 Normal mode autotuning

**4. Execute normal mode autotuning.**

Press and hold the  key until the display changes to .

(For details on the operation, refer to *Normal Mode Autotuning* on page 6-24.)

The Servomotor rotates, and normal mode autotuning begins. The operating pattern will differ depending on the Normal Mode Autotuning Operation Setting (Pn025). If Pn025 is set to 0, the Servomotor will rotate twice in the forward/reverse directions for about 15 seconds. This cycle is repeated up to 5 times. There is no problem if operation ends before 5 cycles are completed.

Repeat "Step 2 (Select the machine rigidity)" to "Step 4 (Execute normal mode autotuning)" until the satisfying response can be obtained.

**5. Save the gain adjustment value.**

Once the satisfying response is obtained, switch to Parameter Write Mode and save the gain values to the EEPROM. (For details on the operation, refer to *Parameter Write Mode* on page 6-23.)

To save the adjustment results, switch to Parameter Write Mode, and save the parameters to the EEPROM.

**Precautions  
for Correct Use**

- ♦ When using normal mode autotuning with a Servomotor with a brake, connect the brake interlock (BKIR) output signal to allow the brake to be released.
- ♦ If the Positioning Completion Range 1 (Pn060) is too narrow, it will cause an error. By default, the parameter is set to 25 for an incremental encoder. When using an absolute encoder, set the parameter to 250 (ten times larger).
- ♦ If the Deviation Counter Overflow Level (Pn209) is too small, it will cause a deviation counter overflow.  
When using an absolute encoder, increase the setting from 20,000 pulses (default) to 200,000 pulses.
- ♦ Set the Torque Limit Selection (Pn003) to 1. If the setting is too small, it will cause an error.
- ♦ The maximum motor output during normal mode autotuning will be limited by the No. 1 Torque Limit (Pn05E). If the value is too small, there may be problems with the operation.
- ♦ Actuating the network during normal mode autotuning will cause a command error (alarm code 27). Do not actuate the network while executing normal mode autotuning.
- ♦ The position data is initialized after normal mode autotuning.
- ♦ If the load inertia is less than 3 times the rotor inertia or greater than the applicable load inertia (20 to 30 times greater), there may be problems with the operation.
- ♦ If the machine rigidity is extremely low, or if the backlash is extremely large, estimation cannot be performed.
- ♦ If an error occurs or a drive prohibition input is received during normal mode autotuning, a tuning error will occur.
- ♦ If normal mode autotuning is executed and the load inertia cannot be estimated, the load inertia will remain the same as it was before normal mode autotuning.
- ♦ Executing normal mode autotuning may not cause an error but result in vibration. Use caution to ensure safety, and promptly turn OFF the power supply if anything unusual happens.

Normal Mode Autotuning (AT) Parameter Tables

| Parameter No. | Parameter name                                      | AT Machine Rigidity Selection (Pn022) |      |      |      |      |      |      |      |      |      |                  |                  |                  |                  |                  |                  |
|---------------|-----------------------------------------------------|---------------------------------------|------|------|------|------|------|------|------|------|------|------------------|------------------|------------------|------------------|------------------|------------------|
|               |                                                     | 0                                     | 1    | 2    | 3    | 4    | 5    | 6    | 7    | 8    | 9    | A                | B                | C                | D                | E                | F                |
| Pn010         | Position Loop Gain                                  | 120                                   | 320  | 390  | 480  | 630  | 720  | 900  | 1080 | 1350 | 1620 | 2060             | 2510             | 3050             | 3770             | 4490             | 5570             |
| Pn011         | Speed Loop Gain                                     | 90                                    | 180  | 220  | 270  | 350  | 400  | 500  | 600  | 750  | 900  | 1150             | 1400             | 1700             | 2100             | 2500             | 3100             |
| Pn012         | Speed Loop Integration Time Constant                | 620                                   | 310  | 250  | 210  | 160  | 140  | 120  | 110  | 90   | 80   | 70               | 60               | 50               | 40               | 40               | 30               |
| Pn013         | Speed Feed-back Filter Time Constant                | 0                                     | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn014         | Torque Command Filter Time Constant <sup>*1</sup>   | 253                                   | 126  | 103  | 84   | 65   | 57   | 45   | 38   | 30   | 25   | 20 <sup>*2</sup> | 16 <sup>*2</sup> | 13 <sup>*2</sup> | 11 <sup>*2</sup> | 10 <sup>*2</sup> | 10 <sup>*2</sup> |
| Pn015         | Speed Feed-forward Amount                           | 300                                   | 300  | 300  | 300  | 300  | 300  | 300  | 300  | 300  | 300  | 300              | 300              | 300              | 300              | 300              | 300              |
| Pn016         | Feed-forward Filter Time Constant                   | 50                                    | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn018         | Position Loop Gain 2                                | 190                                   | 380  | 460  | 570  | 730  | 840  | 1050 | 1260 | 1570 | 1820 | 2410             | 2930             | 3560             | 4400             | 5240             | 6490             |
| Pn019         | Speed Loop Gain 2                                   | 90                                    | 180  | 220  | 270  | 350  | 400  | 500  | 600  | 750  | 900  | 1150             | 1400             | 1700             | 2100             | 2100             | 3100             |
| Pn01A         | Speed Loop Integration Time Constant 2              | 9999                                  | 9999 | 9999 | 9999 | 9999 | 9999 | 9999 | 9999 | 9999 | 9999 | 9999             | 9999             | 9999             | 9999             | 9999             | 9999             |
| Pn01B         | Speed Feed-back Filter Time Constant 2              | 0                                     | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn01C         | Torque Command Filter Time Constant 2 <sup>*1</sup> | 253                                   | 126  | 103  | 84   | 65   | 57   | 45   | 38   | 30   | 25   | 20 <sup>*2</sup> | 16 <sup>*2</sup> | 13 <sup>*2</sup> | 11 <sup>*2</sup> | 10 <sup>*2</sup> | 10 <sup>*2</sup> |
| Pn020         | Inertia Ratio                                       | Estimated load inertia ratio          |      |      |      |      |      |      |      |      |      |                  |                  |                  |                  |                  |                  |
| Pn027         | Instantaneous Speed Observer Setting                | 0                                     | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0    | 0                | 0                | 0                | 0                | 0                | 0                |
| Pn030         | Gain Switching Operating Mode Selection             | 1                                     | 1    | 1    | 1    | 1    | 1    | 1    | 1    | 1    | 1    | 1                | 1                | 1                | 1                | 1                | 1                |
| Pn031         | Gain Switch Setting                                 | 10                                    | 10   | 10   | 10   | 10   | 10   | 10   | 10   | 10   | 10   | 10               | 10               | 10               | 10               | 10               | 10               |
| Pn032         | Gain Switch Time                                    | 30                                    | 30   | 30   | 30   | 30   | 30   | 30   | 30   | 30   | 30   | 30               | 30               | 30               | 30               | 30               | 30               |
| Pn033         | Gain Switch Level Setting                           | 50                                    | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50               | 50               | 50               | 50               | 50               | 50               |
| Pn034         | Gain Switch Hysteresis Setting                      | 33                                    | 33   | 33   | 33   | 33   | 33   | 33   | 33   | 33   | 33   | 33               | 33               | 33               | 33               | 33               | 33               |
| Pn035         | Position Loop Gain Switching Time                   | 20                                    | 20   | 20   | 20   | 20   | 20   | 20   | 20   | 20   | 20   | 20               | 20               | 20               | 20               | 20               | 20               |

\*1. The lower limit is set to 10 when using a 17-bit encoder and 25 when using a 2,500-p/r encoder.

\*2. The value for a 17-bit absolute encoder. The value for a 2500-p/r incremental encoder is 25.

# 7-4 Manual Tuning

## Basic Settings


As described before, the OMNUC G-Series Servo Drives have an autotuning function. Depending on load conditions or other restrictions, however, readjustment may be required if the gain cannot be properly adjusted when normal mode autotuning is performed or the optimum responsiveness or stability is required to match each load. This section describes how to perform manual tuning for each control mode and function.

### ■ Before Manual Setting

The Parameter Unit can be used to adjust the Servomotor (machine) while monitoring the operation or noise, but more reliable adjustment can be performed quickly by using waveform monitoring with the data tracing function of CX-Drive or by measuring the analog voltage waveform with the monitor function.


### Analog Monitor Output

The actual Servomotor speed, command speed, torque, and number of accumulated pulses can be measured in the analog voltage level using an oscilloscope or other device. Set the type of signal to be output and the output voltage level by setting the Speed Monitor (SP) Selection (Pn007) and Torque Monitor (IM) Selection (Pn008). For details, refer to *Parameter Tables* on page 5-61.

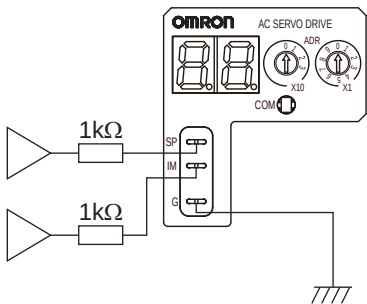


### CX-Drive Data Tracing

Commands to the Servomotor and Servomotor operation (e.g., speed, torque commands, and position deviation) can be displayed on a computer as waveforms. Refer to the *CX-Drive Operation Manual* (Cat. No. W453).

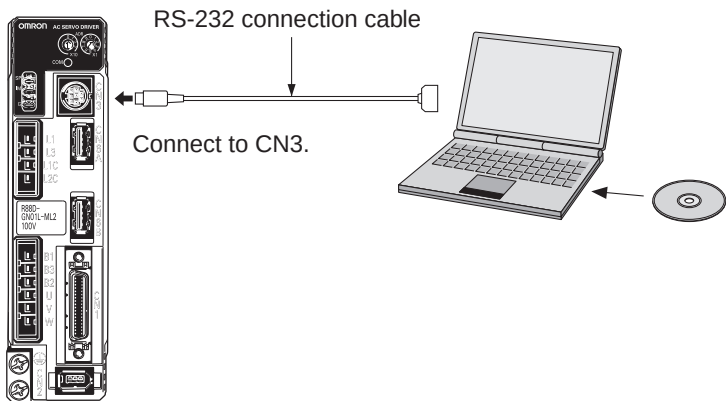


■ Position Control Mode Adjustment

Use the following procedure to make adjustments in position control for the OMNUC G Series.

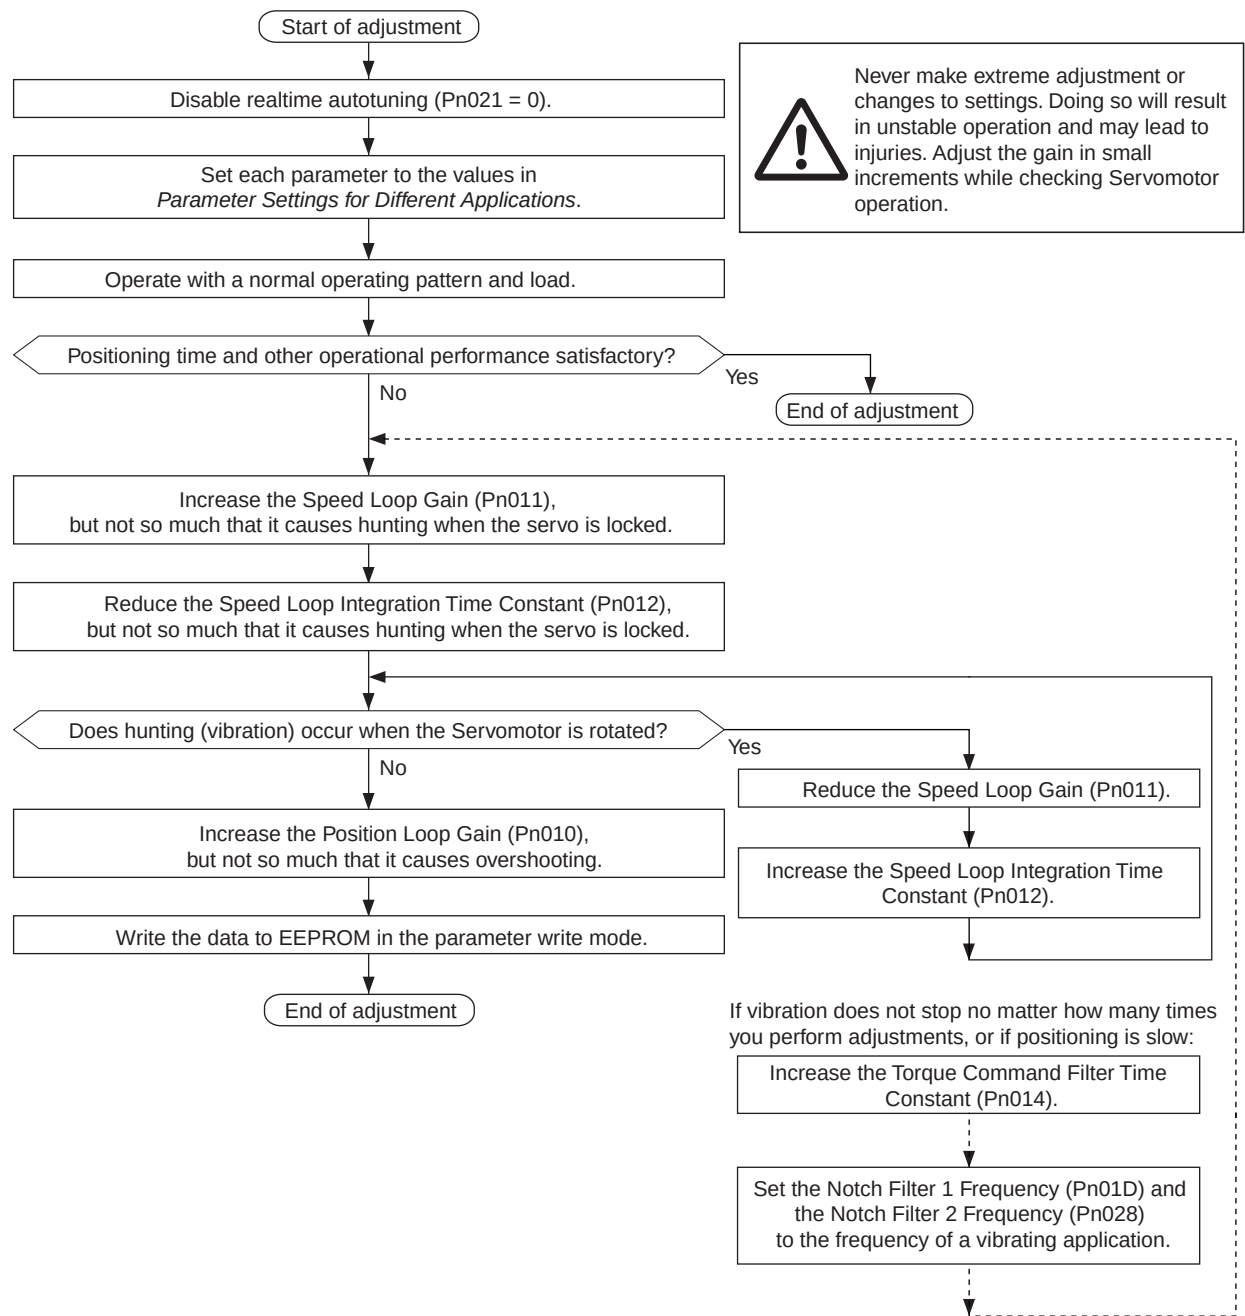

## ■ Speed Control Mode Adjustment

With the OMNUC G Series, adjustments for speed control are almost the same as adjustments for the position control mode. Use the following procedure to adjust parameters.

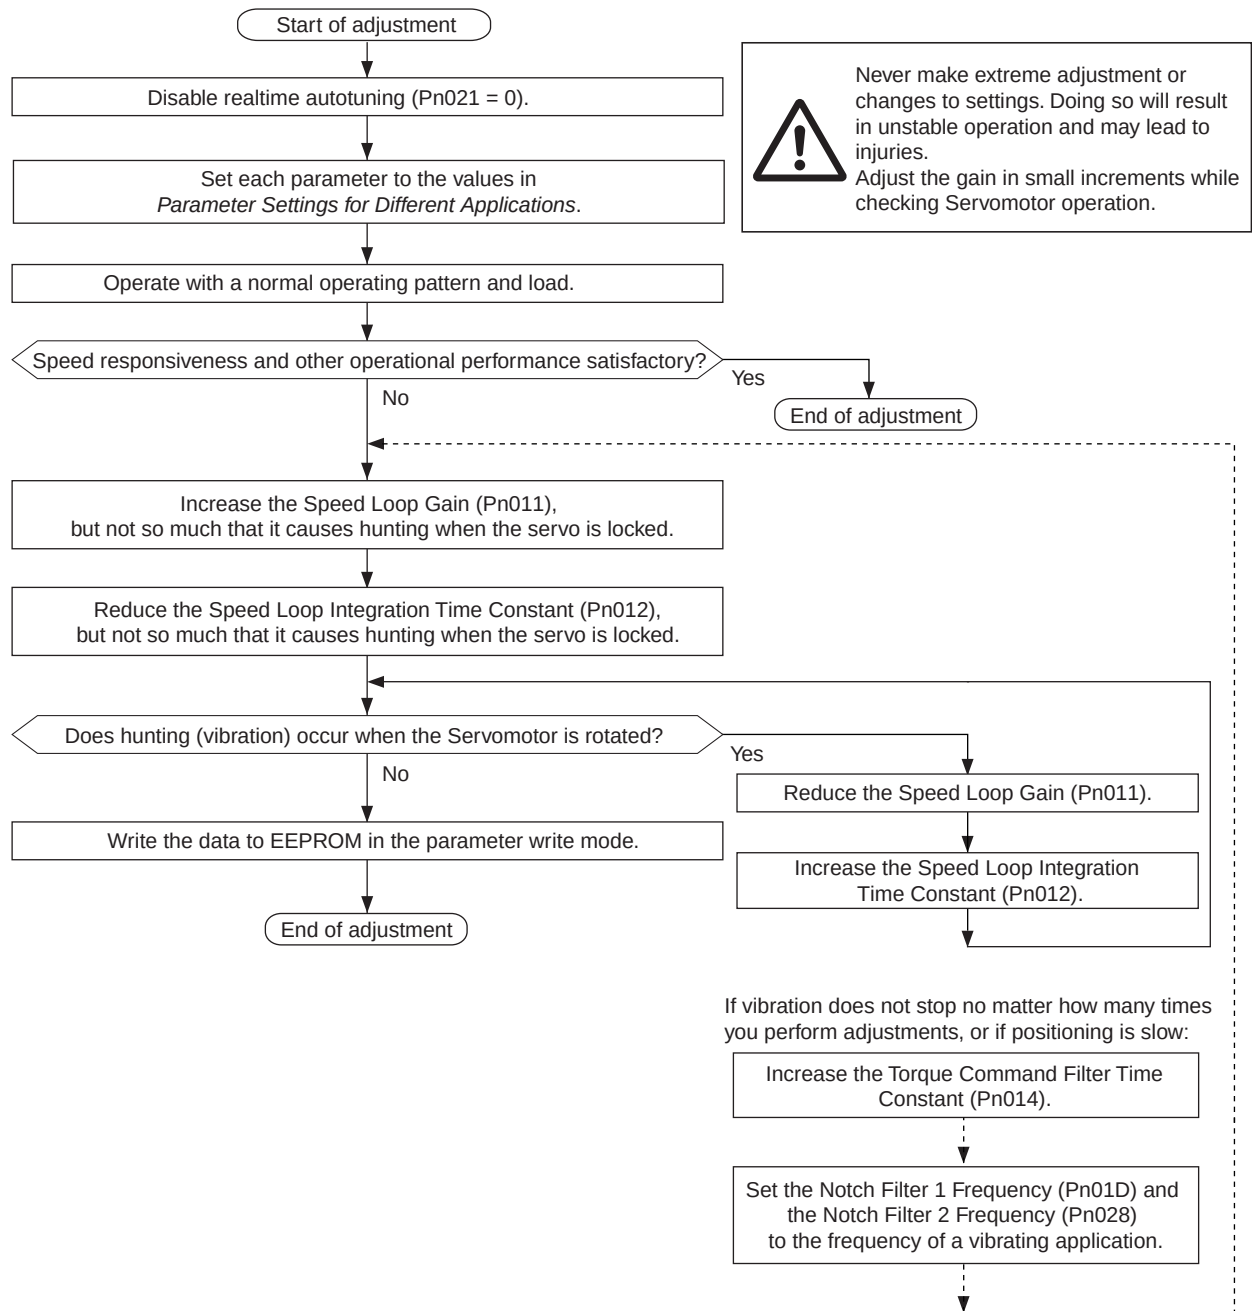

## ■ Servo Drive Manual Tuning Procedure

There are four basic adjustment parameters for the Servo Drive.

If the desired operating characteristics can be achieved by adjusting the following four parameters, you do not need to adjust any other parameter.

| Parameter No. | Parameter Name                       | Default Value | 2nd Parameter No. |
|---------------|--------------------------------------|---------------|-------------------|
| Pn010         | Position Loop Gain                   | 40.0[1/s]     | Pn018             |
| Pn011         | Speed Loop Gain                      | 50.0Hz        | Pn019             |
| Pn012         | Speed Loop Integration Time Constant | 20.0ms        | Pn01A             |
| Pn014         | Torque Command Filter Time Constant  | 0.80ms        | Pn01C             |

## ■ About Parameter Adjustments

There are three Servo Drive control loops: the outermost Position Loop, the Speed Loop, and the innermost Current Loop. The inner loop is affected by the outer loop and vice versa.

Set the initial values according to the configuration and rigidity of the machine, inertia ratio, and other factors.

Referential parameter settings for different applications are provided below.

### Parameter Settings for Different Applications

| Application                          | Inertia | Rigidity | Position Loop Gain [1/s] | Speed Loop Gain [Hz] | Speed Loop Integration Time Constant | Torque Command Filter Time Constant [× 0.01 ms] |
|--------------------------------------|---------|----------|--------------------------|----------------------|--------------------------------------|-------------------------------------------------|
| Ball screw, horizontal               | Large   | Low      | 20                       | 140                  | 35                                   | 160                                             |
| Ball screw, horizontal               | Medium  | Medium   | 40                       | 80                   | 20                                   | 100                                             |
| Ball screw, horizontal               | Small   | High     | 80                       | 60                   | 15                                   | 80                                              |
| Ball screw, vertical                 | Large   | Low      | 20                       | 160                  | 45                                   | 160                                             |
| Ball screw, vertical                 | Medium  | Medium   | 40                       | 80                   | 30                                   | 120                                             |
| Ball screw, vertical                 | Small   | High     | 60                       | 60                   | 20                                   | 100                                             |
| Ball screw, nut rotation, horizontal | Large   | Low      | 20                       | 140                  | 40                                   | 160                                             |
| Ball screw, nut rotation, horizontal | Medium  | Medium   | 40                       | 100                  | 30                                   | 120                                             |
| Ball screw, nut rotation, vertical   | Large   | Low      | 20                       | 160                  | 45                                   | 160                                             |
| Ball screw, nut rotation, vertical   | Medium  | Medium   | 40                       | 120                  | 25                                   | 120                                             |
| Timing belt                          | Large   | Low      | 20                       | 160                  | 60                                   | 160                                             |
| Timing belt                          | Medium  | Medium   | 30                       | 120                  | 40                                   | 120                                             |
| Rack & pinion                        | Large   | Low      | 20                       | 160                  | 60                                   | 160                                             |
| Rack & pinion                        | Large   | Medium   | 30                       | 120                  | 40                                   | 120                                             |
| Rack & pinion                        | Medium  | Medium   | 40                       | 100                  | 20                                   | 100                                             |
| Index table                          | Large   | Medium   | 40                       | 120                  | 25                                   | 120                                             |
| Index table                          | Small   | High     | 80                       | 120                  | 20                                   | 100                                             |
| Robot arm, cylindrical               | Large   | Low      | 15                       | 160                  | 60                                   | 160                                             |
| Robot arm, cylindrical               | Medium  | Medium   | 25                       | 120                  | 40                                   | 120                                             |
| General purpose                      | Medium  | Medium   | 30                       | 100                  | 30                                   | 150                                             |

♦ The Inertial Ratio (Pn020) is fixed at 300%.



## Inertial Estimations

|                |                                          |
|----------------|------------------------------------------|
| Small inertia  | 5 times the rotor inertia or less        |
| Medium inertia | 5 to 10 times the rotor inertia or less  |
| Large inertial | 10 to 20 times the rotor inertia or less |

**Pn010, Pn018 Position Loop Gain**

This loop controls the pulse count from the encoder so that the count will become a specified value. When the deviation counter's pulse count drops below the specified value, positioning is completed and a signal is output. The ratio of the maximum speed to the deviation counter is the Position Loop Gain.

$$\text{Position Loop Gain [1/s]} = \frac{\text{Command maximum speed [pps]}}{\text{Number of accumulated pulses in the deviation counter (P)}}$$

The reciprocal of the Speed Loop Integration Time Constant (Pn012) should be used as a reference for setting the Position Loop Gain.


For example, if Pn012 is set to 100 ms, set the Position Loop Gain to 10 [1/s].

There will be no overshooting with these settings. To speed up the positioning process, increase the Position Loop Gain. If the Position Loop Gain is too large, overshooting or vibrations may occur. In this case, reduce the Position Loop Gain.


If the vibration is occurring in the Speed Loop or the Current Loop, adjusting the Position Loop does not stop the vibration.

The response to Position Loop Gain adjustment is shown below.

- ♦ High Position Loop Gain causes overshooting.

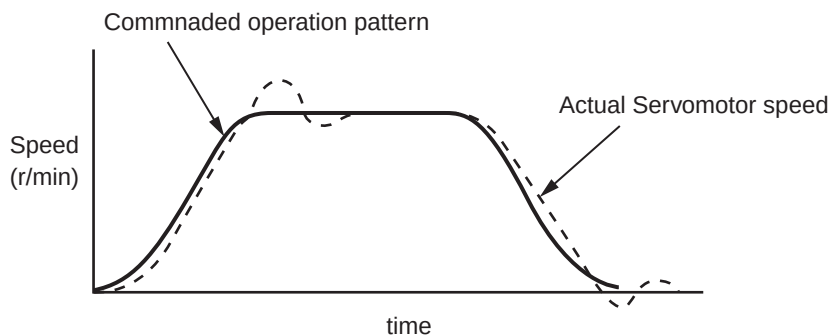

- ♦ Low Position Loop Gain slows down the positioning process.

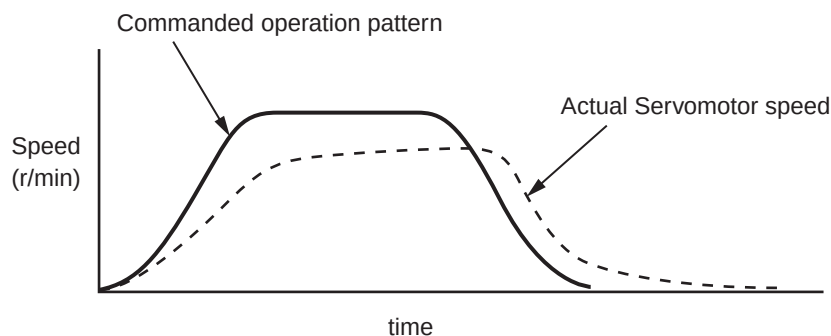

### Pn011, Pn019 Speed Loop Gain


The Speed Loop Gain determines the responsiveness of the Servo Drive.

If the Inertia Ratio (Pn020) is set correctly, this setting will be used as the response frequency.


Increasing the Speed Loop Gain will improve the response and speed up the positioning process, but will also increase the likelihood of vibration. Increase the Speed Loop Gain, but not so much that it causes vibrations.

Since the Speed Loop Gain is related to the Speed Loop Integration Time Constant (Pn012), increasing the Integration Time Constant can also increase the Speed Loop Gain.

- ♦ Low Speed Loop Gain causes a slower response and large overshooting.  
→ Increase the Speed Loop Gain.

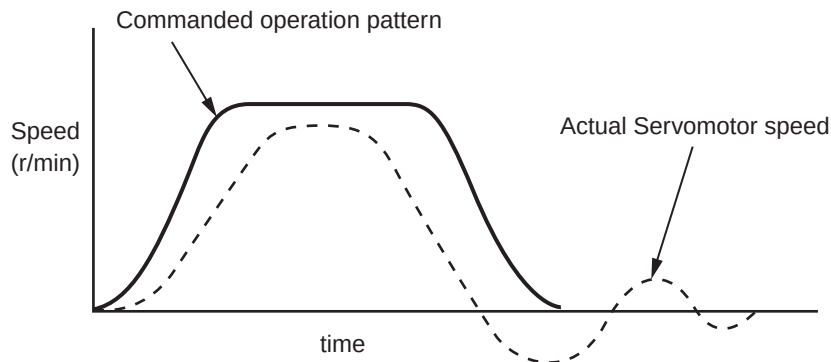


- ♦ High Speed Loop Gain increases the likelihood of vibration. Vibration and resonance may not disappear in some cases. → Decrease the Speed Loop Gain.

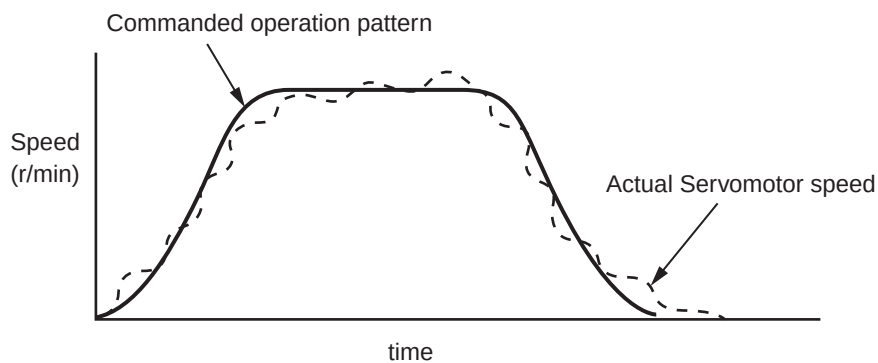


### Pn012, Pn01A Speed Loop Integration Time Constant

The Speed Loop Integration Time Constant also determines the responsiveness of the Servo Drive.

- ♦ Low Speed Loop Integration Time Constant causes vibration and resonance.  
→ Increase the Speed Loop Integration Time Constant.

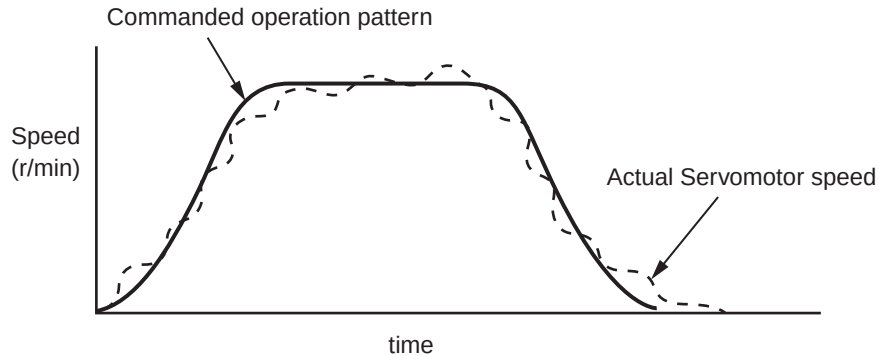

- ♦ High Speed Loop Integration Time Constant causes a slower response and decreased Servo Drive rigidity.  
→ Decrease the Speed Loop Integration Time Constant.

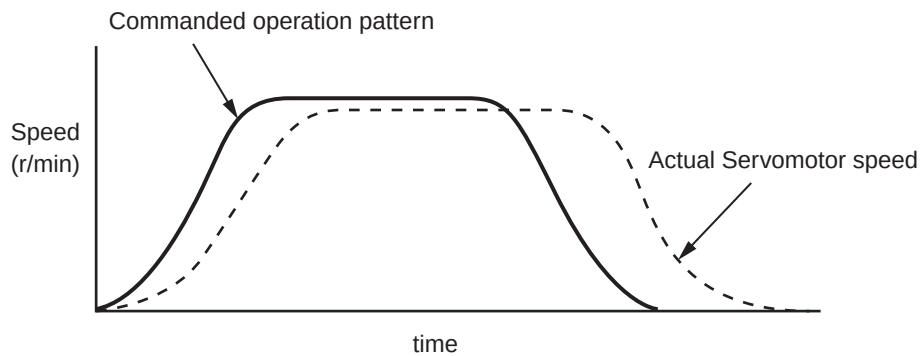


### Pn014, Pn01C Torque Command Filter Time Constant (Input Adjustment for the Current Loop)

The Torque Command Filter applies a filter to smoothen the current commands from the Speed Loop. This provides a smoother current flow, thus reducing the amount of vibration. The default value of the Filter Time Constant is 80 (0.8 ms). Increase the value to reduce vibration. An increase in value, however, will cause a slower response. Use 1/25 of the Speed Loop Integration Time Constant (Pn012) as a reference for setting. The Torque Command Filter also reduces vibration due to machine rigidity. The Torque Command Filter Time Constant is related to the Speed Loop Gain (Pn011). If Pn011 is set too large, vibration cannot be reduced by increasing the Torque Command Filter Time Constant. If there is machine resonance, for example from a ball screw, use the notch filter (Pn01D and Pn01E) to reduce vibration, or enable the adaptive filter.

### Other Adjustments

If the Torque Loop is saturated because of short acceleration time, large load torque, or other causes, overshooting occurs in the speed response. In such a case, increase the acceleration time to prevent torque saturation.

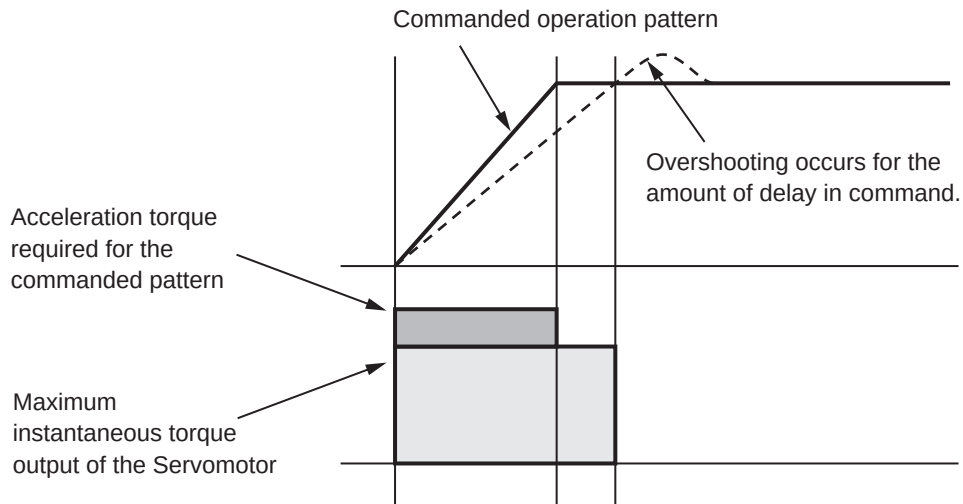

### ■ Torque Control Mode Adjustment

The torque control is based on the speed control loop using the Speed Limit (Pn053) or the speed limit value from MECHATROLINK-II as the speed limit. This section explains how to set the speed limit value.

#### Setting Speed Limit Values

- ♦ If the Speed Limit Selection (Pn05B) is set to 0, the setting for the Speed Limit (Pn053) will be used as the speed limit value. If the Speed Limit Selection (Pn05B) is set to 1, the smaller of either the Speed Limit (Pn053) or the MECHATROLINK-II speed limit value will be used.
- ♦ When the Servomotor speed approaches the speed limit value, the control method will switch from torque control using torque commands from MECHATROLINK-II, to speed control using the speed limit value determined via MECHATROLINK-II or the Speed Limit (Pn053).
- ♦ To ensure the stable operation during the speed limit, parameters need to be adjusted according to *Speed Control Mode Adjustment* on page 7-16.
- ♦ If the Speed Limit (Pn053) or the speed limit value from MECHATROLINK-II is too low, the Speed Loop Gain is too low, or the Speed Loop Integration Time Constant is set to 10000 (disable), the input to the torque limiter will be small and the torque commanded via MECHATROLINK-II may not be achieved.

# Chapter 8

## Troubleshooting

|     |                                                                 |      |
|-----|-----------------------------------------------------------------|------|
| 8-1 | Error Processing .....                                          | 8-1  |
|     | Preliminary Checks When a Problem Occurs .....                  | 8-1  |
|     | Precautions When Troubleshooting .....                          | 8-2  |
|     | Replacing the Servomotor and Servo Drive .....                  | 8-2  |
| 8-2 | Alarm Table .....                                               | 8-3  |
| 8-3 | Troubleshooting .....                                           | 8-7  |
|     | Error Diagnosis Using the Displayed Alarm Codes .....           | 8-7  |
|     | Error Diagnosis Using the Displayed Warning Codes .....         | 8-14 |
|     | Error Diagnosis Using the Operating Status .....                | 8-15 |
| 8-4 | Overload Characteristics<br>(Electronic Thermal Function) ..... | 8-20 |
|     | Overload Characteristics Graphs .....                           | 8-20 |
| 8-5 | Periodic Maintenance .....                                      | 8-21 |
|     | Servomotor Service Life .....                                   | 8-21 |
|     | Servo Drive Service Life .....                                  | 8-22 |
|     | Replacing the Absolute Encoder Battery .....                    | 8-23 |

# 8-1 Error Processing

## Preliminary Checks When a Problem Occurs

This section explains the preliminary checks and analytical tools required to determine the cause of a problem.

### ■ Checking the Power Supply Voltage

- ♦ Check the voltage at the power supply input terminals.

Main Circuit Power Supply Input Terminals (L1, L3)

R88D-GN□L-ML2 (50 W to 400 W): Single-phase, 100 to 115 VAC (85 to 127 V), 50/60 Hz

R88D-GN□H-ML2 (100 W to 1.5 kW): Single-phase, 200 to 240 VAC (170 to 264 V), 50/60 Hz

Main Circuit Power Supply Input Terminals (L1, L2, L3)

R88D-GN□H-ML2 (750 W to 7.5 kW): Three-phase, 200 to 240 VAC (170 to 264 V), 50/60 Hz

Control Circuit Power Supply Input Terminals (L1C, L2C)

R88D-GN□L-ML2: Single-phase, 100 to 115 VAC (85 to 127 V), 50/60 Hz

R88D-GN□H-ML2: Single-phase, 200 to 240 VAC (170 to 264 V), 50/60 Hz

If the voltage is outside of this range, there is a risk of operation failure, so be sure that the power supply is correct.

- ♦ Check the voltage of the sequence input power supply. (+24 VIN Terminal (CN1 pin 1))

Within the range of 11 to 25 VDC

If the voltage is outside of this range, there is a risk of operation failure, so be sure that the power supply is correct.

### ■ Checking Whether an Alarm Has Occurred

- ♦ Evaluate the problem using the 7-segment LED display on the front panel.  
You can also evaluate the problem by using the R88A-PR02G Parameter Unit.
- ♦ CX-Drive can also be used for the display. The operation status can also be monitored.  
Check the load status, including data trace.
- ♦ When an alarm has occurred:  
Check the alarm code that is displayed (□□) and evaluate the problem based on the alarm that is indicated.
- ♦ When an alarm has not occurred:  
Make an analysis according to the problem.

## Precautions When Troubleshooting

When checking and verifying I/O after a problem has occurred, the Servo Drive may suddenly start to operate or suddenly stop, so always take the following precautions.

You should assume that anything not described in this manual is not possible with this product.

### ■ Precautions

- ♦ Disconnect the cable before checking for wire breakage. Even if you test conduction with the cable connected, test results may not be accurate due to conduction via bypassing circuit.
- ♦ If the encoder signal is lost, the Servomotor may run away, or an error may occur. Be sure to disconnect the Servomotor from the mechanical system before checking the encoder signal.
- ♦ When performing tests, first check that there are no persons in the vicinity of the equipment, and that the equipment will not be damaged even if the Servomotor runs away. Before performing the tests, verify that you can immediately stop the machine using an emergency stop even if the Servomotor runs away.

## Replacing the Servomotor and Servo Drive

Use the following procedure to replace the Servomotor or Servo Drive.

### ■ Replacing the Servomotor

#### 1. Replace the Servomotor.

#### 2. Perform origin position alignment (for position control).

- ♦ When the Servomotor is replaced, the Servomotor's origin position (phase Z) may deviate, so origin alignment must be performed.
- ♦ Refer to the Position Controller's manual for details on performing origin alignment.

#### 3. Set up the absolute encoder.

- ♦ If a Servomotor with an absolute encoder is used, the absolute value data in the absolute encoder will be cleared when the Servomotor is replaced, so setup is again required. The rotation data will be different from before the Servomotor was replaced, so reset the initial Motion Control Unit parameters.
- ♦ For details, refer to *Absolute Encoder Setup* on page 6-6.

### ■ Replacing the Servo Drive

#### 1. Copy the parameters.

Use the Parameter Unit or CX-Drive to write down all the parameter settings or save them.

#### 2. Replace the Servo Drive.

#### 3. Set the parameters.

Use the Parameter Unit or CX-Drive to set all the parameters.

#### 4. Set up the absolute encoder.

- ♦ If a Servomotor with an absolute encoder is used, the absolute value data in the absolute encoder will be cleared when the Servo Drive is replaced, so setup is again required. The rotation data will be different from before the Servo Drive was replaced, so reset the initial Motion Control Unit parameters.
- ♦ For details, refer to *Absolute Encoder Setup* on page 6-6.

# 8-2 Alarm Table

## ■ Protective Functions

The Servo Drive has built-in protective functions. When a protective function is activated, the Servo Drive turns OFF the alarm output signal (ALM) and switches to the Servo OFF status. The alarm code will be displayed on the front panel.

| Alarm type | Description                                                                                                                                                            |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ---        | Protective function that allows the alarm to be reset, and leaves record in the alarm history.                                                                         |
| PR         | Protective function that does not allow the alarm to be reset, and requires the control power supply to be turned OFF and turned ON again after resolving the problem. |
| X          | Protective function that does not leave record in the alarm history.                                                                                                   |

### Precautions for Correct Use

- ♦ Alarms can be reset via the network, CX-Drive or the Parameter Unit.
- ♦ Overload (alarm code 16) cannot be reset for approximately 10 s after its occurrence.
- ♦ If "HH", "hh", or "yy" is displayed on the Alarm Number display, the built-in MPU is malfunctioning. Turn OFF the power supply.

## ■ Warning Function

The Servo Drive issues a warning before a protective function is activated, allowing you to check overload and other status in advance. A warning is also issued for a network error, allowing you to check the network status.



## ■ Alarms

| Alarm Display | Alarm Type | Error Detection Function                  | Detection Details and Cause of Error                                                                                                            |
|---------------|------------|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 11            | X          | Control power supply undervoltage         | The DC voltage of the main circuit has dropped below the specified value.                                                                       |
| 12            | ---        | Overvoltage                               | The DC voltage of the main circuit is abnormally high.                                                                                          |
| 13            | X          | Main power supply undervoltage            | The DC voltage of the main circuit is low.                                                                                                      |
| 14            | PR         | Overcurrent                               | Overcurrent flowed to the IGBT. Servomotor power line ground fault or short circuit.                                                            |
| 15            | PR         | Servo Drive overheat                      | The temperature of the Servo Drive radiator exceeded the specified value.                                                                       |
| 16            | ---        | Overload                                  | Operation was performed with torque significantly exceeding the rating for several seconds to several tens of seconds.                          |
| 18            | PR         | Regeneration overload                     | The regenerative energy exceeded the processing capacity of the regeneration resistor.                                                          |
| 21            | PR         | Encoder communications error              | Communications between the encoder and the Servo Drive failed for a specified number of times, thereby activating the error detection function. |
| 23            | PR         | Encoder communications data error         | Communications error occurred for the data from the encoder.                                                                                    |
| 24            | ---        | Deviation counter overflow                | The number of position deviation pulses exceeded the Deviation Counter Overflow Level (Pn209).                                                  |
| 26            | ---        | Overspeed                                 | The rotation speed of the Servomotor exceeded the setting of the Overspeed Detection Level Setting (Pn073).                                     |
| 27            | PR         | Command error                             | The operation command resulted in an error.                                                                                                     |
| 29            | ---        | Internal deviation counter overflow       | The value of the internal deviation counter (internal control unit) exceeded $2^{27}$ (134217728).                                              |
| 34            | ---        | Overrun limit error                       | The Servomotor exceeded the allowable operating range set in the Overrun Limit Setting (Pn026) with respect to the position command input.      |
| 36            | PR<br>X    | Parameter error                           | Data in the parameter save area was corrupted when the data was read from the EEPROM at power-ON.                                               |
| 37            | PR<br>X    | Parameter corruption                      | The EEPROM write verification data was corrupted when the data was read from the EEPROM at power-ON.                                            |
| 38            | X          | Drive prohibit input error                | Forward and Reverse Drive Prohibit Inputs (NOT and POT) both became OPEN.                                                                       |
| 40            | PR         | Absolute encoder system down error        | <b>ABS</b> The voltage supplied to the absolute encoder dropped below the specified value.                                                      |
| 41            | PR         | Absolute encoder counter overflow error   | <b>ABS</b> The multi-turn counter of the absolute encoder exceeded the specified value.                                                         |
| 42            | PR         | Absolute encoder overspeed error          | <b>ABS</b> The Servomotor rotation speed exceeded the specified value when power to the absolute encoder is supplied by the battery only.       |
| 44            | PR         | Absolute encoder one-turn counter error   | <b>ABS</b> A one-turn counter error was detected.                                                                                               |
| 45            | PR         | Absolute encoder multi-turn counter error | <b>ABS</b> A multi-turn counter error or phase-AB signal error was detected.                                                                    |
| 47            | ---        | Absolute encoder status error             | <b>ABS</b> The rotation of the absolute encoder is higher than the specified value.                                                             |

## 8-2 Alarm Table

| Alarm Display | Alarm Type | Error Detection Function         | Detection Details and Cause of Error                                                                                                                        |
|---------------|------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 48            | R          | Encoder phase Z error            | A phase-Z pulse was not detected regularly.                                                                                                                 |
| 49            | R          | Encoder PS signal error          | A logic error was detected in the PS signal.                                                                                                                |
| 82            | R          | Node address setting error       | The rotary switch for setting the node address of the Servo Drive was set out of range.                                                                     |
| 83            | ---        | Communications error             | Data received during each MECHATROLINK-II communications cycle repeatedly failed, exceeding the number of times set in the Communications Control (Pn005).  |
| 84            | ---        | Transmission cycle error         | While actuating MECHATROLINK-II communications, synchronization frames (SYNC) were not received according to the transmission cycle.                        |
| 86            | ---        | Watchdog data error              | Synchronization data exchanged between the master and slave nodes during each MECHATROLINK-II communications cycle resulted in an error.                    |
| 87            | X          | Emergency stop input error       | The emergency stop input became OPEN.                                                                                                                       |
| 90            | ---        | Transmission cycle setting error | The transmission cycle setting error when the MECHATROLINK-II CONNECT command is received.                                                                  |
| 91            | ---        | SYNC command error               | A SYNC-related command was issued while MECHATROLINK-II was in asynchronous communications mode.                                                            |
| 93            | R          | Parameter setting error          | Parameter setting exceeded the allowable range.                                                                                                             |
| 95            | R<br>X     | Servomotor non-conformity        | The combination of the Servomotor and Servo Drive is not appropriate.                                                                                       |
| Others        | R          | Other errors                     | The control circuit malfunctioned due to excessive noise.<br>An error occurred within the Servo Drive due to the activation of its self-diagnosis function. |

■ Warnings

| Priority                                                 | Warning Code | Warning Detection Function    | Warning Details                                                                                                                                                   |
|----------------------------------------------------------|--------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>High</div> <div>↑</div> <div>↓</div> <div>Low</div> | 94h (148)    | Data setting warning          | <div>· Command argument setting is out of the range.</div> <div>· Parameter write failure.</div> <div>· Command settings are wrong, and others.</div>             |
|                                                          | 95h (149)    | Command warning               | <div>· Command output conditions are not satisfied.</div> <div>· Received unsupported command.</div> <div>· Subcommand output conditions are not satisfied.</div> |
|                                                          | 96h (150)    | ML-II communications warning  | One or more MECHATROLINK-II communications error occurred.                                                                                                        |
|                                                          | 90h (144)    | Overload warning              | 85% of the overload alarm trigger level has been exceeded.                                                                                                        |
|                                                          | 91h (145)    | Regeneration overload warning | 85% of the regeneration overload alarm trigger level has been exceeded.                                                                                           |
|                                                          | 92h (146)    | Battery warning               | Voltage of absolute encoder battery has dropped below 3.2 V.                                                                                                      |
|                                                          | 93h (147)    | Fan lock warning              | The built-in cooling fan stopped, or rotated abnormally.                                                                                                          |

**Note 1.** All warnings are retained. After resolving the problem, clear the alarms and the warnings.

**Note 2.** When multiple warnings occur, the warning codes are displayed on the front panel in the order of their priority (shown above).

**Note 3.** Values in parenthesis indicate warning codes read from the host controller.  
Example: When a battery warning is issued, the display on a G-Series front panel will alternate between "92" and "00". The warning code read by the host position control unit (CJ1W-NCF71 or CS1W-NCF71) will be "4146".

## 8-3 Troubleshooting

If an error occurs in the machine, determine the error conditions from the alarm indicator and operating status, identify the cause of the error, and take appropriate countermeasures.

### Error Diagnosis Using the Displayed Alarm Codes

| Alarm code | Alarm Name                        | Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Countermeasure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11         | Control power supply undervoltage | <p>The voltage between P and N in the control voltage converter has dropped below the specified value.</p> <ol style="list-style-type: none"> <li>1 The power supply voltage is low. A momentary power failure occurred.</li> <li>2 The power supply capacity is insufficient. The inrush current at power-ON caused the power supply voltage to drop.</li> <li>3 The Servo Drive has failed.</li> </ol>                                                                                                                                                                                                                                                                                                                    | <p>Measure the line voltage between control power supply L1C and L2C.</p> <ol style="list-style-type: none"> <li>1 Resolve the cause of the power supply voltage drop and/or momentary power failure.</li> <li>2 Increase the power supply capacity.</li> <li>3 Replace the Servo Drive.</li> </ol>                                                                                                                                                                                                                                                                                                          |
| 12         | Overvoltage                       | <p>The voltage between P and N in the main circuit has exceeded the specified value. The power supply voltage is too high. Phase advance capacitor and/or UPS (uninterruptible power supply) is causing a jump in voltage.</p> <ol style="list-style-type: none"> <li>1 Regenerative energy cannot be absorbed due to a disconnection of the regeneration resistor.</li> <li>2 Regenerative energy cannot be absorbed due to the use of an inappropriate external regeneration resistor.</li> <li>3 The Servo Drive has failed.</li> </ol>                                                                                                                                                                                  | <p>Measure and check the line voltages between L1, L2, and L3 of the main power supply. Input a correct voltage. Remove the phase advance capacitor.</p> <ol style="list-style-type: none"> <li>1 Measure the resistance for the external regeneration resistor between terminals B1 and B2 of the Servo Drive, and check that the reading is normal. Replace it if disconnected.</li> <li>2 Provide the necessary regeneration resistance and wattage.</li> <li>3 Replace the Servo Drive.</li> </ol>                                                                                                       |
| 13         | Main power supply undervoltage    | <p>With the Undervoltage Alarm Selection (Pn065) set to 1, the main power supply between L1 and L3 was interrupted for longer than the time set by Momentary Hold Time (Pn06D). Alternatively, the voltage between P and N in the main circuit dropped below the specified value while the Servo Drive was ON.</p> <ol style="list-style-type: none"> <li>1 The power supply voltage is low.</li> <li>2 A momentary power failure occurred.</li> <li>3 The power supply capacity is insufficient - The inrush current at power-ON caused the power supply voltage to drop.</li> <li>4 Missing phase - A single-phase power supply was used for a three-phase Servo Drive.</li> <li>5 The Servo Drive has failed.</li> </ol> | <p>Measure and check the line voltages between L1, L2, and L3 of the main power supply.</p> <ol style="list-style-type: none"> <li>1 Resolve the cause of the power supply voltage drop and/or momentary power failure.</li> <li>2 Check the setting for the Momentary Hold Time (Pn06D).</li> <li>3 Increase the power supply capacity. Refer to the Servo Drive specifications for the power supply capacity.</li> <li>4 Correctly connect the phases (L1, L2, and L3) of the power supply. Connect single-phase 100 V and single-phase 200 V to L1 and L3.</li> <li>5 Replace the Servo Drive.</li> </ol> |

| Alarm code | Alarm Name           | Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Countermeasure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 14         | Overcurrent          | <p>The current on the inverter circuit exceeded the specified value.</p> <ol style="list-style-type: none"> <li>1 The Servo Drive has failed. (Failure of circuit, IGBT parts, etc.)</li> <li>2 Short circuit on Servomotor lines U, V, and W.</li> <li>3 Ground fault on the Servomotor lines.</li> <li>4 Servomotor burnout.</li> <li>5 Contact failure on the Servomotor lines.</li> <li>6 The dynamic brake relay has been consequently welded.</li> <li>7 The Servomotor is not compatible with the Servo Drive.</li> <li>8 The operation command input is received simultaneously with or before Servo-ON.</li> </ol>                                                                                                                                          | <ol style="list-style-type: none"> <li>1 If the alarm is triggered immediately when the Servo Drive is turned ON with the Servomotor lines disconnected, replace the Servo Drive.</li> <li>2 Check for short circuit in the Servomotor lines U, V, and W. Connect the Servomotor lines correctly.</li> <li>3 Check the insulation resistance between Servomotor lines U, V, W and the ground line. If there is insulation failure, replace the Servomotor.</li> <li>4 Measure the interphase resistances of the Servomotor. If they are unbalanced, replace the Servomotor.</li> <li>5 Check the connector pins for connections U, V, and W of the Servomotor. If they are loose or have come off, securely fix them.</li> <li>6 Replace the Servo Drive.</li> <li>7 Check and match the capacity of the Servomotor and the Servo Drive.</li> <li>8 After the Servo ON, wait for at least 100 ms before inputting an operation command.</li> </ol> |
| 15         | Servo Drive overheat | <p>The temperature of the Servo Drive radiator or power elements exceeded the specified value.</p> <ol style="list-style-type: none"> <li>1 The Servo Drive's ambient temperature has exceeded the specified value. Radiation performance has dropped.</li> <li>2 There is excessive load.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <ol style="list-style-type: none"> <li>1 Reduce the Servo Drive's ambient temperature, and improve the cooling conditions.</li> <li>2 Increase the capacity of the Servomotor. Reduce the effective load ratio, for example with a longer acceleration / deceleration time.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 16         | Overload             | <p>The effective values of the torque commands have exceeded the overload level set by the Overload Detection Level Setting (Pn072). Operation is performed with reverse time characteristics.</p> <ol style="list-style-type: none"> <li>1 The load is excessive, and the effective torque has exceeded the set level and operation has been performed for a long time.</li> <li>2 Oscillation, hunching, and vibration are occurring due to improper gain adjustment.</li> <li>3 Servomotor phases are incorrectly wired and/or are disconnected.</li> <li>4 The mechanical load is increasing. There is a problem with the mechanics.</li> <li>5 The holding brake is ON.</li> <li>6 The Servomotor lines are incorrectly wired between multiple axes.</li> </ol> | <p>Check that the torque (current) waveform is not oscillating, and that it is not fluctuating significantly in the vertical direction. Check the overload warning display and the load ratio.</p> <ol style="list-style-type: none"> <li>1 Increase the capacity of the Servo Drive and Servomotor, or reduce the load. Or increase the acceleration / deceleration time to reduce the effective torque.</li> <li>2 Readjust the gain to stop oscillation and hunching.</li> <li>3 Connect the Servomotor lines as specified in the wiring diagram. Replace the cables.</li> <li>4 Check that the mechanics operate smoothly.</li> <li>5 Measure the voltage at the brake terminal. Turn OFF the brake.</li> </ol> <p><b>Note</b> You cannot reset the warning for at least 10 seconds after it occurred.</p>                                                                                                                                     |

## 8-3 Troubleshooting

| Alarm code | Alarm Name                        | Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Countermeasure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 18         | Regeneration overload             | <p>The regenerative energy exceeded the capacity of the regeneration resistor.</p> <ol style="list-style-type: none"> <li>1 The converter voltage was increased by regenerative energy during deceleration due to a large load inertia. The voltage was further increased due to insufficient energy absorption of the regeneration resistance.</li> <li>2 Because the Servomotor's rotation speed is too high, regenerative energy cannot be fully absorbed within the specified deceleration time.</li> <li>3 The operating limit of the External Regeneration Resistor is limited to 10%.</li> </ol> | <p>Check the regeneration resistance load ratio. Continuous regenerative braking is not acceptable.</p> <ol style="list-style-type: none"> <li>1 Check the operation pattern (speed monitor). Check the regeneration resistance load ratio and the over-regeneration warning display. Increase the capacity of the Servomotor and the Servo Drive to slow down the deceleration time. Use an External Regeneration Resistor.</li> <li>2 Check the operation pattern (speed monitor). Check the regeneration resistance load ratio and the over-regeneration warning display. Increase the capacity of the Servomotor and the Servo Drive to slow down the deceleration time. Lower the Servomotor rotation speed. Use an External Regeneration Resistor.</li> <li>3 Set Pn06C to 2.</li> </ol> |
| 21         | Encoder communications error      | <p>Communications between the encoder and the Servo Drive failed for a specified number of times, thereby activating the error detection function. (No response to request from the Servo Drive.)</p>                                                                                                                                                                                                                                                                                                                                                                                                   | <p>Check that the encoder line is properly connected.</p> <p>Check that there is no damage to the encoder due to incorrect connections. Replace the Servomotor and check again.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 23         | Encoder communications data error | <p>Communications error occurred for the data from the encoder. Mainly a data error due to noise. The encoder line is connected, but the communications data is erroneous.</p>                                                                                                                                                                                                                                                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>• Check that the encoder power supply voltage is within the range of 4.75 to 5.25 VDC. (If the encoder line is long.)</li> <li>• If the Servomotor line and the encoder line are bound together, separate them.</li> <li>• Check that the shield is connected to FG (frame ground), and that FG is grounded.</li> <li>• Attach a ferrite core to the encoder cable. Attach a radio noise filter to the power cable.</li> </ul>                                                                                                                                                                                                                                                                                                                          |
| 24         | Deviation counter overflow        | <p>The number of position deviation pulses exceeded the Deviation Counter Overflow Level (Pn209).</p> <ol style="list-style-type: none"> <li>1 The Servomotor operation is not following the commands.</li> <li>2 The Deviation Counter Overflow Level (Pn209) is set too low. Calculate the deviation counter value based on the command speed and the position loop gain.</li> </ol>                                                                                                                                                                                                                  | <ol style="list-style-type: none"> <li>1 Use the speed monitor and torque monitor to check that the Servomotor is operating as commanded. Check that torque is not saturated. Check that the No. 1 Torque Limit (Pn05E) and the No. 2 Torque Limit (Pn05F) are not too small. Check by readjusting the gain, increasing the acceleration / deceleration times, and lowering the speed with the reduced load.</li> <li>2 Increase the setting for Pn209.</li> </ol>                                                                                                                                                                                                                                                                                                                             |

| Alarm code | Alarm Name                          | Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Countermeasure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 26         | Overspeed                           | The rotation speed of the Servomotor exceeded the setting of the Overspeed Detection Level Setting (Pn073).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <ul style="list-style-type: none"> <li>Check that excessive speed commands have not been issued.</li> <li>If overshoot is occurring due to improper gain adjustment, adjust the gain for the position loop and the speed loop.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 27         | Command error                       | <p>The operation command resulted in an error.</p> <ol style="list-style-type: none"> <li>Incorrect value in position command. <ul style="list-style-type: none"> <li>The amount of change in the position command (value calculated with the electronic gear ratio) exceeded the specified value.</li> <li>The travel distance required for acceleration / deceleration, calculated when starting positioning, exceeded the specified value.</li> </ul> </li> <li>A MECHATROLINK-II link was established with the host while executing a standalone operation (normal mode autotuning, and jog operation). <p><b>Note</b> If the alarms are cleared immediately after actuating communications, this alarm may be cleared immediately after it has been issued, and cannot be read.</p> </li> <li>Multi-turn data on the absolute encoder was cleared via RS-232 communications after actuating the MECHATROLINK-II link.</li> </ol> | <ul style="list-style-type: none"> <li>Check that the operation commands are correct.</li> </ul> <ol style="list-style-type: none"> <li>Review the operation commands and settings. Check the settings. For example, check that the amount of change for the position command is not too large (i.e. interpolation function), the backlash compensation amount is not too large, the backlash compensation time constant is not too small, the electronic gear ratio is not too large, and the acceleration/deceleration is not too small.</li> <li>Do not actuate the network while executing normal mode autotuning and jog operation.</li> <li>Alarm code 27 is issued when clearing the multi-turn data on the absolute encoder via RS-232 communications. This is for safety purposes, not an error. When executing the multi-turn clear command via the network, an alarm will not be issued, but be sure to reset the control power supply.</li> </ol> |
| 29         | Internal deviation counter overflow | The value of the internal deviation counter (internal control unit) exceeded $2^{27}$ (134217728).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <p>Check that the speed monitor and torque monitor values are indicated as commanded by the Servo Drive. Check that torque is not saturated. Check that the No. 1 Torque Limit (Pn05E) and the No. 2 Torque Limit (Pn05F) are not too small.</p> <p>Check by readjusting the gain, increasing the acceleration / deceleration times, and lowering the speed with the reduced load.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 34         | Overrun limit error                 | <p>The Servomotor exceeded the allowable operating range set by the Overrun Limit Setting (Pn026) with respect to the position command input.</p> <ol style="list-style-type: none"> <li>The gain is not appropriate for the load.</li> <li>The setting for Pn026 is too small.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <ol style="list-style-type: none"> <li>Check the position loop gain, speed loop gain, integration time constant, and inertia ratio.</li> <li>Increase the setting for Pn026. Set Pn026 to 0 to disable the protective function.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 36         | Parameter error                     | Data in the parameter save area was corrupted when the data was read from the EEPROM at power-ON.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <p>If the warning continues to occur even after retransferring all parameters, the Servo Drive may have failed. Replace the Servo Drive.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## 8-3 Troubleshooting

| Alarm code | Alarm Name                                              | Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Countermeasure                                                                                                                                                                                                                                                                          |
|------------|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 37         | Parameter corruption                                    | The EEPROM write verification data was corrupted when the data was read from the EEPROM at power-ON.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | If the warning continues to occur even after retransferring all parameters, the Servo Drive may have failed. Replace the Servo Drive.                                                                                                                                                   |
| 38         | Drive prohibit input error                              | <ol style="list-style-type: none"> <li>1 The Drive Prohibit Input Selection (Pn004) is set to 0, and both Forward and Reverse Drive Prohibit Inputs (POT and NOT) became OPEN.</li> <li>2 The Drive Prohibit Input Selection (Pn004) is set to 2, and either Forward or Reverse Drive Prohibit Input (POT or NOT) became OPEN.</li> <li>3 With the Drive Prohibit Input Selection (Pn004) set to 0, MECHATROLINK-II communications interrupted, and either Forward or Reverse Drive Prohibit Input (POT or NOT) turned ON, an operation command (jog operation or normal mode autotuning) was received via RS232. Or, either POT or NOT turned ON while operating on an operation command received via RS232.</li> </ol> | <p>Check the sensors, power supply, and wiring for the Forward and Reverse Drive Prohibit Inputs.</p> <p>Also check that the response of the power supply (12 to 24 VDC) is not too slow.</p> <p>Check that there is no command input in the direction of the Drive Prohibit Input.</p> |
| 40         | Absolute encoder system down error<br><b>ABS</b>        | The power supply and battery voltage to the encoder dropped, and the capacitor voltage dropped below the specified value. (3.0 V or less)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | <p>Connect the power supply for the battery, and clear the absolute encoder. Refer to <i>Absolute Encoder Setup</i> on page 6-6.</p> <p>Initial setup of the absolute encoder must be performed to clear the alarm.</p>                                                                 |
| 41         | Absolute encoder counter overflow error<br><b>ABS</b>   | The multi-turn counter of the encoder exceeded the specified value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <p>Check the setting for the Operation Switch When Using Absolute Encoder (Pn00B).</p> <p>Set the travel distance from the mechanical origin within 32767 rotations.</p> <p>Initial setup of the absolute encoder must be performed to clear the alarm.</p>                             |
| 42         | Absolute encoder overspeed error<br><b>ABS</b>          | The Servomotor rotation speed exceeded the specified value when power to the absolute encoder is supplied by the battery only during a power outage.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <p>Check the power supply voltage on the encoder side (5 V <math>\pm</math> 5%).</p> <p>Check the connection of the CN2 connector.</p> <p>Initial setup of the absolute encoder must be performed to clear the alarm.</p>                                                               |
| 44         | Absolute encoder one-turn counter error<br><b>ABS</b>   | An error was detected in the one-turn counter for the encoder.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <p>Replace the Servomotor.</p> <p>Check for malfunction due to noise.</p> <p>Also take EMC measures.</p> <p>Initial setup of the absolute encoder must be performed to clear the alarm.</p>                                                                                             |
| 45         | Absolute encoder multi-turn counter error<br><b>ABS</b> | An error was detected in the multi-turn counter for the encoder.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <p>Replace the Servomotor.</p> <p>Check for malfunction due to noise.</p> <p>Also take EMC measures.</p> <p>Initial setup of the absolute encoder must be performed to clear the alarm.</p>                                                                                             |



| Alarm code | Alarm Name                                  | Cause                                                                                                                                                                                                                                                                                                   | Countermeasure                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 47         | Absolute encoder status error<br><b>ABS</b> | The encoder's detection values were higher than the specified value at power-ON.                                                                                                                                                                                                                        | Do not rotate the Servomotor when the power is turned ON.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 48         | Encoder phase Z error                       | A phase-Z pulse of the 2500 p/r 5-line serial encoder was not detected regularly.<br>The encoder has failed.                                                                                                                                                                                            | Replace the Servomotor.<br>Check for malfunction due to noise.<br>Also take EMC measures.                                                                                                                                                                                                                                                                                                                                                                                                             |
| 49         | Encoder PS signal error                     | Logic error was detected in the PS signal (magnetic pole) of the 2500 p/r 5-line serial encoder.<br>The encoder has failed.                                                                                                                                                                             | Replace the Servomotor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 82         | Node address setting error                  | The rotary switch for setting the node address of the Servo Drive was set out of range. (Value is read at power-ON)                                                                                                                                                                                     | Check the value of the rotary switch for setting the node address.<br>Set the rotary switch correctly (set to 1 to 31), and then turn OFF the control power supply for the Servo Drive and turn it ON again.                                                                                                                                                                                                                                                                                          |
| 83         | Communications error                        | Data received during each MECHATROLINK-II communications cycle repeatedly failed, exceeding the number of times set by the Communications Control (Pn005).                                                                                                                                              | Check that commands are being sent from the master node to the slave node.<br>Check the MECHATROLINK-II communications cable for disconnection or wiring problem.<br>Check the connection of the terminator (termination resistor).<br>Check the MECHATROLINK-II communications cable for excessive noise, and that the cable is laid properly. Also check the FG wiring for the Servo Drive.<br>Increase the consecutive communications error detection count in the Communications Control (Pn005). |
| 84         | Transmission cycle error                    | While actuating MECHATROLINK-II communications, synchronization frames (SYNC) were not received according to the transmission cycle.<br>♦ The synchronization frames themselves were faulty.<br>♦ The transmission cycle of the synchronization frames was not as specified. (Includes dropped frames). | ♦ Check the transmission cycle of the synchronization frames sent from the master node, and ensure that it does not fluctuate and is as specified.<br>♦ Check the communications cable for disconnection or wiring problem.<br>♦ Check for excessive noise on the communications cable.<br>♦ Check the connection of the terminator (termination resistor).<br>♦ Check the laying of the communications cable and the FG wiring.                                                                      |
| 86         | Watchdog data error                         | Synchronization data exchanged between the master and slave nodes during each MECHATROLINK-II communications cycle resulted in an error.                                                                                                                                                                | ♦ Check the update process for the watchdog data (MN) on the master node.                                                                                                                                                                                                                                                                                                                                                                                                                             |

## 8-3 Troubleshooting

| Alarm code | Alarm Name                       | Cause                                                                                                                                                                     | Countermeasure                                                                                                                                                                                                                                                                                                                        |
|------------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 87         | Emergency stop input error       | <ul style="list-style-type: none"> <li>The emergency stop input became OPEN.</li> </ul>                                                                                   | <ul style="list-style-type: none"> <li>Check the power supply and wiring connected to the emergency stop input. Check that the emergency stop input is ON.</li> <li>Check that the response of the control signal power supply (12 to 24 VDC) at power-ON is not too slow in comparison to the startup of the Servo Drive.</li> </ul> |
| 90         | Transmission cycle setting error | <ul style="list-style-type: none"> <li>The transmission cycle setting for receiving the MECHATROLINK-II CONNECT command is incorrect.</li> </ul>                          | <ul style="list-style-type: none"> <li>Check the transmission cycle settings, and resend the CONNECT command.</li> </ul>                                                                                                                                                                                                              |
| 91         | SYNC command error               | <ul style="list-style-type: none"> <li>A SYNC-related command was issued while MECHATROLINK-II was in asynchronous communications mode.</li> </ul>                        | <ul style="list-style-type: none"> <li>Check the command sent from the master node.</li> </ul>                                                                                                                                                                                                                                        |
| 93         | Parameter setting error          | <ul style="list-style-type: none"> <li>The electronic gear ratio parameter is set outside the allowable setting range. (Less than 1/100 or greater than 100/1)</li> </ul> | <ul style="list-style-type: none"> <li>Check the parameter setting.</li> </ul>                                                                                                                                                                                                                                                        |
| 95         | Servomotor non-conformity        | <ul style="list-style-type: none"> <li>The combination of the Servomotor and Servo Drive is not appropriate.</li> </ul>                                                   | <ul style="list-style-type: none"> <li>Use the Servomotor and Servo Drive in the correct combination.</li> </ul>                                                                                                                                                                                                                      |
| Others     | Other errors                     | <p>The control circuit malfunctioned due to excessive noise.<br/>An error occurred within the Servo Drive due to the activation of its self-diagnosis function.</p>       | <p>Turn OFF the power supply, and then turn it back ON.<br/>If the error continues to occur, there may be a failure.<br/>Stop the operation, and replace the Servomotor and Servo Drive.</p>                                                                                                                                          |

## Error Diagnosis Using the Displayed Warning Codes

| Warning Code | Error                        | Cause                                                                                                                                                                                                                                                                                                                  | Countermeasure                                                                                                                                                                                                                                                                                        |
|--------------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 148<br>(94h) | Data setting warning         | <ul style="list-style-type: none"> <li>♦ Command argument setting is out of the range.</li> <li>♦ Parameter write failure.</li> <li>♦ Command settings are wrong, and others.</li> </ul>                                                                                                                               | <ul style="list-style-type: none"> <li>♦ Check the setting range.</li> <li>♦ Check the control power supply voltage.</li> <li>♦ Check the command settings.</li> </ul>                                                                                                                                |
| 149<br>(95h) | Command warning              | <ul style="list-style-type: none"> <li>♦ Command output conditions are not satisfied.</li> <li>♦ Received unsupported command.</li> <li>♦ Subcommand output conditions are not satisfied.</li> <li>♦ Operation command in the drive prohibited direction was issued after being stopped by a POT/NOT input.</li> </ul> | <ul style="list-style-type: none"> <li>♦ Send the command after the command output conditions are satisfied.</li> <li>♦ Do not send unsupported commands.</li> <li>♦ Follow the subcommand output conditions and send.</li> <li>♦ Check the status of POT/NOT input and operation command.</li> </ul> |
| 150<br>(96h) | ML-II communications warning | <ul style="list-style-type: none"> <li>♦ One or more MECHATROLINK-II communications error occurred.</li> </ul>                                                                                                                                                                                                         | <ul style="list-style-type: none"> <li>♦ Refer to the countermeasures for <i>Communications error</i> on page 8-12 (alarm code 83).</li> </ul>                                                                                                                                                        |
| 144<br>(90h) | Overload warning             | <ul style="list-style-type: none"> <li>♦ 85% of the overload alarm trigger level has been exceeded.</li> </ul>                                                                                                                                                                                                         | Refer to <i>Overload</i> on page 8-8.                                                                                                                                                                                                                                                                 |
| 145<br>(91h) | Regeneration overload        | <ul style="list-style-type: none"> <li>♦ 85% of the regeneration overload alarm trigger level has been exceeded.</li> </ul>                                                                                                                                                                                            | Refer to <i>Regeneration overload</i> on page 8-9.                                                                                                                                                                                                                                                    |
| 146<br>(92h) | Battery warning              | <ul style="list-style-type: none"> <li>♦ Voltage of absolute encoder battery has dropped below 3.2 V.</li> </ul>                                                                                                                                                                                                       | Replace the absolute encoder battery while the control power supply is being input.                                                                                                                                                                                                                   |
| 147<br>(93h) | Fan lock warning             | <ul style="list-style-type: none"> <li>♦ The built-in cooling fan stopped, or rotated abnormally.</li> <li>♦ Models with a built-in fan<br/>R88D- GN10H-ML2/ GN20H-ML2/<br/>GN30H-ML2/-GN40H-ML2/-GN50H-<br/>ML2/-GN75H-ML2</li> </ul>                                                                                 | <p>If the warning continues to occur, the fan may have failed.</p> <p>If so, the internal temperature of the Servo Drive will rise, causing a failure. Replace the fan.</p>                                                                                                                           |

## Error Diagnosis Using the Operating Status

| Symptom                         | Probable cause                                                              | Items to check                                                                                                                                     | Countermeasure                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| 7-segment LED is not lit.       | No control power supply.                                                    | Check that the control power supply voltage is within the specified range.                                                                         | Ensure that power is supplied properly.                                                                  |
|                                 |                                                                             | Check that the power supply input is wired correctly.                                                                                              | Wire correctly.                                                                                          |
| LED (COM) is not lit.           | MECHATROLINK-II communications not actuated.                                | Check that the network cable is connected correctly.                                                                                               | Check that the host controller is running.                                                               |
|                                 |                                                                             | Check that the terminator is connected.                                                                                                            | Check the connector and connection.                                                                      |
| LED (COM) is flashing in green. | Asynchronous communications on the MECHATROLINK-II communications actuated. | Can be controlled from the host controller (Normal status).                                                                                        | Normal status.                                                                                           |
| LED (COM) is lit in green.      | Synchronous communications on the MECHATROLINK-II communications actuated.  | Controllable status (Normal status).                                                                                                               | Normal status.                                                                                           |
| LED (COM) is flashing in red.   | Recoverable alarm related to MECHATROLINK-II communications.                | <ul style="list-style-type: none"> <li>Reset and actuate the network again from the host controller.</li> <li>Check the network wiring.</li> </ul> | Check the wiring and noise.                                                                              |
| LED (COM) is lit in red.        | Irrecoverable alarm related to MECHATROLINK-II communications.              | Check that there is no overlap of node address on the network, and that the number of connected Servo Drives is less than 17.                      | Correct the network address.                                                                             |
| An alarm has occurred.          | Read the alarm code and the alarm history.                                  | Check details of alarm by referring to <i>Error Diagnosis Using the Displayed Alarm Codes</i> on page 8-7.                                         | Take countermeasures by referring to <i>Error Diagnosis Using the Displayed Alarm Codes</i> on page 8-7. |

| Symptom                                                                  | Probable cause                                                                                              | Items to check                                                                                                                                     | Countermeasure                                                                               |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Does not Servo lock.                                                     | Not Servo locked.                                                                                           | Check the response of the NCF71 Servo lock bit.                                                                                                    | Set the Servo lock command bit on the host controller again.                                 |
|                                                                          | The power cable is not properly connected.                                                                  | Check the wiring of the Servomotor power cable.                                                                                                    | Wire the Servomotor power cable correctly.                                                   |
|                                                                          | Servomotor power is not ON.                                                                                 | Check the wiring of the main circuit, and the voltage of the power supply.                                                                         | Input the main circuit power supply and voltage correctly.                                   |
|                                                                          | The Forward and Reverse Drive Prohibit Inputs (POT and NOT) are OFF.                                        | <ul style="list-style-type: none"> <li>• Check that the inputs for POT and NOT are not OFF.</li> <li>• Check the +24 VIN input for CN1.</li> </ul> | Turn ON POT and NOT, and input +24 VIN correctly.                                            |
|                                                                          | Torque limit is 0.                                                                                          | Check that torque limits Pn05E and Pn05F are not set to 0.                                                                                         | Set the maximum torque to be used for each.                                                  |
|                                                                          | Torque control is used for the control from the host controller, and the torque command value is set to 0.  | Check the control mode and the torque command value for the host controller.                                                                       | Set the control mode for the host controller to position control mode, and check Servo lock. |
|                                                                          | Servo Drive failure.                                                                                        | ---                                                                                                                                                | Replace the Servo Drive.                                                                     |
| Servo lock is ON, but Servomotor does not rotate.                        | No command is sent from the host controller.                                                                | For position commands, check that speed and position are not set to 0.                                                                             | Input the position and speed data to start the Servomotor.                                   |
|                                                                          | Cannot tell whether the Servomotor is rotating.                                                             | Check that the speed command from the host controller is not too slow.                                                                             | Check the speed command from the host controller.                                            |
|                                                                          | The holding brake is working.                                                                               | Check the brake interlock (BKIR) signal and the +24 VDC power supply.                                                                              | For a Servomotor with brake, check that its holding brake is released by Servo lock.         |
|                                                                          | The No.1 and No. 2 Torque Limits (Pn05E, Pn05F) are too small.                                              | Check that the torque limits Pn05E and Pn05F are not set to a value close to 0.                                                                    | Set the maximum torque to be used for each.                                                  |
|                                                                          | Torque control is used for the control from the host controller, and the torque command value is too small. | Check the control mode and the torque command value for the host controller.                                                                       | Set the control mode for the host controller to position control mode, and check Servo lock. |
|                                                                          | The Speed Limit (Pn053) is set to 0 for torque control mode.                                                | Check the Speed Limit (Pn053) value.                                                                                                               | Increase the value for the Speed Limit (Pn053).                                              |
|                                                                          | Servo Drive failure.                                                                                        | ---                                                                                                                                                | Replace the Servo Drive.                                                                     |
| The Servomotor operates momentarily, but it does not operate after that. | The Servomotor Power Cable is wired incorrectly.                                                            | Check the wiring of the Servomotor Power Cable phases U, V, and W.                                                                                 | Correctly wire the Servomotor Power Cable phases U, V, and W.                                |
|                                                                          | Not enough position command data.                                                                           | Check the position data, electronic gear, and others for NCF71.                                                                                    | Set the correct data.                                                                        |

## 8-3 Troubleshooting

| Symptom                                                          | Probable cause                                                  | Items to check                                                                                                                                                                    | Countermeasure                                                                                                                                                           |
|------------------------------------------------------------------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The Servomotor rotates without a command.                        | There is a small input for speed command mode.                  | Check that there is no input for speed command mode.                                                                                                                              | Set the speed command to 0, or switch to position control mode.                                                                                                          |
|                                                                  | There is a small input for torque command mode.                 | Check that there is no input for torque command mode.                                                                                                                             | Switch from torque control mode to position control mode.                                                                                                                |
| The Servomotor rotates in the direction opposite to the command. | The Operating Direction Setting (Pn043) setting is incorrect.   | Check the Operating Direction Setting (Pn043) value.                                                                                                                              | Change the Operating Direction Setting (Pn043) value.                                                                                                                    |
|                                                                  | NCF71 command is incorrect.                                     | <ul style="list-style-type: none"> <li>Set values are inappropriate for an absolute command.</li> <li>The polarity is incorrect for an incremental command.</li> </ul>            | <ul style="list-style-type: none"> <li>Check the current and target values.</li> <li>Check the rotation direction.</li> </ul>                                            |
| The holding brake does not work.                                 | Power is supplied to the holding brake.                         | Check whether power is supplied to the holding brake.                                                                                                                             | <ul style="list-style-type: none"> <li>Check the brake interlock (BKIR) signal and the relay circuit.</li> <li>Check that the holding brake is not worn down.</li> </ul> |
| The Servomotor is overheating.                                   | The load is too large.                                          | Measure the torque using the front panel IM or a tool.                                                                                                                            | <ul style="list-style-type: none"> <li>Slow down the acceleration/deceleration.</li> <li>Lower the speed and measure the load.</li> </ul>                                |
|                                                                  | The heat radiation conditions for the Servomotor have worsened. | <ul style="list-style-type: none"> <li>Check that the specified heat radiation conditions are satisfied.</li> <li>For a Servomotor with a brake, check the load ratio.</li> </ul> | <ul style="list-style-type: none"> <li>Improve the heat radiation conditions.</li> <li>Reduce the load.</li> <li>Improve ventilation.</li> </ul>                         |
|                                                                  | The ambient temperature is too high.                            | Check that the ambient temperature has not exceeded 40 °C.                                                                                                                        | <ul style="list-style-type: none"> <li>Radiate heat and cool.</li> <li>Reduce the load ratio.</li> </ul>                                                                 |
| The Servomotor rotation is unstable.                             | Load and gain do not match.                                     | Check the response waveforms for speed and torque.                                                                                                                                | Adjust the speed loop gain so that the rotation is stabilized.                                                                                                           |
|                                                                  | Load inertia exceeds the specified range.                       | Calculate the load inertia.                                                                                                                                                       | <ul style="list-style-type: none"> <li>Check if the adjustments can be made via manual tuning.</li> <li>Increase the capacity of the Servomotor.</li> </ul>              |
|                                                                  | Low rigidity is resulting in vibration.                         | Measure the vibration frequency of the load.                                                                                                                                      | Enable damping control, and set the vibration filter frequencies.                                                                                                        |
|                                                                  | Loose coupling with the machine, and/or large gaps.             | Check coupling with the machine.                                                                                                                                                  | Tighten the coupling with the machine.                                                                                                                                   |

| Symptom                                                                                                | Probable cause                                                                                         | Items to check                                                                                                                 | Countermeasure                                                                                                                                                          |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Machine position is misaligned.                                                                        | Problem with the coupling between the Servomotor axis and the machine.                                 | Check that the coupling of the Servomotor and the machine is not misaligned.                                                   | <ul style="list-style-type: none"> <li>♦ Re-tighten the coupling.</li> <li>♦ Replace with a tight coupling.</li> </ul>                                                  |
|                                                                                                        | Deceleration stop command is received from the host controller.                                        | Check the control ladder on the host controller.                                                                               | Review the control on the host controller.                                                                                                                              |
| The Servomotor is slow to stop even if the RUN command is turned OFF while the Servomotor is rotating. | Load inertia is too large.                                                                             | <ul style="list-style-type: none"> <li>♦ Check the load inertia.</li> <li>♦ Dynamic brake resistor is disconnected.</li> </ul> | <ul style="list-style-type: none"> <li>♦ Review the load inertia.</li> <li>♦ Replace the Servomotor and Servo Drive with appropriate models.</li> </ul>                 |
|                                                                                                        | Dynamic brake is disabled.                                                                             | Check if the dynamic brake is disabled or has failed.                                                                          | <ul style="list-style-type: none"> <li>♦ If disabled, enable it.</li> <li>♦ If there is a failure, or disconnection of the resistor, replace the Servomotor.</li> </ul> |
| Overshoots when starting or stopping.                                                                  | The Position Loop Gain (Pn010) is too large.                                                           | Review the Position Loop Gain (Pn010).                                                                                         | Adjust the gain to avoid overshooting.                                                                                                                                  |
|                                                                                                        | Poor balance between the Speed Loop Integration Time Constant (Pn012) and the Speed Loop Gain (Pn011). | Review the Speed Loop Integration Time Constant (Pn012) and the Speed Loop Gain (Pn011).                                       | Use CX-Drive and analog monitors (SP, IM) to measure the response and adjust the gain.                                                                                  |
|                                                                                                        | Inappropriate machine rigidity setting by realtime autotuning.                                         | Review the machine rigidity setting.                                                                                           | Match the machine rigidity setting to the load rigidity.                                                                                                                |
|                                                                                                        | Inertial ratio setting differs from the load.                                                          | Review the Inertial Ratio (Pn020).                                                                                             | Match the Inertia Ratio (Pn020) to the load.                                                                                                                            |

## 8-3 Troubleshooting

| Symptom                                                             | Probable cause                                                                                                                                                                                                 | Items to check                                                                                                        | Countermeasure                                                                                                                                      |
|---------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Unusual noise and vibration occurs from the Servomotor or the load. | The Torque Command Filter Time Constant (Pn014) does not match the load.                                                                                                                                       | Review the Torque Command Filter Time Constant (Pn014).                                                               | Increase the Torque Command Filter Time Constant (Pn014) to stop the vibration.                                                                     |
|                                                                     | Vibration occurs due to machine resonance.                                                                                                                                                                     | Check if the resonance frequency is high or low.                                                                      | If the resonance frequency is high, set an adaptive filter to stop the resonance, or measure the resonance frequency and set Notch Filters 1 and 2. |
|                                                                     | <ul style="list-style-type: none"> <li>The Position Loop Gain (Pn010) is too large.</li> <li>Poor balance between the Speed Loop Integration Time Constant (Pn012) and the Speed Loop Gain (Pn011).</li> </ul> | Review the Position Loop Gain (Pn010), Speed Loop Integration Time Constant (Pn012), and the Speed Loop Gain (Pn011). | Use CX-Drive and analog monitors (SP, IM) to measure the response and adjust the gain.                                                              |
|                                                                     | The Speed Feedback Filter Time Constant (Pn013) does not match the load.                                                                                                                                       | Check the Speed Feedback Filter Time Constant (Pn013). The parameter is usually set to 0.                             | Increase the Speed Feedback Filter Time Constant (Pn013) and operate.                                                                               |
|                                                                     | Vibration occurs due to low mechanical rigidity.                                                                                                                                                               | Check whether the vibration frequency is 100 Hz or below.                                                             | If the vibration frequency is 100 Hz or below, stop the vibration by setting the vibration frequency for the vibration filter.                      |
|                                                                     | Vibration occurs due to mechanical installation.                                                                                                                                                               | Check whether the coupling with the load is unbalanced.                                                               | Make adjustments to balance the rotation.                                                                                                           |
|                                                                     |                                                                                                                                                                                                                | Check for eccentricity of the load.                                                                                   | Eliminate eccentricity. Eccentricity of the load results in noise due to fluctuation of torque.                                                     |
|                                                                     |                                                                                                                                                                                                                | Check for noise from within the decelerator.                                                                          | Check the decelerator specifications and perform an inspection.                                                                                     |



## 8-4 Overload Characteristics (Electronic Thermal Function)



An overload protection (electronic thermal) function is built into the Servo Drive to protect the Servo Drive and Servomotor from overloading.

If an overload does occur, first eliminate the cause of the error and then wait at least one minute for the Servomotor temperature to drop before turning on the power again.

If the power is turned ON again repeatedly at short intervals, the Servomotor windings may burn out.

### Overload Characteristics Graphs

The following graphs show the characteristics of the load ratio and the electronic thermal function's operation time.

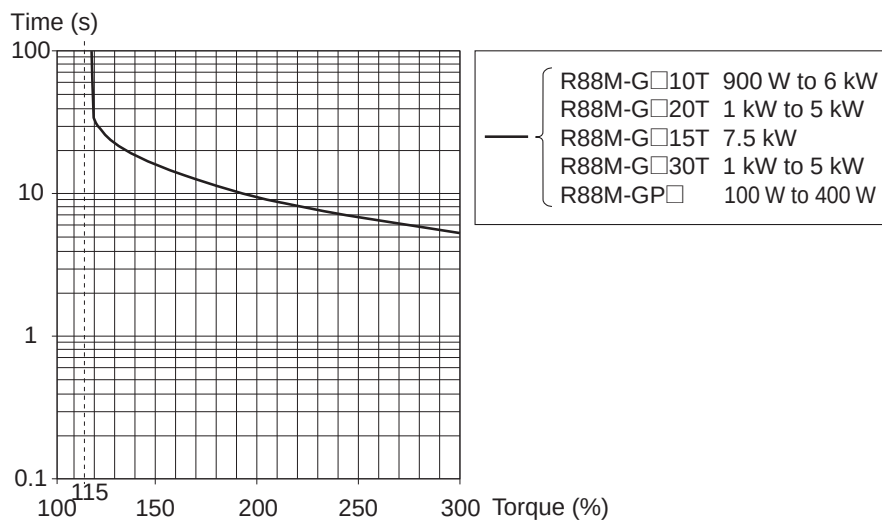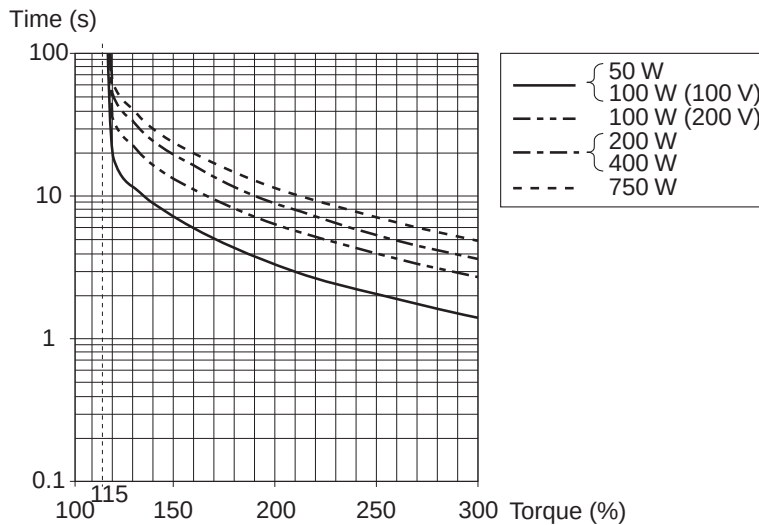

When the torque command = 0, and a constant torque command is continuously applied after three or more times the overload time constant has elapsed, the overload time  $t$  [s] will be:

$$t \text{ [s]} = - \text{Overload time constant [s]} \times \log_e (1 - \text{Overload level [\%]} / \text{Torque command [\%]})^2$$

(The overload time constant [s] depends on the Servomotor. The standard overload level is 115%.)

#### Precautions for Correct Use

- ♦ Overload (alarm code 16) cannot be reset for approximately 10 seconds after its occurrence.

## 8-5 Periodic Maintenance



### Caution



Resume operation only after transferring to the new Unit the contents of the data required for operation.  
Not doing so may result in equipment damage.



Do not attempt to disassemble or repair any of the products.  
Any attempt to do so may result in electric shock or injury.

Servomotors and Servo Drives contain many components and will operate properly only when each of the individual components is operating properly.

Some of the electrical and mechanical components require maintenance depending on application conditions. Periodic inspection and part replacement are necessary to ensure proper long-term operation of Servomotors and Servo Drives. (quotes from "The Recommendation for Periodic Maintenance of a General-purpose Inverter" published by JEMA)

The periodic maintenance cycle depends on the installation environment and application conditions of the Servomotor or Servo Drive.

Recommended maintenance times are listed below for Servomotors and Servo Drives. Use these for reference in determining actual maintenance schedules.

### Servomotor Service Life

- ♦ The service life for components is listed below.

Bearings: 20,000 hours

Decelerator: 20,000 hours

Oil seal: 5,000 hours

Encoder: 30,000 hours

These values presume an ambient Servomotor operating temperature of 40°C, shaft loads within the allowable range, rated operation (rated torque and rated r/min), and proper installation as described in this manual.

The oil seal can be replaced.

- ♦ The radial loads during operation (rotation) on timing pulleys and other components contacting belts is twice the still load. Consult with the belt and pulley manufacturers and adjust designs and system settings so that the allowable shaft load is not exceeded even during operation. If a Servomotor is used under a shaft load exceeding the allowable limit, the Servomotor shaft can break, the bearings can burn out, and other problems can occur.

## Servo Drive Service Life

- ♦ Details on the service life of the Servo Drive are provided below.
  - Aluminum electrolytic capacitors: 28,000 hours  
(at an ambient Servo Drive operating temperature of 55°C, the rated operation output (rated torque), installed as described in this manual.)
  - Axial fan: 10,000 to 30,000 hours
  - Inrush current prevention relay: Approx. 20,000 operations (The service life depends on the operating conditions.)
- ♦ When using the Servo Drive in continuous operation, use fans or air conditioners to maintain an ambient operating temperature below 40°C.
- ♦ We recommend that ambient operating temperature and the power ON time be reduced as much as possible to lengthen the service life of the Servo Drive.
- ♦ The life of aluminum electrolytic capacitors is greatly affected by the ambient operating temperature. Generally speaking, an increase of 10°C in the ambient operating temperature will reduce capacitor life by 50%.
- ♦ The aluminum electrolytic capacitors deteriorate even when the Servo Drive is stored with no power supplied. If the Servo Drive is not used for a long time, we recommend a periodic inspection and part replacement schedule of five years.
- ♦ If the Servomotor or Servo Drive is not to be used for a long time, or if they are to be used under conditions worse than those described above, a periodic inspection schedule of five years is recommended.
- ♦ Upon request, OMRON will examine the Servo Drive and Servomotor and determine if a replacement is required.

## Replacing the Absolute Encoder Battery **ABS**

Replace the Absolute Encoder Backup Battery if it has been used for more than three years or if an absolute encoder system down error (alarm code 40) has occurred.

### ■ Replacement Battery Model and Specifications

| Item             | Specifications                  |
|------------------|---------------------------------|
| Name             | Absolute Encoder Backup Battery |
| Model            | R88A-BAT01G                     |
| Battery model    | ER6V (Toshiba)                  |
| Battery voltage  | 3.6 V                           |
| Current capacity | 2000 mA·h                       |

### ■ Mounting the Backup Battery

#### Mounting the Battery for the First Time

Connect the absolute encoder battery to the Servomotor, and then set up the absolute encoder. Refer to *Absolute Encoder Setup* on page 6-6.

Once the absolute encoder battery is attached, it is recommended that the control power supply be turned ON and OFF once a day to refresh the battery.

If you neglect to refresh the battery, battery errors may occur due to voltage delay in the battery.

#### Replacing the Battery

If a battery alarm occurs, the absolute encoder battery must be replaced.


Replace the battery with the control power supply to the Servo Drive ON. If the battery is replaced with the control power supply to the Servo Drive OFF, data held in the encoder will be lost.

Once the absolute encoder battery has been replaced, clear the battery alarm. For details on clearing the alarm, refer to *Alarm Reset* on page 6-25.


**Note** If the absolute encoder is cleared, or the absolute values are cleared using communications, all error and rotation data will be lost and the absolute encoder must be set up again. For details, refer to *Absolute Encoder Setup* on page 6-6.

**Battery Mounting Procedure**


- 1. Prepare the R88A-BAT01G replacement battery.**

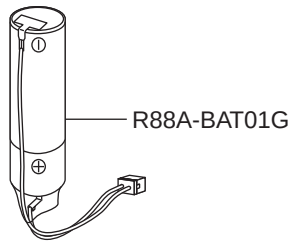


- 2. Remove the battery box cover.**

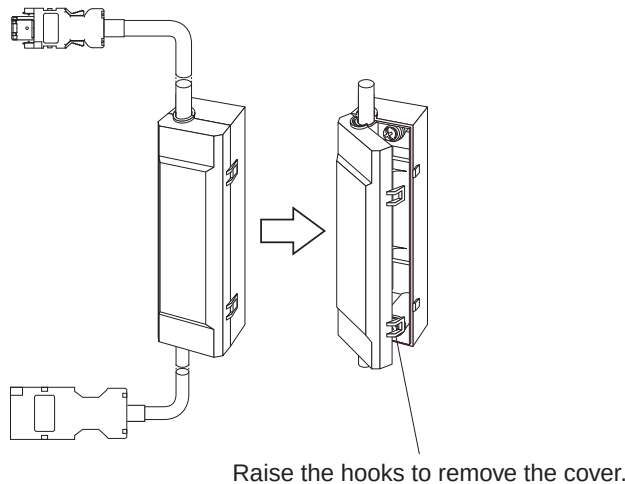

- 3. Put the battery into the battery box.**

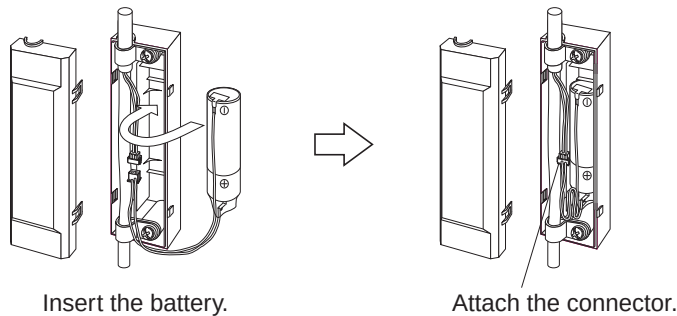

- 4. Close the cover to the battery box.**

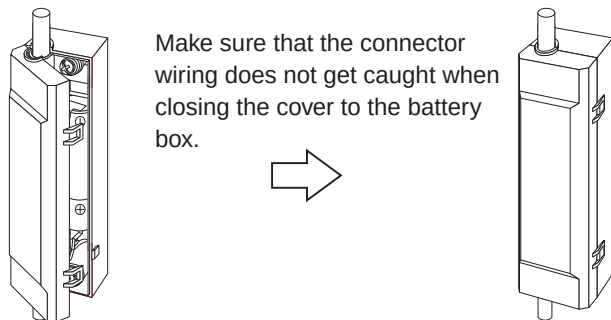



# Chapter 9

## Appendix

|     |                       |     |
|-----|-----------------------|-----|
| 9-1 | Parameter Tables..... | 9-1 |
|-----|-----------------------|-----|

# 9-1 Parameter Tables

The attribute indicates when the changed setting for the parameter will be enabled.

|   |                                                                                                                                                                              |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A | Always enabled after change                                                                                                                                                  |
| B | Change prohibited during Servomotor operation and command issuance.<br>(It is not known when changes made during Servomotor operation and command issuance will be enabled.) |
| C | Enabled when the control power supply is reset, or when a CONFIG command is executed via the network (MECHATROLINK-II communications).                                       |
| R | Read-only and cannot be changed.                                                                                                                                             |

**Note 1.** Parameters marked with "(RT)" are automatically set during realtime autotuning. To set these parameters manually, disable realtime autotuning by setting the Realtime Autotuning Mode Selection (Pn021) to 0 before changing the parameter.

**Note 2.** Parameter No. is the number for MECHATROLINK-II communications and CX-Drive. The Parameter Unit shows only the last two digits. Parameter numbers in the 100s specify 16-bit parameters, and numbers in the 200s specify 32-bit parameters.



User parameters are set and checked on CX-Drive or the Parameter Unit (R88A-PR02G).

### ■ Parameter Tables

| Pn No. | Parameter name  | Setting                                                                           | Explanation                                                             | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|-----------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------|-----------------|------|---------------|-----------|-----------|
| 000    | Reserved        | Do not change.                                                                    |                                                                         | 1               | ---  | ---           | ---       |           |
| 001    | Default Display | Selects the data to be displayed on the 7-segment LED display on the front panel. |                                                                         | 0               | ---  | 0 to 4        | A         |           |
|        |                 | 0                                                                                 | Normal status ("--" Servo OFF, "00" Servo ON)                           |                 |      |               |           |           |
|        |                 | 1                                                                                 | Mechanical angle (0 to FF hex)                                          |                 |      |               |           |           |
|        |                 | 2                                                                                 | Electrical angle (0 to FF hex)                                          |                 |      |               |           |           |
|        |                 | 3                                                                                 | Cumulative count for MECHATROLINK-II communication errors (0 to FF hex) |                 |      |               |           |           |
|        |                 | 4                                                                                 | Rotary switch setting (node address) loaded at startup, in decimal      |                 |      |               |           |           |
|        |                 | 5 to 32767                                                                        | Reserved (Do not set.)                                                  |                 |      |               |           |           |
| 002    | Reserved        | Do not change.                                                                    |                                                                         | 0               | ---  | ---           | ---       |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name         | Setting                                                                                                                                                                                                                                                            | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|-----------|
| 003    | Torque Limit Selection | Selects the torque limit function, or the torque feed-forward function during speed control.                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 1               | ---  | 1 to 5        | B         |           |
|        |                        | ■ Torque Limit Selection<br>For torque control, always select Pn05E.<br>For position control and speed control, select the torque limit as follows.                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                 |      |               |           |           |
|        |                        | 1                                                                                                                                                                                                                                                                  | Use Pn05E as limit value for forward and reverse operations.                                                                                                                                                                                                                                                                                                                                                                                                                                     |                 |      |               |           |           |
|        |                        | 2                                                                                                                                                                                                                                                                  | Forward: Use Pn05E.<br>Reverse: Use Pn05F.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                 |      |               |           |           |
|        |                        | 3                                                                                                                                                                                                                                                                  | Switch limits by torque limit values and input signals from the network.<br>Limit in forward direction:<br>PCL is OFF = Pn05E,<br>PCL is ON = Pn05F<br>Limit in reverse direction:<br>NCL is OFF = Pn05E,<br>NCL is ON = Pn05F                                                                                                                                                                                                                                                                   |                 |      |               |           |           |
|        |                        | 4                                                                                                                                                                                                                                                                  | Forward: Use Pn05E as limit<br>Reverse: Use Pn05F as limit<br>Only in speed control, limits can be switched by torque limit values from the network as follows:<br>Limit in forward direction:<br>Use Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>Use Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller.                                                                                        |                 |      |               |           |           |
|        |                        | 5                                                                                                                                                                                                                                                                  | Forward: Use Pn05E as limit<br>Reverse: Use Pn05F as limit<br>Only in speed control, torque limits can be switched by torque limit values and input signals from the network as follows.<br>Limit in forward direction:<br>PCL is OFF = Pn05E,<br>PCL is ON = Pn05E or MECHATROLINK-II command option command value 1, whichever is smaller.<br>Limit in reverse direction:<br>NCL is OFF = Pn05F,<br>NCL is ON = Pn05F or MECHATROLINK-II command option command value 2, whichever is smaller. |                 |      |               |           |           |
|        |                        | <b>Note</b> PCL ON: When either Forward Torque Limit (CN1 PCL: pin 7) or MECHATROLINK-II Communications Option Field (P-CL) is ON.<br><br>PCL OFF: When both Forward Torque Limit (CN1 PCL: pin 7) and MECHATROLINK-II Communications Option Field (P-CL) are OFF. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                 |      |               |           |           |
|        |                        | ■ Torque Feed-forward Function Selection                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                 |      |               |           |           |
|        |                        | 1 to 3                                                                                                                                                                                                                                                             | Enabled only during speed control.<br>Disabled if not using speed control.                                                                                                                                                                                                                                                                                                                                                                                                                       |                 |      |               |           |           |
| 4 to 5 | Always disabled        |                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                 |      |               |           |           |

| Pn No. | Parameter name                            | Setting   | Explanation                                                                                                                                                                                                                                               | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|-------------------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|-----------|
| 004    | Drive Prohibit Input Selection            |           | Selects the function for the Forward and Reverse Drive Prohibit Inputs (CN1 POT: pin 19, NOT: pin 20).                                                                                                                                                    | 0               | ---  | 0 to 2        | C         |           |
|        |                                           | 0         | Decelerates and stops according to the sequence set in the Stop Selection for Drive Prohibition Input (Pn066) when both POT and NOT inputs are enabled. When both POT and NOT inputs are OPEN, the Drive Prohibit Input Error (alarm code 38) will occur. |                 |      |               |           |           |
|        |                                           | 1         | Both POT and NOT inputs disabled.                                                                                                                                                                                                                         |                 |      |               |           |           |
|        |                                           | 2         | When either POT or NOT input becomes OPEN, the Drive Prohibit Input Error (alarm code 38) will occur.                                                                                                                                                     |                 |      |               |           |           |
| 005    | Communications Control                    |           | Controls errors and warnings for MECHATROLINK-II communications.                                                                                                                                                                                          | 0               | ---  | 0 to 3955     | C         |           |
| 006    | Power ON Address Display Duration Setting |           | Sets the duration to display the node address when the control power is turned ON.                                                                                                                                                                        | 30              | ms   | 0 to 1000     | C         |           |
|        |                                           | 0 to 6    | 600ms                                                                                                                                                                                                                                                     |                 |      |               |           |           |
|        |                                           | 7 to 1000 | set value × 100 ms                                                                                                                                                                                                                                        |                 |      |               |           |           |
| 007    | Speed Monitor (SP) Selection              |           | Selects the output to the Analog Speed Monitor (SP on the front panel). Forward rotation is always positive (+), and reverse rotation is always negative (-).                                                                                             | 3               | ---  | 0 to 11       | A         | ---       |
|        |                                           | 0         | Actual Servomotor speed: 47 r/min/6 V                                                                                                                                                                                                                     |                 |      |               |           |           |
|        |                                           | 1         | Actual Servomotor speed: 188 r/min/6 V                                                                                                                                                                                                                    |                 |      |               |           |           |
|        |                                           | 2         | Actual Servomotor speed: 750 r/min/6 V                                                                                                                                                                                                                    |                 |      |               |           |           |
|        |                                           | 3         | Actual Servomotor speed: 3000 r/min/6 V                                                                                                                                                                                                                   |                 |      |               |           |           |
|        |                                           | 4         | Actual Servomotor speed: 12000 r/min/6 V                                                                                                                                                                                                                  |                 |      |               |           |           |
|        |                                           | 5         | Command speed: 47 r/min/6 V                                                                                                                                                                                                                               |                 |      |               |           |           |
|        |                                           | 6         | Command speed: 188 r/min/6 V                                                                                                                                                                                                                              |                 |      |               |           |           |
|        |                                           | 7         | Command speed: 750 r/min/6 V                                                                                                                                                                                                                              |                 |      |               |           |           |
|        |                                           | 8         | Command speed: 3000 r/min/6 V                                                                                                                                                                                                                             |                 |      |               |           |           |
|        |                                           | 9         | Command speed: 12000 r/min/6 V                                                                                                                                                                                                                            |                 |      |               |           |           |
|        |                                           | 10        | Outputs the Issuance Completion Status (DEN).<br>0 V: Issuing<br>5 V: Issuance complete                                                                                                                                                                   |                 |      |               |           |           |
|        |                                           | 11        | Outputs the Gain Selection Status.<br>0 V: Gain 2<br>5 V: Gain 1                                                                                                                                                                                          |                 |      |               |           |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name                               | Setting                                | Explanation                                                                                                                                                                                | Default Setting | Unit       | Setting Range | Attribute | Set value |
|--------|----------------------------------------------|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------------|---------------|-----------|-----------|
| 008    | Torque Monitor (IM) Selection                |                                        | Selects the output to the Analog Torque Monitor (IM on the front panel).<br>Forward rotation is always positive (+), and reverse rotation is always negative (–).                          | 0               | ---        | 0 to 14       | A         |           |
|        |                                              | 0                                      | Torque command: 100%/3 V                                                                                                                                                                   |                 |            |               |           |           |
|        |                                              | 1                                      | Position deviation: 31 pulses/3 V                                                                                                                                                          |                 |            |               |           |           |
|        |                                              | 2                                      | Position deviation: 125 pulses/3 V                                                                                                                                                         |                 |            |               |           |           |
|        |                                              | 3                                      | Position deviation: 500 pulses/3 V                                                                                                                                                         |                 |            |               |           |           |
|        |                                              | 4                                      | Position deviation: 2000 pulses/3 V                                                                                                                                                        |                 |            |               |           |           |
|        |                                              | 5                                      | Position deviation: 8000 pulses/3 V                                                                                                                                                        |                 |            |               |           |           |
|        |                                              | 6 to 10                                | Reserved                                                                                                                                                                                   |                 |            |               |           |           |
|        |                                              | 11                                     | Torque command: 200%/3 V                                                                                                                                                                   |                 |            |               |           |           |
|        |                                              | 12                                     | Torque command: 400%/3 V                                                                                                                                                                   |                 |            |               |           |           |
|        |                                              | 13                                     | Outputs the Issuance Completion Status (DEN).<br>0 V: Issuing<br>5 V: Issuance complete                                                                                                    |                 |            |               |           |           |
|        |                                              | 14                                     | Outputs the Gain Selection Status.<br>0 V: Gain 2<br>5 V: Gain 1                                                                                                                           |                 |            |               |           |           |
| 009    | Reserved                                     | Do not change.                         |                                                                                                                                                                                            | 0               | ---        | ---           | ---       |           |
| 00A    | Prohibit Parameter Changes via Network       |                                        | Allows/prohibits parameter changes via the network.                                                                                                                                        | 0               | ---        | 0 to 1        | A         |           |
|        |                                              | 0                                      | Allows parameter changes from the host controller via the network.                                                                                                                         |                 |            |               |           |           |
|        |                                              | 1                                      | Prohibits parameter changes from the host controller via the network.<br>Attempting to change a parameter via the network when prohibited triggers the Command Warning (warning code 95h). |                 |            |               |           |           |
| 00B    | Operation Switch When Using Absolute Encoder |                                        | Selects how the absolute encoder is used.<br>This parameter is disabled when using an incremental encoder.                                                                                 | 0               | ---        | 0 to 2        | C         |           |
|        |                                              | 0                                      | Use as an absolute encoder.                                                                                                                                                                |                 |            |               |           |           |
|        |                                              | 1                                      | Use an absolute encoder as incremental encoder.                                                                                                                                            |                 |            |               |           |           |
|        |                                              | 2                                      | Use as an absolute encoder, but ignore absolute multi-turn counter overflow error (alarm code 41).                                                                                         |                 |            |               |           |           |
| 00C    | RS-232 Baud Rate Setting                     |                                        | Sets the baud rate for RS-232 communications.                                                                                                                                              | 2               | ---        | 0 to 5        | C         |           |
|        |                                              | 0                                      | 2,400 bps                                                                                                                                                                                  |                 |            |               |           |           |
|        |                                              | 1                                      | 4,800 bps                                                                                                                                                                                  |                 |            |               |           |           |
|        |                                              | 2                                      | 9,600 bps                                                                                                                                                                                  |                 |            |               |           |           |
|        |                                              | 3                                      | 19,200 bps                                                                                                                                                                                 |                 |            |               |           |           |
|        |                                              | 4                                      | 38,400 bps                                                                                                                                                                                 |                 |            |               |           |           |
|        |                                              | 5                                      | 57,600 bps                                                                                                                                                                                 |                 |            |               |           |           |
| 00D    | Reserved                                     | Do not change.                         |                                                                                                                                                                                            | 0               | ---        | ---           | ---       |           |
| 00E    | Reserved                                     | Do not change.                         |                                                                                                                                                                                            | 0               | ---        | ---           | ---       |           |
| 00F    | Reserved                                     | Do not change.                         |                                                                                                                                                                                            | 0               | ---        | ---           | ---       |           |
| 010    | Position Loop Gain (RT)                      | Sets the position loop responsiveness. |                                                                                                                                                                                            | 400             | ×0.1 [1/s] | 0 to 30000    | B         |           |

| Pn No. | Parameter name                              | Setting                                                                                                                                                                                                                    | Explanation     | Default Setting | Unit       | Setting Range | Attribute | Set value |
|--------|---------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------|------------|---------------|-----------|-----------|
| 011    | Speed Loop Gain (RT)                        | Sets the speed loop responsiveness.<br>If the Inertia Ratio (Pn020) is set correctly, this parameter is set to the Servomotor response frequency.                                                                          |                 | 500             | ×0.1 Hz    | 1 to 30000    | B         |           |
| 012    | Speed Loop Integration Time Constant (RT)   | Adjusts the speed loop integration time constant. Set 9999 to stop integration operation while retaining the integration value. A Setting of 10000 disables integration.                                                   |                 | 200             | ×0.1 ms    | 1 to 10000    | B         |           |
| 013    | Speed Feedback Filter Time Constant (RT)    | Sets the type of speed detection filter time constant. Normally, use a setting of 0.                                                                                                                                       |                 | 0               | ---        | 0 to 5        | B         |           |
| 014    | Torque Command Filter Time Constant (RT)    | Adjusts the first-order lag filter time constant for the torque command section.<br>The torque filter setting may reduce machine vibration.                                                                                |                 | 80              | ×0.01 ms   | 0 to 2500     | B         |           |
| 015    | Speed Feed-forward Amount (RT)              | Sets the speed feed-forward amount.<br>This parameter is particularly useful when fast response is required.                                                                                                               |                 | 300             | ×0.1 %     | 0 to 1000     | B         |           |
| 016    | Feed-forward Filter Time Constant (RT)      | Sets the time constant for the speed feed-forward first-order lag filter.                                                                                                                                                  |                 | 100             | ×0.01 ms   | 0 to 6400     | B         |           |
| 017    | Reserved                                    | Do not change.                                                                                                                                                                                                             |                 | 0               | ---        | ---           | ---       |           |
| 018    | Position Loop Gain 2 (RT)                   | Sets the position loop gain when using gain 2 switching.                                                                                                                                                                   |                 | 200             | ×0.1 [1/s] | 0 to 30000    | B         |           |
| 019    | Speed Loop Gain 2 (RT)                      | Sets the speed loop gain when using gain 2 switching.                                                                                                                                                                      |                 | 800             | ×0.1 Hz    | 1 to 30000    | B         |           |
| 01A    | Speed Loop Integration Time Constant 2 (RT) | Sets the speed loop integration time constant when using gain 2 switching.<br>Same function as Pn012.<br>Set 9999 to stop integration operation while retaining the integration value. Setting 10000 disables integration. |                 | 500             | ×0.1 ms    | 1 to 10000    | B         |           |
| 01B    | Speed Feedback Filter Time Constant 2 (RT)  | Sets the speed detection filter when using gain 2 switching.<br>Normally, use a setting of 0.<br>When Instantaneous Speed Observer Setting (Pn027) is enabled, this parameter will be disabled.                            |                 | 0               | ---        | 0 to 5        | B         |           |
| 01C    | Torque Command Filter Time Constant 2 (RT)  | Sets the first-order lag filter time constant for the torque command section when using gain 2 switching.                                                                                                                  |                 | 100             | ×0.01 ms   | 0 to 2500     | B         |           |
| 01D    | Notch Filter 1 Frequency                    | Sets the notch frequency of notch filter 1 for resonance suppression.                                                                                                                                                      |                 | 1500            | Hz         | 100 to 1500   | B         |           |
|        |                                             | 100 to 1499                                                                                                                                                                                                                | Filter enabled  |                 |            |               |           |           |
|        |                                             | 1500                                                                                                                                                                                                                       | Filter disabled |                 |            |               |           |           |
| 01E    | Notch Filter 1 Width                        | Selects the notch width of notch filter 1 for resonance suppression.<br>Normally, use a setting of 2.                                                                                                                      |                 | 2               | ---        | 0 to 4        | B         |           |
| 01F    | Reserved                                    | Do not change.                                                                                                                                                                                                             |                 | 0               | ---        | ---           | ---       |           |
| 020    | Inertia Ratio (RT)                          | Selects the load inertia as a percentage of the Servomotor rotor inertia.                                                                                                                                                  |                 | 300             | %          | 0 to 10000    | B         |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name                                 | Setting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Explanation                                                                        |                                  | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|----------------------------------|-----------------|------|---------------|-----------|-----------|
| 021    | Realtime Autotuning Mode Selection             | Sets the operating mode for realtime autotuning.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                    |                                  | 0               | ---  | 0 to 7        | B         |           |
|        |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Realtime Autotuning                                                                | Degree of change in load inertia |                 |      |               |           |           |
|        |                                                | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Disabled                                                                           | ---                              |                 |      |               |           |           |
|        |                                                | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Horizontal axis mode                                                               | Almost no change                 |                 |      |               |           |           |
|        |                                                | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Gradual changes                  |                 |      |               |           |           |
|        |                                                | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Sudden changes                   |                 |      |               |           |           |
|        |                                                | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Vertical axis mode                                                                 | Almost no change                 |                 |      |               |           |           |
|        |                                                | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Gradual changes                  |                 |      |               |           |           |
|        |                                                | 6                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Sudden changes                   |                 |      |               |           |           |
|        |                                                | 7                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Gain switching disable mode                                                        | Almost no change                 |                 |      |               |           |           |
| 022    | Realtime Autotuning Machine Rigidity Selection | Sets the machine rigidity for realtime autotuning. Cannot be set to 0 when using the Parameter Unit.                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                    |                                  | 2               | ---  | 0 to F        | B         |           |
| 023    | Adaptive Filter Selection                      | Enables or disables the adaptive filter.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                    |                                  | 0               | ---  | 0 to 2        | B         |           |
|        |                                                | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Adaptive filter disabled.                                                          |                                  |                 |      |               |           |           |
|        |                                                | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Adaptive filter enabled. Adaptive operation performed.                             |                                  |                 |      |               |           |           |
|        |                                                | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Adaptive filter enabled. Adaptive operation will not be performed (i.e. retained). |                                  |                 |      |               |           |           |
| 024    | Vibration Filter Selection                     | Selects the vibration filter type and the switching mode.<br>■ Filter type selection<br>♦ Normal type:<br>Vibration frequency setting range:<br>10.0 to 200.0 Hz<br>♦ Low-pass type:<br>Vibration frequency setting range:<br>1.0 to 200.0 Hz<br>■ Switching mode selection<br>♦ No switching: Both 1 and 2 are enabled<br>♦ Switching with command direction:<br>Selects Vibration Frequency 1 in forward direction (Pn02B, Pn02C)<br>Selects Vibration Frequency 2 in reverse direction (Pn02D, Pn02E) |                                                                                    |                                  | 0               | ---  | 0 to 5        | C         |           |
|        |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Filter Type                                                                        | Switching mode                   |                 |      |               |           |           |
|        |                                                | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Normal type                                                                        | No switching                     |                 |      |               |           |           |
|        |                                                | 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Switching with command direction |                 |      |               |           |           |
|        |                                                | 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    |                                  |                 |      |               |           |           |
|        |                                                | 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Low-pass type                                                                      | No switching                     |                 |      |               |           |           |
|        |                                                | 4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    | Switching with command direction |                 |      |               |           |           |
|        |                                                | 5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                    |                                  |                 |      |               |           |           |

| Pn No. | Parameter name                            | Setting                                                                                                                                                                                                                                                                 | Explanation                             |                                   | Default Setting | Unit          | Setting Range | Attribute | Set value |
|--------|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|-----------------------------------|-----------------|---------------|---------------|-----------|-----------|
| 025    | Normal Mode Autotuning Operation Setting  | Sets the operating pattern for normal mode autotuning.                                                                                                                                                                                                                  |                                         |                                   | 0               | ---           | 0 to 7        | B         |           |
|        |                                           |                                                                                                                                                                                                                                                                         | Number of rotations                     | Rotation direction                |                 |               |               |           |           |
|        |                                           | 0                                                                                                                                                                                                                                                                       | Repeat cycles of 2 rotations            | Forward and Reverse (Alternating) |                 |               |               |           |           |
|        |                                           | 1                                                                                                                                                                                                                                                                       |                                         | Reverse and Forward (Alternating) |                 |               |               |           |           |
|        |                                           | 2                                                                                                                                                                                                                                                                       |                                         | Forward only                      |                 |               |               |           |           |
|        |                                           | 3                                                                                                                                                                                                                                                                       |                                         | Reverse only                      |                 |               |               |           |           |
|        |                                           | 4                                                                                                                                                                                                                                                                       | Repeat cycles of single rotation        | Forward and Reverse (Alternating) |                 |               |               |           |           |
|        |                                           | 5                                                                                                                                                                                                                                                                       |                                         | Reverse and Forward (Alternating) |                 |               |               |           |           |
|        |                                           | 6                                                                                                                                                                                                                                                                       |                                         | Forward only                      |                 |               |               |           |           |
|        |                                           | 7                                                                                                                                                                                                                                                                       |                                         | Reverse only                      |                 |               |               |           |           |
| 026    | Overrun Limit Setting                     | Sets the Servomotor's allowable operating range for the position command input range. Set to 0 to disable overrun protective function.                                                                                                                                  |                                         |                                   | 10              | ×0.1 rotation | 0 to 1000     | A         |           |
| 027    | Instantaneous Speed Observer Setting (RT) | The Instantaneous Speed Observer improves speed detection accuracy, thereby improving responsiveness and reducing vibration when stopping.                                                                                                                              |                                         |                                   | 0               | ---           | 0 to 1        | B         |           |
|        |                                           | 0                                                                                                                                                                                                                                                                       | Disabled                                |                                   |                 |               |               |           |           |
|        |                                           | 1                                                                                                                                                                                                                                                                       | Enabled                                 |                                   |                 |               |               |           |           |
| 028    | Notch Filter 2 Frequency                  | Sets the notch frequency of notch filter 2 for resonance suppression. This parameter must be matched with the resonance frequency of the load.                                                                                                                          |                                         |                                   | 1500            | Hz            | 100 to 1500   | B         |           |
| 029    | Notch Filter 2 Width                      | Selects the notch width of notch filter 2 for resonance suppression. Increasing the value increases the notch width.                                                                                                                                                    |                                         |                                   | 2               | ---           | 0 to 4        | B         |           |
| 02A    | Notch Filter 2 Depth                      | Selects the notch depth of notch filter 2 for resonance suppression. Increasing the value decreases the notch depth, thereby reducing the phase lag.                                                                                                                    |                                         |                                   | 0               | ---           | 0 to 99       | B         |           |
| 02B    | Vibration Frequency 1                     | Sets the vibration frequency 1 for damping control to suppress vibration at the end of the load. Measure and set the frequency of the vibration.                                                                                                                        |                                         |                                   | 0               | ×0.1 Hz       | 0 to 2000     | B         |           |
| 02C    | Vibration Filter 1 Setting                | When setting Vibration Frequency 1 (Pn02B), reduce this setting if torque saturation occurs, or increase it to make the movement faster. Normally, use a setting of 0.                                                                                                  |                                         |                                   | 0               | ×0.1 Hz       | −200 to 2000  | B         |           |
| 02D    | Vibration Frequency 2                     | Sets the vibration frequency 2 for damping control to suppress vibration at the end of the load.                                                                                                                                                                        |                                         |                                   | 0               | ×0.1 Hz       | 0 to 2000     | B         |           |
| 02E    | Vibration Filter 2 Setting                | Sets vibration filter 2 for damping control to suppress vibration at the end of the load.                                                                                                                                                                               |                                         |                                   | 0               | ×0.1 Hz       | −200 to 2000  | B         |           |
| 02F    | Adaptive Filter Table Number Display      | Displays the table entry number corresponding to the frequency of the adaptive filter. This parameter is set automatically when the adaptive filter is enabled (i.e. when the Adaptive Filter Selection (Pn023) is set to a value other than 0), and cannot be changed. |                                         |                                   | 0               | ---           | 0 to 64       | R         |           |
|        |                                           | 0 to 4                                                                                                                                                                                                                                                                  | Filter disabled                         |                                   |                 |               |               |           |           |
|        |                                           | 5 to 48                                                                                                                                                                                                                                                                 | Filter enabled                          |                                   |                 |               |               |           |           |
|        |                                           | 49 to 64                                                                                                                                                                                                                                                                | Enable or disable the filter with Pn022 |                                   |                 |               |               |           |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name                               | Setting | Explanation                                                                                                                                                                                                                                            | Default Setting | Unit    | Setting Range | Attribute | Set value |
|--------|----------------------------------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------|---------------|-----------|-----------|
| 030    | Gain Switching Operating Mode Selection (RT) |         | Enables or disables gain switching.<br>When enabled, the setting of the Gain Switch Setting (Pn031) is used as the condition for switching between gain 1 and gain 2.                                                                                  | 1               | ---     | 0 to 1        | B         |           |
|        |                                              | 0       | Disabled. Uses Gain 1 (Pn010 to Pn014). PI/P operation is switched from MECHATROLINK-II.                                                                                                                                                               |                 |         |               |           |           |
|        |                                              | 1       | The gain is switched between Gain 1 (Pn010 to Pn014) and Gain 2 (Pn018 to Pn01C).                                                                                                                                                                      |                 |         |               |           |           |
| 031    | Gain Switch Setting (RT)                     |         | Sets the trigger for gain switching.<br>The details depend on the control mode.                                                                                                                                                                        | 2               | ---     | 0 to 10       | B         |           |
|        |                                              | 0       | Always Gain 1                                                                                                                                                                                                                                          |                 |         |               |           |           |
|        |                                              | 1       | Always Gain 2                                                                                                                                                                                                                                          |                 |         |               |           |           |
|        |                                              | 2       | Switching from the network                                                                                                                                                                                                                             |                 |         |               |           |           |
|        |                                              | 3       | Degree of change in torque command                                                                                                                                                                                                                     |                 |         |               |           |           |
|        |                                              | 4       | Always Gain 1                                                                                                                                                                                                                                          |                 |         |               |           |           |
|        |                                              | 5       | Speed command                                                                                                                                                                                                                                          |                 |         |               |           |           |
|        |                                              | 6       | Amount of position deviation                                                                                                                                                                                                                           |                 |         |               |           |           |
|        |                                              | 7       | Position command pulses received                                                                                                                                                                                                                       |                 |         |               |           |           |
|        |                                              | 8       | Positioning Completed Signal (INP) OFF                                                                                                                                                                                                                 |                 |         |               |           |           |
|        |                                              | 9       | Actual Servomotor speed                                                                                                                                                                                                                                |                 |         |               |           |           |
|        |                                              | 10      | Combination of position command pulses received and speed                                                                                                                                                                                              |                 |         |               |           |           |
| 032    | Gain Switch Time (RT)                        |         | Enabled when the Gain Switch Setting (Pn031) is set to 3, or 5 to 10. Sets the lag time from the trigger detection to actual gain switching when switching from gain 2 to gain 1.                                                                      | 30              | ×166 μs | 0 to 10000    | B         |           |
| 033    | Gain Switch Level Setting (RT)               |         | Sets the judgment level to switch between Gain 1 and Gain 2 when the Gain Switch Setting (Pn031) is set to 3, 5, 6, 9, or 10. The unit for the setting depends on the condition set in the Gain Switch Setting (Pn031).                                | 600             | ---     | 0 to 20000    | B         |           |
| 034    | Gain Switch Hysteresis Setting (RT)          |         | Sets the hysteresis of the judgment level for the Gain Switch Level Setting (Pn033) when the Gain Switch Setting (Pn031) is set to 3, 5, 6, 9, or 10. The unit for the setting depends on the condition set for the Gain Switch Setting (Pn031).       | 50              | ---     | 0 to 20000    | B         |           |
| 035    | Position Loop Gain Switching Time (RT)       |         | This parameter can prevent the position loop gain from increasing suddenly when the position loop gain and position loop gain 2 differ by a large amount.<br>When the position loop gain increases, it takes the duration of (set value + 1) × 166 μs. | 20              | ×166 μs | 0 to 10000    | B         |           |
| 036    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 037    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 038    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 039    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 03A    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 03B    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 03C    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 03D    | Jog Speed                                    |         | Sets the jog operation speed with the Parameter Unit or CX-Drive.                                                                                                                                                                                      | 200             | r/min   | 0 to 500      | ---       |           |
| 03E    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |
| 03F    | Reserved                                     |         | Do not change.                                                                                                                                                                                                                                         | 0               | ---     | ---           | ---       |           |



| Pn No. | Parameter name                       | Setting                                                                                                                                                          | Explanation                                               | Default Setting | Unit  | Setting Range   | Attribute | Set value |
|--------|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|-----------------|-------|-----------------|-----------|-----------|
| 040    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 041    | Emergency Stop Input Setting         | Enables the Emergency Stop Input (STOP).                                                                                                                         |                                                           | 1               | ---   | 0 to 1          | C         |           |
|        |                                      | 0                                                                                                                                                                | Disabled                                                  |                 |       |                 |           |           |
|        |                                      | 1                                                                                                                                                                | Enabled (alarm code 87 issued on OPEN)                    |                 |       |                 |           |           |
| 042    | Origin Proximity Input Logic Setting | Sets the logic for the Origin Proximity Input (DEC).                                                                                                             |                                                           | 1               | ---   | 0 to 1          | C         |           |
|        |                                      | 0                                                                                                                                                                | N.C contact (origin proximity detected on OPEN)           |                 |       |                 |           |           |
|        |                                      | 1                                                                                                                                                                | N.O contact (origin proximity detected on CLOSE)          |                 |       |                 |           |           |
| 043    | Operating Direction Setting          | Sets the relationship between polarity of operation data sent over the network and the direction of Servomotor rotation.                                         |                                                           | 1               | ---   | 0 to 1          | C         |           |
|        |                                      | 0                                                                                                                                                                | Sets the reverse direction as the positive direction (+). |                 |       |                 |           |           |
|        |                                      | 1                                                                                                                                                                | Sets the forward direction as the positive direction (+). |                 |       |                 |           |           |
| 044    | Input Signal Selection               | Sets the terminal assignment for Drive Prohibit Input.                                                                                                           |                                                           | 0               | ---   | 0 to 1          | C         |           |
|        |                                      | 0                                                                                                                                                                | Sets CN1 pin 19 to POT, CN1 pin 20 to NOT.                |                 |       |                 |           |           |
|        |                                      | 1                                                                                                                                                                | Sets CN1 pin 19 to NOT, CN1 pin 20 to POT.                |                 |       |                 |           |           |
| 045    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 046    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 047    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 048    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 049    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04A    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04B    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04C    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04D    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04E    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 04F    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 050    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 051    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 052    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 053    | Speed Limit                          | Sets the speed limit for torque control mode.<br>(The value is an absolute value)<br>This parameter is limited by the Overspeed Detection Level Setting (Pn073). |                                                           | 50              | r/min | -20000 to 20000 | B         |           |
| 054    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 055    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 056    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 057    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |
| 058    | Soft Start Acceleration Time         | Sets the acceleration time for speed control mode.<br>Acceleration time [s] from 0 r/min to maximum speed [r/min] = Set value × 2 ms                             |                                                           | 0               | ×2 ms | 0 to 5000       | B         |           |
| 059    | Soft Start Deceleration Time         | Sets the deceleration time for speed control mode.<br>Deceleration time [s] from maximum speed [r/min] to 0 r/min = Set value × 2 ms                             |                                                           | 0               | ×2 ms | 0 to 5000       | B         |           |
| 05A    | Reserved                             | Do not change.                                                                                                                                                   |                                                           | 0               | ---   | ---             | ---       |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name                                   | Setting                                                                                        | Explanation                                                                                                                                                                                                                                                                                                                                                                              | Default Setting | Unit          | Setting Range | Attribute | Set value |
|--------|--------------------------------------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------------|---------------|-----------|-----------|
| 05B    | Speed Limit Selection                            |                                                                                                | Sets the speed limit for torque control mode.                                                                                                                                                                                                                                                                                                                                            | 0               | ---           | 0 to 1        | B         |           |
|        |                                                  | 0                                                                                              | Use the Speed Limit (Pn053)                                                                                                                                                                                                                                                                                                                                                              |                 |               |               |           |           |
|        |                                                  | 1                                                                                              | Use the speed limit value via MECHATROLINK-II or the Speed Limit (Pn053), whichever is smaller.                                                                                                                                                                                                                                                                                          |                 |               |               |           |           |
| 05C    | Reserved                                         | Do not change.                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                          | 0               | ---           | ---           | ---       |           |
| 05D    | Reserved                                         | Do not change.                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                          | 0               | ---           | ---           | ---       |           |
| 05E    | No.1 Torque Limit                                | Sets the No.1 Torque Limit for the Servomotor output torque.                                   |                                                                                                                                                                                                                                                                                                                                                                                          | 300             | %             | 0 to 500      | B         |           |
| 05F    | No.2 Torque Limit                                | Sets the No.2 Torque Limit for the Servomotor output torque.                                   |                                                                                                                                                                                                                                                                                                                                                                                          | 100             | %             | 0 to 500      | B         |           |
| 060    | Positioning Completion Range 1                   | Sets the positioning completion range when Positioning Completion 1 (INP1) Output is selected. |                                                                                                                                                                                                                                                                                                                                                                                          | 25              | Command units | 0 to 10000    | A         |           |
| 061    | Speed Conformity Signal Output Width             | Sets the detection width for the speed conformity detection (VCMP) signal.                     |                                                                                                                                                                                                                                                                                                                                                                                          | 20              | r/min         | 10 to 20000   | A         |           |
| 062    | Rotation Speed for Motor Rotation Detection      | Sets the threshold level for the speed reached (TGON) signal.                                  |                                                                                                                                                                                                                                                                                                                                                                                          | 50              | r/min         | 10 to 20000   | A         |           |
| 063    | Positioning Completion Range 2                   | Sets the positioning completion range when Positioning Completion 2 (INP2) is selected.        |                                                                                                                                                                                                                                                                                                                                                                                          | 100             | Command units | 0 to 10000    | A         |           |
| 064    | Motor Phase Current Offset Re-adjustment Setting |                                                                                                | Enables or disables the offset component readjustment function of the Motor Phase Current Detector (CT) for Servo ON command inputs. The readjustment is made when control power is turned ON.                                                                                                                                                                                           | 0               | ---           | 0 to 1        | A         |           |
|        |                                                  | 0                                                                                              | Disabled (only when turning ON control power)                                                                                                                                                                                                                                                                                                                                            |                 |               |               |           |           |
|        |                                                  | 1                                                                                              | Enabled (when turning ON control power, or at Servo ON)                                                                                                                                                                                                                                                                                                                                  |                 |               |               |           |           |
| 065    | Undervoltage Alarm Selection                     |                                                                                                | Selects whether to activate the main power supply undervoltage function (alarm code 13) when the main power supply is interrupted for the duration of the Momentary Hold Time (Pn06D) during Servo ON.                                                                                                                                                                                   | 1               | ---           | 0 to 1        | B         |           |
|        |                                                  | 0                                                                                              | Turns the Servo OFF according to the setting for the Stop Selection with Main Power OFF (Pn067), interrupting the positioning command generation process (positioning operation) within the Servo Drive. When the main power supply is turned back ON, Servo ON will resume. Restart the positioning operation after performing the positioning operation and recovering from Servo OFF. |                 |               |               |           |           |
|        |                                                  | 1                                                                                              | Causes an error due to main power supply undervoltage (alarm code 13).                                                                                                                                                                                                                                                                                                                   |                 |               |               |           |           |

| Pn No. | Parameter name                             | Setting                                                                                                                                                                                                                                         | Explanation                                                            |                                               |                                                                                                    | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|-----------------------------------------------|----------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|-----------|
| 066    | Stop Selection for Drive Prohibition Input | Sets the deceleration stop operation to be performed after the Forward Drive Prohibit Input (POT) or Reverse Drive Prohibit Input (NOT) is enabled.                                                                                             |                                                                        |                                               |                                                                                                    | 0               | ---  | 0 to 2        | C         |           |
|        |                                            |                                                                                                                                                                                                                                                 | During deceleration                                                    | After stopping (30 r/min or less)             | Deviation counter                                                                                  |                 |      |               |           |           |
|        |                                            | 0                                                                                                                                                                                                                                               | Dynamic brake                                                          | Disables torque in drive prohibited direction | Cleared while decelerating with dynamic brake. Retained after stopping.                            |                 |      |               |           |           |
|        |                                            | 1                                                                                                                                                                                                                                               | Disables torque                                                        | Disables torque in drive prohibited direction | Cleared while decelerating. Retained after stopping.                                               |                 |      |               |           |           |
|        |                                            | 2                                                                                                                                                                                                                                               | Emergency Stop Torque (Pn06E)                                          | Servo locked                                  | Retained while decelerating, cleared upon completion of deceleration, and retained after stopping. |                 |      |               |           |           |
| 067    | Stop Selection with Main Power OFF         | Sets the operation to be performed during deceleration and after stopping after the main power supply is turned OFF with the Undervoltage Alarm Selection (Pn065) set to 0. The deviation counter will be reset when the power OFF is detected. |                                                                        |                                               |                                                                                                    | 0               | ---  | 0 to 7        | B         |           |
|        |                                            | 0 and 4                                                                                                                                                                                                                                         | Use dynamic brake to decelerate and remain stopped with dynamic brake. |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 1 and 5                                                                                                                                                                                                                                         | Use free-run to decelerate and remain stopped with dynamic brake.      |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 2 and 6                                                                                                                                                                                                                                         | Use dynamic brake to decelerate, but free the motor when stopped.      |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 3 and 7                                                                                                                                                                                                                                         | Use free-run to decelerate, and free the motor when stopped.           |                                               |                                                                                                    |                 |      |               |           |           |
| 068    | Stop Selection for Alarm Generation        | Sets the deceleration process and stop status after an alarm is issued by the protective function. The deviation counter will be reset when an alarm is issued.                                                                                 |                                                                        |                                               |                                                                                                    | 0               | ---  | 0 to 3        | B         |           |
|        |                                            | 0                                                                                                                                                                                                                                               | Use dynamic brake to decelerate and remain stopped with dynamic brake. |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 1                                                                                                                                                                                                                                               | Use free-run to decelerate and remain stopped with dynamic brake.      |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 2                                                                                                                                                                                                                                               | Use dynamic brake to decelerate, but free the motor when stopped.      |                                               |                                                                                                    |                 |      |               |           |           |
|        |                                            | 3                                                                                                                                                                                                                                               | Use free-run to decelerate, and free the motor when stopped.           |                                               |                                                                                                    |                 |      |               |           |           |
| 069    | Stop Selection with Servo OFF              | Sets the operation after a Servo OFF. The relationship between set values, operation, and deviation counter processing for this parameter is the same as for the Stop Selection with Main Power OFF (Pn067).                                    |                                                                        |                                               |                                                                                                    | 0               | ---  | 0 to 7        | B         |           |
| 06A    | Brake Timing when Stopped                  | Sets the duration from Brake Interlock (BKIR) signal detection to Servo OFF.                                                                                                                                                                    |                                                                        |                                               |                                                                                                    | 10              | 2 ms | 0 to 1000     | B         |           |

## 9-1 Parameter Tables

| Pn No. | Parameter name                    | Setting | Explanation                                                                                                                                                                                                                                                                                          | Default Setting | Unit  | Setting Range | Attribute | Set value |
|--------|-----------------------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-------|---------------|-----------|-----------|
| 06B    | Brake Timing during Operation     |         | Sets the duration from Servo OFF to when the Brake Interlock (BKIR) signal is turned OFF. BKIR is also turned OFF when the speed drops to 30 r/min or less before the set time elapses.                                                                                                              | 50              | 2 ms  | 0 to 1000     | B         |           |
| 06C    | Regeneration Resistor Selection   |         | Sets the regeneration resistor operation and the regeneration overload (alarm code 18) operation. Set this parameter to 0 if using the built-in regeneration resistor. If using an external regeneration resistor, be sure to turn OFF the main power when the built-in thermal switch is activated. | 0               | ---   | 0 to 3        | C         |           |
|        |                                   | 0       | Sets the regeneration overload to match the built-in regeneration resistor. (regeneration load ratio below 1%)                                                                                                                                                                                       |                 |       |               |           |           |
|        |                                   | 1       | The regeneration overload (alarm code 18) occurs when the load ratio of the external regeneration resistor exceeds 10%.                                                                                                                                                                              |                 |       |               |           |           |
|        |                                   | 2       | The regeneration processing circuit by the external regeneration resistor is activated, but the regeneration overload (alarm code 18) does not occur.                                                                                                                                                |                 |       |               |           |           |
|        |                                   | 3       | The regeneration processing circuit is not activated. All regenerative energy is absorbed by the built-in capacitor.                                                                                                                                                                                 |                 |       |               |           |           |
| 06D    | Momentary Hold Time               |         | Sets the amount of time required to detect shutoff when the main power supply continues to shut off. The main power OFF detection will be disabled if this parameter is set to 1000.                                                                                                                 | 35              | 2 ms  | 35 to 1000    | C         |           |
| 06E    | Emergency Stop Torque             |         | Sets the torque limit during deceleration because of the Drive Prohibition Input when the Stop Selection for Drive Prohibition Input (Pn066) is set to 2. When this parameter is set to 0, the normal torque limit will be set. The maximum value of the setting range depends on the Servomotor.    | 0               | %     | 0 to 300      | B         |           |
| 06F    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 070    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 071    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 072    | Overload Detection Level Setting  |         | Sets the overload detection level. The overload detection level will be set at 115% if this parameter is set to 0. Normally, use a setting of 0, and set the level only when reducing the overload detection level.                                                                                  | 0               | %     | 0 to 500      | A         |           |
| 073    | Overspeed Detection Level Setting |         | Sets the overspeed detection level. The overspeed detection level is 1.2 times the maximum Servomotor rotation speed when the parameter is set to 0.                                                                                                                                                 | 0               | r/min | 0 to 20000    | A         |           |
| 074    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 075    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 076    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 077    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 078    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 079    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 07A    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 07B    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |
| 07C    | Reserved                          |         | Do not change.                                                                                                                                                                                                                                                                                       | 0               | ---   | ---           | ---       |           |

| Pn No. | Parameter name | Setting        | Explanation | Default Setting | Unit | Setting Range | Attribute | Set value |
|--------|----------------|----------------|-------------|-----------------|------|---------------|-----------|-----------|
| 07D    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |           |
| 07E    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |           |
| 07F    | Reserved       | Do not change. |             | 0               | ---  | ---           | ---       |           |

## ■ 16-bit Positioning Parameters: Parameter Numbers 100 to 13F

| Pn No. | Parameter name                      | Setting | Explanation                                                                                                                                                                                                                            | Default Setting | Unit                                    | Setting Range   | Attribute | Set value |
|--------|-------------------------------------|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------|-----------------|-----------|-----------|
| 100    | Backlash Compensation Selection     |         | Enables or disables the backlash compensation for position control, and sets the compensation direction.                                                                                                                               | 0               | ---                                     | 0 to 2          | C         |           |
|        |                                     | 0       | Disabled                                                                                                                                                                                                                               |                 |                                         |                 |           |           |
|        |                                     | 1       | Compensates in the initial forward direction after the Servo ON.                                                                                                                                                                       |                 |                                         |                 |           |           |
|        |                                     | 2       | Compensates in the initial forward direction after the Servo ON.                                                                                                                                                                       |                 |                                         |                 |           |           |
| 101    | Backlash Compensation               |         | Sets the backlash compensation amount for position control.                                                                                                                                                                            | 0               | Command units                           | −32768 to 32767 | B         |           |
| 102    | Backlash Compensation Time Constant |         | Sets the backlash compensation time constant for position control.                                                                                                                                                                     | 0               | 0.01 ms                                 | 0 to 6400       | B         |           |
| 103    | Reserved                            |         | Do not change.                                                                                                                                                                                                                         | 0               | ---                                     | ---             | ---       |           |
| 104    | Soft Limit                          |         | Enables or disables the soft limit.                                                                                                                                                                                                    | 0               | ---                                     | 0 to 3          | A         |           |
|        |                                     | 0       | Enable both the Forward / Reverse Software Limits (Pn201 and Pn202)                                                                                                                                                                    |                 |                                         |                 |           |           |
|        |                                     | 1       | Disable the Forward Software Limit (Pn201), enable the Reverse Software Limit (Pn202)                                                                                                                                                  |                 |                                         |                 |           |           |
|        |                                     | 2       | Enable the Forward Software Limit (Pn201), disable the Reverse Software Limit (Pn202)                                                                                                                                                  |                 |                                         |                 |           |           |
|        |                                     | 3       | Disable both the Forward / Reverse Software Limits (Pn201 and Pn202)                                                                                                                                                                   |                 |                                         |                 |           |           |
| 105    | Origin Range                        |         | Sets the threshold for detecting the origin (ZPOINT) in absolute values. ZPOINT = 1 when the return to origin completes (coordinate system setup is complete) and the feedback position is within the setting range of this parameter. | 10              | Command units                           | 0 to 250        | A         |           |
| 106    | Reserved                            |         | Do not change.                                                                                                                                                                                                                         | 0               | ---                                     | ---             | ---       |           |
| 107    | Linear Acceleration Constant        |         | Sets the acceleration for positioning operations. A setting of "0" is regarded as "1". The setting will be handled after conversion to an unsigned 16-bit data (0 to 65535). Example: −32768 → 8000h = 32768<br>−1 → FFFFh = 65535     | 100             | × 10000 [Command units/s <sup>2</sup> ] | −32768 to 32767 | B         |           |
| 108    | Reserved                            |         | Do not change.                                                                                                                                                                                                                         | 0               | ---                                     | ---             | ---       |           |
| 109    | Reserved                            |         | Do not change.                                                                                                                                                                                                                         | 0               | ---                                     | ---             | ---       |           |

| Pn No. | Parameter name                 | Setting | Explanation                                                                                                                                                                                                                        | Default Setting | Unit                                       | Setting Range   | Attribute | Set value |
|--------|--------------------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------------------------------|-----------------|-----------|-----------|
| 10A    | Linear Deceleration Constant   |         | Sets the deceleration for positioning operations. A setting of "0" is regarded as "1". The setting will be handled after conversion to an unsigned 16-bit data (0 to 65535). Example: -32768 → 8000h = 32768<br>-1 → FFFFh = 65535 | 100             | × 10000<br>[Command units/s <sup>2</sup> ] | -32768 to 32767 | B         |           |
| 10B    | Reserved                       |         | Do not change.                                                                                                                                                                                                                     | 0               | ---                                        | ---             | ---       |           |
| 10C    | Reserved                       |         | Do not change.                                                                                                                                                                                                                     | 0               | ---                                        | ---             | ---       |           |
| 10D    | Reserved                       |         | Do not change.                                                                                                                                                                                                                     | 0               | ---                                        | ---             | ---       |           |
| 10E    | Moving Average Time            |         | Sets the moving average time for position commands.                                                                                                                                                                                | 0               | ×0.1 ms                                    | 0 to 5100       | B         |           |
| 10F    | Origin Return Mode Settings    |         | Sets the direction for origin return.                                                                                                                                                                                              | 0               | ---                                        | 0 to 1          | B         |           |
|        |                                | 0       | Positive direction                                                                                                                                                                                                                 |                 |                                            |                 |           |           |
|        |                                | 1       | Negative direction                                                                                                                                                                                                                 |                 |                                            |                 |           |           |
| 110    | Origin Return Approach Speed 1 |         | Sets the operating speed for origin return, from when the origin proximity signal is turned ON, to when it is turned OFF and the latch signal is detected.                                                                         | 50              | ×100<br>[Command units/s]                  | 1 to 32767      | B         |           |
| 111    | Origin Return Approach Speed 2 |         | Sets the operating speed for origin return, from when the latch signal is detected, to when the Origin Return Final Distance (Pn204) is reached.                                                                                   | 5               | ×100<br>[Command units/s]                  | 1 to 32767      | B         |           |

## 9-1 Parameter Tables

| Pn No.     | Parameter name                              | Setting | Explanation                                                                                                                                             | Default Setting | Unit | Setting Range | Attribute | Set value |
|------------|---------------------------------------------|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------|---------------|-----------|-----------|
| 112        | General-purpose Output 1 Function Selection |         | Selects the function for general-purpose output 1 (OUTM1).                                                                                              | 7               | ---  | 0 to 9        | C         |           |
|            |                                             | 0       | Always OFF                                                                                                                                              |                 |      |               |           |           |
|            |                                             | 1       | INP1 output.<br>Turn ON when position deviation is equal to or less than Pn060 for position control.                                                    |                 |      |               |           |           |
|            |                                             | 2       | VCMP output.<br>Turn ON when the deviation between Servomotor speed and commanded speed is within the range set by Pn061 for speed control.             |                 |      |               |           |           |
|            |                                             | 3       | TGON output.<br>Turn ON when the absolute value of the Servomotor speed exceeds Pn062 settings in all control modes.                                    |                 |      |               |           |           |
|            |                                             | 4       | READY output.<br>Turn ON when the main power is supplied, there is no alarm, and Servo SYNC with a host controller is established in all control modes. |                 |      |               |           |           |
|            |                                             | 5       | CLIM output.<br>Turn ON when torque limit is activated in all control modes.                                                                            |                 |      |               |           |           |
|            |                                             | 6       | VLIM output.<br>Turn ON when the Servomotor speed reaches the speed limit for torque control.                                                           |                 |      |               |           |           |
|            |                                             | 7       | BKIR output.<br>Turn ON with the release timing of the brake release signal in all control modes.                                                       |                 |      |               |           |           |
|            |                                             | 8       | WARN output.<br>Turn ON when a warning is issued in all control modes.                                                                                  |                 |      |               |           |           |
|            |                                             | 9       | INP2 output.<br>Turn ON when the position deviation is equal to or less than the Positioning Completion Range 2 (Pn063) for position control.           |                 |      |               |           |           |
| 113        | General-purpose Output 2 Function Selection |         | Selects the function for general-purpose output 2 (OUTM2).<br>The set values and the functions are the same as for general-purpose output 1 (OUTM1).    | 0               | ---  | 0 to 9        | C         |           |
| 114        | General-purpose Output 3 Function Selection |         | Selects the function for general-purpose output 3 (OUTM3).<br>The set values and the functions are the same as for general-purpose output 1 (OUTM1).    | 0               | ---  | 0 to 9        | C         |           |
| 115 to 13F | Reserved                                    |         | Do not change.                                                                                                                                          | 0               | ---  | ---           | ---       |           |



### ■ 32-bit Positioning Parameters: Parameter Numbers 200 to 21F

| Pn No.                               | Parameter name                                                                  | Setting                                                                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Default Setting                      | Unit          | Setting Range             | Attribute | Set value |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
|--------------------------------------|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|---------------|---------------------------|-----------|-----------|--------------------|----------------------------------------------|---------------------------------------------------------------------------------|--------------------|---------------------------------------------------------------------------------|----------------------------------------------|-----|---------------|---------------------------|---|--|
| 200                                  | Absolute Origin Offset                                                          |                                                                                 | Sets the offset amount for the encoder position and the mechanical coordinate system position when using an absolute encoder.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | 0                                    | Command units | −1073741823 to 1073741823 | C         |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
| 201                                  | Forward Software Limit                                                          |                                                                                 | Sets the soft limit in the forward direction. If the Servomotor exceeds the limit, the network response status (PSOT) will turn ON (=1).<br><b>Note 1.</b> Be sure to set the limits so that Forward Software Limit > Reverse Software Limit.<br><b>Note 2.</b> PSOT is not turned ON when origin return is incomplete.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 500000                               | Command units | −1073741823 to 1073741823 | A         |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
| 202                                  | Reverse Software Limit                                                          |                                                                                 | Sets the soft limit for the reverse direction. If the Servomotor exceeds the limit, the network response status (NSOT) will turn ON (=1).<br><b>Note 1.</b> Be sure to set the limits so that Forward Software Limit > Reverse Software Limit.<br><b>Note 2.</b> NSOT is not turned ON when origin return is incomplete.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | −500000                              | Command units | −1073741823 to 1073741823 | A         |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
| 203                                  | Final Distance for External Input Positioning                                   |                                                                                 | <div>Sets the distance to travel after detecting the latch signal input position when performing external input positioning. The operation after detecting the latch signal input position will be determined by the external input positioning direction and this parameter as follows.</div> <table><tr><td rowspan="2">External input positioning direction</td><td colspan="2">Sign</td></tr><tr><td>Positive</td><td>Negative</td></tr><tr><td>Positive direction</td><td>Moves in the positive direction and stops *1</td><td>Decelerates to a stop, reverses, then moves in the negative direction and stops</td></tr><tr><td>Negative direction</td><td>Decelerates to a stop, reverses, then moves in the positive direction and stops</td><td>Moves in the negative direction and stops *1</td></tr></table> <div>*1. Reverses after decelerating to a stop if the final distance for external input positioning is short in comparison to the deceleration distance.</div> | External input positioning direction | Sign          |                           | Positive  | Negative  | Positive direction | Moves in the positive direction and stops *1 | Decelerates to a stop, reverses, then moves in the negative direction and stops | Negative direction | Decelerates to a stop, reverses, then moves in the positive direction and stops | Moves in the negative direction and stops *1 | 100 | Command units | −1073741823 to 1073741823 | B |  |
| External input positioning direction | Sign                                                                            |                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |               |                           |           |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
|                                      | Positive                                                                        | Negative                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |               |                           |           |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
| Positive direction                   | Moves in the positive direction and stops *1                                    | Decelerates to a stop, reverses, then moves in the negative direction and stops |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |               |                           |           |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |
| Negative direction                   | Decelerates to a stop, reverses, then moves in the positive direction and stops | Moves in the negative direction and stops *1                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                      |               |                           |           |           |                    |                                              |                                                                                 |                    |                                                                                 |                                              |     |               |                           |   |  |

## 9-1 Parameter Tables

| Pn No.     | Parameter name                        | Setting                 | Description                                                                                                                                                                                                                                                                                                                                                                                                             | Default Setting | Unit          | Setting Range             | Attribute | Set value |
|------------|---------------------------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|---------------|---------------------------|-----------|-----------|
| 204        | Origin Return Final Distance          |                         | Sets the distance from the latch signal input position to the origin when performing origin return.<br>The operation after detecting the latch signal input position will be determined by the origin return direction and this parameter as follows.                                                                                                                                                                   | 100             | Command units | -1073741823 to 1073741823 | B         |           |
|            |                                       | Origin return direction | Sign                                                                                                                                                                                                                                                                                                                                                                                                                    |                 |               |                           |           |           |
|            |                                       |                         | Positive                                                                                                                                                                                                                                                                                                                                                                                                                |                 |               |                           |           |           |
|            |                                       | Positive direction      | Moves in the positive direction and stops *1                                                                                                                                                                                                                                                                                                                                                                            |                 |               |                           |           |           |
|            |                                       | Negative direction      | Moves in the negative direction and stops *1                                                                                                                                                                                                                                                                                                                                                                            |                 |               |                           |           |           |
|            |                                       |                         | *1. Reverses after decelerating to a stop if the final distance for origin return is short in comparison to the deceleration distance.                                                                                                                                                                                                                                                                                  |                 |               |                           |           |           |
| 205        | Electronic Gear Ratio 1 (Numerator)   |                         | Sets the numerator for the electronic gear ratio.<br>Setting this parameter to 0 automatically sets the encoder resolution as the numerator. (131072 for a 17-bit absolute encoder, or 10000 for a 2,500-p/r incremental encoder).<br><b>Note</b> Set the electronic gear ratio within the range of 1/100 to 100 times. A parameter setting alarm (alarm code 93) will occur if the ratio is set outside of this range. | 1               | ---           | 0 to 131072               | C         |           |
| 206        | Electronic Gear Ratio 2 (Denominator) |                         | Sets the denominator for the electronic gear ratio.<br><b>Note</b> Set the electronic gear ratio within the range of 1/100 to 100 times. A parameter setting alarm (alarm code 93) will occur if the ratio is set outside of this range.                                                                                                                                                                                | 1               | ---           | 1 to 65535                | C         |           |
| 207        | Reserved                              |                         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          | 0               | ---           | ---                       | ---       |           |
| 208        | Reserved                              |                         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          | 0               | ---           | ---                       | ---       |           |
| 209        | Deviation Counter Overflow Level      |                         | Sets the deviation counter overflow level. The value will become saturated at 134217728 (= 2 <sup>27</sup> ) pulse after multiplying with the electronic gear ratio. Setting this parameter to 0 will disable deviation counter overflow.                                                                                                                                                                               | 20000           | Command units | 0 to 2147483647           | A         |           |
| 20A to 21F | Reserved                              |                         | Do not change.                                                                                                                                                                                                                                                                                                                                                                                                          | ---             | ---           | ---                       | ---       |           |



# Index

## Numerics

|                                                |            |
|------------------------------------------------|------------|
| 1,000-r/min Servomotors .....                  | 2-4, 3-28  |
| 12 to 24-VDC Power Supply Input (+24VIN) ..... | 3-11       |
| 16-bit Positioning Parameters .....            | 5-81, 9-15 |
| 2,000-r/min Servomotors .....                  | 2-3, 3-26  |
| 3,000-r/min Flat Servomotors .....             | 2-3, 3-24  |
| 3,000-r/min Servomotors .....                  | 2-2, 3-18  |
| 32-bit Positioning Parameters .....            | 5-84, 9-18 |

## A

|                                                    |            |
|----------------------------------------------------|------------|
| Absolute Encoder Battery Cable .....               | 3-48, 2-20 |
| Absolute Encoders .....                            | 3-31       |
| Absolute Origin Position Offset (Pn200) .....      | 5-84       |
| AC Reactors .....                                  | 4-40       |
| Adaptive Filter .....                              | 5-45       |
| Adaptive Filter Selection (Pn023) .....            | 5-69, 5-92 |
| Adaptive Filter Table Number Display (Pn02F) ..... | 5-72, 5-93 |
| Address Display Time at Power Up (Pn006) .....     | 5-65       |
| Alarm Output (/ALM) .....                          | 3-12, 5-25 |
| Alarm Reset .....                                  | 6-25       |
| alarms table .....                                 | 8-4        |
| allowable current .....                            | 4-24       |
| applicable standards .....                         | 1-10       |

## B

|                                                   |            |
|---------------------------------------------------|------------|
| Backlash Compensation .....                       | 5-27       |
| Backlash Compensation (Pn101) .....               | 5-81       |
| Backlash Compensation Selection (Pn100) .....     | 5-81       |
| Backlash Compensation Time Constant (Pn102) ..... | 5-81       |
| Backup Battery Input (BAT) .....                  | 3-11       |
| Brake Cables (Robot Cables) .....                 | 2-20, 3-66 |
| Brake Cables (Standard Cables) .....              | 2-17, 3-64 |
| Brake Interlock .....                             | 5-11       |
| Brake Timing during Operation (Pn06B) .....       | 5-78       |
| Brake Timing When Stopped (Pn06A) .....           | 5-78       |

## C

|                                                |            |
|------------------------------------------------|------------|
| Check Pins .....                               | 1-4        |
| Clamp Cores .....                              | 4-36       |
| Communications Cables .....                    | 2-20, 3-67 |
| Communications Control (Pn005) .....           | 5-65, 5-88 |
| Computer Monitor Cable .....                   | 3-67, 4-14 |
| Connecting cables .....                        | 4-11       |
| connector specifications .....                 | 3-42       |
| Connector Terminal Block Cables .....          | 2-21, 3-73 |
| Connector Terminal Blocks .....                | 2-21       |
| Connectors .....                               | 2-21       |
| Connector-Terminal Block Conversion Unit ..... | 3-74       |
| Connector-Terminal Blocks and Cables .....     | 4-15       |
| Contactors .....                               | 4-38       |
| Control Cables .....                           | 2-21, 3-42 |
| Control I/O connector specifications .....     | 3-10       |
| Control I/O Connector .....                    | 3-68, 4-14 |
| Control Input Circuits .....                   | 3-14       |
| Control input signals .....                    | 3-11       |
| Control inputs .....                           | 3-14       |
| Control Output Circuits .....                  | 3-14       |
| Control Outputs .....                          | 3-14       |
| Control Sequence Timing .....                  | 3-15       |

|                 |      |
|-----------------|------|
| Copy Mode ..... | 6-28 |
|-----------------|------|

## D

|                                                                           |            |
|---------------------------------------------------------------------------|------------|
| Damping Control .....                                                     | 5-50       |
| Decelerator dimensions .....                                              | 2-47       |
| Decelerator installation conditions .....                                 | 4-7        |
| Decelerator specifications .....                                          | 3-32       |
| Decelerators .....                                                        | 2-7        |
| Decelerators for 1,000-r/min Servomotors (Backlash = 3' Max.) .....       | 2-53, 3-37 |
| Decelerators for 2,000-r/min Servomotors (Backlash = 3' Max.) .....       | 2-51, 3-35 |
| Decelerators for 3,000-r/min Flat Servomotors (Backlash = 15' Max.) ..... | 2-59, 3-41 |
| Decelerators for 3,000-r/min Flat Servomotors (Backlash = 3' Max.) .....  | 2-55, 3-38 |
| Decelerators for 3,000-r/min Servomotors (Backlash = 15' Max.) .....      | 2-57, 3-39 |
| Decelerators for 3,000-r/min Servomotors (Backlash = 3' Max.) .....       | 2-47, 3-32 |
| Default Display (Pn001) .....                                             | 5-62       |
| Deviation Counter Overflow Level (Pn209) .....                            | 5-85       |
| disabling adaptive filter .....                                           | 5-47       |
| Drive Prohibit Input Selection (Pn004) .....                              | 5-64, 5-88 |
| Dynamic brake .....                                                       | 5-95, 5-96 |

## E

|                                                         |                  |
|---------------------------------------------------------|------------------|
| EC Directives .....                                     | 1-10             |
| Electronic Gear .....                                   | 5-21             |
| Electronic Gear Ratio 1 (Numerator) (Pn205) .....       | 5-85             |
| Electronic Gear Ratio 2 (Denominator) (Pn206) .....     | 5-85             |
| Electronic Thermal Function .....                       | 8-20             |
| Emergency Stop Input (STOP) .....                       | 3-11, 5-23       |
| Emergency Stop Input Setting (Pn041) .....              | 5-73             |
| Emergency Stop Torque (Pn06E) .....                     | 5-79             |
| Encoder cable .....                                     | 3-42             |
| Encoder cable noise resistance .....                    | 4-39             |
| Encoder Cables (Robot Cables) .....                     | 2-18, 3-45, 4-13 |
| Encoder Cables (Standard Cables) .....                  | 2-14, 3-42, 4-12 |
| Encoder connector specifications (CN2) .....            | 3-16             |
| Encoder connectors .....                                | 3-68             |
| Encoder Dividing .....                                  | 5-10             |
| Encoder specifications .....                            | 3-31             |
| Error Diagnosis Using the Displayed Alarm Codes .....   | 8-7              |
| Error Diagnosis Using the Displayed Warning Codes ..... | 8-14             |
| Error Diagnosis Using the Operating Status .....        | 8-15             |
| Error Processing .....                                  | 8-1              |
| External dimensions .....                               | 2-23             |
| External General-purpose Input 0 (IN0) .....            | 3-11, 5-23       |
| External General-purpose Input 1 (IN1) .....            | 3-11, 5-23       |
| External General-purpose Input 2 (IN2) .....            | 3-11, 5-23       |
| External latch signal 1 (EXT1) .....                    | 3-11, 5-23       |
| External latch signal 2 (EXT2) .....                    | 3-11, 5-23       |
| External latch signal 3 (EXT3) .....                    | 3-11, 5-23       |
| External Regeneration Resistor dimensions .....         | 2-61             |
| External Regeneration Resistor specifications .....     | 3-79             |
| External Regeneration Resistors .....                   | 2-21             |

## F

|                                                             |            |
|-------------------------------------------------------------|------------|
| Feed-forward Filter Time Constant (Pn016) .....             | 5-68       |
| Final Distance for External Input Positioning (Pn203) ..... | 5-84       |
| Forward Drive Prohibit .....                                | 5-10       |
| Forward Drive Prohibit Input (POT) .....                    | 3-11, 5-23 |
| Forward Software Limit (Pn201) .....                        | 5-84       |
| Forward Torque Limit Input (PCL) .....                      | 3-11, 5-23 |

## G

|                                                           |            |
|-----------------------------------------------------------|------------|
| gain adjustment .....                                     | 7-1        |
| Gain Switch Hysteresis Setting (Pn034) .....              | 5-73       |
| Gain Switch Level Setting (Pn033) .....                   | 5-72       |
| Gain Switch Setting (Pn031) .....                         | 5-72       |
| Gain Switch Time (Pn032) .....                            | 5-72       |
| Gain Switching .....                                      | 5-31       |
| Gain Switching Operating Mode Selection (Pn030) .....     | 5-72       |
| General-purpose Output 1 (OUTM1) .....                    | 3-12, 5-25 |
| General-purpose Output 1 Function Selection (Pn112) ..... | 5-83       |
| General-purpose Output 2 (OUTM2) .....                    | 3-12, 5-25 |
| General-purpose Output 2 Function Selection (Pn113) ..... | 5-83       |
| General-purpose Output 3 (OUTM3) .....                    | 3-12, 5-25 |
| General-purpose Output 3 Function Selection (Pn114) ..... | 5-83       |

## H

|                                        |      |
|----------------------------------------|------|
| harmonic current countermeasures ..... | 4-40 |
|----------------------------------------|------|

## I

|                                                   |      |
|---------------------------------------------------|------|
| Incremental Encoders .....                        | 3-31 |
| Inertia Ratio (Pn020) .....                       | 5-68 |
| Input Signal Selection (Pn044) .....              | 5-74 |
| Instantaneous Speed Observer .....                | 5-48 |
| Instantaneous Speed Observer Setting (Pn027) .... | 5-71 |

## J

|                         |      |
|-------------------------|------|
| Jog Operation .....     | 6-27 |
| Jog Speed (Pn03D) ..... | 5-73 |

## L

|                                            |      |
|--------------------------------------------|------|
| Leakage Breakers .....                     | 4-32 |
| Linear Acceleration Constant (Pn107) ..... | 5-82 |
| Linear Deceleration Constant (Pn10A) ..... | 5-82 |

## M

|                                                                |                      |
|----------------------------------------------------------------|----------------------|
| Main Circuit Connector Specifications (CNA) .....              | 3-7, 4-20            |
| Main Circuit Terminal Block Specifications .....               | 3-8, 3-9, 4-21, 4-22 |
| Manual Tuning .....                                            | 7-14                 |
| MECHATROLINK-II Communications Cable .....                     | 2-20, 3-71           |
| mode setup .....                                               | 6-9                  |
| Momentary Hold Time (Pn06D) .....                              | 5-79                 |
| Monitor Mode .....                                             | 6-10                 |
| Motor Phase Current Offset Re-adjustment Setting (Pn064) ..... | 5-75                 |

|                                                        |      |
|--------------------------------------------------------|------|
| Mounting Brackets (L brackets for rack mounting) ..... | 2-22 |
| mounting hole dimensions .....                         | 2-23 |
| Moving Average Time .....                              | 5-20 |
| Moving Average Time (Pn10E) .....                      | 5-82 |

## N

|                                                        |                        |
|--------------------------------------------------------|------------------------|
| no-fuse breakers .....                                 | 4-31                   |
| Noise filter .....                                     | 4-34, 4-35, 4-36, 4-42 |
| noise filters for brake power supply .....             | 4-35                   |
| noise filters for Servomotor output .....              | 4-42                   |
| noise filters for the power supply input .....         | 4-34                   |
| Normal Mode Autotuning .....                           | 6-24, 7-9              |
| Normal Mode Autotuning Operation Setting (Pn025) ..... | 5-70, 5-93             |
| Notch Filter .....                                     | 5-43                   |
| Notch Filter 1 Frequency (Pn01D) .....                 | 5-68                   |
| Notch Filter 1 Width (Pn01E) .....                     | 5-68                   |
| Notch Filter 2 Depth (Pn02A) .....                     | 5-71                   |
| Notch Filter 2 Frequency (Pn028) .....                 | 5-71                   |
| Notch Filter 2 Width (Pn029) .....                     | 5-71                   |
| No. 1 Torque Limit (Pn05E) .....                       | 5-75                   |
| No. 2 Torque Limit (Pn05F) .....                       | 5-75                   |

## O

|                                                            |            |
|------------------------------------------------------------|------------|
| oil seal .....                                             | 4-5        |
| Operating Direction Setting (Pn043) .....                  | 5-73       |
| Operation Switch When Using Absolute Encoder (Pn00B) ..... | 5-67       |
| Origin Proximity Input (DEC) .....                         | 3-11, 5-23 |
| Origin Proximity Input Logic Setting (Pn042) .....         | 5-73       |
| Origin Range (Pn105) .....                                 | 5-81       |
| Origin Return Approach Speed 1 (Pn110) .....               | 5-82       |
| Origin Return Approach Speed 2 (Pn111) .....               | 5-82       |
| Origin Return Final Distance (Pn204) .....                 | 5-85       |
| Origin Return Mode Settings (Pn10F) .....                  | 5-82       |
| Overload Characteristics .....                             | 8-20       |
| Overload Detection Level Setting (Pn072) .....             | 5-79       |
| Overrun Limit Setting (Pn026) .....                        | 5-70       |
| Overrun Protection .....                                   | 5-29       |
| Overspeed Detection Level Setting (Pn073) .....            | 5-79       |

## P

|                                                    |           |
|----------------------------------------------------|-----------|
| P Control Switching .....                          | 5-41      |
| Parameter Details .....                            | 5-86      |
| Parameter Setting Mode .....                       | 6-17      |
| Parameter Tables .....                             | 5-61, 9-1 |
| Parameter Unit Connector Specifications (CN3) .... | 3-16      |
| Parameter Unit dimensions .....                    | 2-43      |
| Parameter Unit specifications .....                | 3-78      |
| Parameter Write Mode .....                         | 6-23      |
| Periodic Maintenance .....                         | 8-21      |
| pin arrangement .....                              | 3-13      |
| Position Control .....                             | 5-1       |
| Position Control Mode .....                        | 7-15      |
| Position Loop Gain (Pn010) .....                   | 5-67      |
| Position Loop Gain 2 (Pn018) .....                 | 5-68      |
| Position Loop Gain Switching Time (Pn035) .....    | 5-73      |
| Positioning Completion Range 1 (Pn060) .....       | 5-75      |
| Positioning Completion Range 2 (Pn063) .....       | 5-75      |
| Power Cables (Robot Cables) .....                  | 4-14      |

## Index

|                                                                        |      |
|------------------------------------------------------------------------|------|
| Power Cables (Standard Cables) .....                                   | 4-13 |
| Power Cables for Servomotors with Brakes<br>(Robot Cables) .....       | 3-61 |
| Power Cables for Servomotors with Brakes<br>(Standard Cables) .....    | 3-58 |
| Power Cables for Servomotors without Brakes<br>(Robot Cables) .....    | 3-54 |
| Power Cables for Servomotors without Brakes<br>(Standard Cables) ..... | 3-49 |
| Prohibit Parameter Changes via Network (Pn00A)<br>.....                | 5-67 |
| Protective Functions .....                                             | 3-5  |

## R

|                                                                            |                  |
|----------------------------------------------------------------------------|------------------|
| radio noise filters .....                                                  | 4-36             |
| Reactor dimensions .....                                                   | 2-62             |
| Reactors .....                                                             | 2-21, 3-80, 4-40 |
| Realtime Autotuning .....                                                  | 7-3              |
| Realtime Autotuning Machine Rigidity Selection<br>(Pn022) .....            | 5-69, 5-89       |
| Realtime Autotuning Mode Selection (Pn021)<br>.....                        | 5-69, 5-89       |
| Regeneration Resistor Selection (Pn06C)....                                | 5-79, 5-96       |
| regenerative energy.....                                                   | 4-44             |
| regenerative energy (External Regeneration Resistors)<br>.....             | 4-48             |
| regenerative energy absorption.....                                        | 4-47             |
| Replacing the Absolute Encoder Battery .....                               | 8-23             |
| replacing the Servo Drive .....                                            | 8-2              |
| replacing the Servomotor .....                                             | 8-2              |
| Reverse Drive Prohibit.....                                                | 5-10             |
| Reverse Drive Prohibit Input (NOT).....                                    | 3-11, 5-23       |
| Reverse Software Limit (Pn202).....                                        | 5-84             |
| Reverse Torque Limit Input (NCL).....                                      | 3-11, 5-23       |
| Rotation Speed for Motor Rotation Detection<br>(Pn062).....                | 5-75             |
| rotational speed characteristics for 1,000-r/min<br>Servomotors .....      | 3-29             |
| rotational speed characteristics for 2,000-r/min<br>Servomotors .....      | 3-27             |
| rotational speed characteristics for 3,000-r/min<br>Flat Servomotors ..... | 3-25             |
| rotational speed characteristics for 3,000-r/min<br>Servomotors .....      | 3-21             |
| RS-232 Baud Rate Setting (Pn00C).....                                      | 5-67             |

## S

|                                               |           |
|-----------------------------------------------|-----------|
| Sequence Input Signals.....                   | 5-23      |
| Sequence Output Signals.....                  | 5-25      |
| Servo Drive characteristics.....              | 3-2       |
| Servo Drive dimensions.....                   | 2-23      |
| Servo Drive functions .....                   | 1-4       |
| Servo Drive General Specifications.....       | 3-1       |
| Servo Drive installation conditions.....      | 4-1       |
| Servo Drive models .....                      | 2-1       |
| Servo Drive part names.....                   | 1-3       |
| Servo Drive service life.....                 | 8-22      |
| Servo Drive-Servomotor combinations.....      | 2-5       |
| Servomotor and Decelerator Combinations ..... | 2-44      |
| Servomotor characteristics.....               | 3-18      |
| Servomotor connector specifications (CNB)...  | 3-7, 4-20 |
| Servomotor general specifications .....       | 3-17      |

|                                                             |            |
|-------------------------------------------------------------|------------|
| Servomotor installation conditions.....                     | 4-3        |
| Servomotor models .....                                     | 2-2        |
| Servomotor power cable.....                                 | 3-49       |
| Servomotor Power Cables (Robot Cables) .....                | 2-19       |
| Servomotor Power Cables (Standard Cables) .....             | 2-15       |
| Servomotor service life .....                               | 8-21       |
| Soft Limit (Pn104).....                                     | 5-81       |
| Soft Start.....                                             | 5-18       |
| Soft Start Acceleration Time (Pn058) .....                  | 5-74       |
| Soft Start Deceleration Time (Pn059).....                   | 5-74       |
| Speed Conformity Signal Output Width (Pn061) ....           | 5-75       |
| Speed Control.....                                          | 5-4        |
| speed control mode adjustment .....                         | 7-16       |
| Speed Feedback Filter Selection.....                        | 5-40       |
| Speed Feedback Filter Time Constant (Pn013) ....            | 5-67       |
| Speed Feedback Filter Time Constant 2 (Pn01B) ..            | 5-68       |
| Speed Feed-forward.....                                     | 5-38       |
| Speed Feed-forward Amount (Pn015).....                      | 5-68       |
| Speed Limit.....                                            | 5-22       |
| Speed Limit (Pn053).....                                    | 5-74       |
| Speed Limit Selection (Pn05B).....                          | 5-74       |
| speed limit values.....                                     | 7-21       |
| Speed Loop Gain (Pn011).....                                | 5-67       |
| Speed Loop Gain 2 (Pn019).....                              | 5-68       |
| Speed Loop Integration Time Constant (Pn012) ....           | 5-67       |
| Speed Loop Integration Time Constant 2<br>(Pn01A) .....     | 5-68       |
| Speed monitor (SP) Selection (Pn007) .....                  | 5-66       |
| Stop Selection for Alarm Generation (Pn068)<br>.....        | 5-78, 5-96 |
| Stop Selection for Drive Prohibition Input (Pn066)<br>..... | 5-77, 5-95 |
| Stop Selection with Main Power OFF (Pn067)<br>.....         | 5-78, 5-95 |
| Stop Selection with Servo OFF (Pn069).....                  | 5-78, 5-96 |
| surge absorbers.....                                        | 4-33       |
| surge suppressors .....                                     | 4-38       |
| system block diagrams .....                                 | 1-5        |
| system configuration.....                                   | 1-2        |

## T

|                                                        |            |
|--------------------------------------------------------|------------|
| Terminal Block Wire Sizes.....                         | 4-23       |
| Terminal Block Wiring.....                             | 4-25       |
| Torque Command Filter Time Constant .....              | 5-42       |
| Torque Command Filter Time Constant (Pn014) ...        | 5-68       |
| Torque Command Filter Time Constant 2 (Pn01C)<br>..... | 5-68       |
| Torque Control.....                                    | 5-7        |
| torque control mode adjustment.....                    | 7-21       |
| Torque Feed-forward.....                               | 5-39       |
| Torque Limit.....                                      | 5-16, 5-19 |
| Torque Limit Selection (Pn003) .....                   | 5-63, 5-87 |
| Torque Monitor (IM) Selection (Pn008) .....            | 5-66       |
| Trial Operation.....                                   | 6-31       |
| troubleshooting .....                                  | 8-7        |

## U

|                                            |      |
|--------------------------------------------|------|
| UL and CSA standards.....                  | 1-10 |
| Undervoltage Alarm Selection (Pn065) ..... | 5-76 |
| user parameters .....                      | 5-55 |
| using the parameter unit.....              | 6-8  |

V

|                                         |            |
|-----------------------------------------|------------|
| Vibration Filter 1 Setting (Pn02C)..... | 5-71       |
| Vibration Filter 2 Setting (Pn02E)..... | 5-72       |
| Vibration Filter Selection (Pn024)..... | 5-70, 5-92 |
| Vibration Frequency 1 (Pn02B).....      | 5-71       |
| Vibration Frequency 2 (Pn02D).....      | 5-71       |

W

|                                          |      |
|------------------------------------------|------|
| Wire Sizes .....                         | 4-24 |
| wiring conforming to EMC Directives..... | 4-26 |

---

## Revision History

A manual revision code appears as a suffix to the catalog number on the front and back covers of the manual.

Cat. No. I566-E1-01



Revision code

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

| Revision code | Date      | Revised content and pages |
|---------------|-----------|---------------------------|
| 01            | July 2008 | Original production       |





# Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billing.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
  - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
  - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
  - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
  - d. Delivery and shipping dates are estimates only; and
  - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://www.omron247.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

## Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:
  - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
  - (ii) Use in consumer products or any use in significant quantities.
  - (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
  - (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product.
 NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



Automation...simple...powerful.

**OMRON ELECTRONICS LLC • THE AMERICAS HEADQUARTERS**

Schaumburg, IL USA • 847.843.7900 • 800.556.6766 • [www.omron247.com](http://www.omron247.com)

**OMRON CANADA, INC. • HEAD OFFICE**

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • [www.omron.ca](http://www.omron.ca)

**OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE**

São Paulo, SP, Brasil • 55.11.2101.6300 • [www.omron.com.br](http://www.omron.com.br)

**OMRON ELECTRONICS MEXICO SA DE CV • HEAD OFFICE**

Apodaca, N.L. • 52.811.156.99.10 • [mela@omron.com](mailto:mela@omron.com)

I566-E1-01

Note: Specifications are subject to change.

**OMRON ARGENTINA • SALES OFFICE**

Cono Sur • 54.11.4787.1129

**OMRON CHILE • SALES OFFICE**

Santiago 56.2206.4592

**OTHER OMRON LATIN AMERICA SALES**

56.2206.4592

© 2008 Omron Electronics LLC

Printed in U.S.A.