


Smart Sensor

Vision Sensor with built-in LCD monitor

ZFX-C

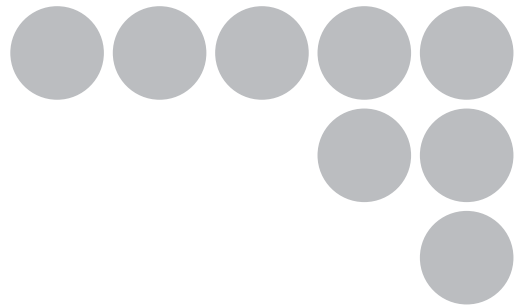

Serial Communication Command Reference

Introduction


Thank you for purchasing the ZFX-C.

This manual provides information regarding functions, performance and operating methods that are required for using the ZFX-C.

When using the ZFX-C, be sure to observe the following:


- The ZFX-C must be operated by personnel knowledgeable in electrical engineering.
- To ensure correct use, please read this manual thoroughly to deepen your understanding of the product.
- Please keep this manual in a safe place so that it can be referred to whenever necessary.

Manuals Provided with this Product

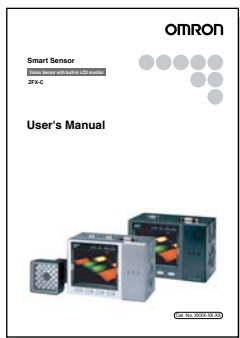

User's Manual

This manual describes basic operations, such as installation and connections, and information on settings and specifications to ensure safe and correct use of this product.

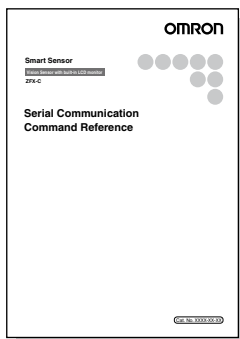

Serial Communication Command Reference (this document)

This manual provides reference information for when this product performs communications with an external device, such as a PC or a programmable controller, via the serial interface.

Contents

Communication Interface Specifications	3
Connection.	4
Connecting a PC	4
Connecting a PLC	6
About Communication Commands	7
Command/Response Format.	7
Available Commands.	10
Bank Control Commands.	12
Measurement Control/Measurement Value Acquisition Commands	14
Setting Acquisition/Change Commands	17
Backup/Restore Commands	25
Utility Commands.	35
Parameter List	39
Example of Usage	56
Version Upgrade Information.	60
Revision History	64

■ Difference between the ZFX-C20/C25, ZFX-C10H/C15H and ZFX-C10/C15

This manual is intended for the ZFX-C20/C25, ZFX-C10H/C15H and ZFX-C10/C15 Controllers.

Unless otherwise specified, explanations are given for the ZFX-C20/C25. The following table summarizes the main differences.

Item	ZFX-C20/C25	ZFX-C10H/C15H	ZFX-C10/C15
Number of connected cameras	2	1	1
Available measurement items	All available		Only the following items are available: Pattern search Sensitive search Area Position Width Count Angle Bright Hue Defect
Available position correction items	All available		Only the following items are available: Edge position Area 1 model 2 model Angle
Number of measurement items that can be measured simultaneously	Max. 128 items/bank		Max. 32 items/bank
Logging monitor function	Available		Not available

Communication Interface Specifications

You can use the USB port or RS-232C/422 connector of the Controller to perform serial communication with external devices such as a personal computer or programmable controller.

Serial communication functions in the RUN mode. Communication cannot be performed in the ADJ or MENU modes.

<USB>

This interface allows Full speed (12 Mbps) communications compliant with USB2.0 with a PC equipped with the same USB interface.

Synchronization method	Start-stop
Transmission code	ASCII (Binary format can be selected only when outputting measurement values set at [Setup] - [Support] - [Calculation] - [Data].)
Communication speed	USB2.0-compliant
Data length	-
Parity	-
Stop bit	-
Delimiter	CR, LF, CR+LF
Transmission protocol	Normal (Note, however, that XMODEM protocol is used when sending image data, system data and other data.)

<RS-232C/422>

This interface allows data communications compliant with the EIA RS-232C/422 standards up to a maximum speed of 115200 bps.

Synchronization method	Start-stop
Transmission code	ASCII (Binary format can be selected only when outputting measurement values set at [Setup] - [Support] - [Calculation] - [Data].)
Communication speed	9600, 19200, 38400, 57600, 115200
Data length	7 bits, 8 bits
Parity	None, even, odd
Stop bit	1 bit, 2 bits
Delimiter	CR, LF, CR+LF
Transmission protocol	Normal (Note, however, that XMODEM protocol is used when sending image data, system data and other data.)



For details on how to set the communication specifications, refer to the User's Manual.


<Ethernet>

Communication protocol	TCP/IP
Transmission mode	Peer to Peer

Connection

Connecting a PC

<USB>

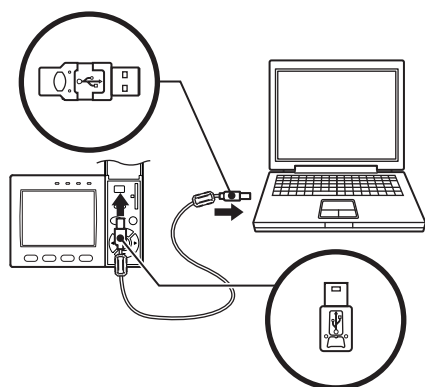

Use a USB cable (ZFX-XUSB) to connect the Controller to the PC.

Important

- When connecting the PC, refer to the Instruction Manual for the PC.
- Attach the ferrite cores supplied to both ends of the USB cable.




Note

Installation of the USB driver is necessary only when connecting an external device to the USB interface for the first time.

For the USB driver, please contact your OMRON representative.

<Ethernet>

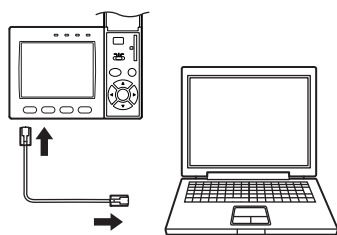

Use a commercially available LAN cable to connect the Controller to the PC.

There are two ways of making the LAN connection to the PC, directly to the PC or via a hub.

Important


The following communications are not possible:

- Communications with the Controller from outside the LAN
- Communications between the Controller and two or more PCs
- Communications between Controllers
- Communications between the Controller and the PLC

• 1:1 Connection

When connecting the Controller directory to the PC, use a 10BASE-T or 100BASE-TX cross cable (Category 5 or higher). Limit the cable length to 30 m.


Example: A measurement command is input and the result is acquired.

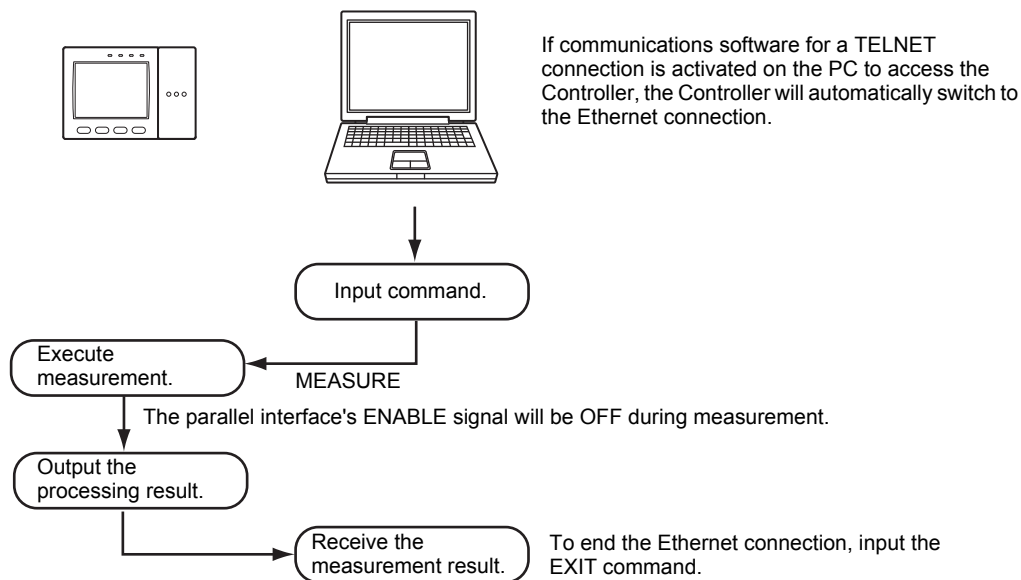


• 1:N Connection

When connecting two or more Controllers to one PC via a hub, use a 10BASE-T or 100BASE-TX straight cable (Category 5 or higher). Also, limit the cable lengths between the PC and the hub, and the Controllers and the hub to 30 m, respectively. Be sure to set unique IP addresses to each Controller. Do not set duplicate IP addresses to Controllers.

Example:

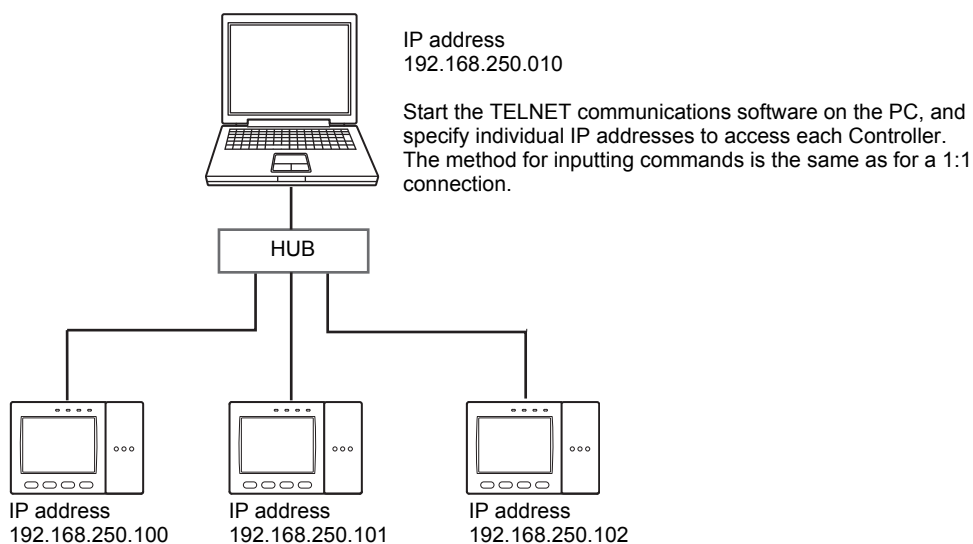

Connecting a PLC

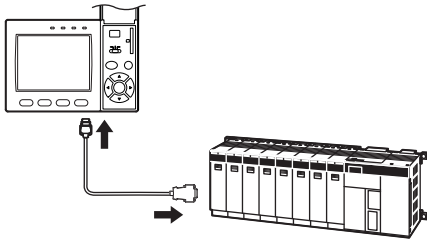

Use the exclusive RS-232C cable (ZFX-XPT2A) / RS-422 cable (ZFX-XPT2B) to connect the Controller to a PLC.

Important

When connecting to a PLC, refer to the Instruction Manual for the PLC.

About Communication Commands

Command/Response Format

< Command >

Command data	Delimiter
--------------	-----------

< Response >

When processing ends successfully

Response data	Record separator
---------------	------------------

O	K	Record separator
---	---	------------------

When processing fails

E	R	Record separator
---	---	------------------

Command data	Specifies the command and parameters in ASCII code.
Response data	Stores the acquired data.
Delimiter	This control code indicates the end of the data.
Record separator	This delimiter is appended to one session's worth of output data. (default delimiter: CR)

Configuration of Measurement Value Data

The following explains the output format of measurement values.

To output measurement values by serial communication, the following items must be set.

Note

Output content

Set the output content as an expression.

Set the output content at [Setup] - [Support] - [Calculation] - [Data].

Output destination

Specify [RS-232C/422] or [USB] at [System] - [Output] - [Data output].

Output format


Set the output format at [System] - [Output] - [Serial output].



For detailed settings, refer to the User's Manual.

ASCII Format

Up to 32 results are output as a data structure of fixed length of up to 12 characters including the sign.

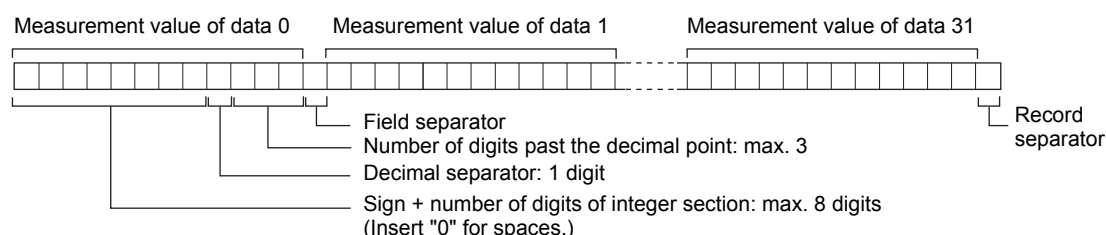

Sign	The sign of the measurement value is stored. Plus: 0/Minus: -
Number of digits of integer section	"0" is inserted in spaces in the integer section and digits past the decimal point.
Number of digits past the decimal point	When a value is greater than the preset number of digits, all digits other than the sign digit become "9".
Decimal separator	Output range: -9999999.999 to 09999999.999
Field separator	
Record separator	

Example: Number of digits of integer section: 7, number of digits past the decimal point: 3, decimal separator: period

< Measurement value > < Data structure >


123456.789	0 1 2 3 4 5 6 . 7 8 9 C _R
4567.8	0 0 0 4 5 6 7 . 8 0 0 C _R
-4567.8	- 0 0 4 5 6 7 . 8 0 0 C _R

Binary Format


The value obtained by multiplying the measurement value by 1000 is output continuously as four bytes per single data item. Minus values are output as 2's complement. Up to 32 results can be output.

The binary format differs from the ASCII format in that data separators, such as field separator or record separator, do not exist.

Output range: -2147483.648 to 2147483.647

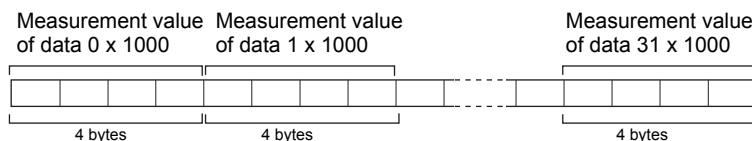

 Example: Data 0 "256.324" and data 1 "-1.000"



Note

- A value obtained by multiplying by 1000 also is output as the judgment result (JG).
OK: 0
NG: -1000 (-1 x 1000)
- When the measurement value is less than -2147483.648, "-2147483.648" is output.
When the measurement value is greater than 2147483.647, "2147483.647" is output.

Available Commands

Bank Control Commands

Command name	Description	Page
BANK (or BK)	This command acquires the current bank No.	p.12
	This command switches the bank to be used.	p.12
BANKGROUP (or BG)	This command acquires the current bank group No.	p.13
	This command switches the bank group to be used.	p.13

Measurement Control/Measurement Value Acquisition Commands

Command name	Description	Page
MEASDATA (or MD)	This command acquires the measurement result of the measurement item.	p.14
MEASURE (or M)	This command executes a single measurement.	p.15
	This command starts continuous measurement.	p.16
	This command ends continuous measurement.	p.16
	This command performs re-measurement using saved images.	p.16

Setting Acquisition/Change Commands

Command name	Description	Page
DATE (or DT)	This command acquires the date and time of the calendar timer incorporated into the Controller.	p.17
	This command changes the date and time of the calendar timer incorporated into the Controller.	p.17
MODELSET (or MS)	This command re-registers the model of the specified item. It does not reset filters, etc.	p.18
MEASPARA (or MP)	This command acquires the detailed conditions and thresholds of specified measurement items.	p.19
	This command sets the detailed conditions and thresholds of specified measurement items.	p.19
POSIPARA (or PP)	This command acquires the detailed conditions and the threshold value of position shift correction.	p.21
	This command sets the detailed conditions and the threshold value of position shift correction.	p.21
PASSWORD (or PW)	This command acquires the currently set password.	p.23
	It sets and changes the password character string.	p.23
VERGET (or VR)	This command acquires the version information of the Controller.	p.24

Backup/Restore Commands

Command name	Description	Page
BGRLOAD (or GL)	This command uploads bank group data to the Controller from an external device.	p.25
	This command uploads bank group data to the Controller from an SD card.	p.25
BGRSAVE (or GS)	This command backs up bank group data to an external device from the Controller.	p.26
	This command backs up bank group data to an SD card from the Controller.	p.26
BNKLOAD (or BL)	This command uploads bank data to the Controller from an external device.	p.27
	This command uploads bank data to the Controller from an SD card.	p.27

Command name	Description	Page
BNKSAVE (or BS)	This command backs up bank data to an external device from the Controller.	p.28
	This command backs up bank data to an SD card from the Controller.	p.28
DATASAVE (or SV)	This command saves the current settings to the Controller.	p.29
IMGLOAD (or IL)	This command uploads image data to the Controller from an external device.	p.29
	This command uploads image data to the Controller from an SD card.	p.30
IMGSAVE (or IS)	This command backs up image data to an external device from the Controller.	p.31
	This command backs up image data to an SD card from the Controller.	p.32
SYSLOAD (or SL)	This command uploads system data to the Controller from an external device.	p.33
	This command uploads system data to the Controller from an SD card.	p.33
SYSSAVE (or SS)	This command backs up system data to an external device from the Controller.	p.34
	This command backs up system data to an SD card from the Controller.	p.34

Utility Commands

Command name	Description	Page
CLRMEAS (or CM)	Clears measurement results.	p.35
CLRERR (or CE)	Clears error output results.	p.35
ERRHISTORY (or EH)	Outputs a history of up to five of the latest errors.	p.36
CAPTURE(CP)	Executes display capture, and outputs this to the host or SD card as an image.	p.37
RESET (or RS)	This command restarts the Controller.	p.38
EXIT	This command ends the TELNET connection for Ethernet communications and disconnects the line.	p.38

Bank Control Commands

Acquiring/Switching the Bank No. < BANK command >

Acquiring a bank No.

This command acquires the current bank No.

< Command format >

B	A	N	K	C _R
---	---	---	---	----------------

 or

B	K	C _R
---	---	----------------

< Response format >

When processing ends successfully

		C _R
--	--	----------------

└── Bank No. (max. 2 digits)

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >

Bank No.	The acquired bank No. is returned. (0 to 31)
----------	--

Switching to another bank

This command switches the bank to be used.

< Command format >

B	A	N	K			C _R
---	---	---	---	--	--	----------------

 or

B	K				C _R
---	---	--	--	--	----------------

└── Bank No. (max. 2 digits) └── Bank No. (max. 2 digits)

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >

Bank No.	Specifies the bank No. after the bank is switched. (0 to 31)
----------	--

Acquiring/Switching the Bank Group No. < BANKGROUP command >

Acquiring a bank group No.

This command acquires the current bank group No.

< Command format >

B	A	N	K	G	R	O	U	P	C	R
---	---	---	---	---	---	---	---	---	---	---

 or

B	G	C	R
---	---	---	---

< Response format >

When processing ends successfully

		C	R
--	--	---	---

O	K	C	R
---	---	---	---

Bank group No. (max. 2 digits)

When processing fails

E	R	C	R
---	---	---	---

< Explanation of parameters >

Bank group No.	The acquired bank group No. is returned. (0 to 31)
----------------	--

Switching bank group Nos.

This command switches the bank group to be used.

< Command format >

B	A	N	K	G	R	O	U	P			C	R
---	---	---	---	---	---	---	---	---	--	--	---	---

 or

B	G			C	R
---	---	--	--	---	---

Bank group No. (max. 2 digits) Bank group No. (max. 2 digits)

< Response format >

When processing ends successfully

O	K	C	R
---	---	---	---

When processing fails

E	R	C	R
---	---	---	---

< Explanation of parameters >


Bank group No.	Specifies the bank group No. after the bank group is switched. (0 to 31)
----------------	--

Measurement Control/Measurement Value Acquisition Commands

Acquiring the Measurement Result of the Measurement Item < MEASDATA command >

This command acquires the measurement result of the measurement item.

< Command format >

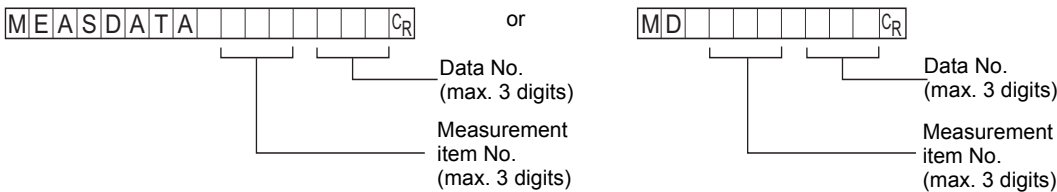

< Response format >

When processing ends successfully

Measurement value CR

OK CR

When processing fails

ER CR

< Explanation of parameters >

Measurement item No.	Specifies the measurement item No. (0 to 127 (ZFX-C20/C25/C10H/C15H), 0 to 31 (ZFX-C10/C15))
Data No.	Specifies the data No. (0 to 127) For details, see "Parameter List (p.39)."
Measurement value	The acquired measurement value is returned in ASCII code. The measurement value is not dependent on the format (ASCII/binary) specified in the output conditions. <ul style="list-style-type: none">• Minus sign: -, plus sign: none• The size of the integer section is variable.• The decimal point is indicated by a period ".".• The maximum number of digits past the decimal point is three.

Executing Measurement < MEASURE command >

Executing a Single Measurement

This command executes a single measurement.

< Command format >

MEASURECR or MCR

< Response format >

When processing ends successfully


Measurement value CR

OKCR

When processing fails

ERRCR

< Explanation of parameters >

Measurement value	The acquired measurement value is returned. The measurement value is output in the format (ASCII/binary) specified in the output conditions.  Configuration of Measurement Value Data p.8
-------------------	---

Important

Measurement values are output only when an expression is set at [Setup] - [Support] - [Calculation] - [Data], and [RS-232C/422] or [USB] is specified at [System] - [Output] - [Data output].

Starting Continuous Measurement

< Command format >

MEASURE / C_{CR} or M / C_{CR}

< Response format >

When processing ends successfully

Measurement value _{CR} (for number of continuous measurements)

OK_{CR}

When processing fails

ER_{CR}

Ending Continuous Measurement

< Command format >

MEASURE / E_{CR} or M / E_{CR}

< Response format >

When processing ends successfully

OK_{CR}

When processing fails

ER_{CR}

Performing re-measurement using saved images

< Command format >

MEASURE / I _{Save memory No. (max. 2 digits)} _{CR} or M / I _{Save memory No. (max. 2 digits)} _{CR}

< Response format >

When processing ends successfully

Measurement value _{CR}


OK_{CR}

When processing fails

- Measurement images are not stored in the specified save memory No.
- [Image storage] option is set to OFF

ER_{CR}

< Explanation of parameters >

Measurement value	The re-measurement value for the saved image of specified save memory No. is returned. When the save memory No. is omitted, the re-measurement value for the latest saved image is returned.  Configuration of Measurement Value Data p.8
-------------------	---

Setting Acquisition/Change Commands

Acquiring/Changing the Date Setting < DATE command >

Acquiring the date setting

This command acquires the date and time of the calendar timer incorporated into the Controller.

< Command format >

DATE_{CR} or DT_{CR}

< Response format >

When processing ends successfully

Year/hour/day/hour/minute/second
OK_{CR}

When processing fails

ER_{CR}

< Explanation of parameters >

Year/hour/day/hour/ minute/second	The acquired date and time are returned as numerical values of two digits each. Example: 060301120020 → 12:00:20 on March 1st, 2006.
--------------------------------------	---

Changing the Date Setting

This command changes the date and time of the calendar timer incorporated into the Controller.

< Command format >

DATE_{CR} or DT_{CR}
Year/hour/day/hour/
minute/second

< Response format >

When processing ends successfully

OK_{CR}

When processing fails

ER_{CR}

< Explanation of parameters >

Year/hour/day/hour/ minute/second	Specifies the date and time. Example: 060301120020 → 12:00:20 on March 1st, 2006
--------------------------------------	---


Re-registering the Model of the Specified Item < MODELSET command >

This command re-registers the model of the specified item. It does not reset filters, etc.

Important

The execution of this command does not re-register any model for the flexible search, graphic search and grouping items.

< Command format >

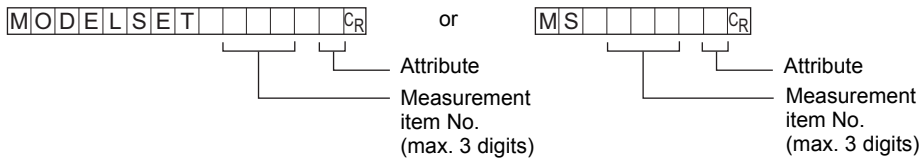

< Response format >

When processing ends successfully

OKCR

When processing fails

ERCR

< Explanation of parameters >


Measurement item No.	<p>Specifies the measurement item No.</p> <p>Measurement items: 0 to 127 (ZFX-C20/C25/C10H/C15H), 0 to 31 (ZFX-C10/C15)</p> <p>Position correction items: 0 to 3</p> <p>0: Position correction 0 of camera 0</p> <p>1: Position correction 1 of camera 0</p> <p>2: Position correction 0 of camera 1</p> <p>3: Position correction 1 of camera 1</p>
Attribute	<p>Specifies measurement item or position correction item.</p> <p>0: Measurement item</p> <p>1: Position correction item</p> <p>Default is measurement item.</p>

Setting/Acquiring the Measurement Conditions < MEASPARA command >

Setting measurement conditions

This command sets the detailed conditions and thresholds of specified items.

< Command format >

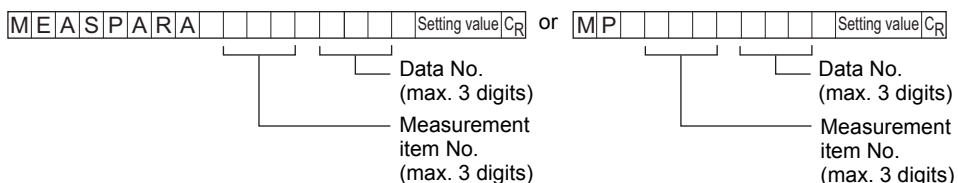

< Response format >

When processing ends successfully

OK CR

When processing fails

ER CR


< Explanation of parameters >

Measurement item No.	Specifies the measurement item No. (0 to 127)
Data No.	Specifies the data No. (0 to 127) For details, see "Parameter List (p.39)."
Setting value	Specifies the setting value. For details, see "Parameter List (p.39)."

Acquiring measurement conditions

This command acquires the detailed conditions and thresholds of specified items.

< Command format >

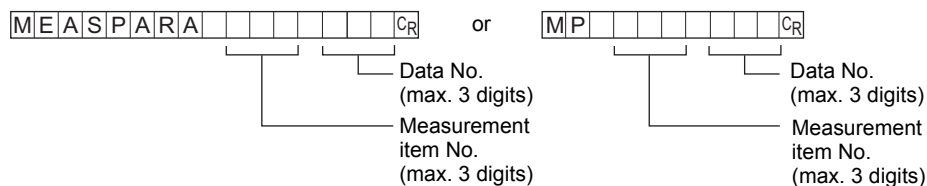

< Response format >

When processing ends successfully



Acquired value CR

OK CR

When processing fails

ER CR

< Explanation of parameters >


Measurement item No.	Specifies the measurement item No. (0 to 127)
Data No.	Specifies the data No. (0 to 127)  For details, see "Parameter List (p.39)."
Acquired value	The detailed conditions and thresholds of specified items is returned.  For details, see "Parameter List (p.39)."

Setting/Acquiring Position Shift Correction Condition< POSIPARA Command >

Setting position shift correction conditions

This command sets the detailed conditions and thresholds of position shift correction.

< Command format >

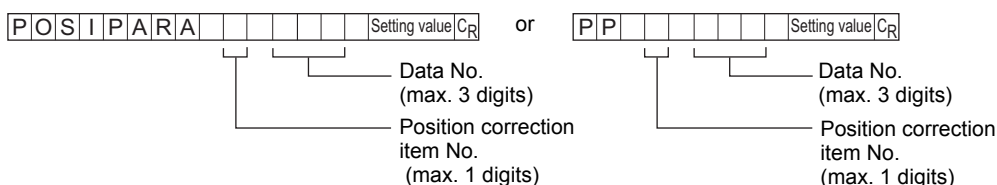

< Response format >

When processing ends successfully

OK CR

When processing fails

ER CR


< Explanation of parameters >

Position correction item No.	Specifies the position correction item No. (0 to 3) Item Nos are assigned as follows: 0: Position correction0 of camera0 1: Position correction1 of camera0 2: Position correction0 of camera1 3: Position correction1 of camera1
Data No.	Specifies the data No. (0 to 127) For details, see "Parameter List (p.39)."
Setting value	Specifies the setting value. For details, see "Parameter List (p.39)."

Acquiring position shift correction conditions

This command acquires the detailed conditions and thresholds of position shift correction.

< Command format >

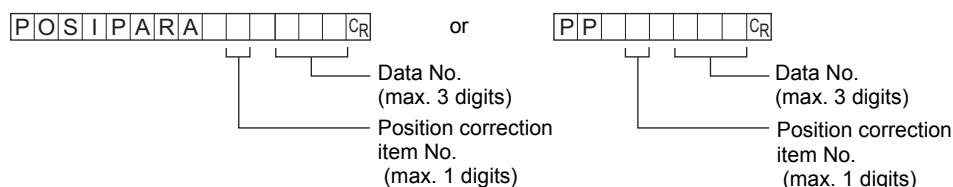

< Response format >

When processing ends successfully



Acquired value^{C_R}

O_K^{C_R}

When processing fails

E_R^{C_R}

< Explanation of parameters >

Position correction item No.	Specifies the position correction item No. (0 to 3) Item Nos are assigned as follows: 0: Position correction0 of Camera0 1: Position correction1 of Camera0 2: Position correction0 of Camera1 3: Position correction1 of Camera1
Data No.	Specifies the data No. (0 to 127)  For details, see "Parameter List (p.39)."
Acquired value	The detailed conditions and thresholds of position correction is returned.  For details, see "Parameter List (p.39)."

Acquiring the Version No. < VERGET command >

This command acquires the version information of the Controller.

< Command format >

VERGET_{CR} or VR_{CR}

< Response format >

When processing ends successfully

ZFX- VerX.XX_{CR}

Version No.

Model information

OK_{CR}

When processing fails

ER_{CR}

< Explanation of parameters >

Model information	The model No. of the Controller is returned.
Version No.	The version No. of the Controller's firmware is returned.

 
Backup/Restore Commands

Uploading Bank Group Data < BGRLOAD command >

Uploading bank group data to the Controller from an external device

This command uploads the bank group data to the Controller by XMODEM protocol. The bank group data is loaded to the specified bank group No.

< Command format >



< File transfer >

The bank group data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C _R
---	---	---	---	---	----------------

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------


< Explanation of parameters >

Bank group No.	Specifies the bank group No. to upload. (0 to 31)
----------------	---

Uploading bank group data to the Controller from an SD card

This command uploads bank group data to the Controller from an SD card.

< Command format >

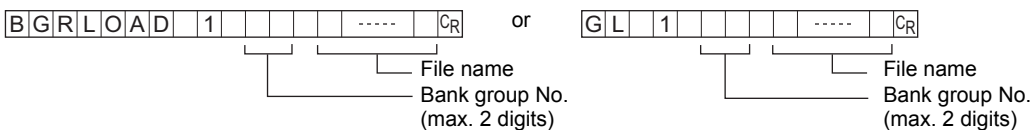

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >


Bank group No.	Specifies the bank group No. to upload. (0 to 31)
File name	Specifies the file name within eight alphanumeric characters. (An extension is not required.)

Backing up Bank Group Data < BGRSAVE command >

Backing up bank group data to an external device from the Controller

This command backs up the bank group data from the Controller by XMODEM protocol.
 
< Command format >



< File transfer >

The bank group data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C _R
---	---	---	---	---	----------------

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------


< Explanation of parameters >

Bank group No.	Specifies the bank group No. to back up. (0 to 31)
----------------	--

Backing up bank group data to an SD from the Controller

This command backs up bank group data to an SD card from the Controller.

< Command format >

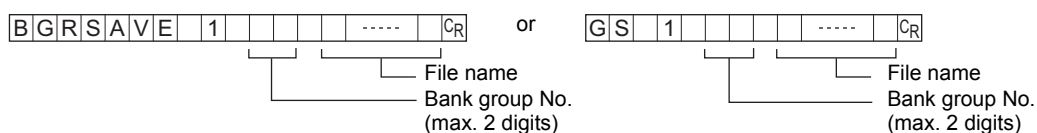

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >


Bank group No.	Specifies the bank group No. to back up. (0 to 31)
File name	The file can be given any name within eight alphanumeric characters. (An extension is not required.)

Uploading Bank Data < BNKLOAD command >

Uploading bank data to the Controller from an external device

This command uploads the bank data to the Controller by XMODEM protocol.
 
< Command format >



< File transfer >

The bank data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C _R
---	---	---	---	---	----------------

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------


< Explanation of parameters >

Bank No.	Specifies the bank No. to upload. (0 to 31)
----------	---

Uploading bank data to the Controller from an SD card

This command uploads bank data to the Controller from an SD card.

< Command format >

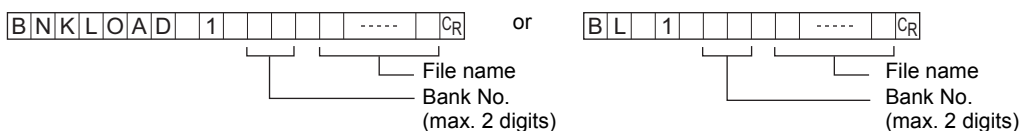

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >


Bank No.	Specifies the bank No. to upload. (0 to 31)
File name	Specifies the file name within eight alphanumeric characters. (An extension is not required.)

Backing up Bank Data < BNKSAVE command >

Backing up bank data to an external device from the Controller

This command backs up the bank data from the Controller by XMODEM protocol.
 
< Command format >



< File transfer >

The bank data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C _R
---	---	---	---	---	----------------

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------


< Explanation of parameters >

Bank No.	Specifies the bank No. to back up. (0 to 31)
----------	--

Backing up bank data to an SD card from the Controller

This command backs up bank data to an SD card from the Controller.

< Command format >

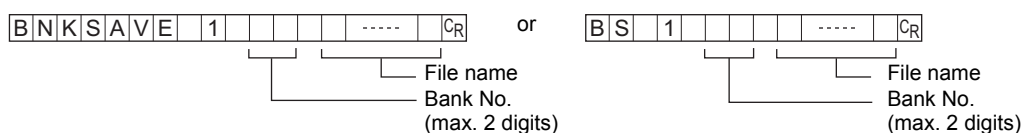

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >

Bank No.	Specifies the bank No. to back up. (0 to 31)
File name	The file can be given any name within eight alphanumeric characters. (An extension is not required.)

Saving the Current Settings to the Controller < DATASAVE command >

This command saves the current settings to the Controller.

No parameters are provided for this command.

< Command format >

D A T A S A V E C_R or S V C_R

< Response format >

When processing ends successfully

O K C_R

When processing fails

E R C_R

Uploading Image Data < IMGLOAD command >

Uploading image data to the Controller from an external device

This command uploads image data to the Controller by XMODEM protocol.

< Command format >

I M G L O A D 0 C_R or I L 0 C_R

Save memory No. (max. 2 digits)

Save memory No. (max. 2 digits)

< File transfer >

The image data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R E A D Y C_R

When processing ends successfully

O K C_R

When processing fails

E R C_R


< Explanation of parameters >

Save memory No.	Specifies the No. of the save memory for saving the image data to. (0 to 99)
-----------------	--

Uploading image data to the Controller from an SD card

This command uploads image data to the Controller from an SD card.

< Command format >

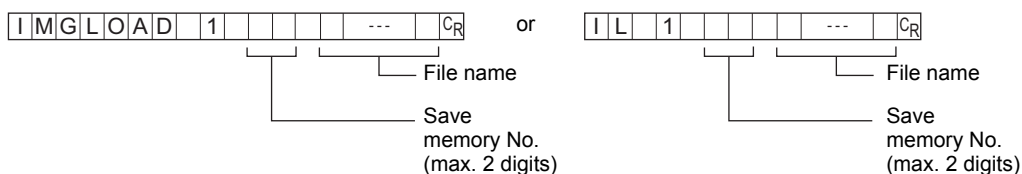

< Response format >

When processing ends successfully

`OK` `CR`

When processing fails

`ER` `CR`

< Explanation of parameters >


Save memory No.	Specifies the No. of the save memory for saving the image data to. (0 to 99)
File name	Specifies the file name (within 8 characters, excluding the file extension). File extensions ".GRY" (image captured by a monochrome camera) or ".BYR" (image captured by a color camera) are allowed.

Backing up Image Data < IMGSAVE command >

Backing up image data from the Controller to an external device

This command backs up image data from the Controller by XMODEM protocol.

< Command format >

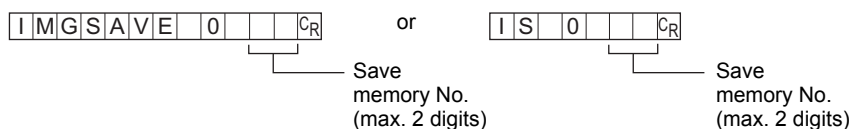

< File transfer >

The image data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R E A D Y C_R

When processing ends successfully

O K C_R

When processing fails

E R C_R


< Explanation of parameters >

Save memory No.	Specifies the No. of the save memory for backing up the image data to. (0 to 99) When "-1" is specified for the Save memory No., the latest image data of camera 0 is specified. When "-2" is specified for the Save memory No., the latest image data of camera 1 is specified.
-----------------	--

Backing up image data from the Controller to an SD card

This command backs up image data from the Controller to an SD card.

< Command format >

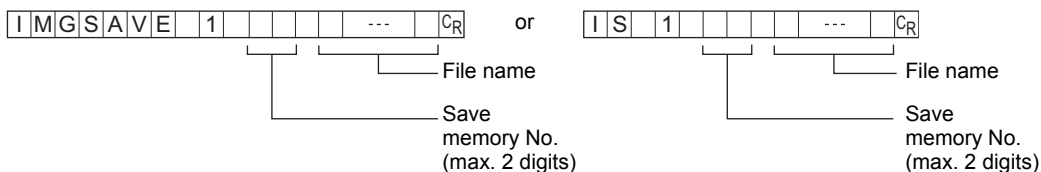

< Response format >

When processing ends successfully

`OK` `CR`

When processing fails

`ER` `CR`

When an SD card is not inserted

`ER` `0` `CR`

When there is no free space on the SD card

`ER` `1` `CR`

< Explanation of parameters >

Save memory No.	Specifies the No. of the save memory for backing up the image data to. (0 to 99) When "-1" is specified for the Save memory No., the latest image data is specified.
File name	Files can be given any file name up to 5 characters long. (Entry of a file extension is not necessary.) When performing measurement on two cameras, the image data of both cameras is saved. In this case, the file names are automatically appended with "C0" and "C1". Image data from camera 0: file name_C0.BYR or file name_C1.GRY Image data from camera 1: file name_C1.BYR or file name_C1.GRY

Uploading System Data < SYSLOAD command >

Uploading system data to the Controller from an external device

This command uploads the system data to the Controller by XMODEM protocol.
No parameters are provided for this command.

< Command format >

S	Y	S	L	O	A	D		0	C _R
---	---	---	---	---	---	---	--	---	----------------

 or

S	L		0	C _R
---	---	--	---	----------------

< File transfer >

The system data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C _R
---	---	---	---	---	----------------

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

Uploading system data to the Controller from an SD card

This command uploads system data to the Controller from an SD card.

< Command format >

S	Y	S	L	O	A	D		1			---		C _R
---	---	---	---	---	---	---	--	---	--	--	-----	--	----------------

 or

S	L		1			---		C _R
---	---	--	---	--	--	-----	--	----------------

File name File name

< Response format >

When processing ends successfully

O	K	C _R
---	---	----------------

When processing fails

E	R	C _R
---	---	----------------

< Explanation of parameters >

File name	Specifies the file name within eight alphanumeric characters. (An extension is not required.)
-----------	---

Backing up System Data < SYSSAVE command >

Backing up system data to an external device from the Controller

This command backs up the system data from the Controller by XMODEM protocol.
No parameters are provided for this command.

< Command format >

S	Y	S	S	A	V	E		0	C	R
---	---	---	---	---	---	---	--	---	---	---

 or

S	S		0	C	R
---	---	--	---	---	---

< File transfer >

The system data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1K) is not supported.

< Response format >

R	E	A	D	Y	C	R
---	---	---	---	---	---	---

When processing ends successfully

O	K	C	R
---	---	---	---

When processing fails

E	R	C	R
---	---	---	---

Backing up system data to an SD card from the Controller

This command backs up system data to an SD card from the Controller.

< Command format >

S	Y	S	S	A	V	E		1			...		C	R
---	---	---	---	---	---	---	--	---	--	--	-----	--	---	---

 or

S	S		1			...		C	R
---	---	--	---	--	--	-----	--	---	---

File name File name

< Response format >

When processing ends successfully

O	K	C	R
---	---	---	---

When processing fails

E	R	C	R
---	---	---	---

< Explanation of parameters >

File name	The file can be given any name within eight alphanumeric characters. (An extension is not required.)
-----------	--

Utility Commands

Clearing Measurement Values < CLRMEAS Command >

This command clears the following measurement results.

- Judgment results and measurement values of measurement items
- Judgment results and measurement values of expressions
- Logging data
- Parallel external output signals (OR, DO0 to DO15)

No parameters are provided for this command.

< Command format >

CLRM EAS C_R or CM C_R

< Response format >

When processing ends successfully

OK C_R

When processing fails

ER C_R

Clearing Error Output < CLRERR Command >

Clears the error output results.

The parallel external output signal (ERROR) is turned OFF to turn the ERROR LED OFF.

No parameters are provided for this command.

< Command format >

CLRERR C_R or CE C_R

< Response format >

When processing ends successfully

OK C_R

When processing fails

ER C_R

Outputting the Error History < ERRHISTORY Command >

This command outputs a history of up to five of the latest errors.

This command shows information of up to five of the latest errors by error code No. (0 to 9).

"-1" is returned other than error code No. if the number of error occurrences does not exceed five.

< Command format >

ERRHISTORY_{CR} or EH_{CR}

< Response format >

When processing ends successfully

[, , , , , ,]_{CR}

Error Code No.
(0 to 9)

When no error occurs

[-1, -1, -1, -1, -1]_{CR}

Example: When handshaking timeout error occurs two times

[3, 3, -1, -1, -1]_{CR}

When processing fails

ER_{CR}

< Explanation of parameters >

Error Code No.	Description
0	Trigger input error
1	Parallel command error
2	SD CARD access error
3	Parallel timeout error
4	USB connection error
5	LAN connection error
6	Image input error
8	VDIN timeout error
9	Camera communication error

Executing Display Capture to Output an Image < CAPTURE Command >

This command executes display capture.
Captured images are output to the SD card or external devices.

Important

When parameter (mode No.) input is omitted, captured images are output to the SD card.

Note

Captured images are transferred to external devices by XMODEM protocol.
Images are sent in bitmap format. Save the images with ".BMP" file extensions.

< Command format >

C	A	P	T	U	R	E			C	R
---	---	---	---	---	---	---	--	--	---	---

 or

C	P					C	R
---	---	--	--	--	--	---	---

└─┬─┐
Mode No.
(0 or 1)

└─┬─┐
Mode No.
(0 or 1)

< File transfer >

When the mode No. is set to 0 and the image is output to external devices, the image data is transferred by XMODEM (-CRC or SUM) after READY is received. XMODEM (-1k) is not supported.

< Response format >

When Mode No. is set to 0:

R	E	A	D	Y	C	R
---	---	---	---	---	---	---

When processing ends successfully

O	K	C	R
---	---	---	---

When processing fails

E	R	C	R
---	---	---	---

When Mode No. is set to 1 or omitted:
When processing ends successfully

O	K	C	R
---	---	---	---

When processing fails

E	R	C	R
---	---	---	---

< Explanation of parameters >

Mode No.	Description
0	Display capture is executed and the captured display is output as an image to external devices.
1 or omitted	Display capture is executed and the captured display is output as an image to SD card. The captured image is stored to CAPTURE directory in the SD card.

Restarting the Controller < RESET command >

This command restarts the Controller. No parameters are provided for this command.

< Command format >

`RESET`_{CR} or `RS`_{CR}

< Response format >

When processing ends successfully

None

When processing fails

`ER`_{CR}

Ending Ethernet Communications < EXIT command >

This command ends the TELNET connection for Ethernet communications and disconnects the line.

No parameters are provided for this command.

< Command format >

`EXIT`_{CR}

< Response format >

When processing ends successfully

None

When processing fails

`ER`_{CR}

Parameter List

MEASDATA Command

Shape inspection parameters

Pattern search

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Correlation	0 to 100
2	Measurement position X	-9999.999 to 9999.999
3	Measurement position Y	-9999.999 to 9999.999
4	Measurement angle	-180 to 180
5	Search number	0 to 99
6	Reference position X	-9999.999 to 9999.999
7	Reference position Y	-9999.999 to 9999.999
8	Reference angle	-180 to 180
9	Position difference X	-9999.999 to 9999.999
10	Position difference Y	-9999.999 to 9999.999
11	Angle difference	-180 to 180

Graphic search (available only on ZFX-C20/C25/C10H/C15H)

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Correlation	0 to 100
2	Measurement position X	-9999.999 to 9999.999
3	Measurement position Y	-9999.999 to 9999.999
4	Measurement angle	-180 to 180
5	Search number	0 to 99
6	Reference position X	-9999.999 to 9999.999
7	Reference position Y	-9999.999 to 9999.999
8	Reference angle	-180 to 180
9	Position difference X	-9999.999 to 9999.999
10	Position difference Y	-9999.999 to 9999.999
11	Angle difference	-180 to 180

Flexible search (available only on ZFX-C20/C25/C10H/C15H)

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Correlation	0 to 100
2	Measurement position X	-9999.999 to 9999.999
3	Measurement position Y	-9999.999 to 9999.999

Sensitive search

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Correlation	0 to 100
2	Measurement position X	-9999.999 to 9999.999
3	Measurement position Y	-9999.999 to 9999.999
4	Measurement angle	-180 to 180
5	Solid color rate	0 to 100

Size inspection parameters**Area**

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Area	0 to 9999999.999
2	Gravity position X	-9999.999 to 9999.999
3	Gravity position Y	-9999.999 to 9999.999
4	Axis angle	-9999.999 to 9999.999
5	Reference area	0 to 9999999.999
6	Reference position X	-9999.999 to 9999.999
7	Reference position Y	-9999.999 to 9999.999
8	Reference axis angle	-180.0 to 180.0
9	Area difference	-9999999.999 to 9999999.999
10	Position difference X	-9999.999 to 9999.999
11	Position difference Y	-9999.999 to 9999.999
12	Axis angle difference	-180.0 to 180.0

Labeling (available only on ZFX-C20/C25/C10H/C15H)

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Area	0 to 9999999.999
2	Gravity position X	-9999.999 to 9999.999
3	Gravity position Y	-9999.999 to 9999.999
4	Number of labels	0 to 65535
5	Axis angle	-180.0 to 180.0
6	Perimeter	0 to 9999.999
7	Length X	0 to 9999.999
8	Length Y	0 to 9999.999
9	Roundness	0 to 1.0
10	Reference area	0 to 9999999.999
11	Reference position X	-9999.999 to 9999.999
12	Reference position Y	-9999.999 to 9999.999
13	Reference axis angle	-180.0 to 180.0
14	Reference perimeter	0 to 9999.999
15	Reference length X	0 to 9999.999
16	Reference length Y	0 to 9999.999
17	Reference roundness	0 to 1.0
18	Area difference	-9999999.999 to 9999999.999
19	Position difference X	-9999.999 to 9999.999
20	Position difference Y	-9999.999 to 9999.999
21	Axis angle difference	-180.0 to 180.0
22	Perimeter difference	-9999.999 to 9999.999
23	Length X difference	-9999.999 to 9999.999
24	Length Y difference	-9999.999 to 9999.999
25	Roundness difference	-1.0 to 1.0

Edge inspection parameters

Position

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Edge position X	-9999.999 to 9999.999
2	Edge position Y	-9999.999 to 9999.999
3	Reference position X	-9999.999 to 9999.999
4	Reference position Y	-9999.999 to 9999.999
5	Position difference X	-9999.999 to 9999.999
6	Position difference Y	-9999.999 to 9999.999

Width

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Edge width	0 to 9999.999
2	Edge position X1	-9999.999 to 9999.999
3	Edge position Y1	-9999.999 to 9999.999
4	Edge position X2	-9999.999 to 9999.999
5	Edge position Y2	-9999.999 to 9999.999
6	Reference edge width	0 to 9999.999
7	Reference edge position X1	-9999.999 to 9999.999
8	Reference edge position Y1	-9999.999 to 9999.999
9	Reference edge position X2	-9999.999 to 9999.999
10	Reference edge position Y2	-9999.999 to 9999.999
11	Width difference	-9999.999 to 9999.999
12	Position difference X1	-9999.999 to 9999.999
13	Position difference Y1	-9999.999 to 9999.999
14	Position difference X2	-9999.999 to 9999.999
15	Position difference Y2	-9999.999 to 9999.999

Count

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Number of edges	0 to 255
2	Average pitch	0 to 9999.999
3	Minimum pitch	0 to 9999.999

Data No.	Parameter	Output Range
4	Maximum pitch	0 to 9999.999
5	Average width	0 to 9999.999
6	Minimum width	0 to 9999.999
7	Maximum width	0 to 9999.999
8	Pitch 1	0 to 9999.999
9	Width 1	0 to 9999.999
10	Pitch 2	0 to 9999.999
11	Width 2	0 to 9999.999
:	:	0 to 9999.999
506	Pitch 255	0 to 9999.999
507	Width 255	0 to 9999.999

Angle (available only on ZFX-C20/C25/C10H/C15H)

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Angle	-180.00 to 180.00
2	Edge position X1	-9999.999 to 9999.999
3	Edge position Y1	-9999.999 to 9999.999
4	Edge position X2	-9999.999 to 9999.999
5	Edge position Y2	-9999.999 to 9999.999
6	Reference angle	-180.00 to 180.00
7	Reference position X1	-9999.999 to 9999.999
8	Reference position Y1	-9999.999 to 9999.999
9	Reference position X2	-9999.999 to 9999.999
10	Reference position Y2	-9999.999 to 9999.999
11	Angle difference	-180.00 to 180.00
12	Position difference X1	-9999.999 to 9999.999
13	Position difference Y1	-9999.999 to 9999.999
14	Position difference X2	-9999.999 to 9999.999
15	Position difference Y2	-9999.999 to 9999.999

Brightness and color inspection parameters

Brightness

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Density average	0 to 255.0
2	Density deviation	0 to 127.0
3	Reference density average	0 to 255.0
4	Reference density deviation	0 to 127.0
5	Density average difference	0 to 255.0
6	Density deviation difference	0 to 127.0

Hue

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Hue	0 to 360.0
2	Saturation	0 to 100.0
3	Value	0 to 100.0
4	Hue deviation	0 to 180.0
5	Saturation deviation	0 to 50.0
6	Value deviation	0 to 50.0
7	Reference hue	0 to 360.0
8	Reference saturation	0 to 100.0
9	Reference value	0 to 100.0
10	Hue difference	-360.0 to 360.0
11	Saturation difference	-100.0 to 100.0
12	Value difference	-100.0 to 100.0
13	Reference hue deviation	0 to 180.0
14	Reference saturation deviation	0 to 50.0
15	Reference value deviation	0 to 50.0
16	Hue deviation difference	-180.0 to 180.0
17	Saturation deviation difference	-50.0 to 50.0
18	Value deviation difference	-50.0 to 50.0
19	Maximum hue	0 to 360.0
20	Minimum hue	0 to 360.0
21	Maximum saturation	0 to 100.0
22	Minimum saturation	0 to 100.0

Data No.	Parameter	Output Range
23	Maximum value	0 to 100.0
24	Minimum value	0 to 100.0

Parameters for inspection by individual application

Grouping (available only on ZFX-C20/C25/C10H/C15H)

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Correlation	0 to 100
2	Measurement position X	-9999.999 to 9999.999
3	Measurement position Y	-9999.999 to 9999.999
4	Index No.	0 to 633

Defect

Data No.	Parameter	Output Range
0	Judgment result	0: OK -1: NG -2: not measured
1	Defect	0 to 255
2	Maximum density	0 to 255
3	Minimum density	0 to 255
4	Number of defects	0 to 255
5	Defect position X	-9999.999 to 9999.999
6	Defect position Y	-9999.999 to 9999.999
7	Reference position X	-9999.999 to 9999.999
8	Reference position Y	-9999.999 to 9999.999
9	Position difference X	-9999.999 to 9999.999
10	Position difference Y	-9999.999 to 9999.999

MEASPARA Command/POSIPARA Command

Shape inspection parameters

Pattern search

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
53	Rotation range	0 to 180
54	Skipping angle	0: 1°, 1: 2°, 2: 3°, 3: 5°, 4: 10°, 5: 15°, 6: 20°, 7: 30°
55	Interpolation	0: OFF, 1: ON
56	Verification	0: OFF, 1: ON
57	Candidate level	0 to 100
58	Calibration	0: OFF, 1: ON
59	Coordinates mode	0: Normal 1: Pos. correction
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Angle upper limit value	-180 to 180
78	Angle lower limit value	-180 to 180
79	Count upper limit value	0 to 99
80	Count lower limit value	0 to 99

Graphic search

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
53	Rotation range	0 to 180
54	Skipping angle	0: 1°, 1: 2°, 2: 3°, 3: 5°, 4: 10°, 5: 15°, 6: 20°, 7: 30°
55	Interpolation	0: OFF, 1: ON
57	Candidate level	0 to 100
58	Noise level	0 to 255
59	Calibration	0: OFF, 1: ON
60	Coordinates mode	0: Normal, 1: Pos. correction
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Angle upper limit value	-180 to 180
78	Angle lower limit value	-180 to 180

Flexible search

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
52	Verification	0: OFF, 1: ON
53	Candidate level	0 to 100
54	Calibration	0: OFF, 1: ON
55	Coordinates mode	0: Normal, 1: Pos. correction
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Model No. upper limit value	0 to 35
78	Model No. lower limit value	0 to 35

Sensitive search

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
52	Sensitivity	0: Low, 1: Middle 2: High
54	Rotation range	0 to 180
55	Skipping angle	0: 1°, 1: 2°, 2: 3°, 3: 5°, 4: 10°, 5: 15°, 6: 20°, 7: 30°
56	Interpolation	0: OFF, 1: ON
57	Verification	0: OFF, 1: ON
58	Candidate level	0 to 100
59	Calibration	0: OFF, 1: ON
60	Solid color check	0: OFF, 1: ON
61	Coordinates mode	0: Normal 1: Pos. correction
62	Output position	0: Difference position, 1: Center position
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Angle upper limit value	-180 to 180
78	Angle lower limit value	-180 to 180
79	Solid color rate upper limit value	0 to 100
80	Solid color rate lower limit value	0 to 100

Size inspection parameters

Area

Data No.	Parameter	Output Range
52	Measure axis angle	0: OFF, 1: ON
53	Fill profile	0: OFF, 1: ON
54	Calibration	0: OFF, 1: ON
55	Coordinates mode	0: Normal 1: Pos. correction
71	Area upper limit value	0.000 to 9999999.999
72	Area lower limit value	0.000 to 9999999.999
73	Gravity position X upper limit value	-9999.999 to 9999.999
74	Gravity position X lower limit value	-9999.999 to 9999.999
75	Gravity position Y upper limit value	-9999.999 to 9999.999
76	Gravity position Y lower limit value	-9999.999 to 9999.999
77	Axis angle upper limit value	-90.00 to 90.00
78	Axis angle lower limit value	-90.00 to 90.00

Labeling

Data No.	Parameter	Output Range
51	Labeling mode	0: Normal, 1: Precision
52	Sort mode	0: Area descending order, 1: Area ascending order, 2: X gravity descending order, 3: X gravity ascending order, Y gravity descending order, Y gravity ascending order
53	Label No.	0 to 2499
54	Measure axis angle	0: OFF, 1: ON
55	Measure perimeter	0: OFF, 1: ON
56	Measure roundness	0: OFF, 1: ON
57	Filling up holes	0: OFF, 1: ON
58	Outside trimming	0: OFF, 1: ON
59	Noise area upper limit value	0.000 to 9999999.999
60	Noise area lower limit value	0.000 to 9999999.999
61	Calibration	0: OFF, 1: ON
62	Coordinates mode	0: Normal, 1: Pos. correction
71	Area upper limit value	0.000 to 9999999.999
72	Area lower limit value	0.000 to 9999999.999
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Axis angle upper limit value	-90.00 to 90.00
78	Axis angle lower limit value	-90.00 to 90.00
79	Perimeter upper limit value	0.000 to 9999999.999
80	Perimeter lower limit value	0.000 to 9999999.999
81	Length X upper limit value	0.000 to 9999.999
82	Length X lower limit value	0.000 to 9999.999
83	Length Y upper limit value	0.000 to 9999.999
84	Length Y lower limit value	0.000 to 9999.999
85	Roundness upper limit value	0.00 to 2.00
86	Roundness lower limit value	0.00 to 2.00
87	Number of labels upper limit value	0 to 65535
88	Number of labels upper limit value	0 to 65535

Edge inspection parameters

Position

Data No.	Parameter	Output Range
51	Measurement mode	0: Average, 1: Peak, 2: Bottom
52	Color mode	0: Color filter, 1: Color Pickup
53	Split size	1 to 99
54	Color	0: Light → Dark, 1: Dark → Light
55	Edge level	1 to 99
56	Noise level	0 to 255
57	Noise width	0 to 255
58	Calibration	0: OFF, 1: ON
59	Coordinates mode	0: Normal, 1: Pos. correction
71	X upper limit value	-9999.999 to 9999.999
72	X lower limit value	-9999.999 to 9999.999
73	Y upper limit value	-9999.999 to 9999.999
74	Y lower limit value	-9999.999 to 9999.999

Width

Data No.	Parameter	Output Range
51	Measurement mode	0: Average, 1: Maximum, 2: Minimum
52	Color mode	0: Color filter, 1: Color Pickup
53	Split size	1 to 99
54	Color1	0: Light → Dark, 1: Dark → Light
55	Edge level1	1 to 99
56	Noise level1	0 to 255
57	Noise width1	0 to 255
58	Color2	0: Light → Dark, 1: Dark → Light
59	Edge level2	1 to 99
60	Noise level2	0 to 255
61	Noise width2	0 to 255
62	Calibration	0: OFF, 1: ON
63	Coordinates mode	0: Normal, 1: Pos. correction
71	Edge width upper limit value	0.000 to 9999.999
72	Edge width lower limit value	0.000 to 9999.999
73	Edge position X1 upper limit value	-9999.999 to 9999.999
74	Edge position X1 lower limit value	-9999.999 to 9999.999
75	Edge position Y1 upper limit value	-9999.999 to 9999.999
76	Edge position Y1 lower limit value	-9999.999 to 9999.999
77	Edge position X2 upper limit value	-9999.999 to 9999.999
78	Edge position X2 lower limit value	-9999.999 to 9999.999
79	Edge position Y2 upper limit value	-9999.999 to 9999.999
80	Edge position Y2 lower limit value	-9999.999 to 9999.999

Count

Data No.	Parameter	Output Range
51	Search mode	0: Normal, 1: Fine
52	Color mode	0: Color filter, 1: Color Pickup
53	Target color	0: Light, 1: Dark
54	Edge level	1 to 99
55	Noise level	0 to 255
56	Noise width	0 to 255
57	Calibration	0: OFF, 1: ON
71	Number of edges upper limit value	0 to 255
72	Number of edges lower limit value	0 to 255
73	Average pitch upper limit value	0.000 to 9999.999
74	Average pitch lower limit value	0.000 to 9999.999
75	Average width upper limit value	0.000 to 9999.999
76	Average width lower limit value	0.000 to 9999.999

Angle

Data No.	Parameter	Output Range
51	Color mode	0: Color filter, 1: Color Pickup
52	Measurement mode1	0:Average, 1: Peak, 2: Bottom
53	Split size1	1 to 99
54	Color1	0: Light → Dark, 1: Dark → Light
55	Edge level1	1 to 99
56	Noise level1	0 to 255
57	Noise width1	0 to 255
58	Measurement mode2	0:Average, 1: Peak, 2: Bottom
59	Split size2	1 to 99
60	Color2	0: Light → Dark, 1: Dark → Light
61	Edge level2	1 to 99
62	Noise level2	0 to 255
63	Noise width2	0 to 255
64	Calibration	0: OFF, 1: ON
65	Coordinates mode	0: Normal, 1: Pos. correction
71	Angle upper limit value	-180.00 to 180.00
72	Angle lower limit value	-180.00 to 180.00
73	Region1 X upper limit value	-9999.999 to 9999.999
74	Region1 X lower limit value	-9999.999 to 9999.999
75	Region1 Y upper limit value	-9999.999 to 9999.999
76	Region1 Y lower limit value	-9999.999 to 9999.999
77	Region2 X upper limit value	-9999.999 to 9999.999
78	Region2 X lower limit value	-9999.999 to 9999.999
79	Region2 Y upper limit value	-9999.999 to 9999.999
80	Region2 Y lower limit value	-9999.999 to 9999.999

Brightness and color inspection parameters

Brightness

Data No.	Parameter	Output Range
71	Density average upper limit value	0.0 to 255.0
72	Density average lower limit value	0.0 to 255.0
73	Density deviation upper limit value	0.0 to 127.0
74	Density deviation lower limit value	0.0 to 127.0

Hue

Data No.	Parameter	Output Range
51	Deviation	0: OFF, 1:ON
71	Hue upper limit value	0.0 to 360.0
72	Hue lower limit value	0.0 to 360.0
73	Saturation upper limit value	0.0 to 100.0
74	Saturation lower limit value	0.0 to 100.0
75	Value upper limit value	0.0 to 100.0
76	Value lower limit value	0.0 to 100.0
77	Hue deviation upper limit value	0.0 to 180.0
78	Hue deviation lower limit value	0.0 to 180.0
79	Saturation deviation upper limit value	0.0 to 50.0
80	Saturation deviation lower limit value	0.0 to 50.0
81	Value deviation upper limit value	0.0 to 50.0
82	Value deviation lower limit value	0.0 to 50.0

Parameters for inspection by individual application

Grouping

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
52	Verification	0: OFF, 1: ON
53	Candidate level	0 to 100
54	Calibration	0: OFF, 1: ON
55	Coordinates mode	0: Normal, 1: Pos. correction
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Index No. upper limit value	0 to 63
78	Index No. lower limit value	0 to 63

Defect

Data No.	Parameter	Output Range
52	Detection size	4 to 64
53	Detection interval	4 to 64
54	Noise level	0 to 255
55	Calibration	0: OFF, 1: ON
56	Coordinates mode	0: Normal, 1: Pos. correction
71	Defect	0 to 255
72	Density upper limit value	0 to 255
73	Density lower limit value	0 to 255
74	Number of defects upper limit value	0 to 255
75	Number of defects lower limit value	0 to 255

Position shift correction parameters

2 model search

Data No.	Parameter	Output Range
51	Search mode	0: Hi-speed, 1: Normal, 2: Precision
53	Rotation range	0 to 180
54	Skipping angle	0: 1°, 1: 2°, 2: 3°, 3: 5°, 4: 10°, 5: 15°, 6: 20°, 7: 30°
55	Interpolation	0: OFF, 1: ON
56	Verification	0: OFF, 1: ON
57	Candidate level	0 to 100
71	Correlation upper limit value	0 to 100
72	Correlation lower limit value	0 to 100
73	X upper limit value	-9999.999 to 9999.999
74	X lower limit value	-9999.999 to 9999.999
75	Y upper limit value	-9999.999 to 9999.999
76	Y lower limit value	-9999.999 to 9999.999
77	Angle upper limit value	-180 to 180
78	Angle lower limit value	-180 to 180

Example of Usage

The following describes an example procedure to communicate by non-procedural commands using Windows standard tool HyperTerminal.


1 Start up HyperTerminal.

HyperTerminal is located under [Program]-[Accessory]-[Communication].


1-1 Enter an appropriate project name, and select OK.




1-2 Select the COM port connected to the ZFX-C in the Connect using field.

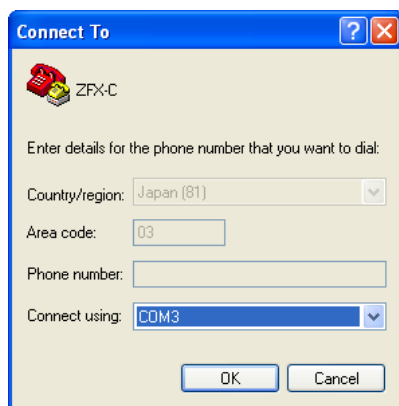

1-3 Set the communication conditions.

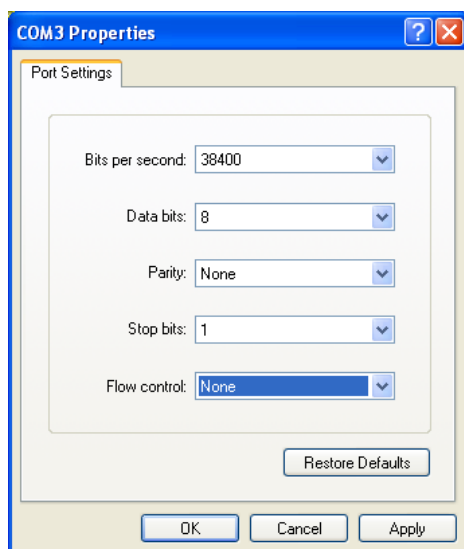


1-4 HyperTerminal is started up.

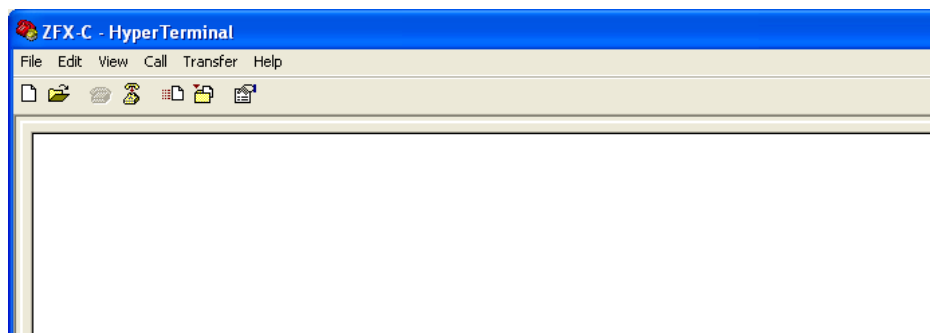


2 To facilitate command transactions, set echo and other communication conditions.


2-1 Open [Property].

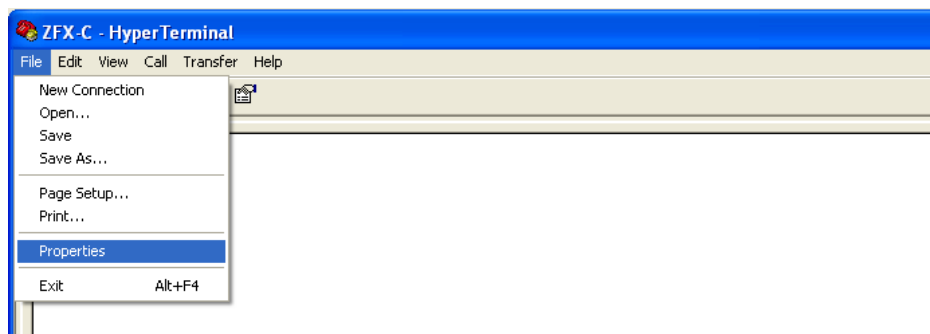

2-2 Select the Settings tab, and then [ASCII Setup].

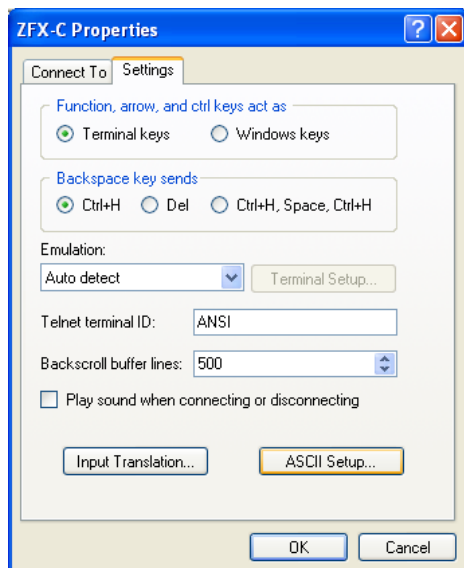

2-3 Mark the following checkboxes, and click OK to complete the setting.

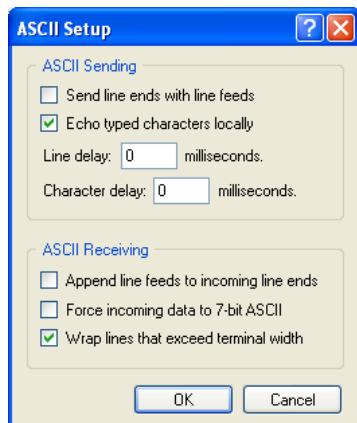


3 Set the communication conditions for the ZFX-C.

Set [System]-[Comm] to match the above settings.


 For details on how to set the communication specifications, refer to the User's Manual.

4 Switch the ZFX-C to the RUN mode.

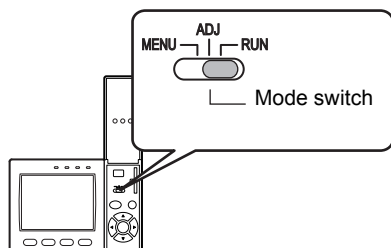


5 Execute non-procedural communication.

5-1 Enter a command, and then press the return key.

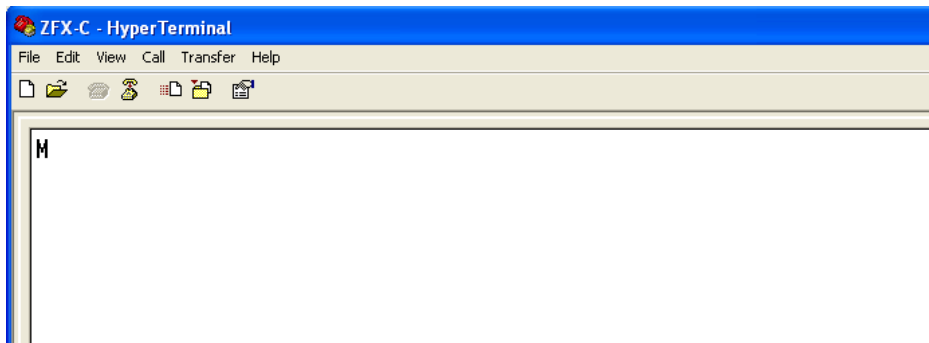

5-2 The returned value corresponding to the command is returned from the Controller.

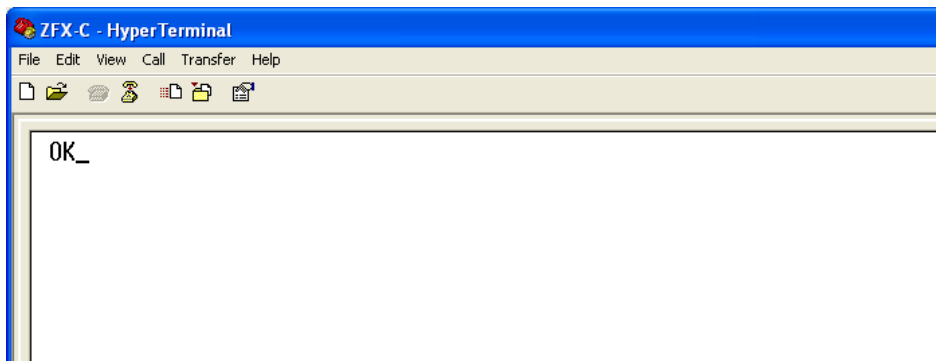

Version Upgrade Information

The following describes the content of the software version upgrade.

Ver1.00 to Ver1.10

Changes

The following backup and restore commands can now be used in Ethernet communications, too:
BGRLOAD, BGRSAVE, BNKLOAD, BNKSAVE, SYSLOAD, SYSSAVE

Ver1.10 to Ver1.20

Changes

The following image data backup/restore commands have been newly added:
IMGLOAD, IMGSAVE

Ver1.20 to Ver1.30

Changes

"Angle" has been newly added to the edge inspection parameters of the MEASDATA command.


Ver1.30 to Ver1.50

Changes

The following commands were added:
MEASPARA, POSIPARA, CLRMEAS, CLRERR, ERRHISTORY, CAPTURE
The new feature to re-measure the saved image has been added to the MEASURE command.

Revision History

A manual revision code appears as a suffix to the catalog number at the bottom of the front and back covers of this manual.

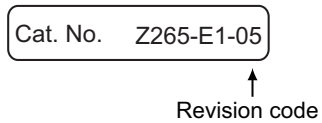

Revision code	Date	Revised contents
01	June 2007	Original production
02	August 2007	New commands as explained in "Version Upgrade Information" added (Ver1.20)
03	November 2007	New command parameters as explained in "Version Upgrade Information" added (Ver1.30)
04	March 2008	Inclusion of information of ZFX-C20/C25, ZFX-C10H/C15H and ZFX-C10/C15 Controllers
05	September 2008	New commands as explained in "Version Upgrade Information" added (Ver1.50)

Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billing.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
 - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
 - d. Delivery and shipping dates are estimates only; and
 - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://www.omron247.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:
 - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
 - (ii) Use in consumer products or any use in significant quantities.
 - (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
 - (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product.
 NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



Automation...simple...powerful.

OMRON ELECTRONICS LLC • THE AMERICAS HEADQUARTERS

Schaumburg, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron.ca

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ELECTRONICS MEXICO SA DE CV • HEAD OFFICE

Apodaca, N.L. • 52.811.156.99.10 • mela@omron.com

Cat. No. Z265-E1-05 9/08 Note: Specifications are subject to change.

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4787.1129

OMRON CHILE • SALES OFFICE

Santiago 56.2206.4592

OTHER OMRON LATIN AMERICA SALES

56.2206.4592

© 2008 Omron Electronics LLC

Printed in U.S.A.